

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P830171

Luminaire Tested: **OHBL-30HE-A-UNV-L930-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P830171
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-30HE-A-UNV-L930-CD
Description: 30000 LUMEN OHBL HE LED LUMINAIRE WITH 90CRI, 3000K LEDS AND AISLE LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 24205.0 lumens
Efficiency: N/A
Efficacy: 147.8 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.8' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 163.8
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P830171

CATALOG NUMBER: OHBL-30HE-A-UNV-L930-CD

Luminous Intensity Polar Plot

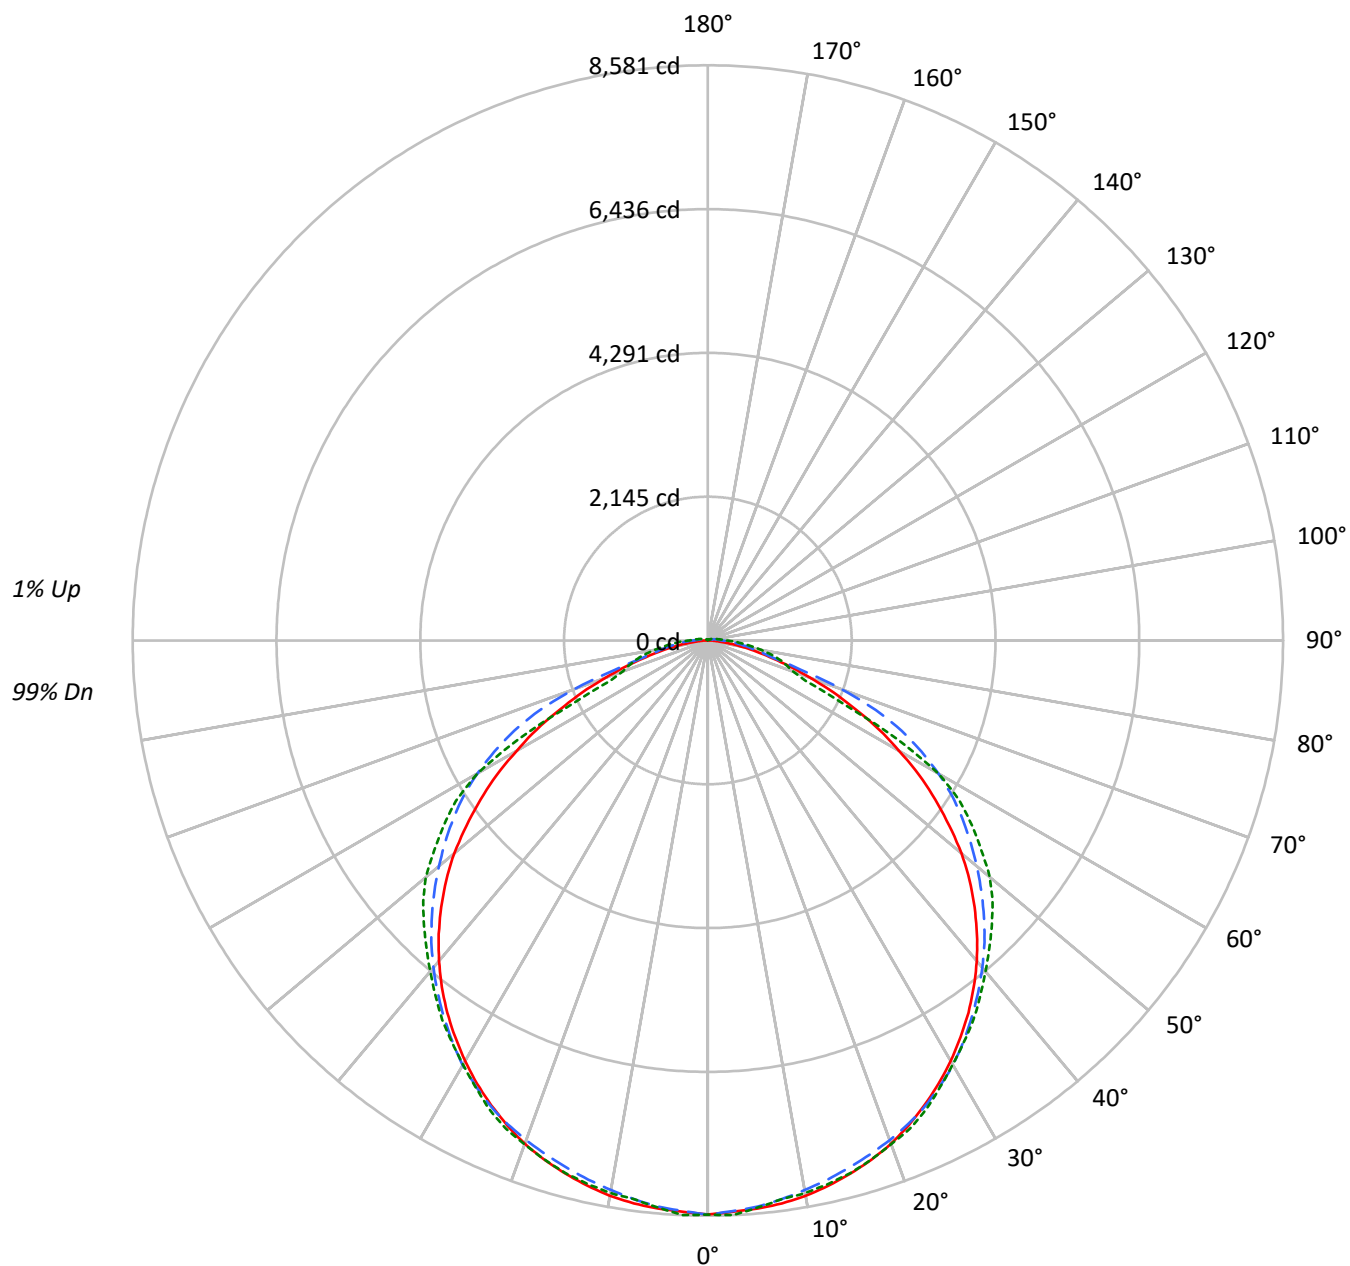



TEST NUMBER: P830171

CATALOG NUMBER: OHBL-30HE-A-UNV-L930-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	110	110	110	106	106	106	101	101	101			99
1	109	104	100	96	106	102	98	95	97	94	91	93	91	88	90	87	86			83
2	99	91	84	79	96	89	83	78	85	80	76	82	78	74	79	75	72			70
3	91	80	72	66	88	79	71	65	75	69	64	72	67	63	70	65	61			59
4	83	71	62	56	81	70	62	55	67	60	54	65	59	54	62	57	53			51
5	76	64	55	48	74	62	54	48	60	53	47	58	52	46	56	50	46			44
6	70	57	48	42	68	56	48	42	54	47	41	52	46	41	51	45	40			38
7	65	52	43	37	63	51	43	37	49	42	36	48	41	36	46	40	36			34
8	61	47	39	33	59	46	38	33	45	38	33	44	37	32	42	36	32			30
9	57	43	35	30	55	43	35	29	41	34	29	40	34	29	39	33	29			27
10	53	40	32	27	52	39	32	27	38	31	27	37	31	26	36	30	26			24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	13543	13543	13543
5°	13455	13347	13375
10°	13406	13145	13226
15°	13320	12993	13138
20°	13235	12898	13021
25°	13076	12802	12906
30°	12902	12651	12662
35°	12694	12411	12527
40°	12424	12163	12344
45°	12050	11877	12263
50°	11543	11550	12166
55°	10737	11229	11712
60°	9683	10759	10827
65°	8306	9887	6862
70°	6690	7718	4975
75°	5016	4582	5049
80°	3491	3810	4821
85°	1987	3491	4518



TEST NUMBER: P830171

CATALOG NUMBER: OHBL-30HE-A-UNV-L930-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	807.5	3.3
10°-20°	2315.5	9.6
20°-30°	3536.5	14.6
30°-40°	4290.9	17.7
40°-50°	4497.3	18.6
50°-60°	4075.2	16.8
60°-70°	2732.3	11.3
70°-80°	1226.9	5.1
80°-90°	445.2	1.8
90°-100°	134.0	0.6
100°-110°	63.2	0.3
110°-120°	31.7	0.1
120°-130°	17.5	0.1
130°-140°	12.0	0.0
140°-150°	8.1	0.0
150°-160°	6.0	0.0
160°-170°	3.9	0.0
170°-180°	1.2	0.0
0°-30°	6659.4	27.5
0°-40°	10950.4	45.2
0°-60°	19522.9	80.7
0°-90°	23927.4	98.9
90°-120°	228.9	0.9
90°-150°	266.5	1.1
90°-180°	278.0	1.1
0°-180°	24205.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	8564	8564	8564	8564	8564	
5°	8508	8538	8478	8504	8493	809
15°	8232	8200	8142	8213	8223	2324
25°	7647	7614	7667	7738	7716	3525
35°	6778	6794	6864	6937	6909	4237
45°	5625	5717	5824	5972	5991	4333
55°	4140	4339	4635	4820	4809	3695
65°	2430	2810	3190	2692	2198	2421
75°	956	1387	1020	1044	1112	1045
85°	165	316	405	489	513	201
90°	1	105	209	262	275	10
95°	1	66	144	175	180	2
105°	5	28	71	85	89	6
115°	10	15	36	46	48	9
125°	9	10	22	26	27	9
135°	11	12	14	20	21	9
145°	11	12	12	14	15	7
155°	12	14	14	14	12	6
165°	14	14	14	14	14	4
175°	14	14	12	11	11	1
180°	12	12	12	12	12	



TEST NUMBER: P830171

CATALOG NUMBER: OHBL-30HE-A-UNV-L930-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	8563.7	8563.7	8563.7	8563.7	8563.7
2.5°	8529.1	8565.0	8520.4	8568.7	8581.1
5°	8508.0	8537.7	8478.3	8504.3	8493.2
7.5°	8469.6	8479.5	8409.0	8430.0	8407.7
10°	8412.7	8407.7	8324.8	8365.6	8370.6
12.5°	8328.5	8313.6	8239.3	8301.2	8302.5
15°	8231.9	8199.7	8141.5	8213.3	8223.2
17.5°	8120.5	8078.4	8040.0	8132.8	8118.0
20°	7990.4	7940.9	7933.5	8035.0	7997.9
22.5°	7829.5	7791.1	7808.4	7905.0	7881.5
25°	7647.4	7614.0	7667.3	7737.8	7715.5
27.5°	7455.5	7435.7	7496.4	7550.9	7507.5
30°	7245.0	7233.9	7314.4	7358.9	7304.4
32.5°	7015.9	7019.6	7096.4	7157.1	7106.3
35°	6778.2	6794.3	6863.6	6936.7	6909.4
37.5°	6516.9	6552.8	6622.2	6705.1	6676.7
40°	6240.8	6292.8	6369.6	6469.9	6443.9
42.5°	5942.4	6008.0	6107.1	6218.5	6216.0
45°	5625.4	5717.0	5823.5	5972.1	5990.7
47.5°	5296.0	5398.8	5533.7	5731.9	5760.3
50°	4938.1	5066.9	5235.3	5473.1	5490.4
52.5°	4539.4	4715.3	4938.1	5166.0	5144.9
55°	4139.5	4338.8	4634.8	4820.5	4809.4
57.5°	3740.8	3964.9	4324.0	4456.5	4455.2
60°	3295.0	3578.5	3971.1	4071.4	3972.3
62.5°	2882.7	3187.3	3594.6	3521.6	3182.3
65°	2429.5	2809.6	3189.7	2692.0	2197.9
67.5°	2027.0	2423.3	2709.3	1843.8	1578.8
70°	1622.1	2059.2	2112.5	1368.3	1349.7
72.5°	1263.0	1728.6	1457.4	1171.4	1230.8
75°	955.9	1386.8	1020.3	1043.8	1112.0
77.5°	697.1	1064.9	793.7	915.1	970.8
80°	479.2	754.1	647.6	769.0	807.3
82.5°	300.9	497.8	518.8	619.1	658.7
85°	164.7	315.8	404.9	489.1	512.6
87.5°	68.1	190.7	309.6	377.7	397.5
90°	1.2	105.3	209.3	262.5	274.9
92.5°	1.2	80.5	170.9	211.7	220.4
95°	1.2	65.6	143.6	174.6	179.5
97.5°	2.5	52.0	120.1	144.9	149.8
100°	3.7	43.3	100.3	121.3	125.1
102.5°	5.0	34.7	84.2	101.5	105.3
105°	5.0	28.5	70.6	85.4	89.2



TEST NUMBER: P830171

CATALOG NUMBER: OHBL-30HE-A-UNV-L930-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	8.7	17.3	42.1	53.2	55.7
115°	9.9	14.9	35.9	45.8	48.3
117.5°	9.9	12.4	31.0	38.4	40.9
120°	9.9	11.1	27.2	33.4	34.7
122.5°	9.9	9.9	23.5	29.7	31.0
125°	8.7	9.9	22.3	26.0	27.2
127.5°	9.9	9.9	19.8	23.5	24.8
130°	9.9	11.1	17.3	22.3	22.3
132.5°	11.1	12.4	16.1	21.1	21.1
135°	11.1	12.4	13.6	19.8	21.1
137.5°	12.4	12.4	12.4	18.6	19.8
140°	12.4	12.4	11.1	16.1	17.3
142.5°	11.1	12.4	11.1	14.9	16.1
145°	11.1	12.4	12.4	13.6	14.9
147.5°	12.4	12.4	12.4	12.4	13.6
150°	12.4	12.4	12.4	12.4	12.4
152.5°	12.4	12.4	12.4	12.4	12.4
155°	12.4	13.6	13.6	13.6	12.4
157.5°	12.4	13.6	13.6	13.6	13.6
160°	12.4	13.6	13.6	13.6	13.6
162.5°	13.6	13.6	13.6	13.6	13.6
165°	13.6	13.6	13.6	13.6	13.6
167.5°	13.6	14.9	13.6	13.6	13.6
170°	13.6	13.6	13.6	12.4	12.4
172.5°	13.6	13.6	13.6	12.4	12.4
175°	13.6	13.6	12.4	11.1	11.1
177.5°	14.9	13.6	12.4	11.1	9.9
180°	12.4	12.4	12.4	12.4	12.4



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	6.2	23.5	60.7	73.1	75.5
110°	7.4	19.8	50.8	61.9	64.4



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930


Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				

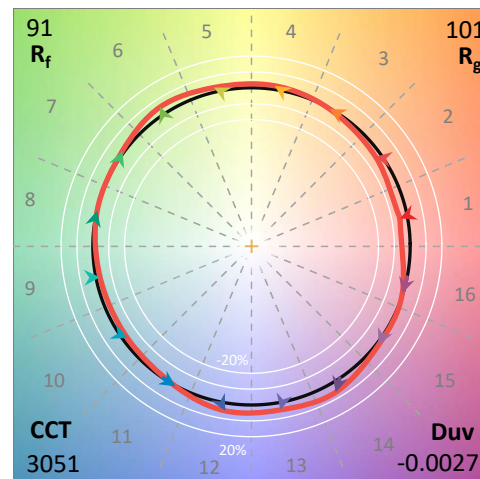

Test Conditions


Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram

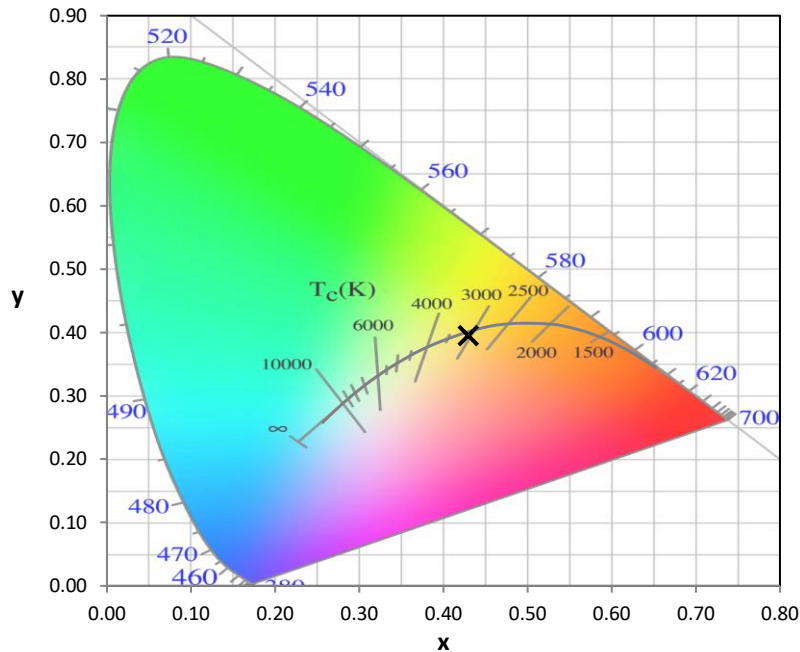


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

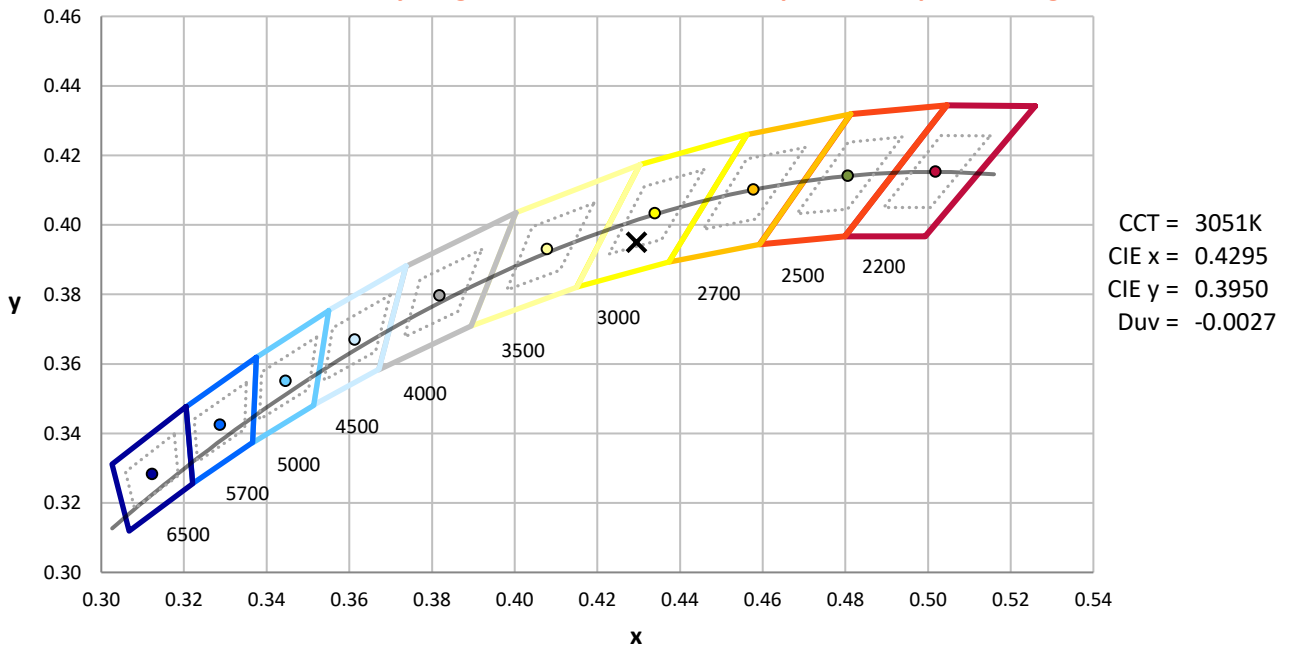

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength

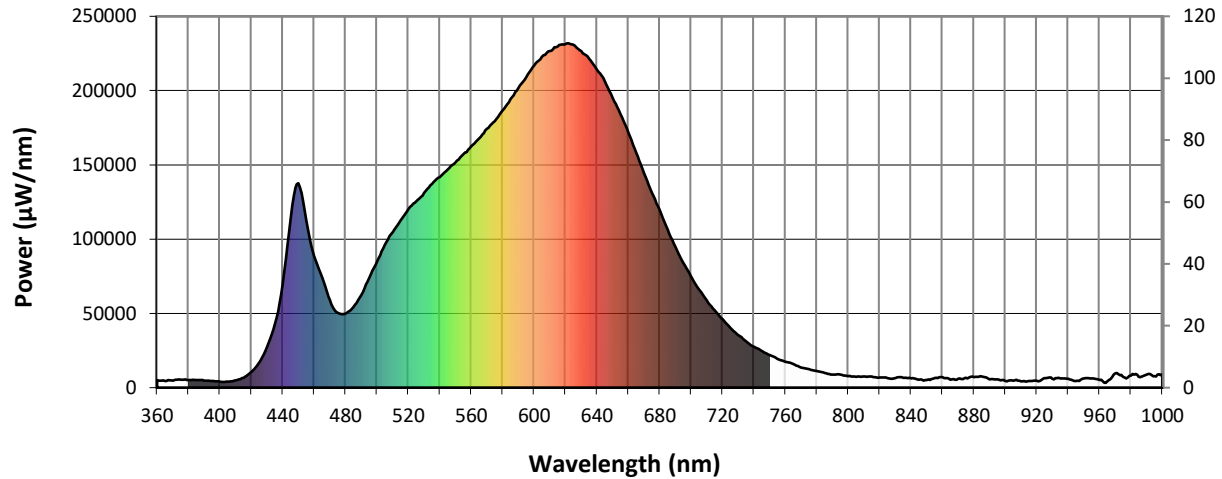


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength

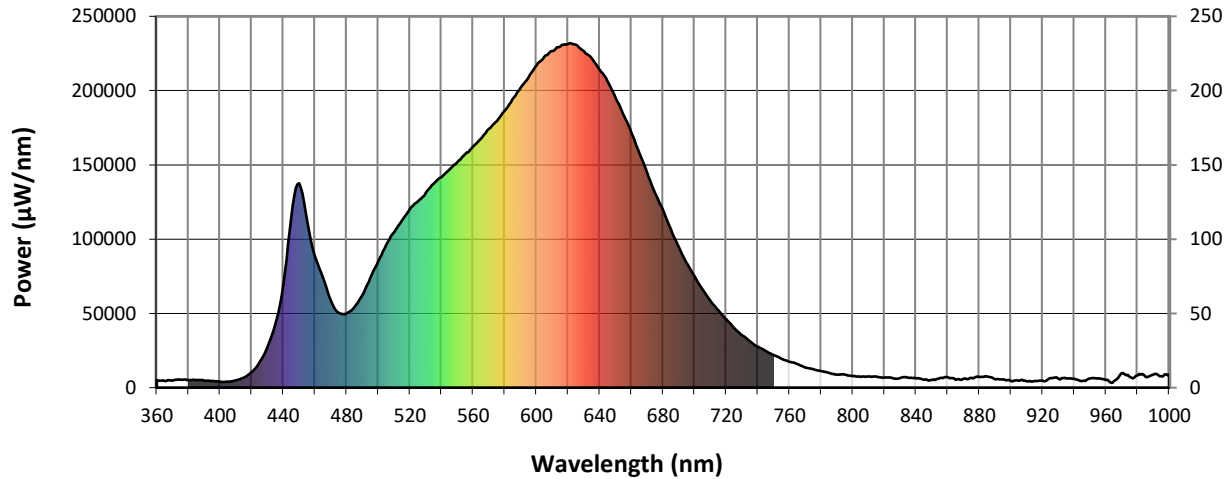


Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength

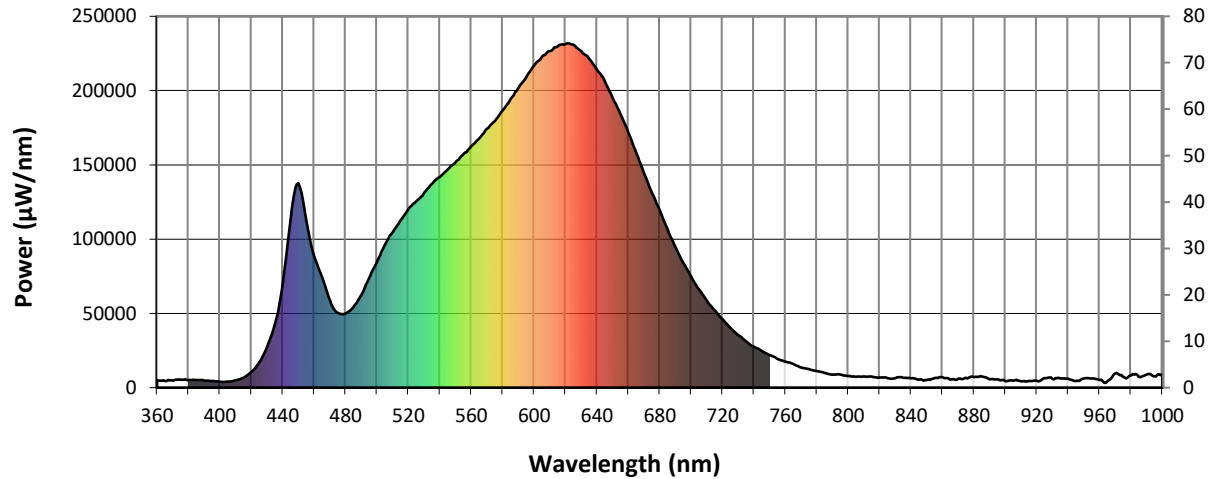

Melanopic Lumens: 6505.3 M/P: 0.55


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2





TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$

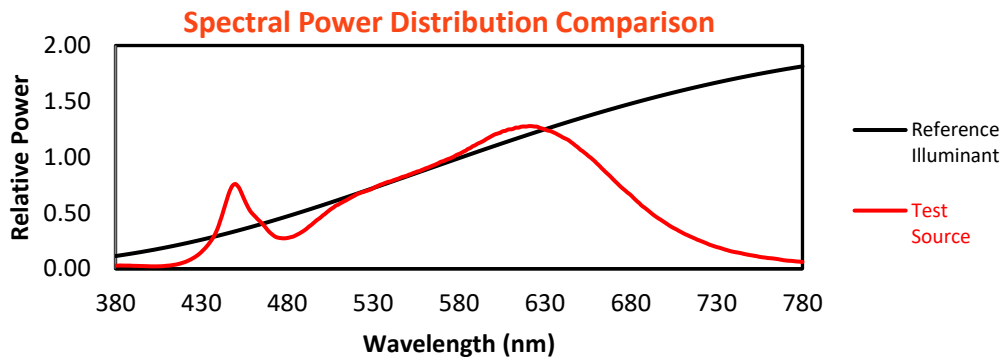

Color Vector Graphics

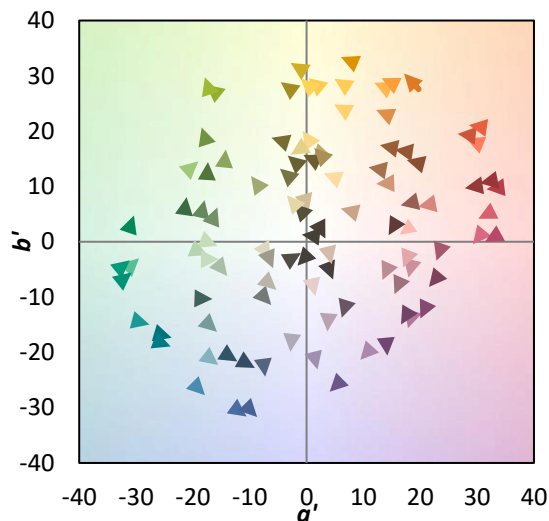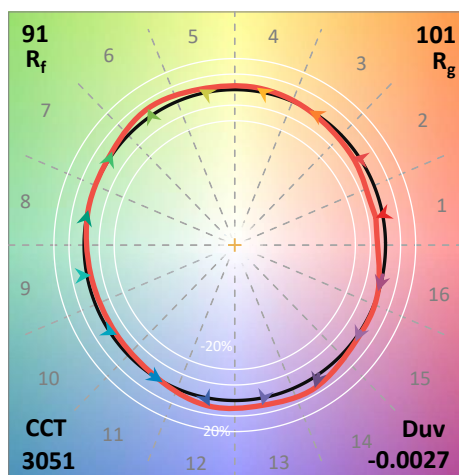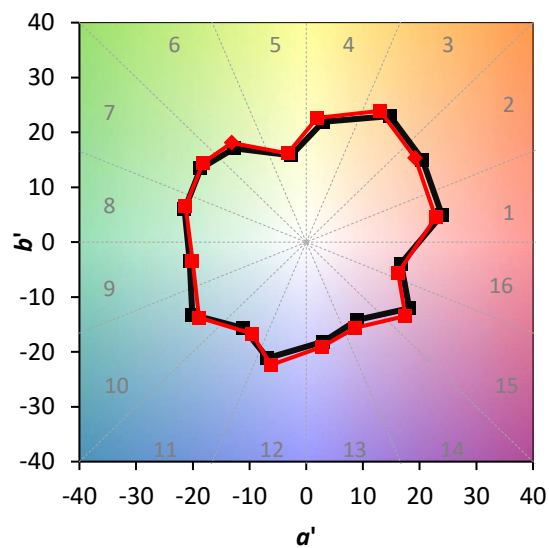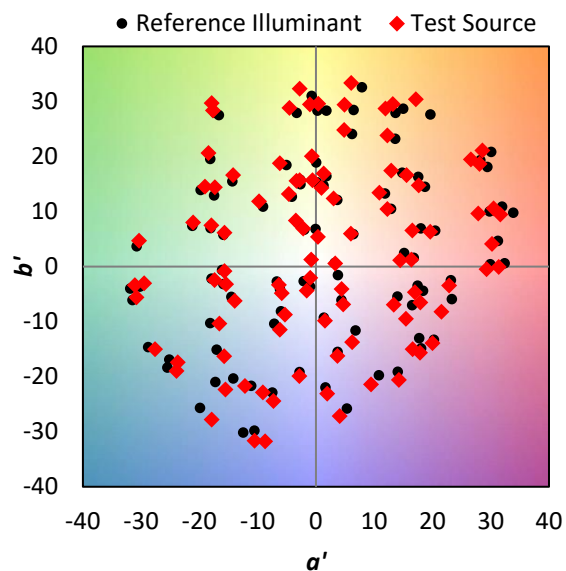


REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	

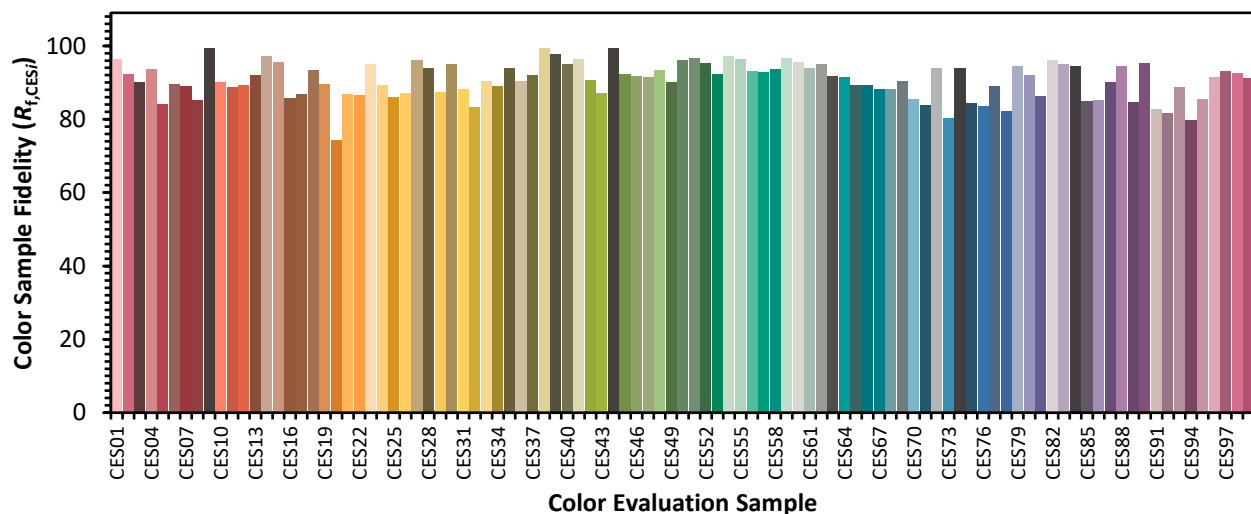

REPORT NUMBER: SP1-2304-001-2

TM-30-18



Color Rendition by Hue-Angle Bin

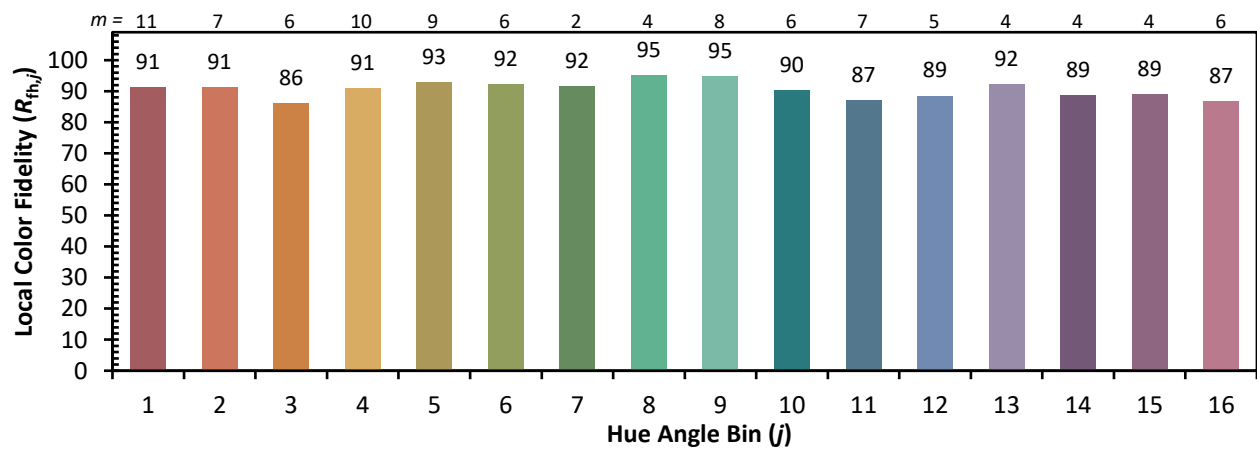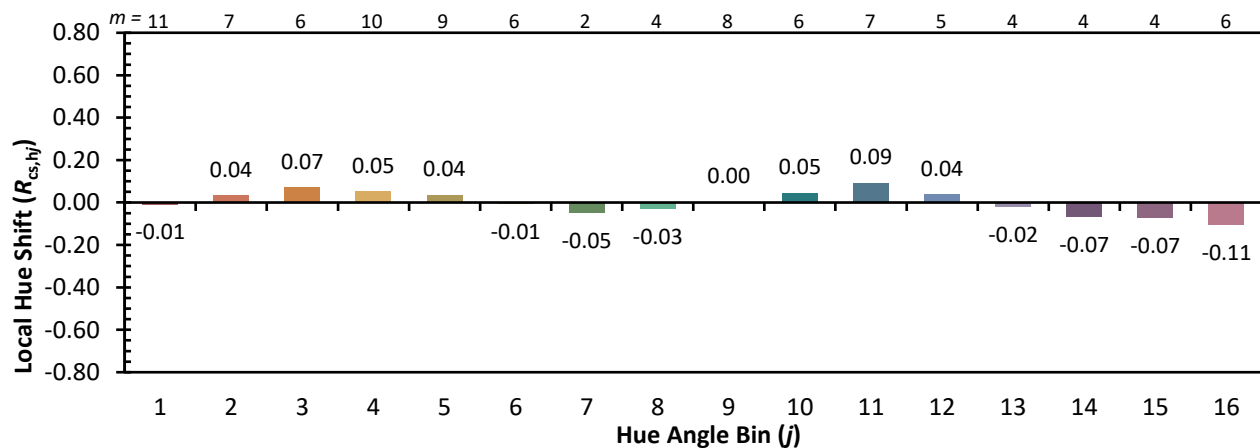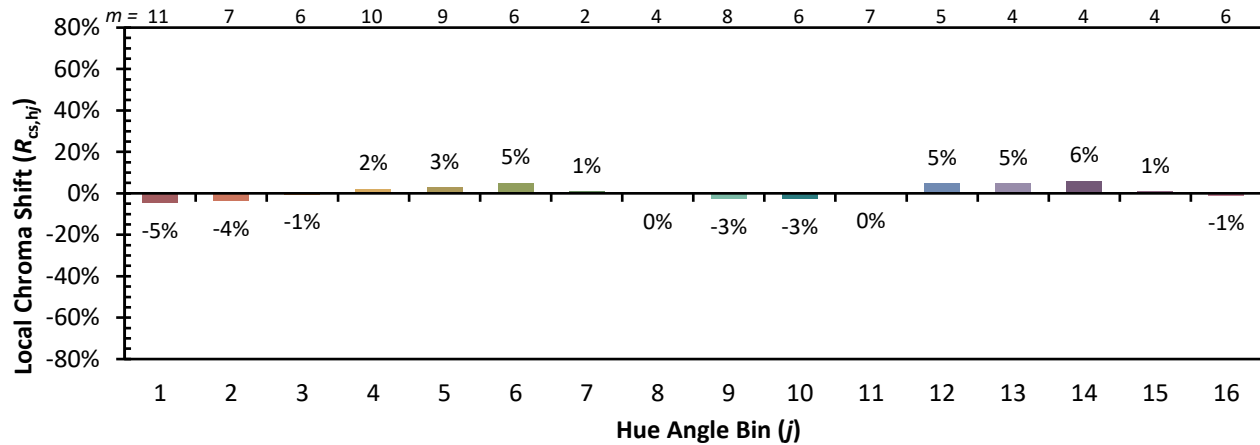

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons

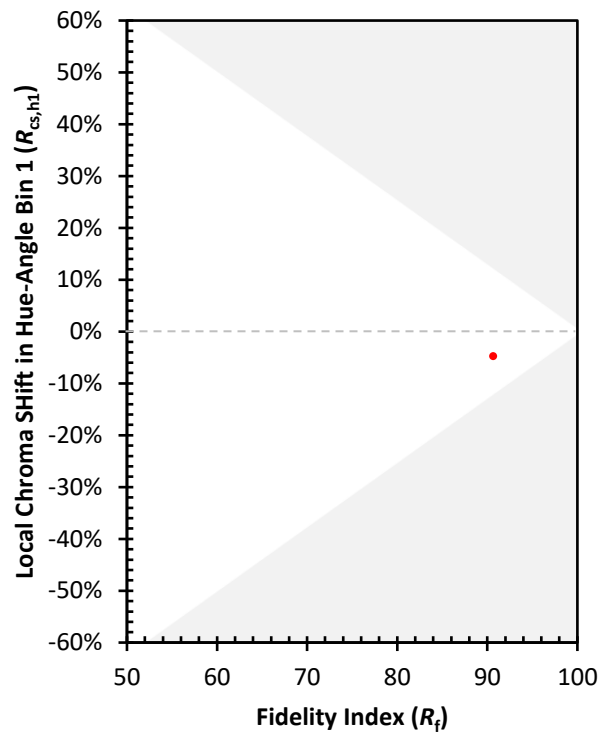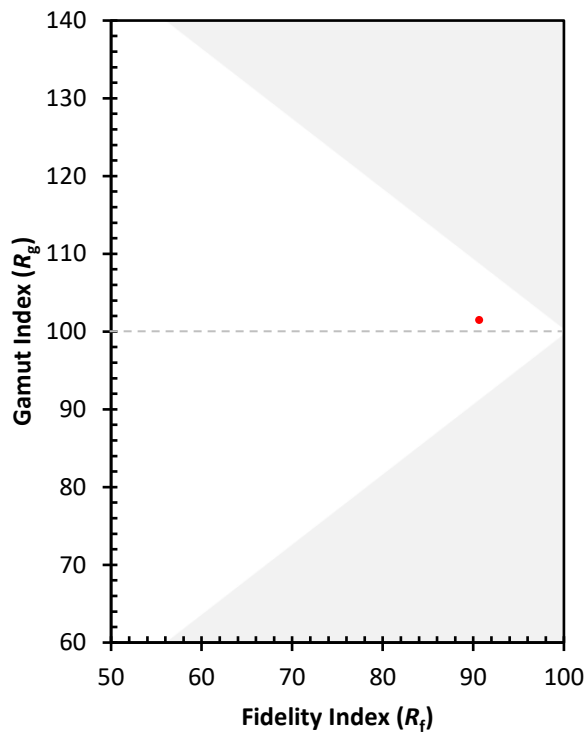

(END OF REPORT)