

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P859841

Luminaire Tested: **SPHB-12HE-N-L850-CD**

Issue Date: 7/11/2024

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been influenced by sources from within Cooper Lighting Solutions or from external interests.



Test Information

Test Method: LM-79-08
Report Number: P859841
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2404-343-7)
Test Lab: INNOVATION CENTER
Issue Date: 7/11/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: SPHB-12HE-N-L850-CD
Description: 12000 Lumen High Efficacy Select Pro High Bay with Narrow Lens and,
5000K 80CRI LEDs
Light Source: -
Ballast/Driver: -

Luminaire Equipment: Sample No. Condition Description

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 12054.0 lumens
Efficiency: N/A
Efficacy: 169.5 lumens/watt
Spacing Criteria (0/90/45): 1.16 / 0.54 / 0.94
Luminous Opening: Rectangular (W 1' x L: 1.38' x H: 0')
CIE Type: Direct

Input Watts (W): 71.1
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P859841

CATALOG NUMBER: SPHB-12HE-N-L850-CD

Luminous Intensity Polar Plot

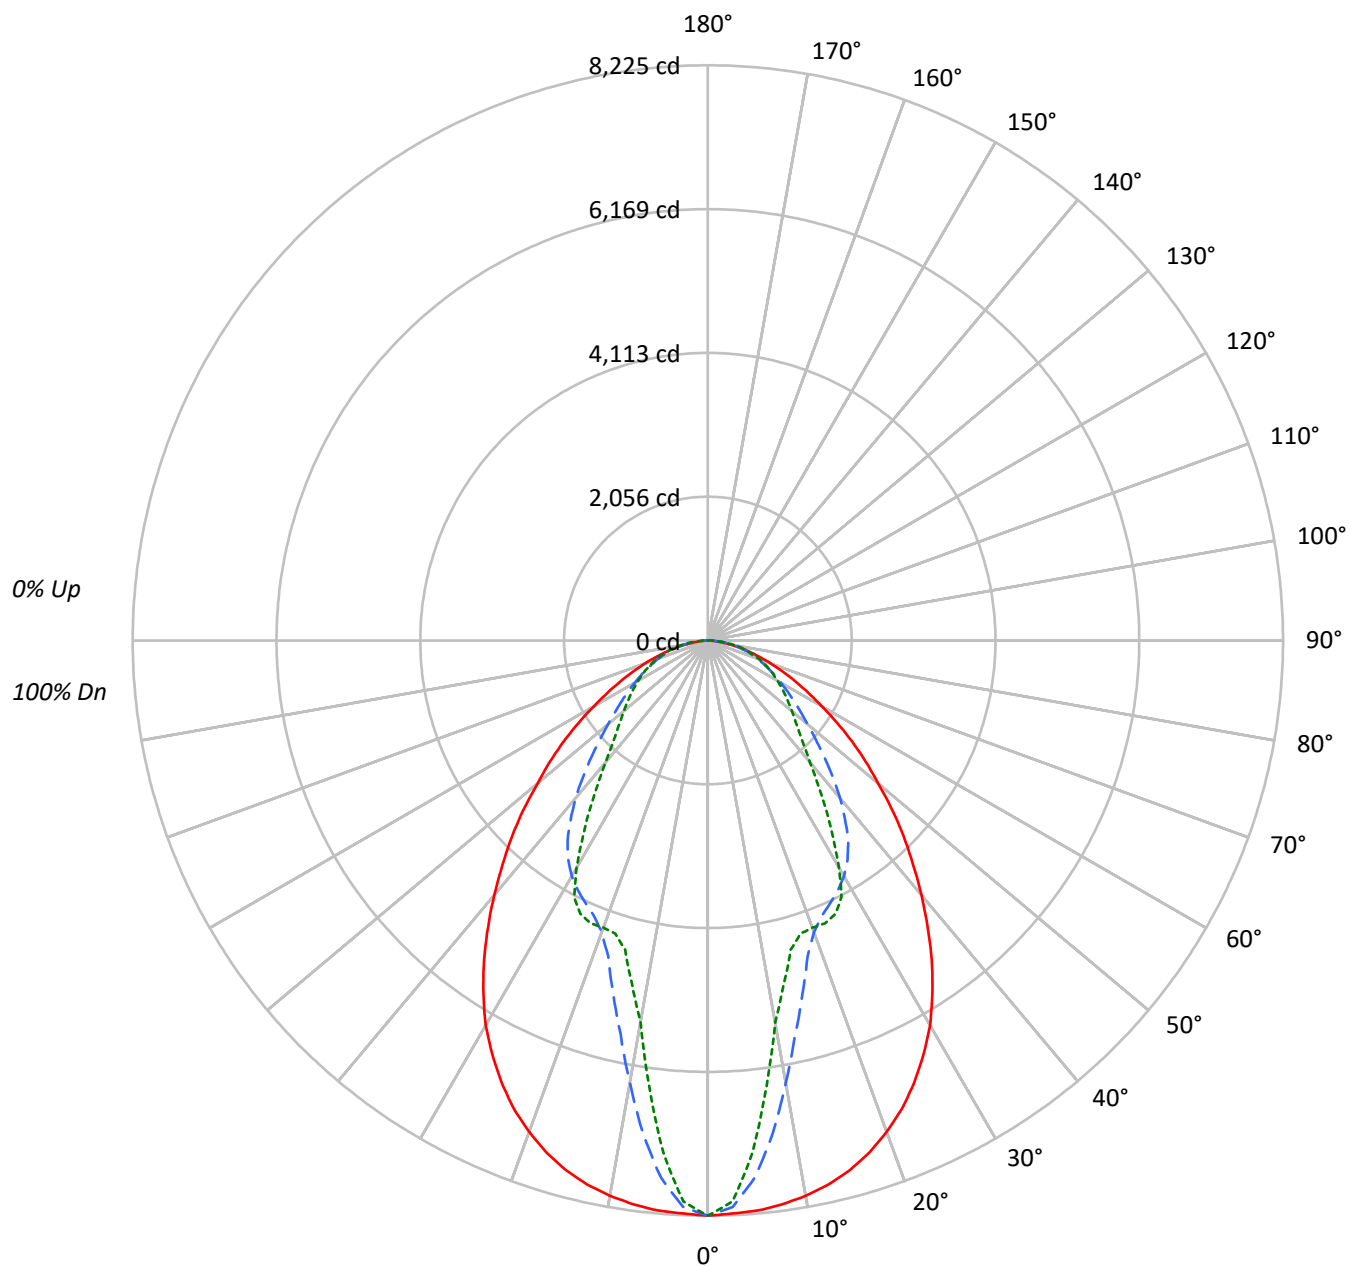



TEST NUMBER: P859841

CATALOG NUMBER: SPHB-12HE-N-L850-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	110	106	102	98	107	103	100	97	99	96	94	95	93	91	92	90	88	86		
2	101	94	88	83	99	92	86	82	88	84	80	85	81	78	82	79	76	74		
3	93	84	76	71	91	82	75	70	79	73	69	77	72	68	74	70	66	64		
4	86	75	67	61	84	74	67	61	72	65	60	69	64	59	67	62	58	56		
5	80	68	60	54	78	67	59	54	65	58	53	63	57	53	61	56	52	50		
6	74	62	54	48	73	61	54	48	60	53	47	58	52	47	56	51	47	45		
7	70	57	49	43	68	56	49	43	55	48	43	53	47	43	52	46	42	40		
8	65	53	45	39	64	52	44	39	51	44	39	49	43	39	48	43	38	37		
9	61	49	41	36	60	48	41	36	47	40	36	46	40	35	45	39	35	34		
10	58	45	38	33	56	45	38	33	44	37	33	43	37	33	42	37	33	31		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	64152	64152	64152
5°	64077	60361	57505
10°	63859	50879	43862
15°	63327	42235	36962
20°	62051	36816	36284
25°	60057	35621	37134
30°	57218	35050	33795
35°	53127	33307	28004
40°	48377	29901	23125
45°	43669	25945	20300
50°	38537	22561	19010
55°	34197	20346	18299
60°	29306	18817	17924
65°	25366	17685	17834
70°	21709	17011	17813
75°	18224	16518	17654
80°	13902	15964	17289
85°	9102	14158	13317



TEST NUMBER: P859841

CATALOG NUMBER: SPHB-12HE-N-L850-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	701.2	5.8
10°-20°	1610.1	13.4
20°-30°	2176.0	18.1
30°-40°	2290.1	19.0
40°-50°	1943.2	16.1
50°-60°	1505.3	12.5
60°-70°	1048.4	8.7
70°-80°	600.3	5.0
80°-90°	174.7	1.4
90°-100°	4.7	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	4487.3	37.2
0°-40°	6777.4	56.2
0°-60°	10225.9	84.8
0°-90°	12049.3	100.0
90°-120°	4.7	0.0
90°-150°	4.7	0.0
90°-180°	5.0	0.0
0°-180°	12054.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	8225	8225	8225	8225	8225	
5°	8184	8034	7709	7413	7344	777
15°	7842	6656	5230	4708	4577	2207
25°	6978	4930	4139	4259	4315	3203
35°	5579	3791	3498	3160	2941	3478
45°	3959	2847	2352	1933	1840	3049
55°	2515	1918	1496	1360	1346	2248
65°	1374	1125	958	958	966	1373
75°	605	538	548	583	586	645
85°	102	132	158	149	149	129
90°	1	12	23	30	31	6
95°	1	2	4	4	3	0
105°	0	0	0	0	0	0
115°	0	0	0	0	0	0
125°	0	0	0	0	0	0
135°	0	0	0	0	0	0
145°	0	0	0	0	0	0
155°	0	0	0	0	0	0
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P859841

CATALOG NUMBER: SPHB-12HE-N-L850-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	8224.7	8224.7	8224.7	8224.7	8224.7
2.5°	8200.8	8173.8	8107.9	8065.2	8031.9
5°	8183.8	8033.8	7709.2	7413.4	7344.4
7.5°	8133.0	7803.3	7109.5	6562.6	6424.5
10°	8062.7	7472.4	6423.9	5738.9	5537.9
12.5°	7969.1	7118.9	5767.1	5121.6	5023.1
15°	7842.3	6656.2	5230.3	4707.9	4577.3
17.5°	7677.8	6177.8	4734.9	4432.9	4396.4
20°	7475.6	5738.9	4435.4	4332.4	4371.3
22.5°	7248.3	5312.5	4261.4	4304.8	4377.6
25°	6978.3	4929.5	4139.0	4258.9	4314.8
27.5°	6675.0	4583.6	4026.6	4136.5	4136.5
30°	6352.9	4295.4	3891.6	3881.6	3752.2
32.5°	5976.8	4050.5	3715.2	3516.2	3324.0
35°	5579.4	3791.2	3497.9	3159.5	2941.0
37.5°	5162.5	3550.1	3222.9	2776.5	2573.1
40°	4751.2	3312.1	2936.6	2432.4	2271.1
42.5°	4341.8	3069.7	2638.4	2153.6	2026.2
45°	3958.8	2846.8	2352.1	1932.6	1840.3
47.5°	3569.5	2610.1	2087.7	1754.9	1690.9
50°	3175.8	2370.3	1859.2	1613.7	1566.6
52.5°	2844.3	2146.7	1665.1	1479.9	1451.7
55°	2514.7	1917.6	1496.2	1360.0	1345.6
57.5°	2187.5	1704.1	1341.8	1250.1	1247.0
60°	1878.6	1504.4	1206.2	1155.9	1149.0
62.5°	1615.5	1306.0	1077.4	1053.6	1056.7
65°	1374.4	1125.2	958.2	958.2	966.3
67.5°	1150.9	958.8	848.9	863.3	874.6
70°	951.9	808.1	745.9	771.0	781.1
72.5°	763.5	668.1	647.3	675.0	683.1
75°	604.7	537.5	548.1	582.7	585.8
77.5°	448.3	423.2	450.8	488.5	495.4
80°	309.5	312.1	355.4	381.8	384.9
82.5°	199.7	217.9	266.2	280.0	275.0
85°	101.7	131.9	158.2	148.8	148.8
87.5°	38.9	57.1	67.2	79.1	83.5
90°	0.6	11.9	23.2	29.5	30.8
92.5°	0.6	3.1	5.0	5.7	5.0
95°	0.6	1.9	3.8	3.8	3.1
97.5°	0.0	0.0	0.0	0.0	0.0
100°	0.0	0.0	0.0	0.0	0.0
102.5°	0.0	0.0	0.0	0.0	0.0
105°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P859841

CATALOG NUMBER: SPHB-12HE-N-L850-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	0.0	0.0	0.0	0.0	0.0
115°	0.0	0.0	0.0	0.0	0.0
117.5°	0.0	0.0	0.0	0.0	0.0
120°	0.0	0.0	0.0	0.0	0.0
122.5°	0.0	0.0	0.0	0.0	0.0
125°	0.0	0.0	0.0	0.0	0.0
127.5°	0.0	0.0	0.0	0.0	0.0
130°	0.0	0.0	0.0	0.0	0.0
132.5°	0.0	0.0	0.0	0.0	0.0
135°	0.0	0.0	0.0	0.0	0.0
137.5°	0.0	0.0	0.0	0.0	0.0
140°	0.0	0.0	0.0	0.0	0.0
142.5°	0.0	0.0	0.0	0.0	0.0
145°	0.0	0.0	0.0	0.0	0.0
147.5°	0.0	0.0	0.0	0.0	0.0
150°	0.0	0.0	0.0	0.0	0.0
152.5°	0.0	0.0	0.0	0.0	0.0
155°	0.0	0.0	0.0	0.0	0.0
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	0.0	0.0	0.0	0.0	0.0
110°	0.0	0.0	0.0	0.0	0.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2309-187-6

Test Date: 10/10/2023

Luminaire Tested: SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)


Data in this report applies to families of products including SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K).

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2309-187-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/10/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)**
 Description: SPHB SELECT, MEDIUM LENS, 36K LUMENS, 5000K

Spectral Parameters

CCT (K):	4957	CRI (Ra):	83.0		
CIE u':	0.2117	R1:	81.6	R9:	13.4
CIE v':	0.4855	R2:	88.2	R10:	70.8
Duv:	0.0002	R3:	91.8	R11:	80.4
CIE x:	0.3463	R4:	82.0	R12:	55.2
CIE y:	0.3530	R5:	81.2	R13:	83.4
CIE z:	0.3007	R6:	82.2	R14:	95.6
Peak Wavelength (nm):	452	R7:	88.1		
Dominant Wavelength (nm):	573	R8:	69.2		
Purity:	10				
Rf:	83				
Rg:	96.6				

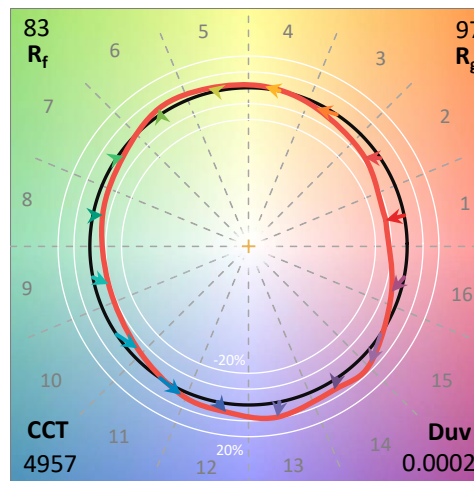

Test Conditions


Stabilization Time: 10M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.8/38%
 Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2309-187-6


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/9/2023	2/9/2024
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2309-187-6

CIE 1931 Chromaticity Diagram

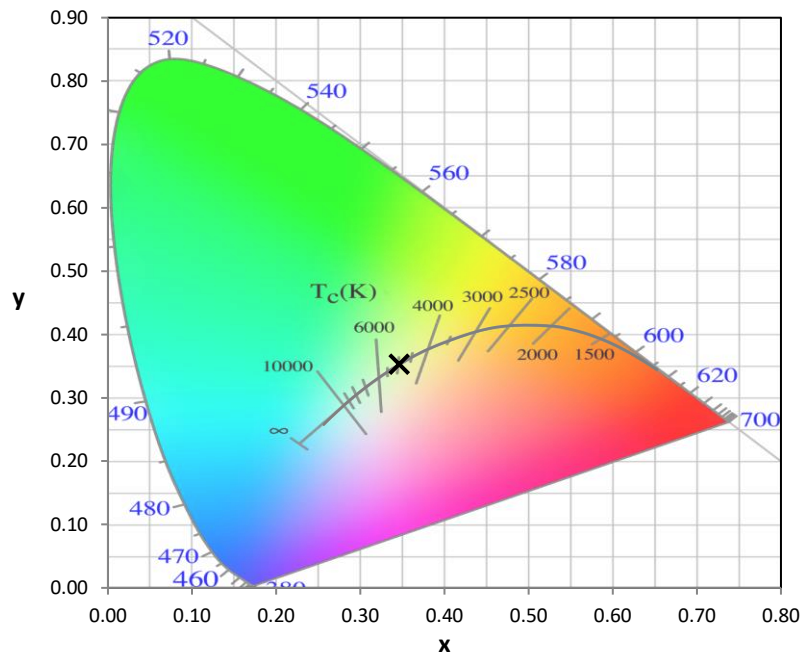


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

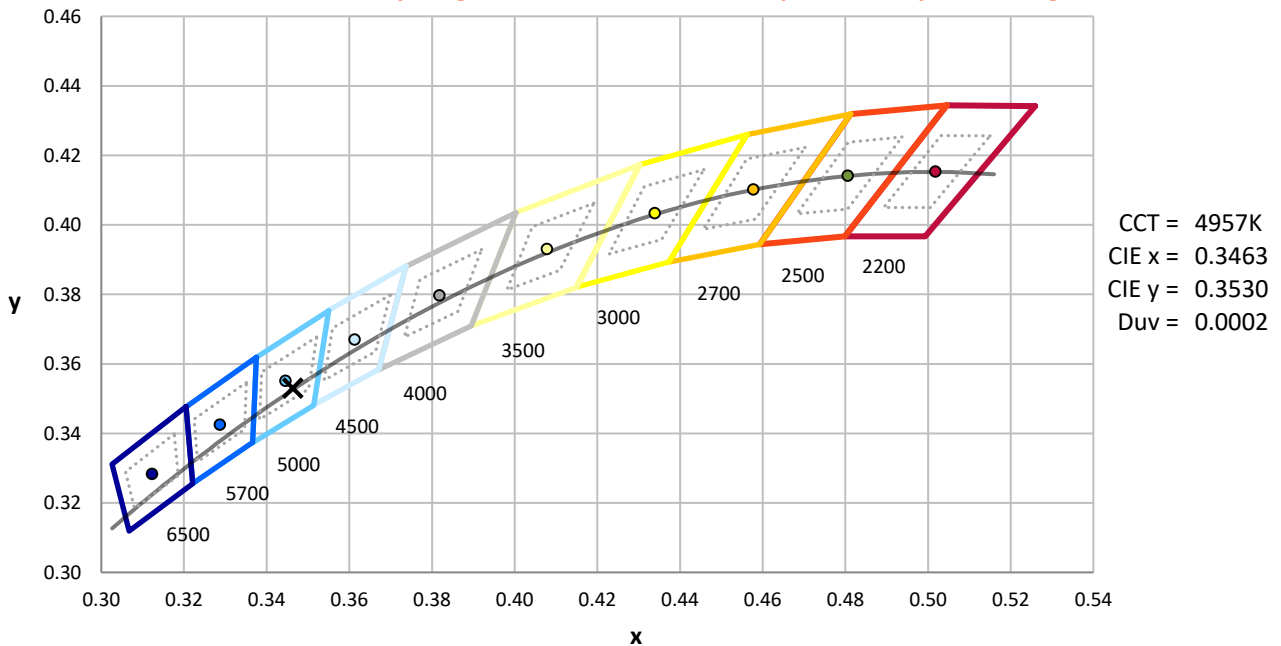

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2309-187-6

Photopic Flux vs. Wavelength

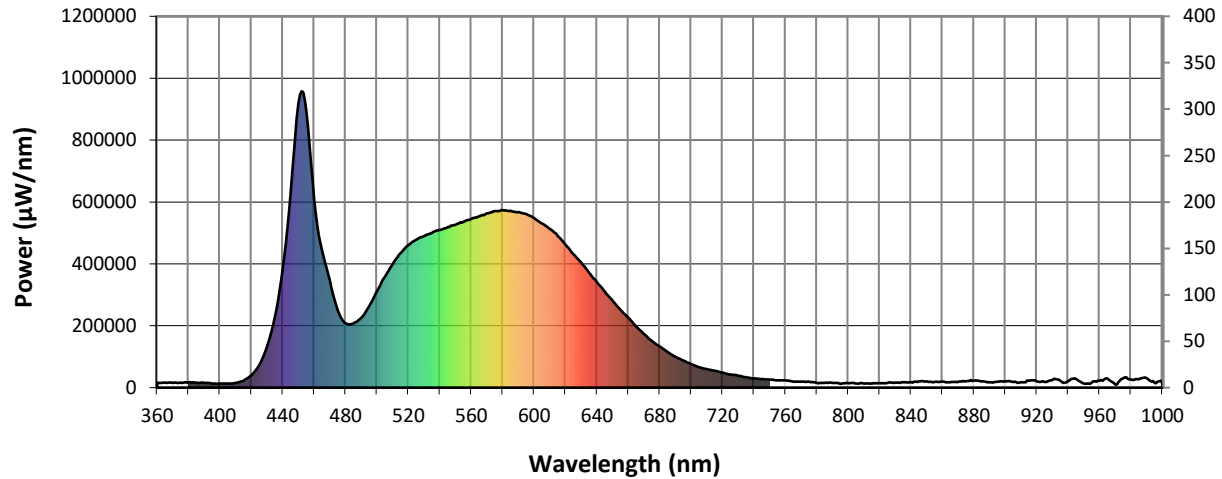


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Scotopic Flux vs. Wavelength

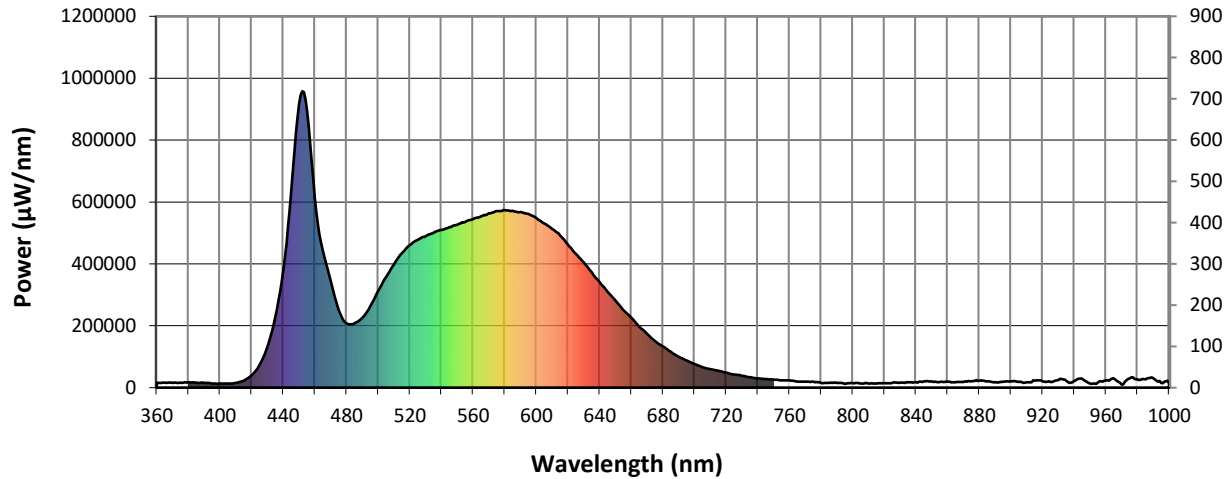


Scotopic Lumens: 69332.4

S/P: 1.93

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Melanopic Flux vs. Wavelength

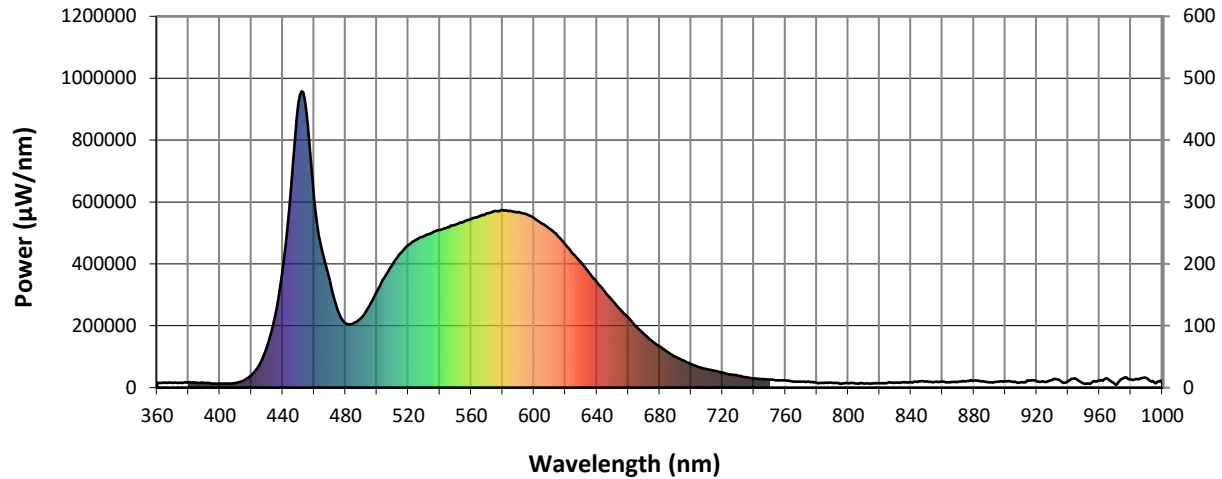

Melanopic Lumens: 29078.2 M/P: 0.81


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6





TM-30-18

Summary

$R_f = 83$
 $R_g = 96.6$
 CIE $R_a = 83.0$
 $R_9 = 13.4$

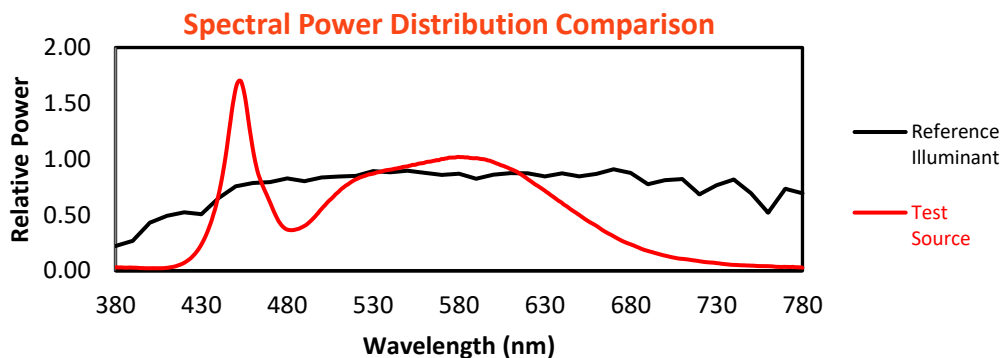

Color Vector Graphics

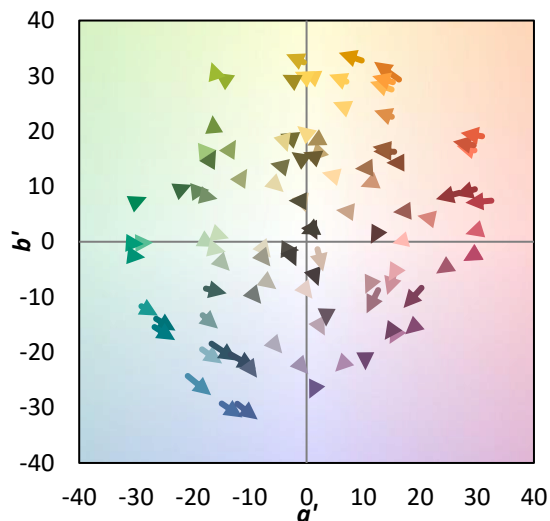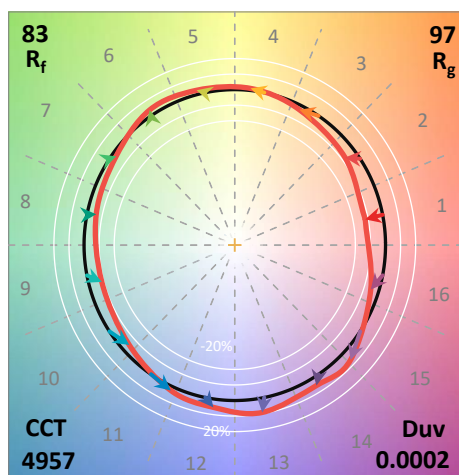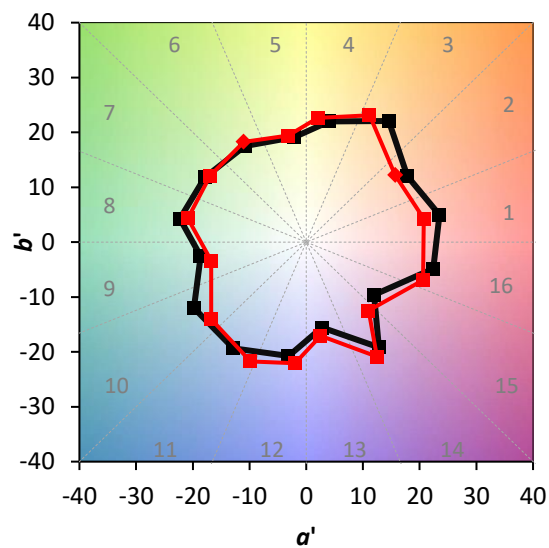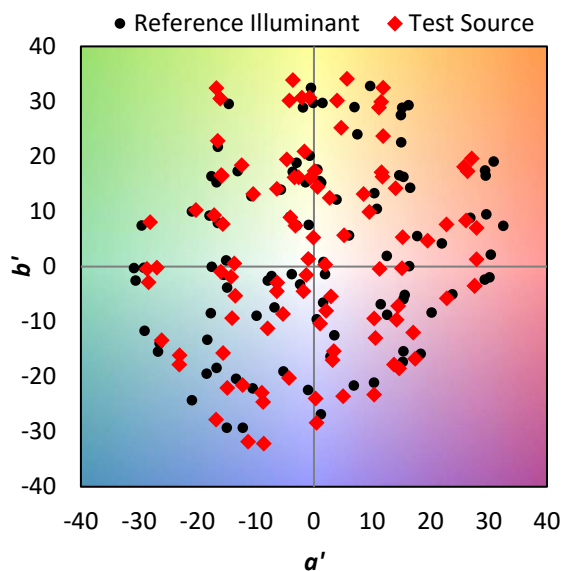


REPORT NUMBER: SP1-2309-187-6

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 85	CES26 = 78	CES51 = 94	CES76 = 69
CES02 = 60	CES27 = 93	CES52 = 94	CES77 = 78
CES03 = 30	CES28 = 88	CES53 = 89	CES78 = 69
CES04 = 69	CES29 = 83	CES54 = 90	CES79 = 89
CES05 = 47	CES30 = 96	CES55 = 88	CES80 = 86
CES06 = 50	CES31 = 85	CES56 = 85	CES81 = 85
CES07 = 40	CES32 = 77	CES57 = 84	CES82 = 94
CES08 = 39	CES33 = 92	CES58 = 84	CES83 = 95
CES09 = 29	CES34 = 81	CES59 = 91	CES84 = 89
CES10 = 73	CES35 = 89	CES60 = 90	CES85 = 80
CES11 = 56	CES36 = 84	CES61 = 87	CES86 = 80
CES12 = 62	CES37 = 87	CES62 = 83	CES87 = 84
CES13 = 42	CES38 = 93	CES63 = 83	CES88 = 89
CES14 = 74	CES39 = 98	CES64 = 76	CES89 = 80
CES15 = 71	CES40 = 95	CES65 = 75	CES90 = 90
CES16 = 46	CES41 = 99	CES66 = 72	CES91 = 72
CES17 = 49	CES42 = 87	CES67 = 70	CES92 = 68
CES18 = 56	CES43 = 86	CES68 = 75	CES93 = 80
CES19 = 71	CES44 = 99	CES69 = 80	CES94 = 66
CES20 = 64	CES45 = 92	CES70 = 70	CES95 = 73
CES21 = 85	CES46 = 91	CES71 = 63	CES96 = 84
CES22 = 77	CES47 = 95	CES72 = 88	CES97 = 91
CES23 = 91	CES48 = 88	CES73 = 63	CES98 = 86
CES24 = 90	CES49 = 90	CES74 = 91	CES99 = 77
CES25 = 71	CES50 = 94	CES75 = 65	

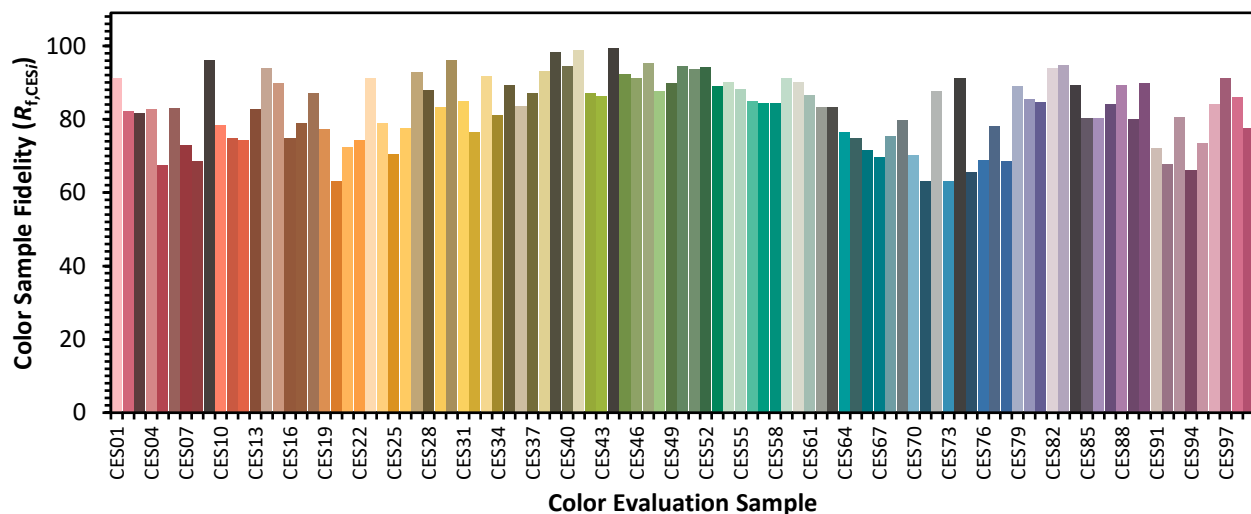

REPORT NUMBER: SP1-2309-187-6

TM-30-18



Color Rendition by Hue-Angle Bin

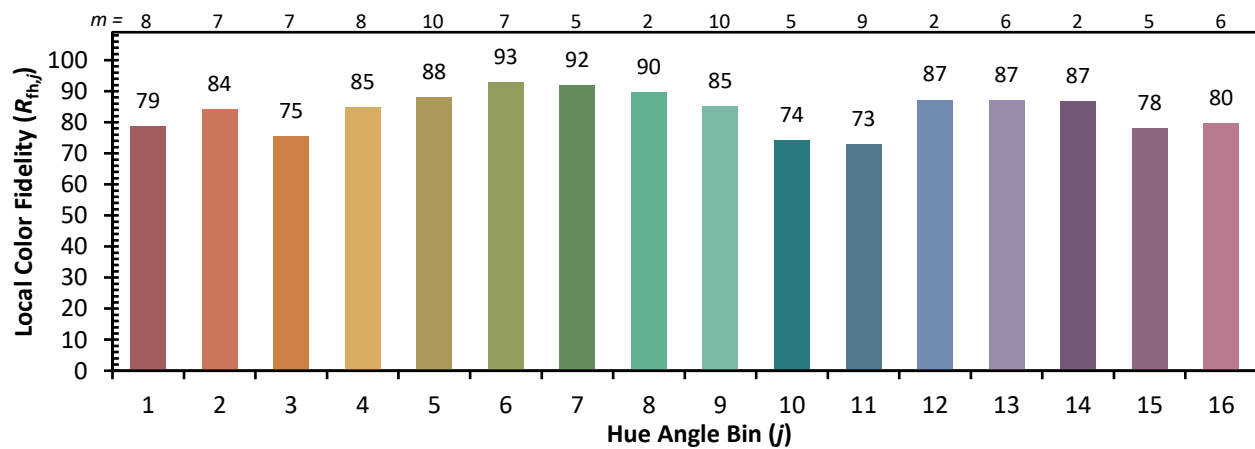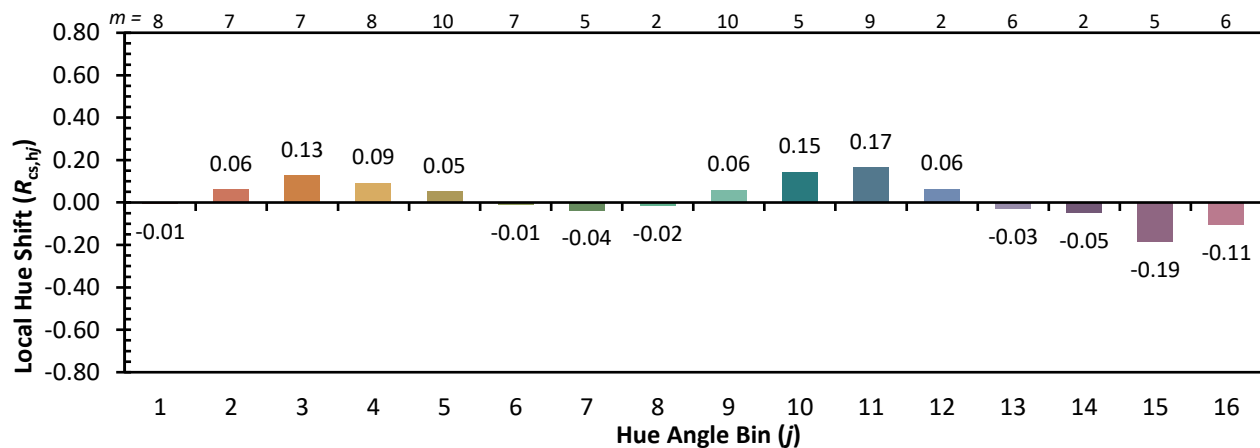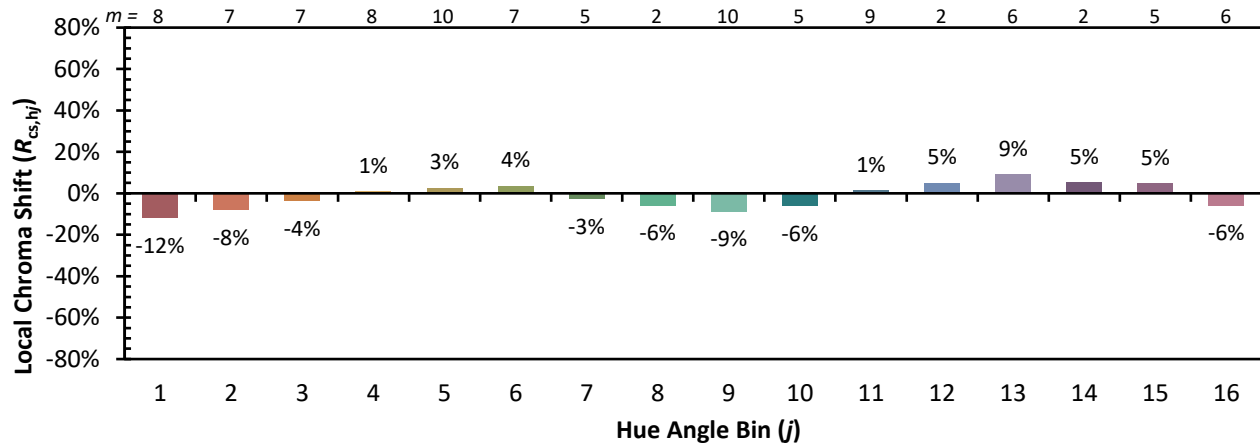

REPORT NUMBER: SP1-2309-187-6

TM-30-18

Measure Comparisons

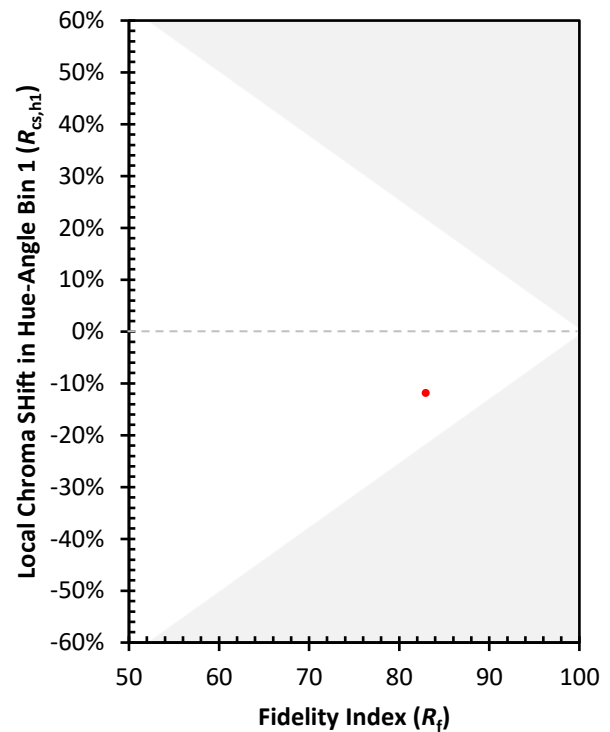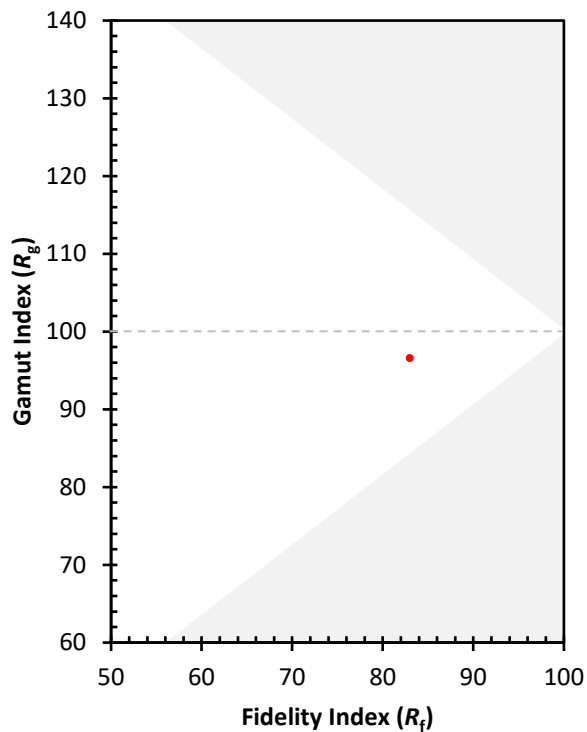

(END OF REPORT)