

Scaled data based on original data using
LM-79-2024 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: PrentaLux

Report Number: P1503692

Luminaire Tested: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)

Issue Date: 7/28/2026

Test Information

Test Method: LM-79-2024
Report Number: P1503692
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2606-836-14)
Test Lab: INNOVATION CENTER
Issue Date: 7/28/2026
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: PrentaLux
Catalog Number: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)
Description: PrentaLux Fluxyn SM4 SURFACE MOUNT, DISC, OPEN CYLINDER, BRONZE REFLECTOR
LIGHT LEVEL 3 - 1000 NOMINAL LUMENS
Light Source: SELECTABLE CCT - 4000K CCT, 90 CRI
Ballast/Driver: ELECTRONIC DRIVER

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 699.6 lumens
Efficiency: N/A
Efficacy: 64.8 lumens/watt
Spacing Criteria (0/90/45): 1.06 / 1.06 / 1.14
Luminous Opening: Circular (Dia: 0.67' x H: 0')
CIE Type: Direct

Input Watts (W): 10.8
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 24 FT

TEST NUMBER: P1503692

CATALOG NUMBER: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)

Luminous Intensity Polar Plot

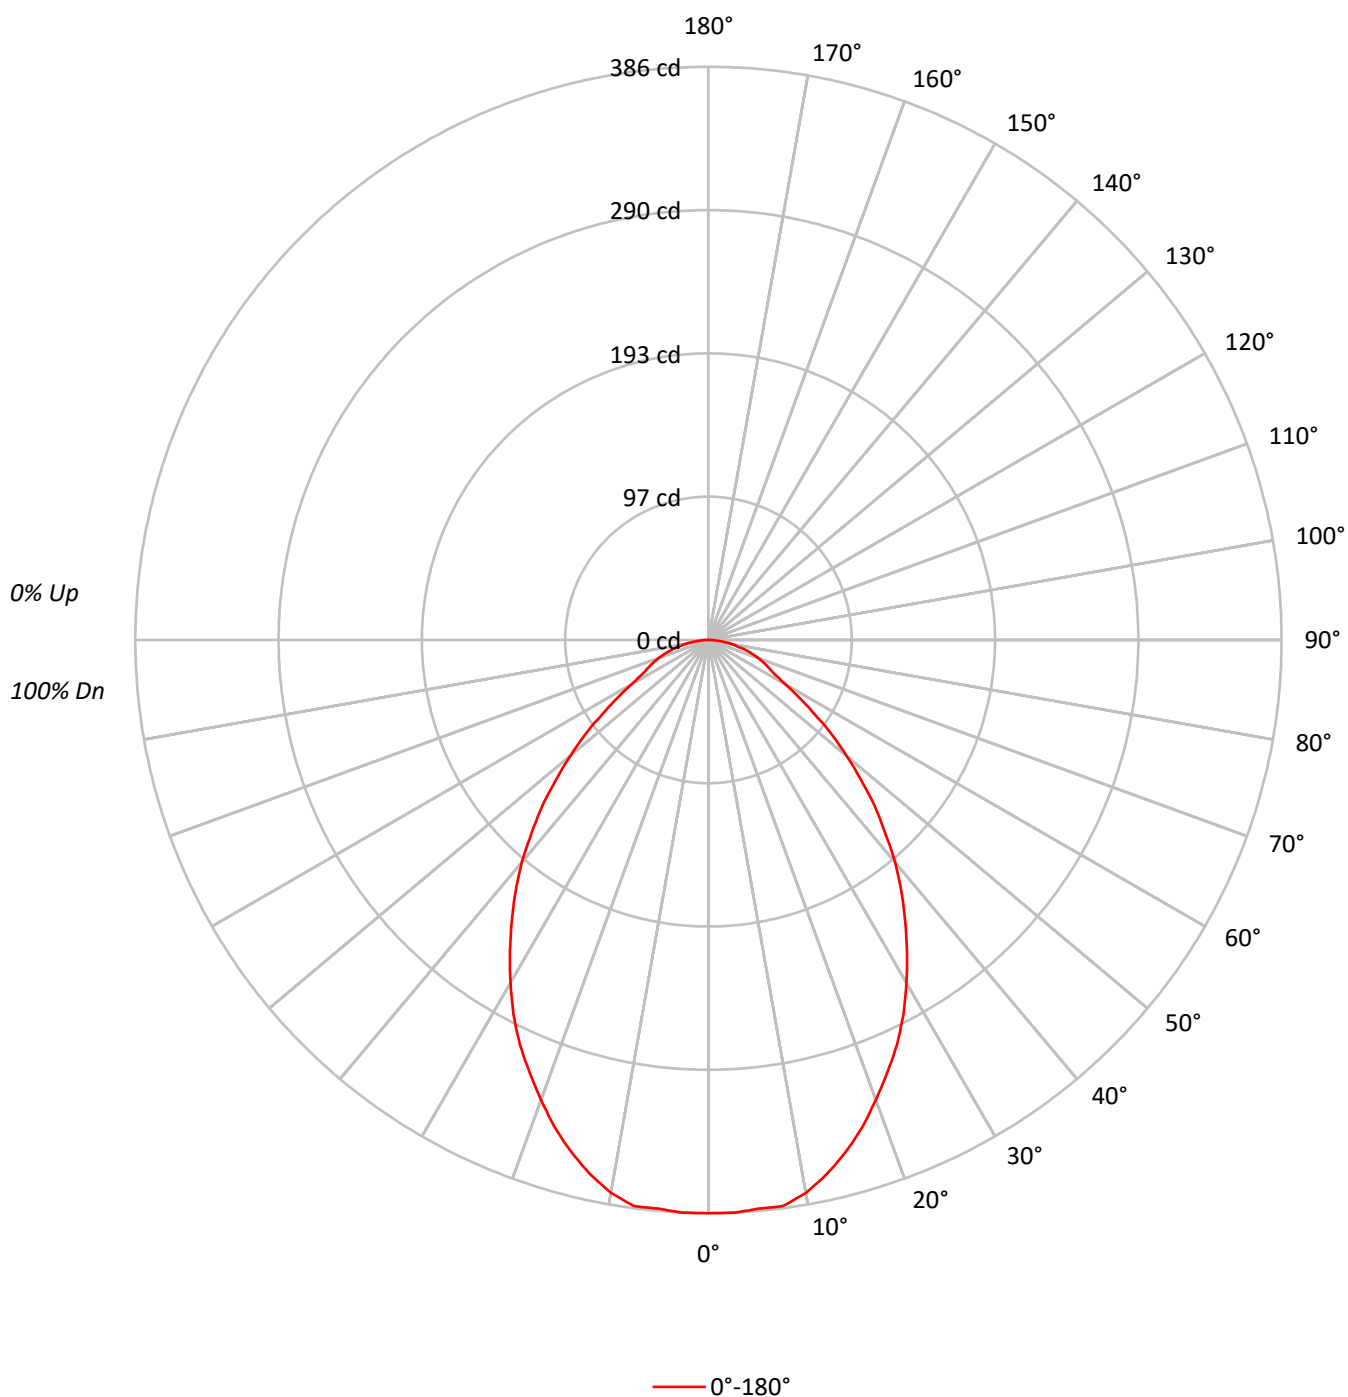



TEST NUMBER: P1503692

CATALOG NUMBER: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20					20					20					20					20					
RC	80					70					50					30					10					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10	0		
RCR																										
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100								
1	111	107	103	100	108	104	101	98	100	97	95	96	94	92	93	91	89	87								
2	102	95	89	84	100	93	88	83	90	85	82	87	83	80	84	81	78	76								
3	94	85	78	73	92	84	77	72	81	75	71	78	74	70	76	72	69	67								
4	88	77	69	64	85	76	69	63	73	67	62	71	66	61	69	65	61	59								
5	81	70	62	56	79	69	61	56	67	60	55	65	59	55	63	58	54	52								
6	76	64	56	50	74	63	55	50	61	55	50	60	54	49	58	53	49	47								
7	71	59	51	45	69	58	50	45	56	50	45	55	49	44	54	48	44	42								
8	66	54	46	41	65	53	46	41	52	45	41	51	45	40	50	44	40	38								
9	62	50	42	37	61	49	42	37	48	42	37	47	41	37	46	41	37	35								
10	59	46	39	34	57	46	39	34	45	39	34	44	38	34	43	38	34	32								

AVERAGE LUMINANCE (cd/sqm):

	0°
0°	11906
5°	11902
10°	11839
15°	11400
20°	10816
25°	10224
30°	9493
35°	8696
40°	7870
45°	6903
50°	5814
55°	4688
60°	3688
65°	3298
70°	3201
75°	3074
80°	2877
85°	2300

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 6903 cd/sqm

TEST NUMBER: P1503692

CATALOG NUMBER: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	36.6	5.2
10°-20°	100.2	14.3
20°-30°	137.8	19.7
30°-40°	144.3	20.6
40°-50°	121.5	17.4
50°-60°	79.2	11.3
60°-70°	45.4	6.5
70°-80°	26.8	3.8
80°-90°	7.9	1.1
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	274.5	39.2
0°-40°	418.8	59.9
0°-60°	619.5	88.5
0°-90°	699.6	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	699.6	100.0

CANDELA DISTRIBUTION:

	0°	Flux
0°	386	
5°	384	37
15°	357	100
25°	300	138
35°	231	144
45°	158	122
55°	87	79
65°	45	45
75°	26	27
85°	6	8
90°	0	

TEST NUMBER: P1503692

CATALOG NUMBER: PRLX-SM4-03-LS-FS-010-XXXX-BRNZ-XX-OC (4000K-1000LM)

CANDELA DISTRIBUTION (FULL):

	0°
0°	386.1
2.5°	386.1
5°	384.5
7.5°	384.5
10°	378.1
12.5°	368.4
15°	357.1
17.5°	344.1
20°	329.6
22.5°	315.0
25°	300.5
27.5°	284.3
30°	266.6
32.5°	248.8
35°	231.0
37.5°	213.3
40°	195.5
42.5°	176.1
45°	158.3
47.5°	138.9
50°	121.2
52.5°	105.0
55°	87.2
57.5°	72.7
60°	59.8
62.5°	50.1
65°	45.2
67.5°	40.4
70°	35.5
72.5°	30.7
75°	25.8
77.5°	19.4
80°	16.2
82.5°	11.3
85°	6.5
87.5°	3.2
90°	0.0

(END OF REPORT)