

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1217129

Luminaire Tested: 14-ID2-45-CNC-L950-U

Issue Date: 12/5/2025


**Test Information**

Test Method: LM-79-2019  
Report Number: P1217129  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2508-507-17)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 14-ID2-45-CNC-L950-U  
Description: 1X4 IN DEPTH TROFFER WITH 2INCH CURVE REGRESS LENS  
Light Source: 5000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3959.6 lumens  
Efficiency: N/A  
Efficacy: 100.0 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.19 / 1.3  
Luminous Opening: Rectangular (W 1' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 39.6  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

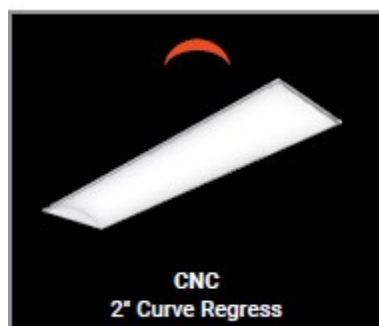

TEST NUMBER: P1217129  
CATALOG NUMBER: 14-ID2-45-CNC-L950-U

### Luminous Intensity Polar Plot

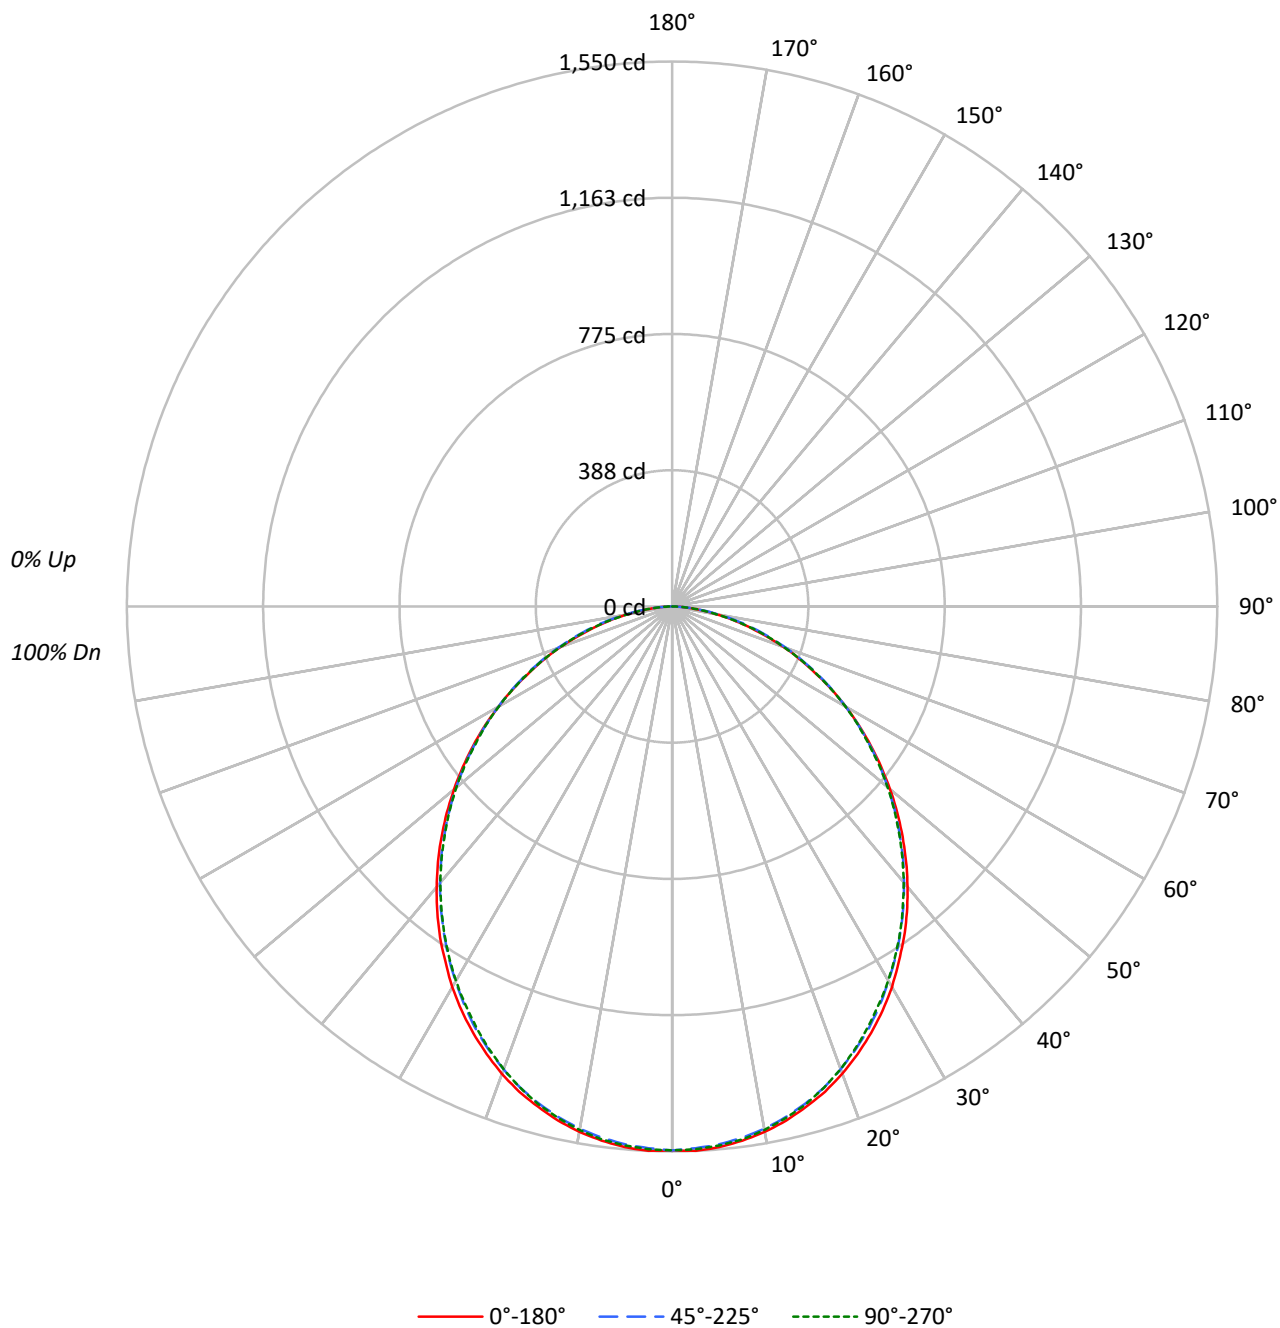

TEST NUMBER: P1217129

CATALOG NUMBER: 14-ID2-45-CNC-L950-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 104 | 100 | 97  | 106 | 102 | 98  | 95  | 98  | 95  | 92  |  | 94  | 92  | 89  |  | 84  |
| 2   | 99  | 91  | 85  | 79  | 97  | 90  | 83  | 78  | 86  | 81  | 76  |  | 83  | 78  | 75  |  | 71  |
| 3   | 91  | 81  | 73  | 66  | 88  | 79  | 72  | 66  | 76  | 70  | 64  |  | 73  | 68  | 63  |  | 60  |
| 4   | 83  | 72  | 63  | 56  | 81  | 70  | 62  | 56  | 68  | 61  | 55  |  | 65  | 59  | 54  |  | 52  |
| 5   | 77  | 64  | 55  | 49  | 75  | 63  | 55  | 48  | 61  | 54  | 48  |  | 59  | 53  | 47  |  | 45  |
| 6   | 71  | 58  | 49  | 43  | 69  | 57  | 49  | 43  | 55  | 48  | 42  |  | 53  | 47  | 42  |  | 39  |
| 7   | 66  | 53  | 44  | 38  | 64  | 52  | 44  | 38  | 50  | 43  | 37  |  | 49  | 42  | 37  |  | 35  |
| 8   | 61  | 48  | 40  | 34  | 60  | 47  | 39  | 34  | 46  | 39  | 34  |  | 45  | 38  | 33  |  | 31  |
| 9   | 57  | 44  | 36  | 31  | 56  | 44  | 36  | 31  | 42  | 35  | 30  |  | 41  | 35  | 30  |  | 28  |
| 10  | 54  | 41  | 33  | 28  | 53  | 40  | 33  | 28  | 39  | 32  | 28  |  | 38  | 32  | 27  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 4163 | 4163 | 4163 |
| 5°  | 4170 | 4148 | 4157 |
| 10° | 4147 | 4123 | 4132 |
| 15° | 4104 | 4077 | 4085 |
| 20° | 4051 | 4012 | 4010 |
| 25° | 3974 | 3930 | 3916 |
| 30° | 3885 | 3824 | 3820 |
| 35° | 3778 | 3718 | 3713 |
| 40° | 3659 | 3604 | 3600 |
| 45° | 3528 | 3482 | 3474 |
| 50° | 3388 | 3354 | 3348 |
| 55° | 3238 | 3216 | 3200 |
| 60° | 3069 | 3069 | 3058 |
| 65° | 2863 | 2907 | 2881 |
| 70° | 2654 | 2712 | 2670 |
| 75° | 2345 | 2492 | 2394 |
| 80° | 1993 | 2149 | 1993 |
| 85° | 1497 | 1621 | 1559 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 3528 cd/sqm

TEST NUMBER: P1217129  
 CATALOG NUMBER: 14-ID2-45-CNC-L950-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 146.0  | 3.7       |
| 10°-20°   | 413.2  | 10.4      |
| 20°-30°   | 609.8  | 15.4      |
| 30°-40°   | 709.7  | 17.9      |
| 40°-50°   | 707.2  | 17.9      |
| 50°-60°   | 613.2  | 15.5      |
| 60°-70°   | 449.8  | 11.4      |
| 70°-80°   | 248.7  | 6.3       |
| 80°-90°   | 62.0   | 1.6       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1169.0 | 29.5      |
| 0°-40°    | 1878.7 | 47.4      |
| 0°-60°    | 3199.2 | 80.8      |
| 0°-90°    | 3959.6 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3959.6 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1547 | 1547  | 1547 | 1547  | 1547 |      |
| 5°  | 1544 | 1542  | 1536 | 1536  | 1539 | 146  |
| 15° | 1473 | 1470  | 1464 | 1462  | 1466 | 415  |
| 25° | 1338 | 1331  | 1324 | 1316  | 1319 | 616  |
| 35° | 1150 | 1142  | 1132 | 1126  | 1130 | 719  |
| 45° | 927  | 922   | 915  | 910   | 913  | 715  |
| 55° | 690  | 689   | 685  | 681   | 682  | 617  |
| 65° | 450  | 457   | 456  | 450   | 452  | 447  |
| 75° | 226  | 240   | 240  | 231   | 230  | 241  |
| 85° | 48   | 55    | 52   | 48    | 50   | 59   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1217129

CATALOG NUMBER: 14-ID2-45-CNC-L950-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1547.1 | 1547.1 | 1547.1 | 1547.1 | 1547.1 |
| 2.5°  | 1549.8 | 1547.8 | 1542.4 | 1542.4 | 1545.1 |
| 5°    | 1543.8 | 1541.7 | 1535.7 | 1535.7 | 1539.0 |
| 7.5°  | 1532.3 | 1531.0 | 1524.2 | 1524.2 | 1528.9 |
| 10°   | 1517.5 | 1514.8 | 1508.7 | 1508.1 | 1512.1 |
| 12.5° | 1498.0 | 1495.3 | 1488.6 | 1487.2 | 1491.2 |
| 15°   | 1473.1 | 1470.4 | 1463.6 | 1461.6 | 1466.3 |
| 17.5° | 1446.8 | 1441.4 | 1435.4 | 1431.3 | 1435.4 |
| 20°   | 1414.5 | 1409.1 | 1401.0 | 1396.3 | 1400.4 |
| 22.5° | 1378.1 | 1372.1 | 1364.0 | 1356.6 | 1361.3 |
| 25°   | 1338.4 | 1331.0 | 1323.6 | 1316.2 | 1318.9 |
| 27.5° | 1296.0 | 1287.3 | 1278.5 | 1271.8 | 1274.5 |
| 30°   | 1250.2 | 1240.8 | 1230.7 | 1225.3 | 1229.4 |
| 32.5° | 1199.1 | 1193.7 | 1182.9 | 1176.8 | 1180.2 |
| 35°   | 1149.9 | 1142.5 | 1131.7 | 1126.3 | 1130.4 |
| 37.5° | 1096.7 | 1089.3 | 1079.9 | 1073.8 | 1077.9 |
| 40°   | 1041.5 | 1034.8 | 1026.0 | 1020.0 | 1024.7 |
| 42.5° | 985.0  | 980.9  | 971.5  | 964.8  | 969.5  |
| 45°   | 927.1  | 922.4  | 914.9  | 909.6  | 912.9  |
| 47.5° | 868.5  | 864.5  | 858.4  | 852.3  | 857.0  |
| 50°   | 809.2  | 807.9  | 801.2  | 795.8  | 799.8  |
| 52.5° | 749.3  | 749.3  | 743.3  | 738.6  | 742.6  |
| 55°   | 690.1  | 688.7  | 685.4  | 681.3  | 682.0  |
| 57.5° | 630.2  | 630.2  | 627.5  | 623.4  | 626.8  |
| 60°   | 570.2  | 572.9  | 570.2  | 565.5  | 568.2  |
| 62.5° | 511.0  | 514.4  | 513.0  | 507.6  | 510.3  |
| 65°   | 449.7  | 457.1  | 456.5  | 450.4  | 452.4  |
| 67.5° | 394.5  | 400.6  | 399.9  | 394.5  | 395.9  |
| 70°   | 337.3  | 345.4  | 344.7  | 338.6  | 339.3  |
| 72.5° | 279.4  | 291.5  | 290.8  | 284.1  | 284.1  |
| 75°   | 225.5  | 240.3  | 239.7  | 230.9  | 230.3  |
| 77.5° | 177.1  | 189.9  | 188.5  | 179.1  | 179.1  |
| 80°   | 128.6  | 140.0  | 138.7  | 128.6  | 128.6  |
| 82.5° | 85.5   | 95.6   | 92.9   | 84.8   | 86.2   |
| 85°   | 48.5   | 55.2   | 52.5   | 48.5   | 50.5   |
| 87.5° | 17.5   | 21.5   | 20.9   | 17.5   | 19.5   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1217129

CATALOG NUMBER: 14-ID2-45-CNC-L950-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 16.07            | 17.68 | 16.44 | 17.99 | 18.30 | 16.00          | 17.61 | 16.37 | 17.92 | 18.24 |
|                 | 3H   | 17.75            | 19.20 | 18.13 | 19.53 | 19.89 | 17.69          | 19.14 | 18.07 | 19.47 | 19.83 |
|                 | 4H   | 18.35            | 19.71 | 18.75 | 20.06 | 20.44 | 18.30          | 19.66 | 18.70 | 20.01 | 20.39 |
|                 | 6H   | 18.76            | 20.02 | 19.17 | 20.39 | 20.78 | 18.70          | 19.97 | 19.12 | 20.33 | 20.72 |
|                 | 8H   | 18.87            | 20.08 | 19.30 | 20.47 | 20.87 | 18.82          | 20.02 | 19.24 | 20.41 | 20.81 |
|                 | 12H  | 18.94            | 20.09 | 19.37 | 20.47 | 20.90 | 18.88          | 20.04 | 19.31 | 20.42 | 20.85 |
| 4H              | 2H   | 16.67            | 18.03 | 17.07 | 18.38 | 18.76 | 16.62          | 17.98 | 17.01 | 18.33 | 18.70 |
|                 | 3H   | 18.58            | 19.72 | 18.99 | 20.12 | 20.52 | 18.52          | 19.66 | 18.93 | 20.06 | 20.46 |
|                 | 4H   | 19.31            | 20.34 | 19.74 | 20.76 | 21.19 | 19.24          | 20.27 | 19.68 | 20.69 | 21.12 |
|                 | 6H   | 19.85            | 20.75 | 20.31 | 21.19 | 21.65 | 19.76          | 20.66 | 20.22 | 21.10 | 21.56 |
|                 | 8H   | 20.01            | 20.85 | 20.47 | 21.29 | 21.76 | 19.91          | 20.75 | 20.37 | 21.19 | 21.66 |
|                 | 12H  | 20.11            | 20.86 | 20.59 | 21.34 | 21.81 | 20.01          | 20.76 | 20.49 | 21.24 | 21.71 |
| 8H              | 4H   | 19.60            | 20.44 | 20.06 | 20.89 | 21.35 | 19.54          | 20.38 | 20.00 | 20.83 | 21.29 |
|                 | 6H   | 20.26            | 20.96 | 20.75 | 21.45 | 21.92 | 20.16          | 20.86 | 20.66 | 21.35 | 21.82 |
|                 | 8H   | 20.49            | 21.11 | 21.00 | 21.62 | 22.10 | 20.37          | 20.99 | 20.88 | 21.50 | 21.98 |
|                 | 12H  | 20.65            | 21.20 | 21.15 | 21.69 | 22.25 | 20.52          | 21.07 | 21.02 | 21.56 | 22.12 |
| 12H             | 4H   | 19.63            | 20.38 | 20.11 | 20.86 | 21.33 | 19.57          | 20.33 | 20.05 | 20.80 | 21.27 |
|                 | 6H   | 20.30            | 20.93 | 20.81 | 21.44 | 21.92 | 20.21          | 20.84 | 20.72 | 21.34 | 21.83 |
|                 | 8H   | 20.58            | 21.13 | 21.09 | 21.62 | 22.19 | 20.46          | 21.02 | 20.97 | 21.51 | 22.07 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-13

Test Date: 08/27/2025

Luminaire Tested: 22ID2-55-CFR1-L950-U

Data in this report applies to families of products including 22ID2-55-CFR1-L950-U


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-13  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L950-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 5000K 90CRI

### Spectral Parameters

CCT (K): 4919  
 CIE  $u'$ : 0.2096  
 CIE  $v'$ : 0.4901  
 Duv: 0.0038  
 CIE x: 0.3483  
 CIE y: 0.3619  
 CIE z: 0.2898  
 Peak Wavelength (nm): 453  
 Dominant Wavelength (nm): 570  
 Purity: 13.10873  
 R<sub>f</sub>: 90.8  
 R<sub>g</sub>: 97.4

CRI (Ra): 94.0  
 R1: 94.8  
 R2: 97.7  
 R3: 98.4  
 R4: 90.8  
 R5: 92.2  
 R6: 94.3  
 R7: 94.0  
 R8: 90.0  
 R9: 77.7  
 R10: 93.1  
 R11: 92.0  
 R12: 65.9  
 R13: 95.9  
 R14: 99.0  
 R15: 91.4

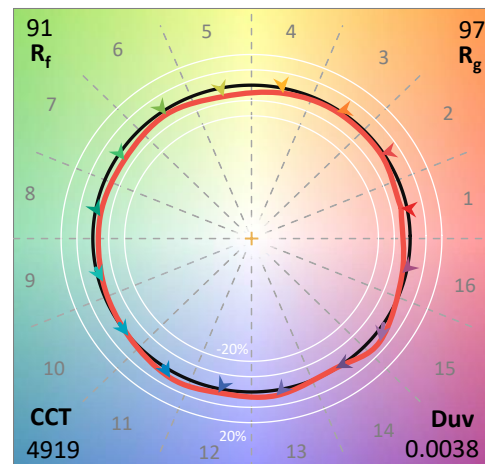

### Test Conditions


Stabilization Time: M  
 Operation Time: 1H 0M  
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP1-2506-458-13

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-13

**CIE 1931 Chromaticity Diagram**

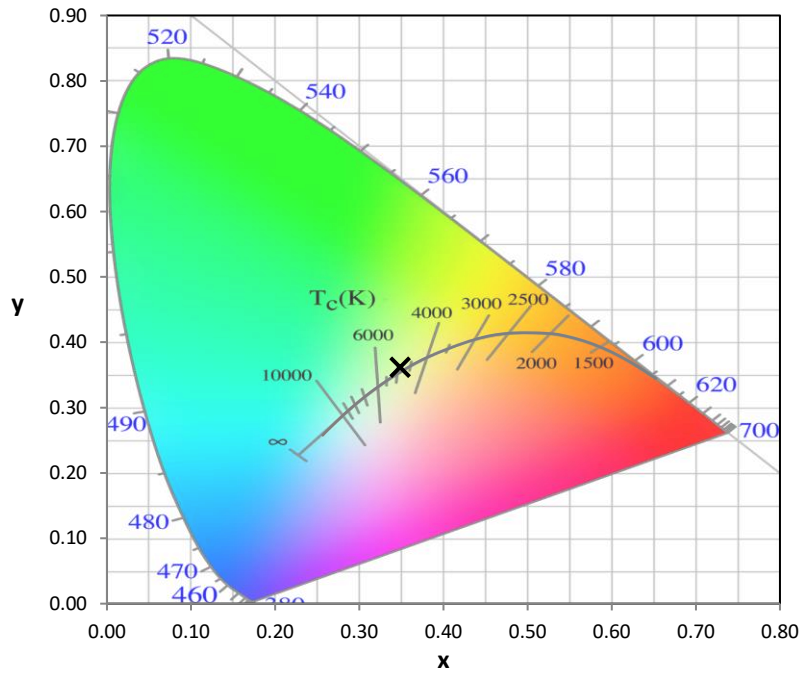

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-13

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 419                                  | NR                             | 620               | 583                                  | NR                             | 750               | 44                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 441                                  | NR                             | 625               | 580                                  | NR                             | 755               | 37                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 472                                  | NR                             | 630               | 572                                  | NR                             | 760               | 32                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 501                                  | NR                             | 635               | 559                                  | NR                             | 765               | 27                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 524                                  | NR                             | 640               | 543                                  | NR                             | 770               | 23                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 545                                  | NR                             | 645               | 522                                  | NR                             | 775               | 20                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 559                                  | NR                             | 650               | 496                                  | NR                             | 780               | 17                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 3                                    | NR                             | 525               | 572                                  | NR                             | 655               | 468                                  | NR                             | 785               | 14                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 581                                  | NR                             | 660               | 435                                  | NR                             | 790               | 12                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 7                                    | NR                             | 535               | 590                                  | NR                             | 665               | 403                                  | NR                             | 795               | 10                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 595                                  | NR                             | 670               | 368                                  | NR                             | 800               | 9                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 14                                   | NR                             | 545               | 599                                  | NR                             | 675               | 335                                  | NR                             | 805               | 8                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 23                                   | NR                             | 550               | 599                                  | NR                             | 680               | 304                                  | NR                             | 810               | 6                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 40                                   | NR                             | 555               | 599                                  | NR                             | 685               | 271                                  | NR                             | 815               | 6                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 72                                   | NR                             | 560               | 595                                  | NR                             | 690               | 243                                  | NR                             | 820               | 5                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 132                                  | NR                             | 565               | 589                                  | NR                             | 695               | 215                                  | NR                             | 825               | 4                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 243                                  | NR                             | 570               | 581                                  | NR                             | 700               | 189                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 488                                  | NR                             | 575               | 575                                  | NR                             | 705               | 165                                  | NR                             | 835               | 3                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 879                                  | NR                             | 580               | 573                                  | NR                             | 710               | 144                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 974                                  | NR                             | 585               | 570                                  | NR                             | 715               | 124                                  | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 726                                  | NR                             | 590               | 572                                  | NR                             | 720               | 108                                  | NR                             | 850               | 2                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 627                                  | NR                             | 595               | 574                                  | NR                             | 725               | 93                                   | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 546                                  | NR                             | 600               | 576                                  | NR                             | 730               | 80                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 434                                  | NR                             | 605               | 581                                  | NR                             | 735               | 69                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 395                                  | NR                             | 610               | 582                                  | NR                             | 740               | 59                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 403                                  | NR                             | 615               | 586                                  | NR                             | 745               | 51                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-13

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 2.09

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 419                         | NR               | 620       | 583                         | NR               | 750       | 44                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 441                         | NR               | 625       | 580                         | NR               | 755       | 37                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 472                         | NR               | 630       | 572                         | NR               | 760       | 32                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 501                         | NR               | 635       | 559                         | NR               | 765       | 27                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 524                         | NR               | 640       | 543                         | NR               | 770       | 23                          | NR               | 900       | 0                           | NR               |
| 385       | 0                           | NR               | 515       | 545                         | NR               | 645       | 522                         | NR               | 775       | 20                          | NR               | 905       | 0                           | NR               |
| 390       | 1                           | NR               | 520       | 559                         | NR               | 650       | 496                         | NR               | 780       | 17                          | NR               | 910       | 0                           | NR               |
| 395       | 3                           | NR               | 525       | 572                         | NR               | 655       | 468                         | NR               | 785       | 14                          | NR               | 915       | 0                           | NR               |
| 400       | 4                           | NR               | 530       | 581                         | NR               | 660       | 435                         | NR               | 790       | 12                          | NR               | 920       | 0                           | NR               |
| 405       | 7                           | NR               | 535       | 590                         | NR               | 665       | 403                         | NR               | 795       | 10                          | NR               | 925       | 0                           | NR               |
| 410       | 9                           | NR               | 540       | 595                         | NR               | 670       | 368                         | NR               | 800       | 9                           | NR               | 930       | 0                           | NR               |
| 415       | 14                          | NR               | 545       | 599                         | NR               | 675       | 335                         | NR               | 805       | 8                           | NR               | 935       | 0                           | NR               |
| 420       | 23                          | NR               | 550       | 599                         | NR               | 680       | 304                         | NR               | 810       | 6                           | NR               | 940       | 0                           | NR               |
| 425       | 40                          | NR               | 555       | 599                         | NR               | 685       | 271                         | NR               | 815       | 6                           | NR               | 945       | 0                           | NR               |
| 430       | 72                          | NR               | 560       | 595                         | NR               | 690       | 243                         | NR               | 820       | 5                           | NR               | 950       | 0                           | NR               |
| 435       | 132                         | NR               | 565       | 589                         | NR               | 695       | 215                         | NR               | 825       | 4                           | NR               | 955       | 0                           | NR               |
| 440       | 243                         | NR               | 570       | 581                         | NR               | 700       | 189                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 488                         | NR               | 575       | 575                         | NR               | 705       | 165                         | NR               | 835       | 3                           | NR               | 965       | 0                           | NR               |
| 450       | 879                         | NR               | 580       | 573                         | NR               | 710       | 144                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 974                         | NR               | 585       | 570                         | NR               | 715       | 124                         | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 726                         | NR               | 590       | 572                         | NR               | 720       | 108                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 627                         | NR               | 595       | 574                         | NR               | 725       | 93                          | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 546                         | NR               | 600       | 576                         | NR               | 730       | 80                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 434                         | NR               | 605       | 581                         | NR               | 735       | 69                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 395                         | NR               | 610       | 582                         | NR               | 740       | 59                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 403                         | NR               | 615       | 586                         | NR               | 745       | 51                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-13

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 4.55

| λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 419                      | NR            | 620    | 583                      | NR            | 750    | 44                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 441                      | NR            | 625    | 580                      | NR            | 755    | 37                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 472                      | NR            | 630    | 572                      | NR            | 760    | 32                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 501                      | NR            | 635    | 559                      | NR            | 765    | 27                       | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 524                      | NR            | 640    | 543                      | NR            | 770    | 23                       | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 545                      | NR            | 645    | 522                      | NR            | 775    | 20                       | NR            | 905    | 0                        | NR            |
| 390    | 1                        | NR            | 520    | 559                      | NR            | 650    | 496                      | NR            | 780    | 17                       | NR            | 910    | 0                        | NR            |
| 395    | 3                        | NR            | 525    | 572                      | NR            | 655    | 468                      | NR            | 785    | 14                       | NR            | 915    | 0                        | NR            |
| 400    | 4                        | NR            | 530    | 581                      | NR            | 660    | 435                      | NR            | 790    | 12                       | NR            | 920    | 0                        | NR            |
| 405    | 7                        | NR            | 535    | 590                      | NR            | 665    | 403                      | NR            | 795    | 10                       | NR            | 925    | 0                        | NR            |
| 410    | 9                        | NR            | 540    | 595                      | NR            | 670    | 368                      | NR            | 800    | 9                        | NR            | 930    | 0                        | NR            |
| 415    | 14                       | NR            | 545    | 599                      | NR            | 675    | 335                      | NR            | 805    | 8                        | NR            | 935    | 0                        | NR            |
| 420    | 23                       | NR            | 550    | 599                      | NR            | 680    | 304                      | NR            | 810    | 6                        | NR            | 940    | 0                        | NR            |
| 425    | 40                       | NR            | 555    | 599                      | NR            | 685    | 271                      | NR            | 815    | 6                        | NR            | 945    | 0                        | NR            |
| 430    | 72                       | NR            | 560    | 595                      | NR            | 690    | 243                      | NR            | 820    | 5                        | NR            | 950    | 0                        | NR            |
| 435    | 132                      | NR            | 565    | 589                      | NR            | 695    | 215                      | NR            | 825    | 4                        | NR            | 955    | 0                        | NR            |
| 440    | 243                      | NR            | 570    | 581                      | NR            | 700    | 189                      | NR            | 830    | 3                        | NR            | 960    | 0                        | NR            |
| 445    | 488                      | NR            | 575    | 575                      | NR            | 705    | 165                      | NR            | 835    | 3                        | NR            | 965    | 0                        | NR            |
| 450    | 879                      | NR            | 580    | 573                      | NR            | 710    | 144                      | NR            | 840    | 3                        | NR            | 970    | 0                        | NR            |
| 455    | 974                      | NR            | 585    | 570                      | NR            | 715    | 124                      | NR            | 845    | 2                        | NR            | 975    | 0                        | NR            |
| 460    | 726                      | NR            | 590    | 572                      | NR            | 720    | 108                      | NR            | 850    | 2                        | NR            | 980    | 0                        | NR            |
| 465    | 627                      | NR            | 595    | 574                      | NR            | 725    | 93                       | NR            | 855    | 2                        | NR            | 985    | 0                        | NR            |
| 470    | 546                      | NR            | 600    | 576                      | NR            | 730    | 80                       | NR            | 860    | 1                        | NR            | 990    | 0                        | NR            |
| 475    | 434                      | NR            | 605    | 581                      | NR            | 735    | 69                       | NR            | 865    | 1                        | NR            | 995    | 0                        | NR            |
| 480    | 395                      | NR            | 610    | 582                      | NR            | 740    | 59                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 403                      | NR            | 615    | 586                      | NR            | 745    | 51                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2506-458-13


TM-30-18

### Summary

$R_f = 90.8$   
 $R_g = 97.4$   
 $CIE R_a = 94.0$   
 $R_9 = 77.7$



### Color Vector Graphics

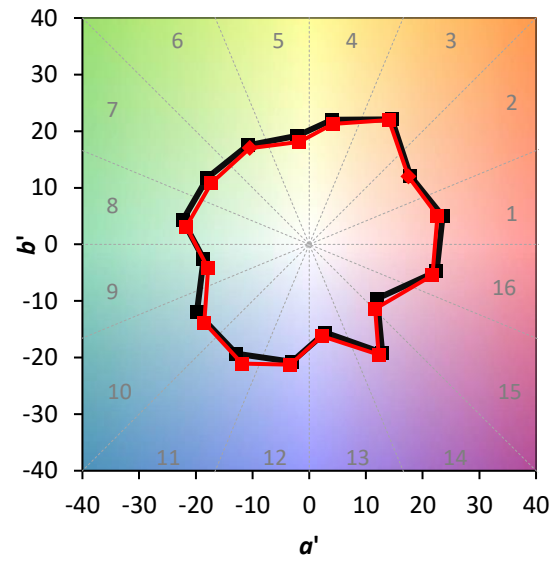


**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 98 | CES51 = 93 | CES76 = 91 |
| CES02 = 61 | CES27 = 86 | CES52 = 96 | CES77 = 89 |
| CES03 = 31 | CES28 = 98 | CES53 = 93 | CES78 = 87 |
| CES04 = 68 | CES29 = 90 | CES54 = 89 | CES79 = 97 |
| CES05 = 48 | CES30 = 80 | CES55 = 86 | CES80 = 94 |
| CES06 = 50 | CES31 = 92 | CES56 = 89 | CES81 = 89 |
| CES07 = 41 | CES32 = 97 | CES57 = 87 | CES82 = 97 |
| CES08 = 40 | CES33 = 89 | CES58 = 87 | CES83 = 96 |
| CES09 = 29 | CES34 = 98 | CES59 = 96 | CES84 = 94 |
| CES10 = 73 | CES35 = 98 | CES60 = 89 | CES85 = 84 |
| CES11 = 56 | CES36 = 74 | CES61 = 90 | CES86 = 90 |
| CES12 = 62 | CES37 = 97 | CES62 = 78 | CES87 = 92 |
| CES13 = 42 | CES38 = 75 | CES63 = 89 | CES88 = 95 |
| CES14 = 74 | CES39 = 97 | CES64 = 85 | CES89 = 90 |
| CES15 = 71 | CES40 = 97 | CES65 = 87 | CES90 = 92 |
| CES16 = 47 | CES41 = 91 | CES66 = 82 | CES91 = 69 |
| CES17 = 48 | CES42 = 99 | CES67 = 82 | CES92 = 81 |
| CES18 = 56 | CES43 = 97 | CES68 = 86 | CES93 = 88 |
| CES19 = 70 | CES44 = 99 | CES69 = 87 | CES94 = 86 |
| CES20 = 65 | CES45 = 97 | CES70 = 86 | CES95 = 83 |
| CES21 = 84 | CES46 = 94 | CES71 = 77 | CES96 = 94 |
| CES22 = 77 | CES47 = 90 | CES72 = 93 | CES97 = 97 |
| CES23 = 91 | CES48 = 83 | CES73 = 82 | CES98 = 94 |
| CES24 = 89 | CES49 = 95 | CES74 = 89 | CES99 = 92 |
| CES25 = 70 | CES50 = 94 | CES75 = 81 |            |



Color Rendition by Hue-Angle Bin

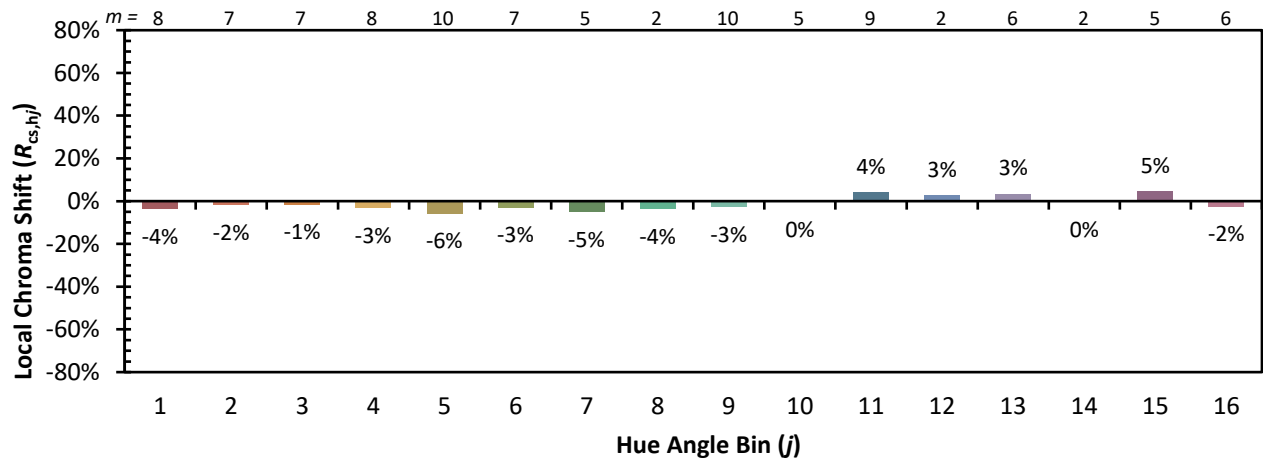

**Measure Comparisons**



(END OF REPORT)