

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1214647

Luminaire Tested: 22-ID2-25-CFR2-L940-U

Issue Date: 12/4/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1214647  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2506-458-11)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/4/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 22-ID2-25-CFR2-L940-U  
Description: 2X2 IN DEPTH TROFFER WITH 2INCH CUBE REGRESS LENS  
Light Source: 4000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2524.8 lumens  
Efficiency: N/A  
Efficacy: 115.8 lumens/watt  
Spacing Criteria (0/90/45): 1.18 / 1.17 / 1.27  
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')  
CIE Type: Direct

Input Watts (W): 21.8  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1214647  
CATALOG NUMBER: 22-ID2-25-CFR2-L940-U

### Luminous Intensity Polar Plot

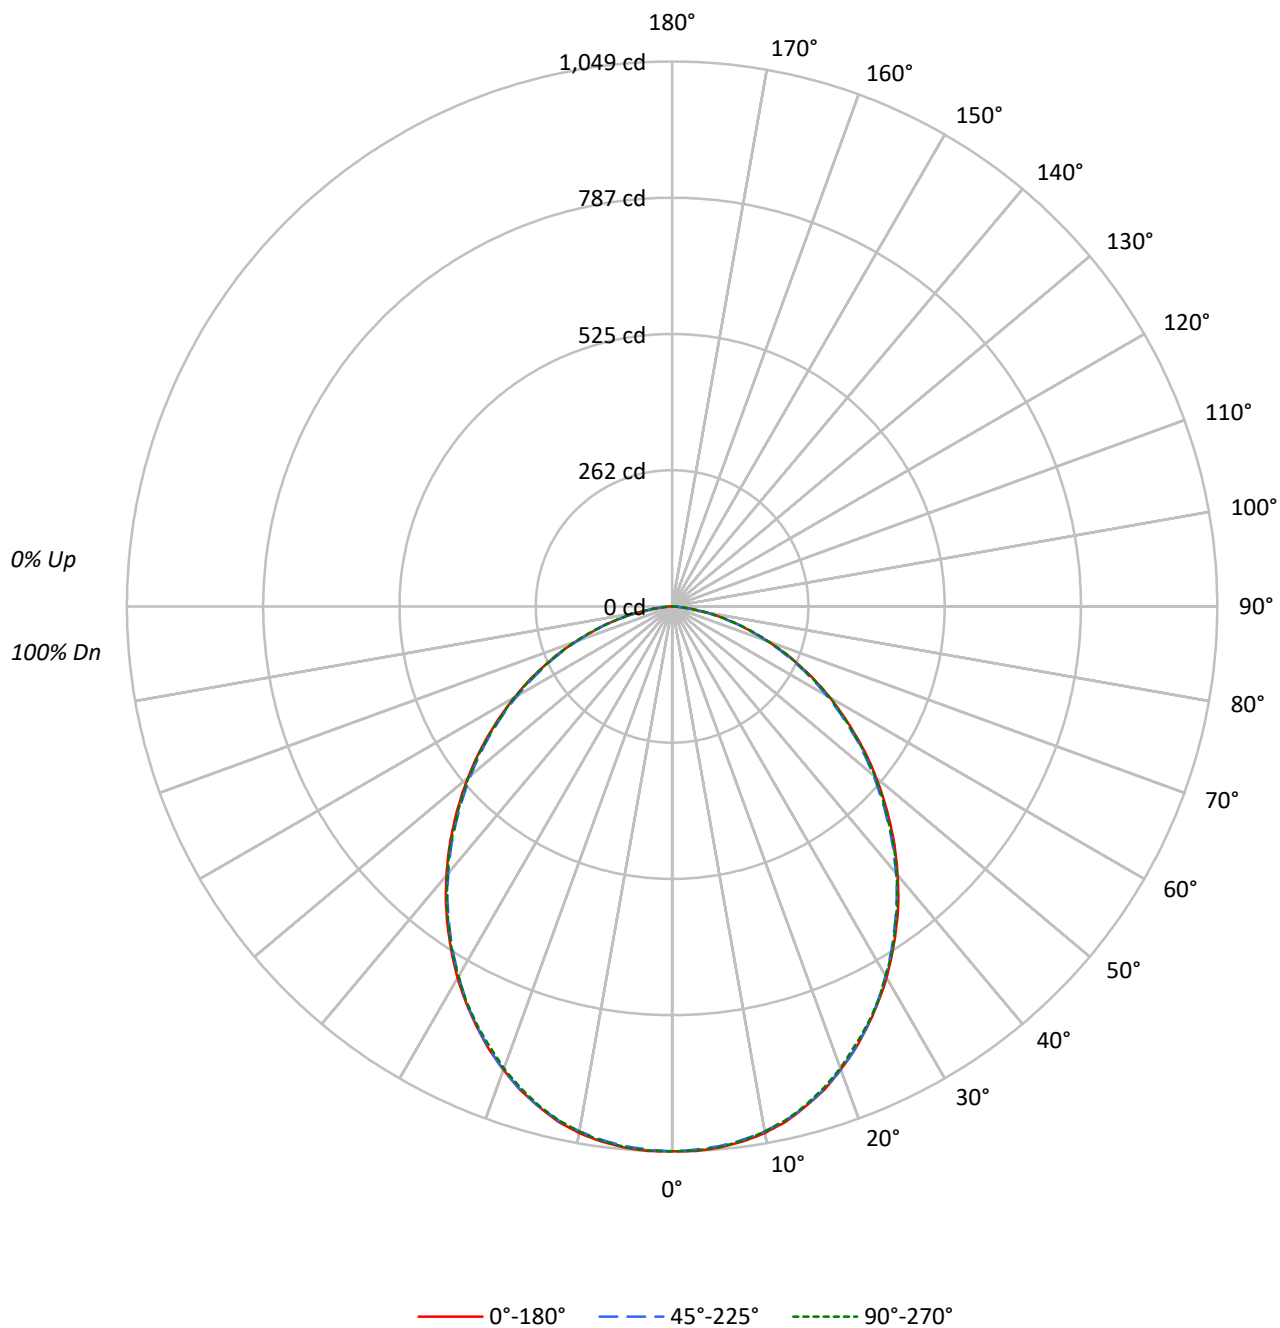

TEST NUMBER: P1214647

CATALOG NUMBER: 22-ID2-25-CFR2-L940-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 110 | 105 | 101 | 98  | 107 | 103 | 99  | 96  | 99  | 96  | 93  |  | 95  | 92  | 90  |  | 85  |
| 2   | 100 | 92  | 86  | 81  | 98  | 91  | 85  | 80  | 87  | 82  | 78  |  | 84  | 80  | 76  |  | 72  |
| 3   | 92  | 82  | 74  | 68  | 89  | 80  | 73  | 67  | 77  | 71  | 66  |  | 75  | 69  | 65  |  | 62  |
| 4   | 84  | 73  | 64  | 58  | 82  | 72  | 64  | 58  | 69  | 62  | 57  |  | 67  | 61  | 56  |  | 53  |
| 5   | 78  | 65  | 57  | 50  | 76  | 64  | 56  | 50  | 62  | 55  | 50  |  | 60  | 54  | 49  |  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 50  | 44  | 56  | 49  | 44  |  | 55  | 48  | 43  |  | 41  |
| 7   | 67  | 54  | 45  | 39  | 65  | 53  | 45  | 39  | 51  | 44  | 39  |  | 50  | 44  | 39  |  | 36  |
| 8   | 62  | 49  | 41  | 35  | 61  | 49  | 41  | 35  | 47  | 40  | 35  |  | 46  | 40  | 35  |  | 33  |
| 9   | 58  | 45  | 37  | 32  | 57  | 45  | 37  | 32  | 44  | 37  | 32  |  | 43  | 36  | 31  |  | 30  |
| 10  | 55  | 42  | 34  | 29  | 54  | 41  | 34  | 29  | 40  | 34  | 29  |  | 39  | 33  | 29  |  | 27  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 2822 | 2822 | 2822 |
| 5°  | 2825 | 2817 | 2822 |
| 10° | 2813 | 2804 | 2805 |
| 15° | 2774 | 2773 | 2768 |
| 20° | 2717 | 2718 | 2709 |
| 25° | 2646 | 2642 | 2638 |
| 30° | 2565 | 2552 | 2554 |
| 35° | 2473 | 2455 | 2462 |
| 40° | 2372 | 2354 | 2361 |
| 45° | 2262 | 2236 | 2244 |
| 50° | 2145 | 2115 | 2137 |
| 55° | 2019 | 1990 | 2006 |
| 60° | 1884 | 1848 | 1885 |
| 65° | 1731 | 1699 | 1725 |
| 70° | 1543 | 1526 | 1551 |
| 75° | 1328 | 1305 | 1341 |
| 80° | 1012 | 1012 | 1051 |
| 85° | 556  | 593  | 584  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 2262 cd/sqm

TEST NUMBER: P1214647  
 CATALOG NUMBER: 22-ID2-25-CFR2-L940-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 99.1   | 3.9       |
| 10°-20°   | 280.1  | 11.1      |
| 20°-30°   | 409.7  | 16.2      |
| 30°-40°   | 469.1  | 18.6      |
| 40°-50°   | 455.6  | 18.0      |
| 50°-60°   | 381.9  | 15.1      |
| 60°-70°   | 266.8  | 10.6      |
| 70°-80°   | 135.4  | 5.4       |
| 80°-90°   | 27.0   | 1.1       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 788.9  | 31.2      |
| 0°-40°    | 1258.0 | 49.8      |
| 0°-60°    | 2095.5 | 83.0      |
| 0°-90°    | 2524.8 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2524.8 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1049 | 1049  | 1049 | 1049  | 1049 |      |
| 5°  | 1046 | 1044  | 1043 | 1043  | 1045 | 99   |
| 15° | 996  | 996   | 996  | 993   | 994  | 281  |
| 25° | 891  | 893   | 890  | 890   | 888  | 410  |
| 35° | 753  | 752   | 747  | 750   | 750  | 470  |
| 45° | 594  | 592   | 588  | 590   | 590  | 459  |
| 55° | 430  | 426   | 424  | 427   | 428  | 385  |
| 65° | 272  | 268   | 267  | 269   | 271  | 270  |
| 75° | 128  | 126   | 126  | 127   | 129  | 136  |
| 85° | 18   | 18    | 19   | 20    | 19   | 26   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1214647

CATALOG NUMBER: 22-ID2-25-CFR2-L940-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1048.8 | 1048.8 | 1048.8 | 1048.8 | 1048.8 |
| 2.5°  | 1049.1 | 1048.2 | 1046.6 | 1047.2 | 1048.2 |
| 5°    | 1045.7 | 1044.1 | 1042.8 | 1043.1 | 1044.7 |
| 7.5°  | 1039.0 | 1037.1 | 1035.6 | 1036.2 | 1037.5 |
| 10°   | 1029.3 | 1027.4 | 1026.1 | 1026.1 | 1026.4 |
| 12.5° | 1015.4 | 1013.5 | 1012.9 | 1011.9 | 1012.5 |
| 15°   | 995.8  | 995.5  | 995.5  | 993.3  | 993.6  |
| 17.5° | 975.0  | 974.1  | 974.1  | 971.5  | 971.2  |
| 20°   | 948.8  | 948.8  | 949.2  | 947.6  | 946.0  |
| 22.5° | 921.7  | 922.0  | 921.4  | 919.8  | 916.7  |
| 25°   | 891.1  | 892.7  | 889.9  | 890.5  | 888.3  |
| 27.5° | 859.0  | 859.3  | 857.1  | 858.0  | 857.1  |
| 30°   | 825.5  | 825.5  | 821.4  | 824.9  | 821.8  |
| 32.5° | 789.3  | 790.5  | 785.2  | 788.0  | 787.7  |
| 35°   | 752.7  | 752.4  | 747.3  | 750.5  | 749.6  |
| 37.5° | 715.2  | 713.6  | 709.8  | 711.7  | 711.7  |
| 40°   | 675.1  | 673.2  | 670.1  | 672.9  | 672.0  |
| 42.5° | 635.7  | 633.2  | 629.1  | 631.0  | 632.9  |
| 45°   | 594.4  | 592.2  | 587.5  | 590.0  | 589.7  |
| 47.5° | 553.4  | 551.2  | 545.8  | 548.7  | 549.9  |
| 50°   | 512.4  | 510.2  | 505.2  | 508.0  | 510.5  |
| 52.5° | 472.1  | 468.3  | 465.1  | 468.6  | 468.6  |
| 55°   | 430.4  | 426.3  | 424.1  | 427.3  | 427.6  |
| 57.5° | 390.1  | 386.6  | 383.8  | 386.6  | 386.9  |
| 60°   | 350.0  | 347.2  | 343.4  | 346.6  | 350.3  |
| 62.5° | 311.6  | 308.1  | 304.9  | 307.5  | 309.3  |
| 65°   | 271.8  | 268.0  | 266.8  | 268.7  | 270.9  |
| 67.5° | 235.6  | 231.8  | 229.6  | 230.5  | 234.6  |
| 70°   | 196.1  | 195.8  | 193.9  | 194.2  | 197.1  |
| 72.5° | 160.8  | 159.9  | 159.6  | 160.8  | 163.3  |
| 75°   | 127.7  | 126.1  | 125.5  | 127.4  | 129.0  |
| 77.5° | 97.1   | 96.2   | 94.6   | 95.5   | 96.2   |
| 80°   | 65.3   | 65.0   | 65.3   | 67.5   | 67.8   |
| 82.5° | 39.7   | 39.7   | 40.0   | 41.9   | 40.7   |
| 85°   | 18.0   | 18.3   | 19.2   | 19.6   | 18.9   |
| 87.5° | 6.6    | 6.9    | 6.6    | 7.6    | 6.9    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1214647

CATALOG NUMBER: 22-ID2-25-CFR2-L940-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 14.29            | 15.86 | 14.65 | 16.17 | 16.49 | 14.28          | 15.85 | 14.64 | 16.16 | 16.48 |
|                 | 3H   | 15.82            | 17.24 | 16.20 | 17.57 | 17.93 | 15.81          | 17.22 | 16.19 | 17.55 | 17.91 |
|                 | 4H   | 16.33            | 17.66 | 16.73 | 18.01 | 18.39 | 16.33          | 17.66 | 16.73 | 18.01 | 18.38 |
|                 | 6H   | 16.64            | 17.87 | 17.05 | 18.24 | 18.63 | 16.64          | 17.87 | 17.05 | 18.24 | 18.63 |
|                 | 8H   | 16.70            | 17.87 | 17.13 | 18.26 | 18.66 | 16.71          | 17.88 | 17.14 | 18.27 | 18.67 |
|                 | 12H  | 16.72            | 17.84 | 17.15 | 18.22 | 18.65 | 16.73          | 17.85 | 17.16 | 18.23 | 18.66 |
| 4H              | 2H   | 14.82            | 16.15 | 15.22 | 16.50 | 16.88 | 14.81          | 16.14 | 15.21 | 16.49 | 16.87 |
|                 | 3H   | 16.56            | 17.67 | 16.97 | 18.07 | 18.47 | 16.55          | 17.65 | 16.96 | 18.05 | 18.45 |
|                 | 4H   | 17.18            | 18.17 | 17.61 | 18.59 | 19.02 | 17.18          | 18.17 | 17.61 | 18.59 | 19.02 |
|                 | 6H   | 17.58            | 18.45 | 18.04 | 18.89 | 19.35 | 17.59          | 18.46 | 18.05 | 18.90 | 19.36 |
|                 | 8H   | 17.67            | 18.48 | 18.13 | 18.92 | 19.39 | 17.69          | 18.50 | 18.15 | 18.94 | 19.41 |
|                 | 12H  | 17.71            | 18.43 | 18.19 | 18.91 | 19.38 | 17.73          | 18.45 | 18.21 | 18.93 | 19.40 |
| 8H              | 4H   | 17.39            | 18.20 | 17.86 | 18.65 | 19.11 | 17.39          | 18.20 | 17.86 | 18.65 | 19.11 |
|                 | 6H   | 17.88            | 18.55 | 18.37 | 19.04 | 19.51 | 17.89          | 18.56 | 18.39 | 19.05 | 19.53 |
|                 | 8H   | 18.00            | 18.60 | 18.51 | 19.11 | 19.60 | 18.03          | 18.63 | 18.54 | 19.14 | 19.62 |
|                 | 12H  | 18.07            | 18.60 | 18.58 | 19.09 | 19.65 | 18.10          | 18.63 | 18.61 | 19.12 | 19.69 |
| 12H             | 4H   | 17.40            | 18.13 | 17.88 | 18.60 | 19.07 | 17.40          | 18.13 | 17.88 | 18.60 | 19.07 |
|                 | 6H   | 17.89            | 18.49 | 18.40 | 19.00 | 19.49 | 17.90          | 18.50 | 18.41 | 19.01 | 19.50 |
|                 | 8H   | 18.05            | 18.58 | 18.56 | 19.08 | 19.64 | 18.08          | 18.61 | 18.59 | 19.10 | 19.66 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-11

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L940-U

Data in this report applies to families of products including 22ID2-55-CFR1-L940-U

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-11  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L940-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 4000K 90CRI

### Spectral Parameters

CCT (K): 3910  
 CIE  $u'$ : 0.2263  
 CIE  $v'$ : 0.5043  
 Duv: 0.0008  
 CIE x: 0.3851  
 CIE y: 0.3813  
 CIE z: 0.2336  
 Peak Wavelength (nm): 451  
 Dominant Wavelength (nm): 578  
 Purity: 30.01895  
 R<sub>f</sub>: 90.8  
 R<sub>g</sub>: 98.8

CRI (Ra): 92.4  
 R1: 92.5  
 R2: 94.9  
 R3: 95.8  
 R4: 92.7  
 R5: 91.7  
 R6: 92.1  
 R7: 94.3  
 R8: 85.2  
 R9: 62.0  
 R10: 87.0  
 R11: 92.8  
 R12: 71.7  
 R13: 93.2  
 R14: 97.3  
 R15: 89.6



### Test Conditions

Stabilization Time: 31M  
 Operation Time: 1H 31M  
 Sphere Temperature (°C): 25.2.

REPORT NUMBER: SP1-2506-458-11

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-11

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-11

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.75

| λ<br>(nm) | Power<br>W <sup>Λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>Λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>Λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>Λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>Λ</sup> /nm | Lumens<br>(Φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.61

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11

TM-30-18

### Summary

$R_f = 90.8$   
 $R_g = 98.8$   
 $CIE R_a = 92.4$   
 $R_9 = 62.0$



### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 93 | CES51 = 96 | CES76 = 85 |
| CES02 = 62 | CES27 = 90 | CES52 = 98 | CES77 = 88 |
| CES03 = 31 | CES28 = 96 | CES53 = 96 | CES78 = 82 |
| CES04 = 69 | CES29 = 96 | CES54 = 92 | CES79 = 96 |
| CES05 = 49 | CES30 = 90 | CES55 = 90 | CES80 = 93 |
| CES06 = 50 | CES31 = 97 | CES56 = 93 | CES81 = 89 |
| CES07 = 42 | CES32 = 91 | CES57 = 91 | CES82 = 97 |
| CES08 = 41 | CES33 = 98 | CES58 = 92 | CES83 = 98 |
| CES09 = 29 | CES34 = 93 | CES59 = 96 | CES84 = 93 |
| CES10 = 74 | CES35 = 96 | CES60 = 91 | CES85 = 83 |
| CES11 = 57 | CES36 = 79 | CES61 = 91 | CES86 = 88 |
| CES12 = 63 | CES37 = 95 | CES62 = 84 | CES87 = 91 |
| CES13 = 43 | CES38 = 85 | CES63 = 91 | CES88 = 96 |
| CES14 = 74 | CES39 = 99 | CES64 = 87 | CES89 = 87 |
| CES15 = 71 | CES40 = 98 | CES65 = 87 | CES90 = 96 |
| CES16 = 47 | CES41 = 96 | CES66 = 84 | CES91 = 71 |
| CES17 = 49 | CES42 = 95 | CES67 = 83 | CES92 = 79 |
| CES18 = 56 | CES43 = 95 | CES68 = 86 | CES93 = 87 |
| CES19 = 71 | CES44 = 99 | CES69 = 87 | CES94 = 81 |
| CES20 = 66 | CES45 = 98 | CES70 = 84 | CES95 = 82 |
| CES21 = 85 | CES46 = 97 | CES71 = 77 | CES96 = 91 |
| CES22 = 78 | CES47 = 97 | CES72 = 93 | CES97 = 96 |
| CES23 = 91 | CES48 = 90 | CES73 = 78 | CES98 = 94 |
| CES24 = 90 | CES49 = 96 | CES74 = 91 | CES99 = 91 |
| CES25 = 71 | CES50 = 97 | CES75 = 80 |            |



Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)