

Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1214825

Luminaire Tested: 22-ID2-30-CFD2-L830-U

Issue Date: 12/4/2025

Test Information

Test Method: LM-79-2019
Report Number: P1214825
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2506-458-13)
Test Lab: INNOVATION CENTER
Issue Date: 12/4/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: CORELITE
Catalog Number: 22-ID2-30-CFD2-L830-U
Description: 2X2 IN DEPTH TROFFER WITH 2INCH CUBE DROP LENS
Light Source: 3000K CCT, 80 CRI LEDS
Ballast/Driver: ELECTRONIC DRIVER

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 3256.7 lumens
Efficiency: N/A
Efficacy: 127.7 lumens/watt
Spacing Criteria (0/90/45): 1.19 / 1.19 / 1.31
Luminous Opening: Rectangular w/ Sides (W: 2' x L: 2' x H: 0.16')
CIE Type: Direct

Input Watts (W): 25.5
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 24 FT



TEST NUMBER: P1214825
CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

Luminous Intensity Polar Plot

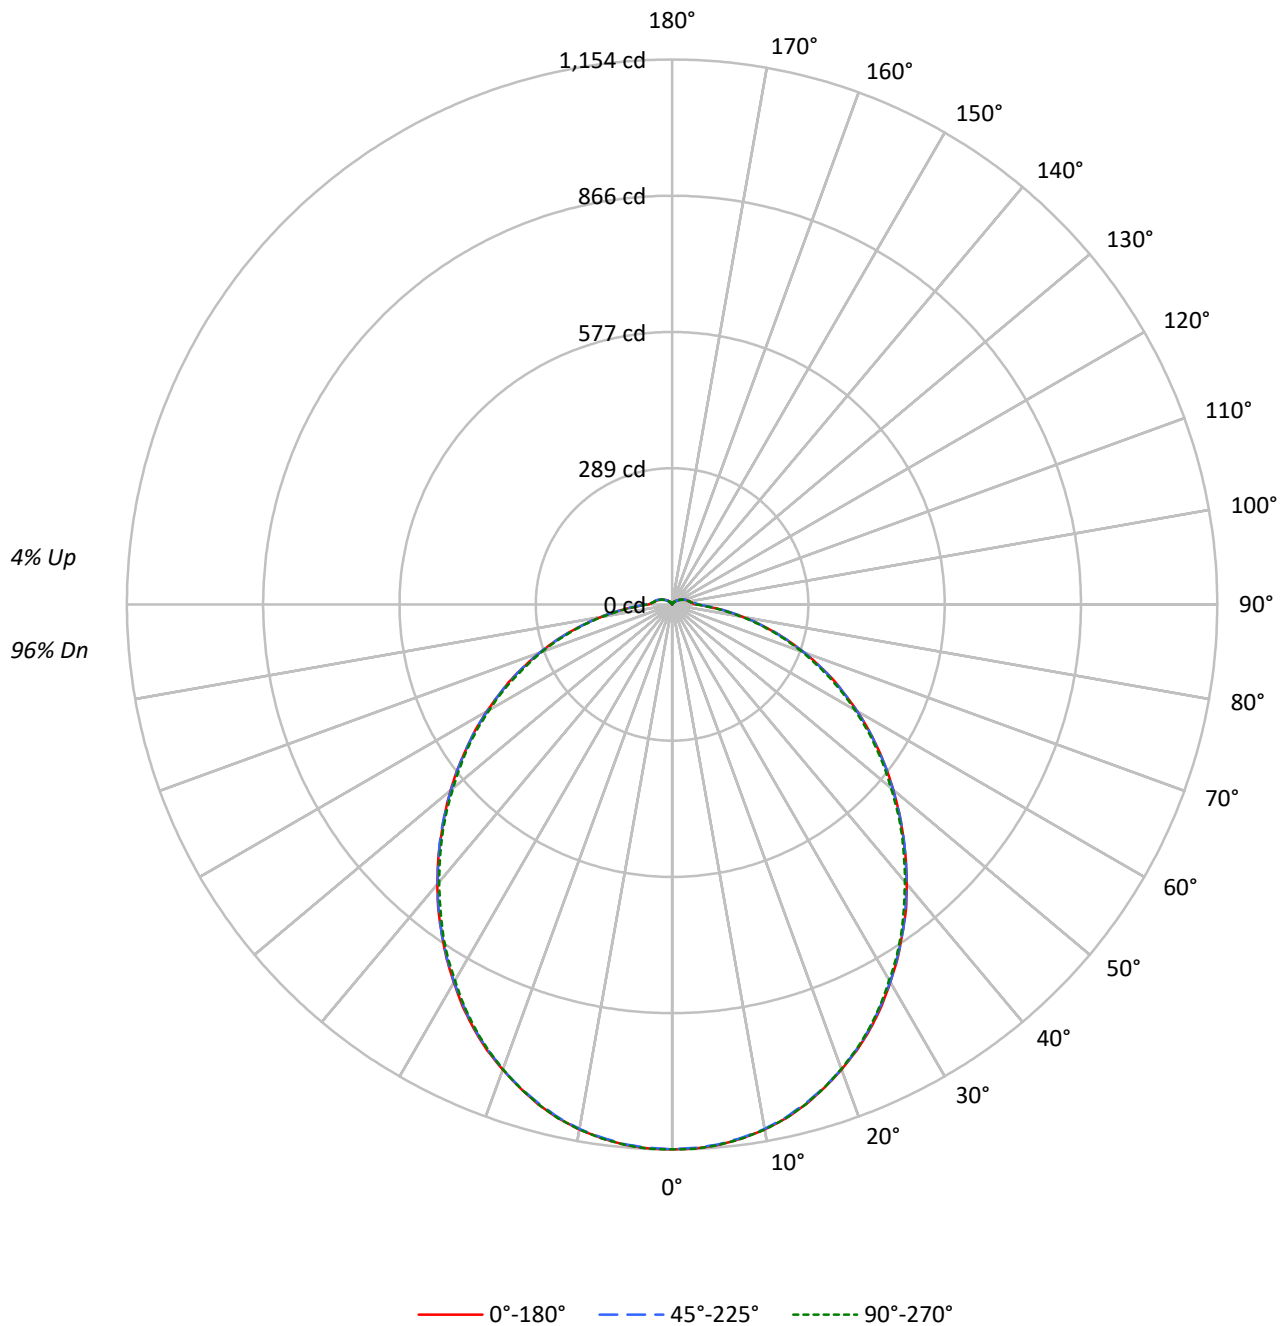

TEST NUMBER: P1214825

CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				0
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		0
RCR																	
0	118	118	118	118	115	115	115	115	109	109	109		103	103	103		98
1	107	102	98	94	104	100	95	92	95	91	88		90	87	85		86
2	97	89	82	76	94	87	80	75	83	77	73		79	74	70		75
3	89	78	70	63	86	76	69	62	73	66	61		69	64	59		66
4	81	69	60	54	79	68	59	53	65	58	52		62	56	51		59
5	75	62	53	46	72	61	52	46	58	51	45		56	49	44		53
6	69	56	47	40	67	55	46	40	52	45	39		50	44	39		48
7	64	51	42	36	62	50	41	36	48	40	35		46	39	34		44
8	60	46	38	32	58	45	37	32	44	37	31		42	36	31		41
9	56	43	34	29	54	42	34	29	40	33	28		39	33	28		38
10	52	39	31	26	51	39	31	26	37	30	26		36	30	25		35

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	3105	3105	3105
5°	3081	3069	3081
10°	3042	3021	3042
15°	2988	2956	2987
20°	2917	2882	2914
25°	2840	2794	2831
30°	2744	2692	2730
35°	2645	2589	2633
40°	2544	2475	2524
45°	2436	2367	2423
50°	2337	2251	2311
55°	2237	2144	2216
60°	2139	2031	2109
65°	2043	1918	2000
70°	1918	1787	1887
75°	1780	1628	1744
80°	1620	1440	1590
85°	1482	1286	1437

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 2436 cd/sqm

TEST NUMBER: P1214825
 CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	108.9	3.3
10°-20°	308.4	9.5
20°-30°	455.7	14.0
30°-40°	531.1	16.3
40°-50°	533.5	16.4
50°-60°	475.0	14.6
60°-70°	370.2	11.4
70°-80°	236.1	7.2
80°-90°	106.2	3.3
90°-100°	49.2	1.5
100°-110°	35.6	1.1
110°-120°	23.7	0.7
120°-130°	13.7	0.4
130°-140°	6.7	0.2
140°-150°	2.4	0.1
150°-160°	0.4	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	873.0	26.8
0°-40°	1404.0	43.1
0°-60°	2412.5	74.1
0°-90°	3125.0	96.0
90°-120°	108.5	3.3
90°-150°	131.3	4.0
90°-180°	132.0	4.1
0°-180°	3256.7	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1154	1154	1154	1154	1154	
5°	1149	1147	1147	1148	1149	109
15°	1096	1095	1093	1094	1095	309
25°	992	991	990	988	989	457
35°	850	851	850	846	846	532
45°	691	694	692	690	688	534
55°	531	533	531	529	526	476
65°	376	377	374	372	368	371
75°	222	226	223	222	218	236
85°	92	96	96	94	89	88
90°	50	54	56	55	50	29
95°	42	45	46	45	42	33
105°	33	33	34	34	32	35
115°	24	24	24	23	24	24
125°	16	15	16	14	16	15
135°	10	8	8	8	10	8
145°	5	4	2	4	5	3
155°	1	1	0	1	1	1
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	

TEST NUMBER: P1214825

CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1153.8	1153.8	1153.8	1153.8	1153.8
2.5°	1153.0	1152.2	1151.8	1152.6	1153.8
5°	1148.6	1147.4	1147.4	1147.8	1148.6
7.5°	1140.2	1139.4	1138.6	1139.8	1140.6
10°	1128.9	1128.1	1127.7	1128.1	1128.9
12.5°	1114.5	1112.5	1112.5	1113.3	1114.5
15°	1095.6	1094.8	1093.2	1094.0	1095.2
17.5°	1072.8	1073.6	1071.6	1072.0	1072.4
20°	1048.3	1047.9	1047.9	1047.5	1047.1
22.5°	1022.2	1020.6	1020.2	1018.6	1019.8
25°	992.1	990.9	990.5	988.5	988.9
27.5°	959.6	958.0	956.8	956.0	955.2
30°	923.9	923.9	923.1	921.5	919.1
32.5°	888.6	888.2	887.0	885.0	884.2
35°	850.1	850.9	850.5	846.5	846.5
37.5°	813.2	813.2	811.6	809.2	806.0
40°	772.7	773.5	771.5	768.7	766.7
42.5°	732.6	733.4	732.2	730.2	726.5
45°	691.2	694.5	692.4	689.6	687.6
47.5°	651.5	654.3	651.5	649.5	646.7
50°	611.4	613.4	610.2	608.6	604.6
52.5°	571.7	573.7	571.3	569.7	565.7
55°	531.2	533.2	530.8	528.8	526.4
57.5°	492.7	494.3	492.3	491.1	486.6
60°	452.5	454.9	451.3	450.1	446.1
62.5°	412.4	417.2	412.8	411.2	407.6
65°	375.9	377.1	374.3	372.3	367.9
67.5°	335.8	338.2	335.0	333.4	329.4
70°	297.3	300.1	297.7	296.1	292.5
72.5°	259.6	263.6	259.6	258.4	254.8
75°	222.3	225.5	222.7	221.9	217.8
77.5°	186.6	190.2	186.6	187.8	183.7
80°	152.0	156.1	152.5	153.3	149.2
82.5°	121.6	124.0	122.8	122.0	117.9
85°	91.9	95.5	95.5	94.3	89.1
87.5°	67.4	70.6	71.8	71.4	66.6
90°	49.7	54.2	55.8	54.6	50.5
92.5°	44.9	48.5	50.1	48.9	45.3
95°	41.7	44.9	46.1	45.3	42.1
97.5°	39.3	41.7	42.9	41.7	39.3
100°	37.3	38.9	40.1	38.9	36.9
102.5°	34.9	36.1	37.3	36.1	34.5
105°	32.9	33.3	34.5	33.7	32.5
107.5°	30.9	30.9	31.7	30.9	30.1
110°	28.5	28.5	29.3	28.5	27.7

TEST NUMBER: P1214825

CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	26.1	26.1	26.9	25.7	25.7
115°	24.1	23.7	24.5	23.3	23.7
117.5°	21.7	21.3	22.1	20.9	21.3
120°	19.7	18.9	19.7	18.5	19.3
122.5°	18.1	16.8	17.7	16.4	17.3
125°	16.0	14.8	15.6	14.4	15.6
127.5°	14.4	12.8	13.6	12.4	13.6
130°	12.8	11.2	11.6	10.4	12.4
132.5°	11.2	9.6	10.0	9.2	10.8
135°	9.6	8.4	8.0	8.0	9.6
137.5°	8.4	7.2	6.4	6.8	8.0
140°	7.2	6.0	4.8	5.6	6.8
142.5°	6.0	4.8	3.6	4.8	6.0
145°	5.2	4.0	2.4	3.6	4.8
147.5°	4.0	3.2	1.2	2.8	3.6
150°	3.2	2.0	0.4	2.0	2.4
152.5°	2.0	1.6	0.4	1.2	1.6
155°	1.2	0.8	0.4	0.8	1.2
157.5°	0.4	0.4	0.4	0.4	0.4
160°	0.4	0.4	0.4	0.4	0.4
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0

TEST NUMBER: P1214825

CATALOG NUMBER: 22-ID2-30-CFD2-L830-U

CIE UGR TABLE:

Reflectances:											
Ceiling		0.7	0.7	0.5	0.5	0.3	0.7	0.7	0.5	0.5	0.3
Wall		0.5	0.3	0.5	0.3	0.3	0.5	0.3	0.5	0.3	0.3
Reference plane		0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
Room dimensions		Viewed crosswise					Viewed endwise				
X=2H	Y=2H	14.36	15.91	14.79	16.31	16.72	14.31	15.85	14.73	16.25	16.67
	3H	16.20	17.60	16.64	18.01	18.47	16.12	17.52	16.56	17.93	18.39
	4H	16.92	18.25	17.39	18.68	19.15	16.84	18.16	17.30	18.59	19.06
	6H	17.51	18.74	17.98	19.18	19.67	17.42	18.65	17.89	19.09	19.58
	8H	17.73	18.91	18.22	19.37	19.87	17.63	18.81	18.12	19.28	19.77
	12H	17.91	19.04	18.41	19.50	20.03	17.81	18.94	18.30	19.40	19.92
4H	2H	14.96	16.28	15.42	16.71	17.19	14.92	16.24	15.38	16.67	17.14
	3H	17.02	18.14	17.50	18.62	19.11	16.95	18.07	17.43	18.55	19.04
	4H	17.89	18.90	18.38	19.39	19.92	17.81	18.82	18.30	19.31	19.84
	6H	18.61	19.51	19.13	20.02	20.57	18.53	19.42	19.04	19.93	20.48
	8H	18.90	19.74	19.42	20.25	20.81	18.80	19.64	19.33	20.16	20.71
	12H	19.14	19.90	19.69	20.45	21.01	19.04	19.80	19.59	20.34	20.91
8H	4H	18.20	19.04	18.73	19.56	20.11	18.13	18.97	18.65	19.48	20.04
	6H	19.07	19.77	19.63	20.33	20.90	18.99	19.70	19.55	20.25	20.82
	8H	19.45	20.08	20.02	20.66	21.23	19.37	20.00	19.93	20.57	21.15
	12H	19.80	20.36	20.37	20.92	21.57	19.71	20.27	20.28	20.83	21.48
12H	4H	18.24	19.00	18.79	19.54	20.11	18.17	18.93	18.72	19.48	20.04
	6H	19.14	19.78	19.71	20.35	20.93	19.07	19.70	19.64	20.28	20.85
	8H	19.59	20.15	20.16	20.71	21.36	19.51	20.07	20.08	20.63	21.27

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-3

Test Date: 07/24/2025

Luminaire Tested: 22ID2-55-CFR1-L830-U

Data in this report applies to families of products including 22ID2-55-CFR1-L830-U


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2506-458-3
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/27/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Corelite
 Catalog Number: **22ID2-55-CFR1-L830-U**
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3000K 80CRI

Spectral Parameters

CCT (K): 3031
 CIE u' : 0.2493
 CIE v' : 0.5215
 Duv: 0.0005
 CIE x: 0.4355
 CIE y: 0.4049
 CIE z: 0.1596
 Peak Wavelength (nm): 603
 Dominant Wavelength (nm): 582
 Purity: 52.24762
 R_f: 84.8
 R_g: 95.8

CRI (Ra): 82.5
 R1: 80.7
 R2: 90.5
 R3: 96.7
 R4: 80.7
 R5: 80.9
 R6: 88.5
 R7: 83.0
 R8: 58.8
 R9: 5.8
 R10: 78.6
 R11: 80.2
 R12: 69.8
 R13: 83.0
 R14: 98.8
 R15: 73.0

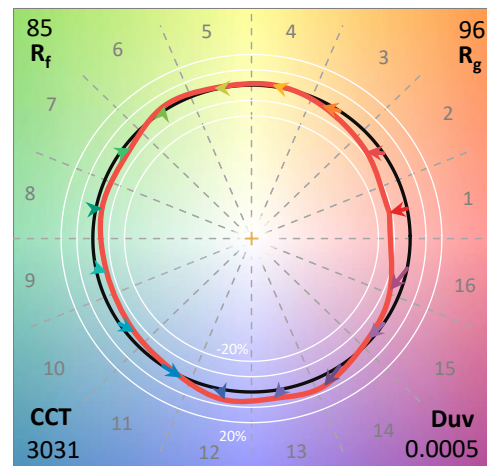

Test Conditions


Stabilization Time: 38M
 Operation Time: 1H 38M
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2506-458-3


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	6/16/2025	12/16/2025
Power Meter	XITRON INXT2011004	1/21/2025	1/21/2026
AC Power Source	CHROMA 61603 IN0063	10/22/2024	10/22/2025
DC Power Source	AGILENT E3634A IN0208	10/22/2024	10/22/2025
Sphere Thermometer	ONSET IN0085	10/22/2024	10/22/2025
Room Thermometer	ONSET IN0046	10/22/2024	10/22/2025

REPORT NUMBER: SP1-2506-458-3

CIE 1931 Chromaticity Diagram

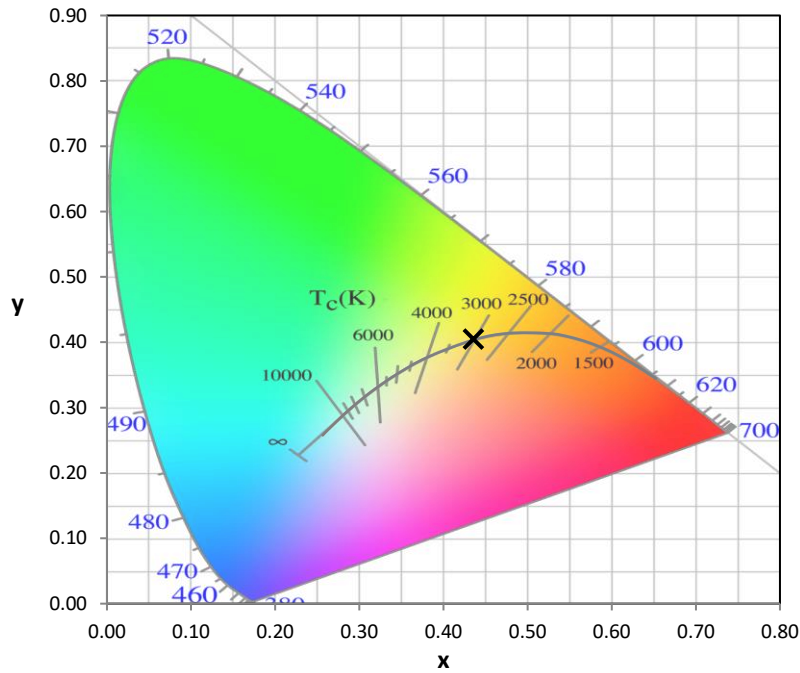


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

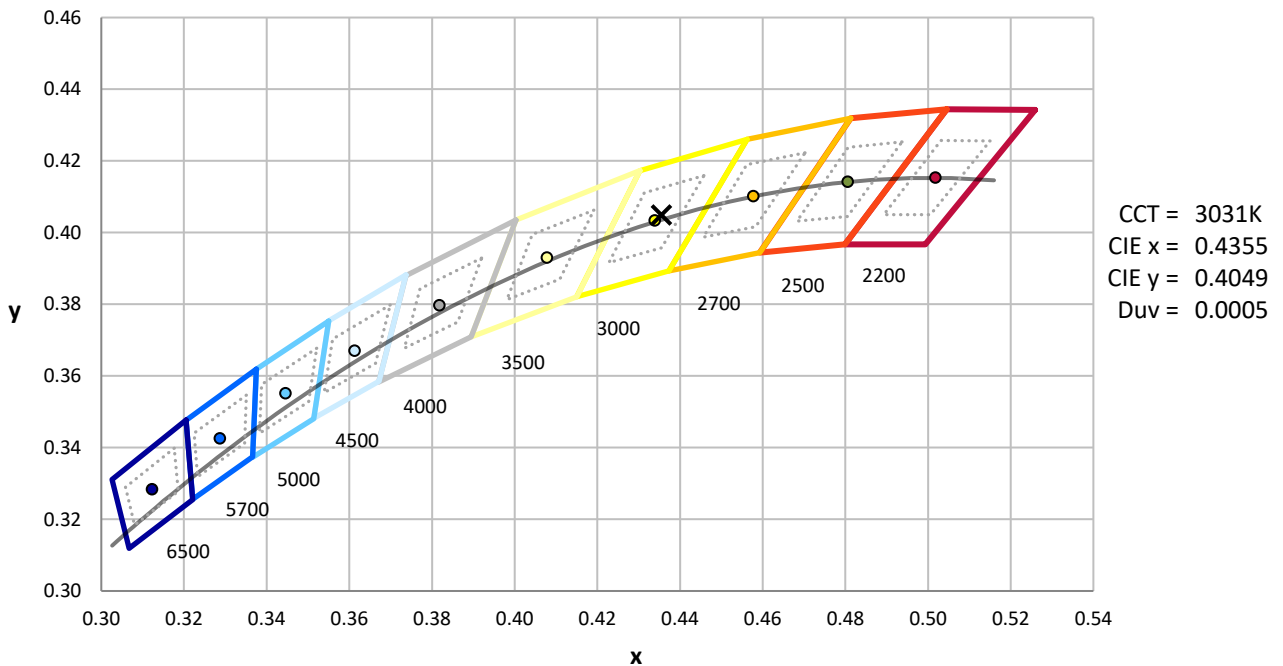

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-3

Photopic Flux vs. Wavelength

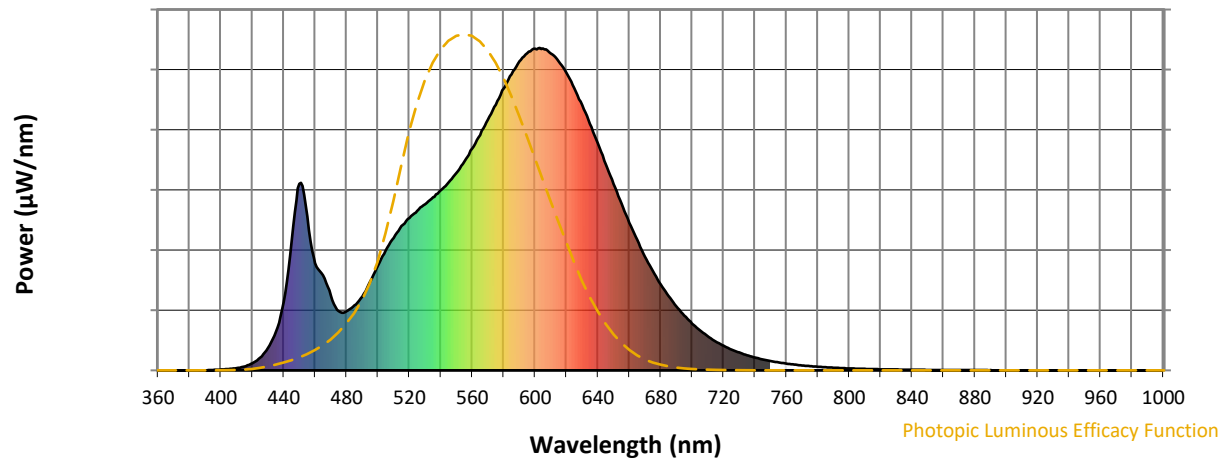


Photopic Lumens: NR

λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	229	NR	620	922	NR	750	29	NR	880	1	NR
365	0	NR	495	275	NR	625	875	NR	755	25	NR	885	1	NR
370	0	NR	500	326	NR	630	822	NR	760	21	NR	890	1	NR
375	0	NR	505	372	NR	635	764	NR	765	18	NR	895	0	NR
380	0	NR	510	411	NR	640	704	NR	770	15	NR	900	0	NR
385	0	NR	515	447	NR	645	638	NR	775	13	NR	905	0	NR
390	0	NR	520	473	NR	650	577	NR	780	11	NR	910	0	NR
395	1	NR	525	495	NR	655	517	NR	785	10	NR	915	0	NR
400	3	NR	530	515	NR	660	457	NR	790	8	NR	920	0	NR
405	4	NR	535	537	NR	665	404	NR	795	7	NR	925	0	NR
410	7	NR	540	559	NR	670	353	NR	800	6	NR	930	0	NR
415	12	NR	545	584	NR	675	307	NR	805	5	NR	935	0	NR
420	22	NR	550	612	NR	680	267	NR	810	5	NR	940	0	NR
425	40	NR	555	648	NR	685	230	NR	815	4	NR	945	0	NR
430	69	NR	560	688	NR	690	199	NR	820	3	NR	950	0	NR
435	120	NR	565	730	NR	695	170	NR	825	3	NR	955	0	NR
440	212	NR	570	777	NR	700	145	NR	830	3	NR	960	0	NR
445	400	NR	575	824	NR	705	124	NR	835	2	NR	965	0	NR
450	578	NR	580	873	NR	710	106	NR	840	2	NR	970	0	NR
455	478	NR	585	918	NR	715	90	NR	845	2	NR	975	0	NR
460	332	NR	590	958	NR	720	76	NR	850	1	NR	980	0	NR
465	295	NR	595	983	NR	725	65	NR	855	1	NR	985	0	NR
470	231	NR	600	997	NR	730	55	NR	860	1	NR	990	0	NR
475	183	NR	605	998	NR	735	47	NR	865	1	NR	995	0	NR
480	184	NR	610	982	NR	740	40	NR	870	1	NR	1000	0	NR
485	201	NR	615	958	NR	745	34	NR	875	1	NR			

REPORT NUMBER: SP1-2506-458-3

Scotopic Flux vs. Wavelength

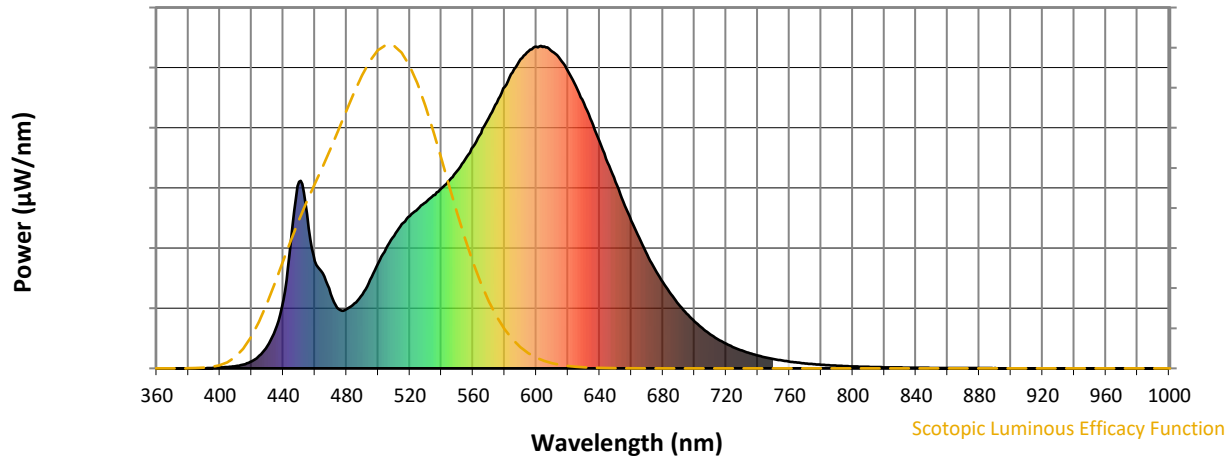


Scotopic Lumens: NR

S/P: 1.35

λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	229	NR	620	922	NR	750	29	NR	880	1	NR
365	0	NR	495	275	NR	625	875	NR	755	25	NR	885	1	NR
370	0	NR	500	326	NR	630	822	NR	760	21	NR	890	1	NR
375	0	NR	505	372	NR	635	764	NR	765	18	NR	895	0	NR
380	0	NR	510	411	NR	640	704	NR	770	15	NR	900	0	NR
385	0	NR	515	447	NR	645	638	NR	775	13	NR	905	0	NR
390	0	NR	520	473	NR	650	577	NR	780	11	NR	910	0	NR
395	1	NR	525	495	NR	655	517	NR	785	10	NR	915	0	NR
400	3	NR	530	515	NR	660	457	NR	790	8	NR	920	0	NR
405	4	NR	535	537	NR	665	404	NR	795	7	NR	925	0	NR
410	7	NR	540	559	NR	670	353	NR	800	6	NR	930	0	NR
415	12	NR	545	584	NR	675	307	NR	805	5	NR	935	0	NR
420	22	NR	550	612	NR	680	267	NR	810	5	NR	940	0	NR
425	40	NR	555	648	NR	685	230	NR	815	4	NR	945	0	NR
430	69	NR	560	688	NR	690	199	NR	820	3	NR	950	0	NR
435	120	NR	565	730	NR	695	170	NR	825	3	NR	955	0	NR
440	212	NR	570	777	NR	700	145	NR	830	3	NR	960	0	NR
445	400	NR	575	824	NR	705	124	NR	835	2	NR	965	0	NR
450	578	NR	580	873	NR	710	106	NR	840	2	NR	970	0	NR
455	478	NR	585	918	NR	715	90	NR	845	2	NR	975	0	NR
460	332	NR	590	958	NR	720	76	NR	850	1	NR	980	0	NR
465	295	NR	595	983	NR	725	65	NR	855	1	NR	985	0	NR
470	231	NR	600	997	NR	730	55	NR	860	1	NR	990	0	NR
475	183	NR	605	998	NR	735	47	NR	865	1	NR	995	0	NR
480	184	NR	610	982	NR	740	40	NR	870	1	NR	1000	0	NR
485	201	NR	615	958	NR	745	34	NR	875	1	NR			

REPORT NUMBER: SP1-2506-458-3

Melanopic Flux vs. Wavelength

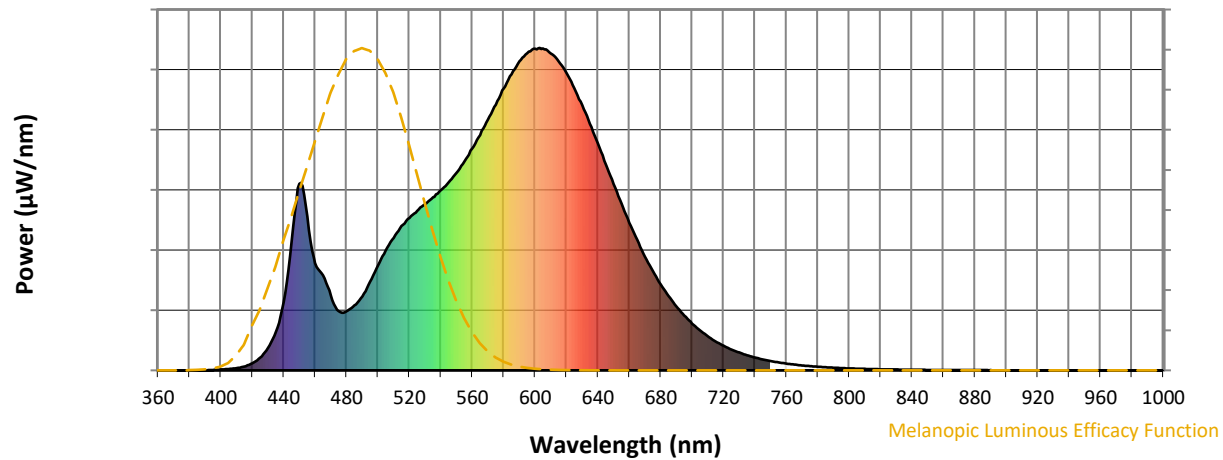

Melanopic Lumens: NR

M/P: 2.59


λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	229	NR	620	922	NR	750	29	NR	880	1	NR
365	0	NR	495	275	NR	625	875	NR	755	25	NR	885	1	NR
370	0	NR	500	326	NR	630	822	NR	760	21	NR	890	1	NR
375	0	NR	505	372	NR	635	764	NR	765	18	NR	895	0	NR
380	0	NR	510	411	NR	640	704	NR	770	15	NR	900	0	NR
385	0	NR	515	447	NR	645	638	NR	775	13	NR	905	0	NR
390	0	NR	520	473	NR	650	577	NR	780	11	NR	910	0	NR
395	1	NR	525	495	NR	655	517	NR	785	10	NR	915	0	NR
400	3	NR	530	515	NR	660	457	NR	790	8	NR	920	0	NR
405	4	NR	535	537	NR	665	404	NR	795	7	NR	925	0	NR
410	7	NR	540	559	NR	670	353	NR	800	6	NR	930	0	NR
415	12	NR	545	584	NR	675	307	NR	805	5	NR	935	0	NR
420	22	NR	550	612	NR	680	267	NR	810	5	NR	940	0	NR
425	40	NR	555	648	NR	685	230	NR	815	4	NR	945	0	NR
430	69	NR	560	688	NR	690	199	NR	820	3	NR	950	0	NR
435	120	NR	565	730	NR	695	170	NR	825	3	NR	955	0	NR
440	212	NR	570	777	NR	700	145	NR	830	3	NR	960	0	NR
445	400	NR	575	824	NR	705	124	NR	835	2	NR	965	0	NR
450	578	NR	580	873	NR	710	106	NR	840	2	NR	970	0	NR
455	478	NR	585	918	NR	715	90	NR	845	2	NR	975	0	NR
460	332	NR	590	958	NR	720	76	NR	850	1	NR	980	0	NR
465	295	NR	595	983	NR	725	65	NR	855	1	NR	985	0	NR
470	231	NR	600	997	NR	730	55	NR	860	1	NR	990	0	NR
475	183	NR	605	998	NR	735	47	NR	865	1	NR	995	0	NR
480	184	NR	610	982	NR	740	40	NR	870	1	NR	1000	0	NR
485	201	NR	615	958	NR	745	34	NR	875	1	NR			

REPORT NUMBER: SP1-2506-458-3





TM-30-18

Summary

$R_f = 84.8$
 $R_g = 95.8$
 $CIE R_a = 82.5$
 $R_9 = 5.8$

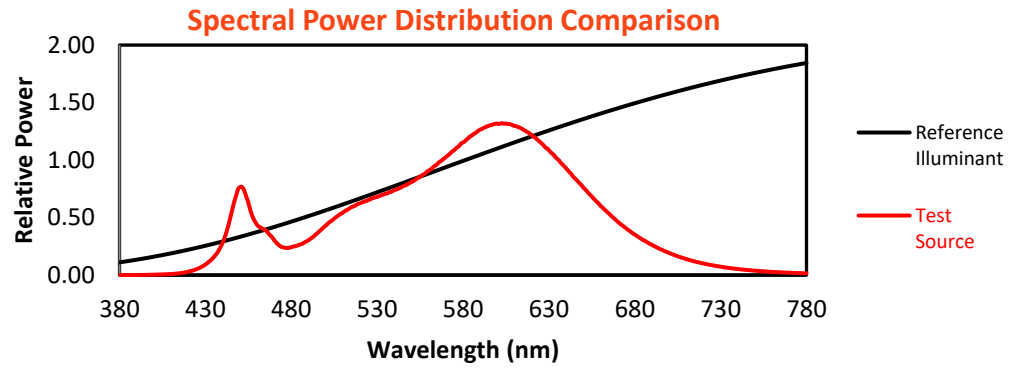


Color Vector Graphics

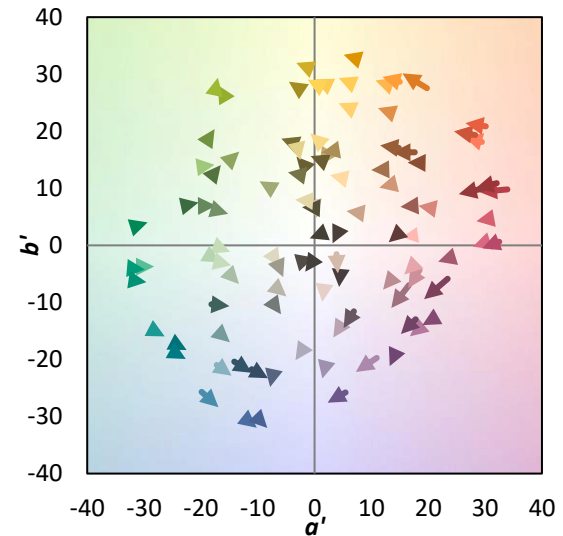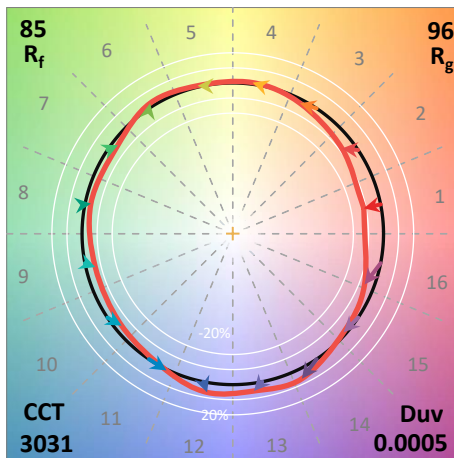
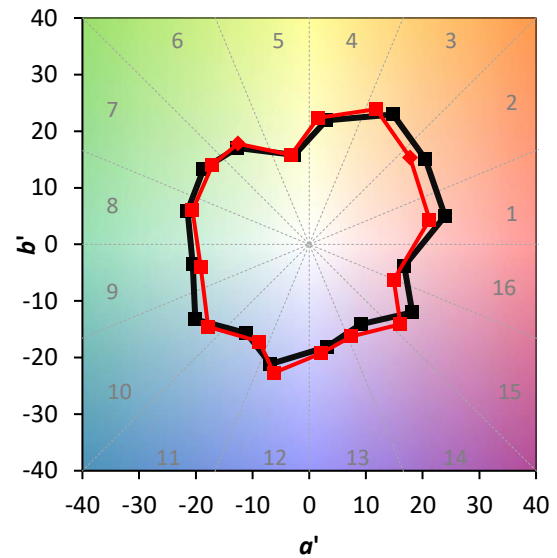
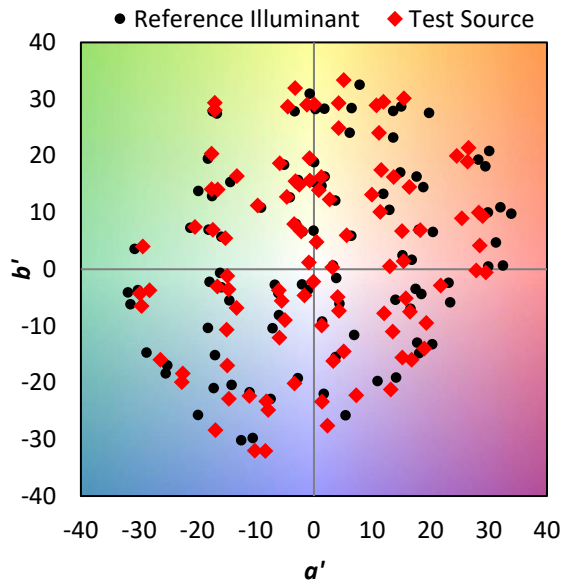


Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 86	CES26 = 84	CES51 = 94	CES76 = 80
CES02 = 63	CES27 = 94	CES52 = 94	CES77 = 85
CES03 = 31	CES28 = 93	CES53 = 89	CES78 = 79
CES04 = 70	CES29 = 87	CES54 = 91	CES79 = 91
CES05 = 50	CES30 = 96	CES55 = 90	CES80 = 90
CES06 = 51	CES31 = 89	CES56 = 87	CES81 = 74
CES07 = 42	CES32 = 82	CES57 = 86	CES82 = 95
CES08 = 41	CES33 = 92	CES58 = 87	CES83 = 94
CES09 = 29	CES34 = 90	CES59 = 91	CES84 = 92
CES10 = 76	CES35 = 94	CES60 = 92	CES85 = 77
CES11 = 59	CES36 = 86	CES61 = 88	CES86 = 69
CES12 = 65	CES37 = 94	CES62 = 90	CES87 = 84
CES13 = 43	CES38 = 95	CES63 = 87	CES88 = 88
CES14 = 74	CES39 = 98	CES64 = 81	CES89 = 75
CES15 = 72	CES40 = 95	CES65 = 79	CES90 = 89
CES16 = 47	CES41 = 97	CES66 = 79	CES91 = 77
CES17 = 50	CES42 = 95	CES67 = 78	CES92 = 65
CES18 = 56	CES43 = 90	CES68 = 81	CES93 = 79
CES19 = 72	CES44 = 99	CES69 = 86	CES94 = 62
CES20 = 67	CES45 = 93	CES70 = 78	CES95 = 74
CES21 = 87	CES46 = 90	CES71 = 75	CES96 = 84
CES22 = 79	CES47 = 94	CES72 = 91	CES97 = 89
CES23 = 92	CES48 = 85	CES73 = 73	CES98 = 85
CES24 = 91	CES49 = 90	CES74 = 92	CES99 = 77
CES25 = 72	CES50 = 94	CES75 = 78	

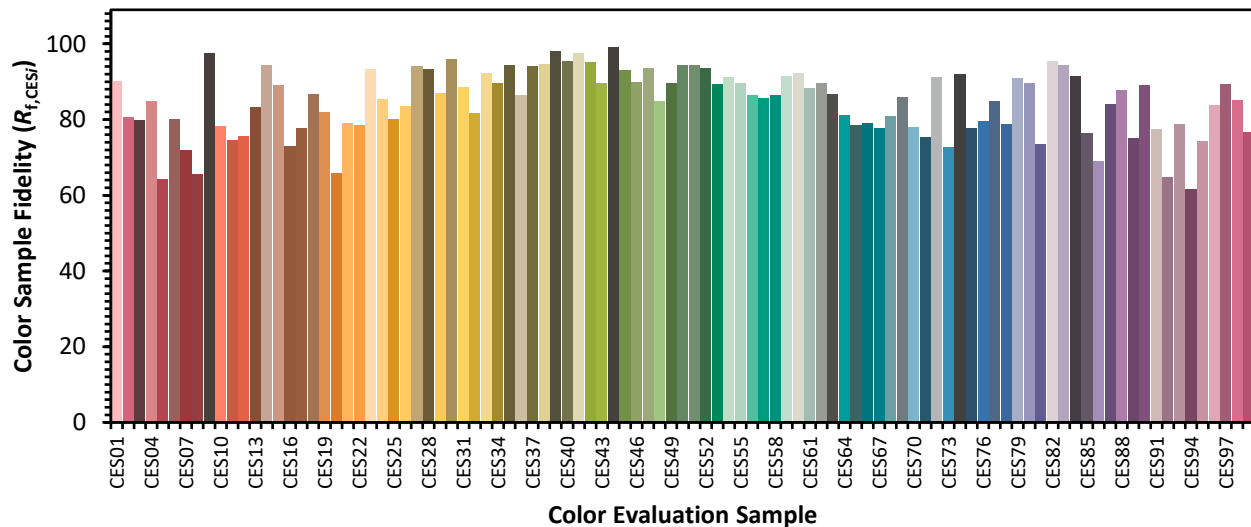

Color Rendition by Hue-Angle Bin

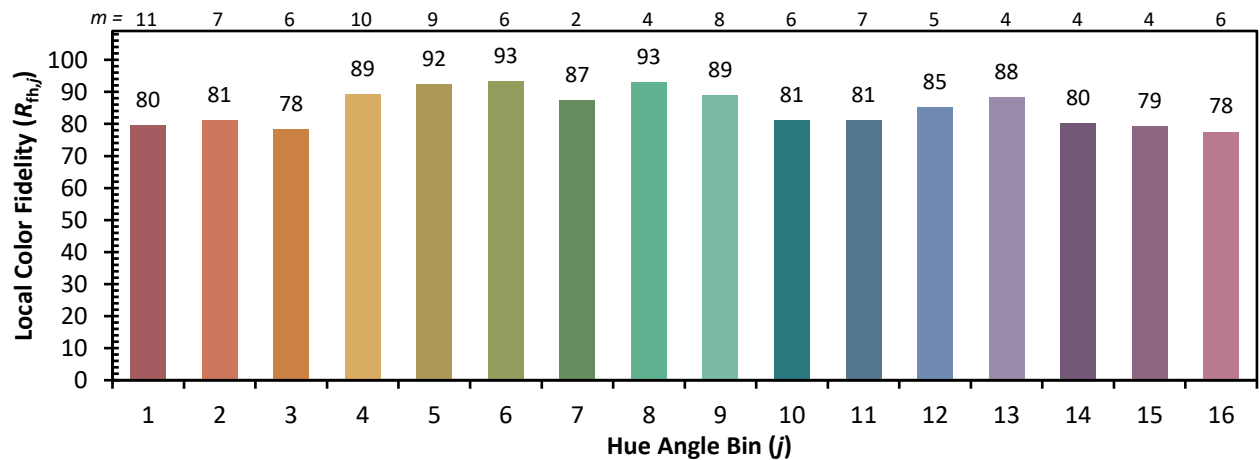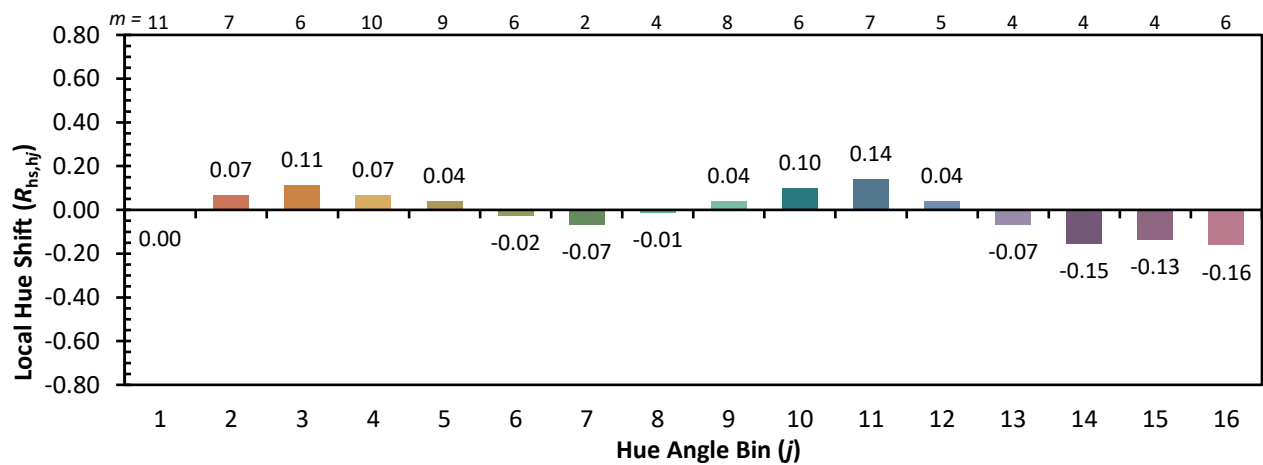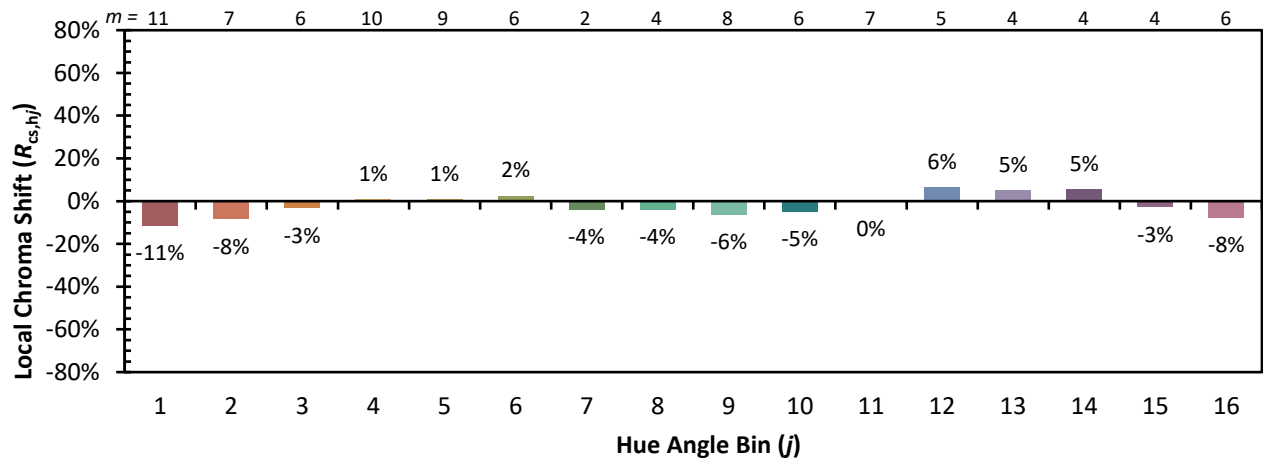

Measure Comparisons

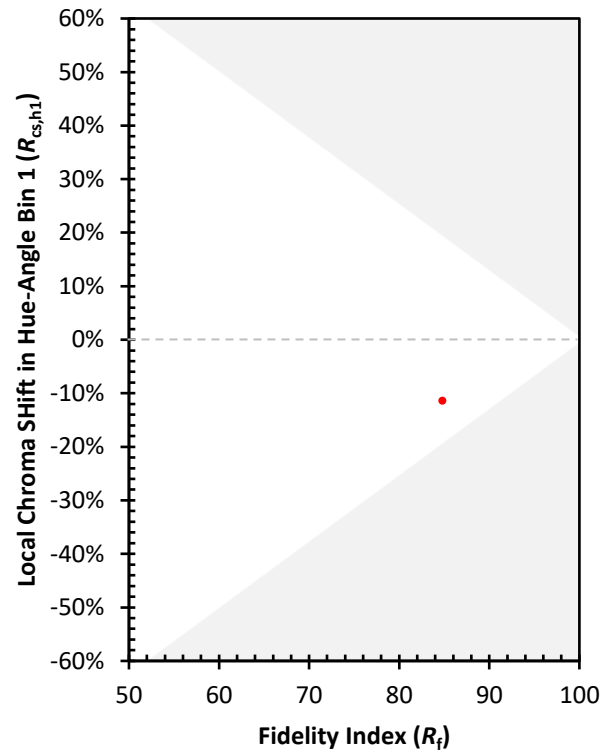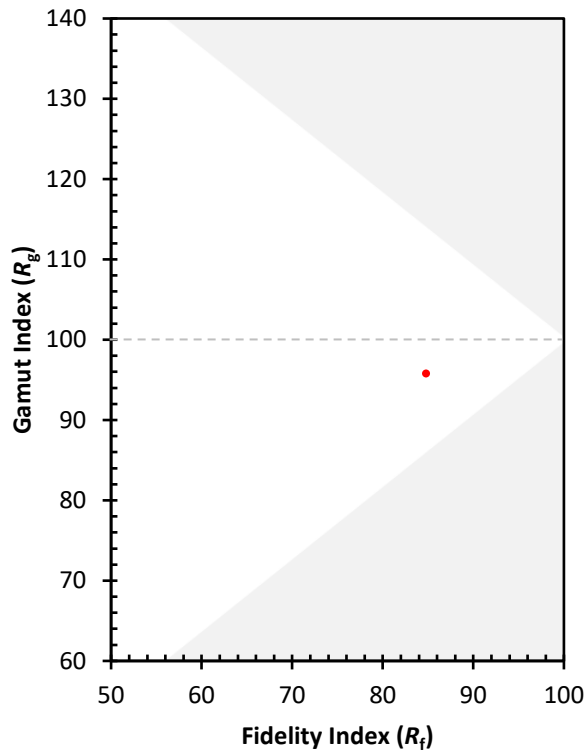

(END OF REPORT)