

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1215383

Luminaire Tested: 22-ID2-45-SWD-L940-U

Issue Date: 12/4/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1215383  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2506-458-19)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/4/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 22-ID2-45-SWD-L940-U  
Description: 2X2 IN DEPTH TROFFER WITH SWEEP DROP  
Light Source: 4000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 4296.9 lumens  
Efficiency: N/A  
Efficacy: 110.5 lumens/watt  
Spacing Criteria (0/90/45): 1.19 / 1.19 / 1.3  
Luminous Opening: Rectangular w/ Sides (W: 2' x L: 2' x H: 0.16')  
CIE Type: Direct

Input Watts (W): 38.9  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1215383  
CATALOG NUMBER: 22-ID2-45-SWD-L940-U

### Luminous Intensity Polar Plot

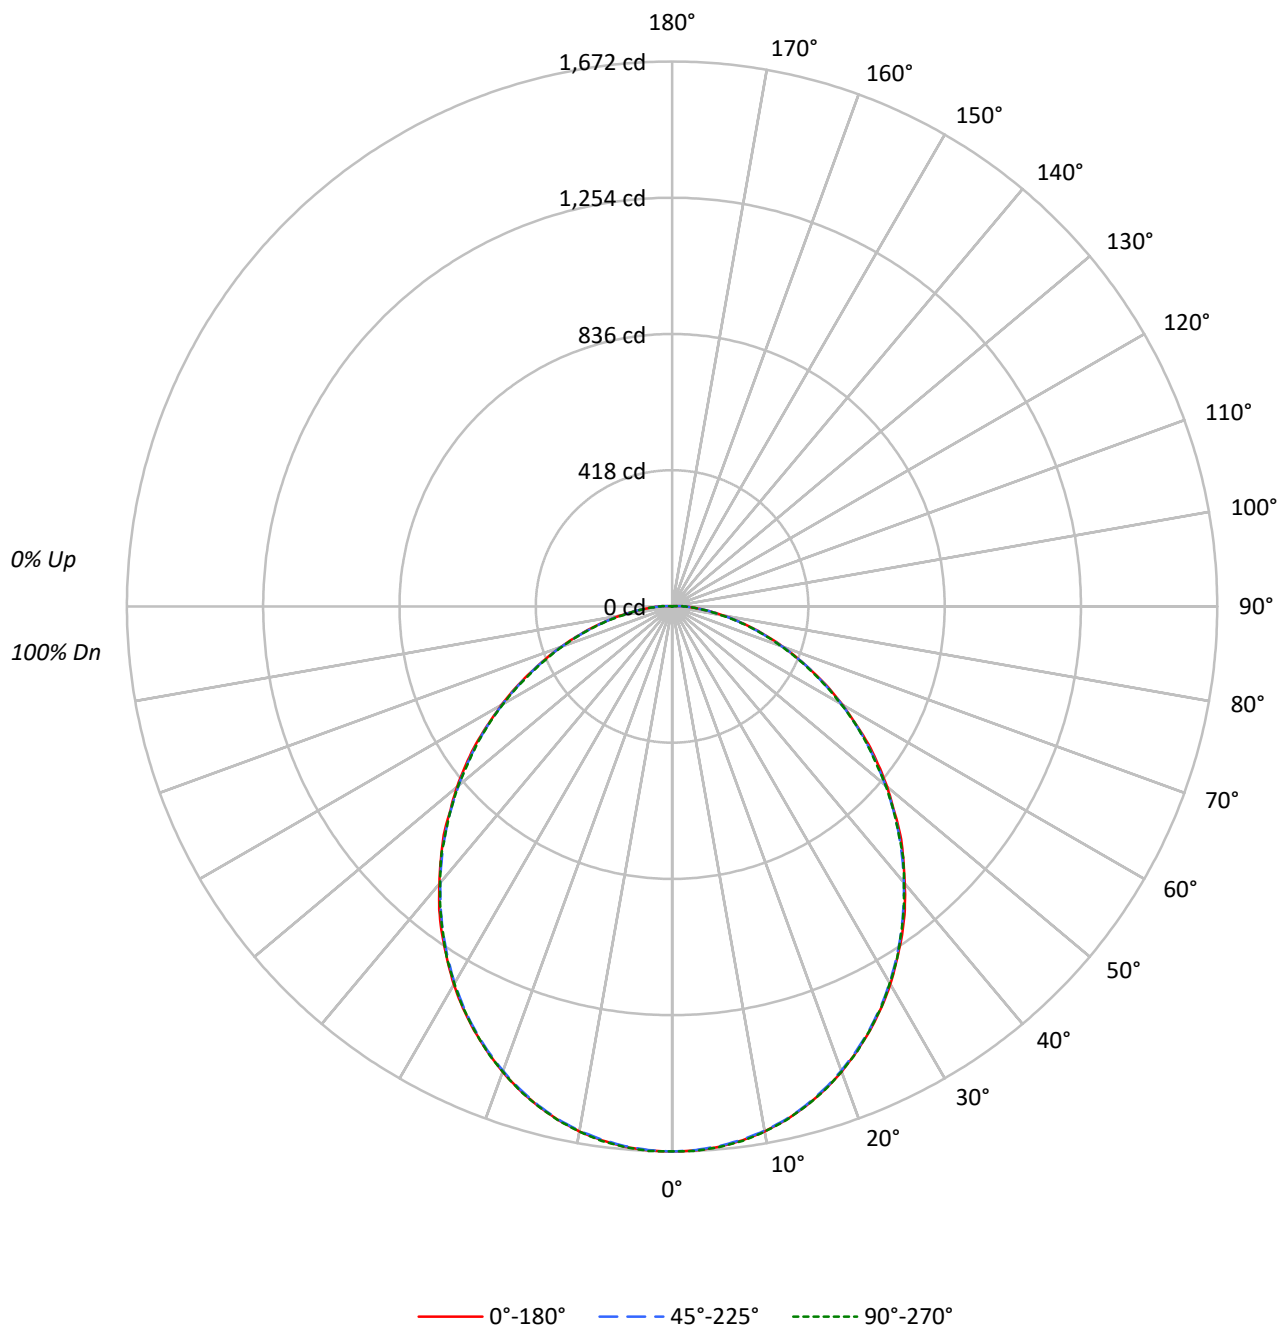

TEST NUMBER: P1215383

CATALOG NUMBER: 22-ID2-45-SWD-L940-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 104 | 100 | 96  | 106 | 102 | 98  | 94  | 97  | 94  | 91  |  | 93  | 91  | 88  |  | 84  |
| 2   | 99  | 91  | 84  | 79  | 97  | 89  | 83  | 78  | 86  | 80  | 76  |  | 82  | 78  | 74  |  | 70  |
| 3   | 91  | 80  | 72  | 66  | 88  | 79  | 71  | 65  | 76  | 69  | 64  |  | 73  | 67  | 63  |  | 60  |
| 4   | 83  | 71  | 63  | 56  | 81  | 70  | 62  | 56  | 67  | 60  | 55  |  | 65  | 59  | 54  |  | 51  |
| 5   | 77  | 64  | 55  | 49  | 75  | 63  | 55  | 48  | 61  | 53  | 48  |  | 59  | 52  | 47  |  | 45  |
| 6   | 71  | 58  | 49  | 43  | 69  | 57  | 48  | 42  | 55  | 48  | 42  |  | 53  | 47  | 42  |  | 39  |
| 7   | 66  | 52  | 44  | 38  | 64  | 52  | 43  | 38  | 50  | 43  | 37  |  | 49  | 42  | 37  |  | 35  |
| 8   | 61  | 48  | 40  | 34  | 60  | 47  | 39  | 34  | 46  | 39  | 33  |  | 45  | 38  | 33  |  | 31  |
| 9   | 57  | 44  | 36  | 31  | 56  | 44  | 36  | 30  | 42  | 35  | 30  |  | 41  | 35  | 30  |  | 28  |
| 10  | 54  | 41  | 33  | 28  | 53  | 40  | 33  | 28  | 39  | 32  | 28  |  | 38  | 32  | 27  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 4499 | 4499 | 4499 |
| 5°  | 4464 | 4445 | 4466 |
| 10° | 4407 | 4376 | 4409 |
| 15° | 4328 | 4285 | 4328 |
| 20° | 4228 | 4170 | 4227 |
| 25° | 4109 | 4040 | 4106 |
| 30° | 3978 | 3892 | 3967 |
| 35° | 3825 | 3726 | 3810 |
| 40° | 3655 | 3548 | 3642 |
| 45° | 3490 | 3360 | 3460 |
| 50° | 3290 | 3152 | 3270 |
| 55° | 3093 | 2937 | 3057 |
| 60° | 2853 | 2701 | 2825 |
| 65° | 2594 | 2438 | 2567 |
| 70° | 2333 | 2161 | 2302 |
| 75° | 2047 | 1831 | 1996 |
| 80° | 1711 | 1485 | 1637 |
| 85° | 1372 | 1131 | 1329 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 3490 cd/sqm

TEST NUMBER: P1215383  
 CATALOG NUMBER: 22-ID2-45-SWD-L940-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 157.9  | 3.7       |
| 10°-20°   | 446.8  | 10.4      |
| 20°-30°   | 660.0  | 15.4      |
| 30°-40°   | 766.3  | 17.8      |
| 40°-50°   | 758.5  | 17.7      |
| 50°-60°   | 650.9  | 15.1      |
| 60°-70°   | 472.8  | 11.0      |
| 70°-80°   | 267.7  | 6.2       |
| 80°-90°   | 96.6   | 2.2       |
| 90°-100°  | 17.4   | 0.4       |
| 100°-110° | 1.8    | 0.0       |
| 110°-120° | 0.1    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1264.7 | 29.4      |
| 0°-40°    | 2031.1 | 47.3      |
| 0°-60°    | 3440.5 | 80.1      |
| 0°-90°    | 4277.7 | 99.6      |
| 90°-120°  | 19.3   | 0.4       |
| 90°-150°  | 19.3   | 0.4       |
| 90°-180°  | 19.0   | 0.4       |
| 0°-180°   | 4296.9 | 100.0     |

**CANDELA DISTRIBUTION:**

|      | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|------|------|-------|------|-------|------|------|
| 0°   | 1672 | 1672  | 1672 | 1672  | 1672 |      |
| 5°   | 1664 | 1662  | 1662 | 1664  | 1665 | 158  |
| 15°  | 1587 | 1584  | 1585 | 1586  | 1587 | 447  |
| 25°  | 1436 | 1435  | 1432 | 1433  | 1434 | 661  |
| 35°  | 1230 | 1226  | 1224 | 1225  | 1225 | 768  |
| 45°  | 990  | 985   | 983  | 981   | 982  | 761  |
| 55°  | 735  | 730   | 727  | 724   | 726  | 655  |
| 65°  | 477  | 479   | 476  | 475   | 472  | 475  |
| 75°  | 256  | 253   | 250  | 248   | 249  | 271  |
| 85°  | 85   | 84    | 84   | 82    | 82   | 85   |
| 90°  | 38   | 37    | 36   | 36    | 38   | 22   |
| 95°  | 15   | 13    | 12   | 12    | 14   | 11   |
| 105° | 2    | 2     | 0    | 1     | 2    | 3    |
| 115° | 0    | 0     | 0    | 0     | 0    | 0    |
| 125° | 0    | 0     | 0    | 0     | 0    | 0    |
| 135° | 0    | 0     | 0    | 0     | 0    | 0    |
| 145° | 0    | 0     | 0    | 0     | 0    | 0    |
| 155° | 0    | 0     | 0    | 0     | 0    | 0    |
| 165° | 0    | 0     | 0    | 0     | 0    | 0    |
| 175° | 0    | 0     | 0    | 0     | 0    | 0    |
| 180° | 0    | 0     | 0    | 0     | 0    | 0    |

TEST NUMBER: P1215383

CATALOG NUMBER: 22-ID2-45-SWD-L940-U

**CANDELA DISTRIBUTION (FULL):**

|        | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|--------|--------|--------|--------|--------|--------|
| 0°     | 1672.0 | 1672.0 | 1672.0 | 1672.0 | 1672.0 |
| 2.5°   | 1670.9 | 1669.3 | 1669.3 | 1670.4 | 1672.0 |
| 5°     | 1664.0 | 1662.4 | 1661.8 | 1664.0 | 1665.0 |
| 7.5°   | 1652.2 | 1651.1 | 1650.1 | 1651.7 | 1653.8 |
| 10°    | 1635.6 | 1634.6 | 1633.5 | 1635.6 | 1636.2 |
| 12.5°  | 1613.7 | 1612.6 | 1612.1 | 1612.6 | 1614.8 |
| 15°    | 1586.9 | 1584.3 | 1584.8 | 1586.4 | 1586.9 |
| 17.5°  | 1555.4 | 1553.8 | 1552.7 | 1554.8 | 1556.4 |
| 20°    | 1519.5 | 1517.9 | 1516.3 | 1517.9 | 1519.0 |
| 22.5°  | 1478.9 | 1477.2 | 1476.2 | 1477.8 | 1479.9 |
| 25°    | 1435.5 | 1435.0 | 1432.3 | 1433.4 | 1434.4 |
| 27.5°  | 1389.0 | 1387.4 | 1385.2 | 1386.3 | 1387.9 |
| 30°    | 1339.2 | 1336.0 | 1334.4 | 1335.5 | 1335.5 |
| 32.5°  | 1283.6 | 1283.0 | 1279.3 | 1284.1 | 1283.6 |
| 35°    | 1229.5 | 1225.8 | 1224.2 | 1225.2 | 1224.7 |
| 37.5°  | 1172.8 | 1166.9 | 1165.3 | 1168.5 | 1167.5 |
| 40°    | 1110.2 | 1108.6 | 1105.9 | 1107.0 | 1106.5 |
| 42.5°  | 1049.2 | 1047.6 | 1044.4 | 1043.3 | 1049.2 |
| 45°    | 990.4  | 985.0  | 982.9  | 980.7  | 981.8  |
| 47.5°  | 921.3  | 922.4  | 918.7  | 918.1  | 919.2  |
| 50°    | 860.9  | 858.2  | 854.5  | 853.9  | 855.5  |
| 52.5°  | 796.7  | 794.5  | 790.8  | 789.2  | 787.6  |
| 55°    | 734.6  | 730.3  | 727.1  | 723.9  | 726.1  |
| 57.5°  | 665.1  | 667.2  | 662.9  | 661.8  | 662.4  |
| 60°    | 603.5  | 601.9  | 600.3  | 598.2  | 597.6  |
| 62.5°  | 541.5  | 540.9  | 536.6  | 536.6  | 534.5  |
| 65°    | 477.3  | 478.9  | 475.7  | 475.1  | 472.4  |
| 67.5°  | 418.4  | 419.5  | 418.4  | 416.3  | 412.5  |
| 70°    | 361.7  | 360.6  | 360.1  | 357.9  | 356.9  |
| 72.5°  | 305.5  | 304.4  | 303.9  | 303.4  | 302.8  |
| 75°    | 255.7  | 253.1  | 250.4  | 248.3  | 249.3  |
| 77.5°  | 204.4  | 202.8  | 203.3  | 200.6  | 199.0  |
| 80°    | 160.5  | 157.3  | 157.3  | 155.7  | 153.6  |
| 82.5°  | 117.7  | 118.2  | 116.6  | 116.6  | 115.6  |
| 85°    | 85.1   | 84.0   | 84.0   | 82.4   | 82.4   |
| 87.5°  | 58.9   | 57.8   | 57.2   | 57.8   | 55.6   |
| 90°    | 38.0   | 36.9   | 36.4   | 36.4   | 37.5   |
| 92.5°  | 24.1   | 23.0   | 21.9   | 22.5   | 23.0   |
| 95°    | 15.0   | 12.8   | 11.8   | 12.3   | 13.9   |
| 97.5°  | 9.1    | 7.5    | 6.4    | 7.0    | 8.0    |
| 100°   | 5.9    | 4.8    | 2.7    | 4.3    | 5.4    |
| 102.5° | 3.7    | 2.7    | 1.1    | 2.7    | 3.2    |
| 105°   | 2.1    | 1.6    | 0.5    | 1.1    | 1.6    |
| 107.5° | 1.1    | 0.5    | 0.5    | 0.5    | 1.1    |
| 110°   | 0.5    | 0.5    | 0.5    | 0.5    | 0.5    |

TEST NUMBER: P1215383

CATALOG NUMBER: 22-ID2-45-SWD-L940-U

**CANDELA DISTRIBUTION (continued):**

|        | 0°  | 22.5° | 45° | 67.5° | 90° |
|--------|-----|-------|-----|-------|-----|
| 112.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 115°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 117.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 120°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 122.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 125°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 127.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 130°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 132.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 135°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 137.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 140°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 142.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 145°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 147.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 150°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 152.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 155°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 157.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 160°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 162.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 165°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 167.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 170°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 172.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 175°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 177.5° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 180°   | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |

TEST NUMBER: P1215383

CATALOG NUMBER: 22-ID2-45-SWD-L940-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 15.64            | 17.24 | 16.02 | 17.56 | 17.89 | 15.59          | 17.19 | 15.96 | 17.51 | 17.84 |
|                 | 3H   | 17.22            | 18.67 | 17.61 | 19.00 | 19.37 | 17.16          | 18.61 | 17.55 | 18.94 | 19.31 |
|                 | 4H   | 17.80            | 19.16 | 18.20 | 19.51 | 19.90 | 17.73          | 19.09 | 18.13 | 19.44 | 19.83 |
|                 | 6H   | 18.21            | 19.47 | 18.63 | 19.84 | 20.24 | 18.13          | 19.38 | 18.54 | 19.76 | 20.16 |
|                 | 8H   | 18.34            | 19.55 | 18.78 | 19.94 | 20.35 | 18.25          | 19.46 | 18.69 | 19.85 | 20.26 |
|                 | 12H  | 18.44            | 19.59 | 18.88 | 19.98 | 20.42 | 18.35          | 19.50 | 18.79 | 19.89 | 20.33 |
| 4H              | 2H   | 16.17            | 17.53 | 16.58 | 17.89 | 18.28 | 16.13          | 17.49 | 16.54 | 17.85 | 18.23 |
|                 | 3H   | 17.96            | 19.10 | 18.38 | 19.51 | 19.92 | 17.91          | 19.05 | 18.33 | 19.46 | 19.87 |
|                 | 4H   | 18.65            | 19.68 | 19.09 | 20.10 | 20.55 | 18.59          | 19.62 | 19.03 | 20.04 | 20.49 |
|                 | 6H   | 19.18            | 20.08 | 19.64 | 20.53 | 21.00 | 19.10          | 20.00 | 19.57 | 20.45 | 20.92 |
|                 | 8H   | 19.36            | 20.20 | 19.83 | 20.65 | 21.13 | 19.28          | 20.12 | 19.74 | 20.57 | 21.05 |
|                 | 12H  | 19.50            | 20.26 | 19.99 | 20.74 | 21.22 | 19.42          | 20.17 | 19.90 | 20.66 | 21.14 |
| 8H              | 4H   | 18.89            | 19.74 | 19.36 | 20.19 | 20.66 | 18.84          | 19.68 | 19.30 | 20.13 | 20.61 |
|                 | 6H   | 19.53            | 20.23 | 20.03 | 20.73 | 21.21 | 19.46          | 20.16 | 19.96 | 20.65 | 21.14 |
|                 | 8H   | 19.77            | 20.40 | 20.29 | 20.92 | 21.41 | 19.69          | 20.33 | 20.21 | 20.84 | 21.34 |
|                 | 12H  | 19.99            | 20.55 | 20.50 | 21.04 | 21.62 | 19.91          | 20.47 | 20.42 | 20.96 | 21.53 |
| 12H             | 4H   | 18.91            | 19.67 | 19.40 | 20.16 | 20.64 | 18.86          | 19.62 | 19.35 | 20.10 | 20.58 |
|                 | 6H   | 19.56            | 20.19 | 20.08 | 20.71 | 21.21 | 19.49          | 20.13 | 20.01 | 20.64 | 21.14 |
|                 | 8H   | 19.86            | 20.42 | 20.37 | 20.92 | 21.49 | 19.79          | 20.35 | 20.30 | 20.84 | 21.42 |



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-11

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L940-U

Data in this report applies to families of products including 22ID2-55-CFR1-L940-U


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-11  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L940-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 4000K 90CRI

### Spectral Parameters

CCT (K): 3910  
 CIE  $u'$ : 0.2263  
 CIE  $v'$ : 0.5043  
 Duv: 0.0008  
 CIE x: 0.3851  
 CIE y: 0.3813  
 CIE z: 0.2336  
 Peak Wavelength (nm): 451  
 Dominant Wavelength (nm): 578  
 Purity: 30.01895  
 R<sub>f</sub>: 90.8  
 R<sub>g</sub>: 98.8

CRI (Ra): 92.4  
 R1: 92.5  
 R2: 94.9  
 R3: 95.8  
 R4: 92.7  
 R5: 91.7  
 R6: 92.1  
 R7: 94.3  
 R8: 85.2  
 R9: 62.0  
 R10: 87.0  
 R11: 92.8  
 R12: 71.7  
 R13: 93.2  
 R14: 97.3  
 R15: 89.6

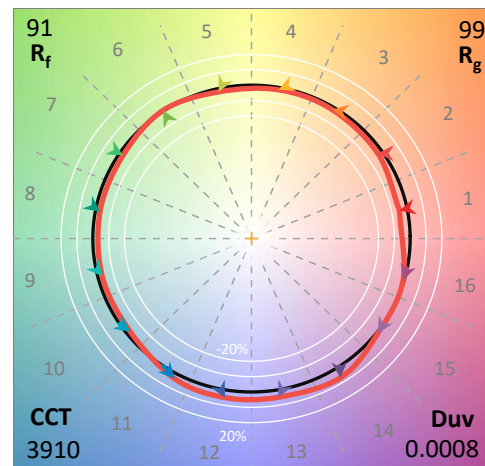

### Test Conditions


Stabilization Time: 31M  
 Operation Time: 1H 31M  
 Sphere Temperature (°C): 25.2.

REPORT NUMBER: SP1-2506-458-11


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-11

**CIE 1931 Chromaticity Diagram**

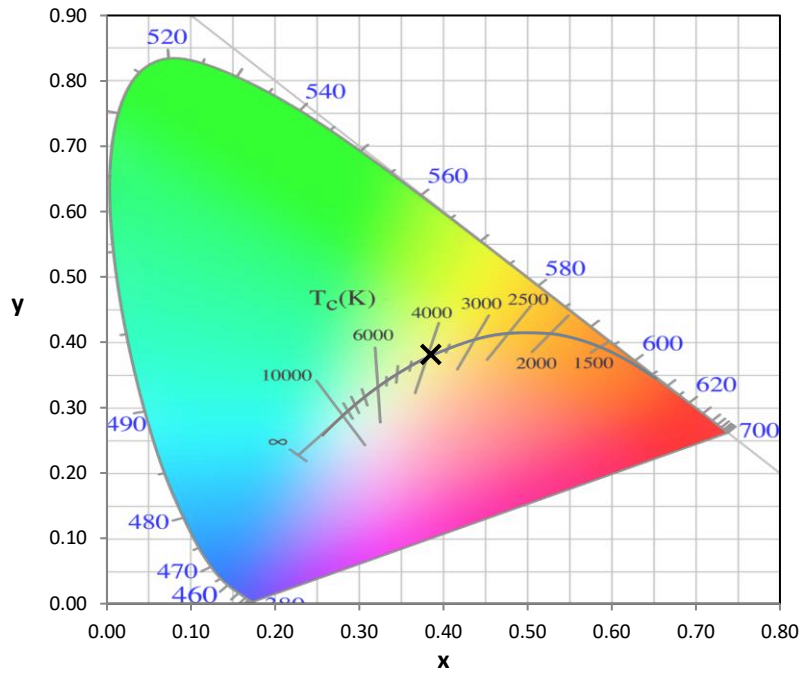


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

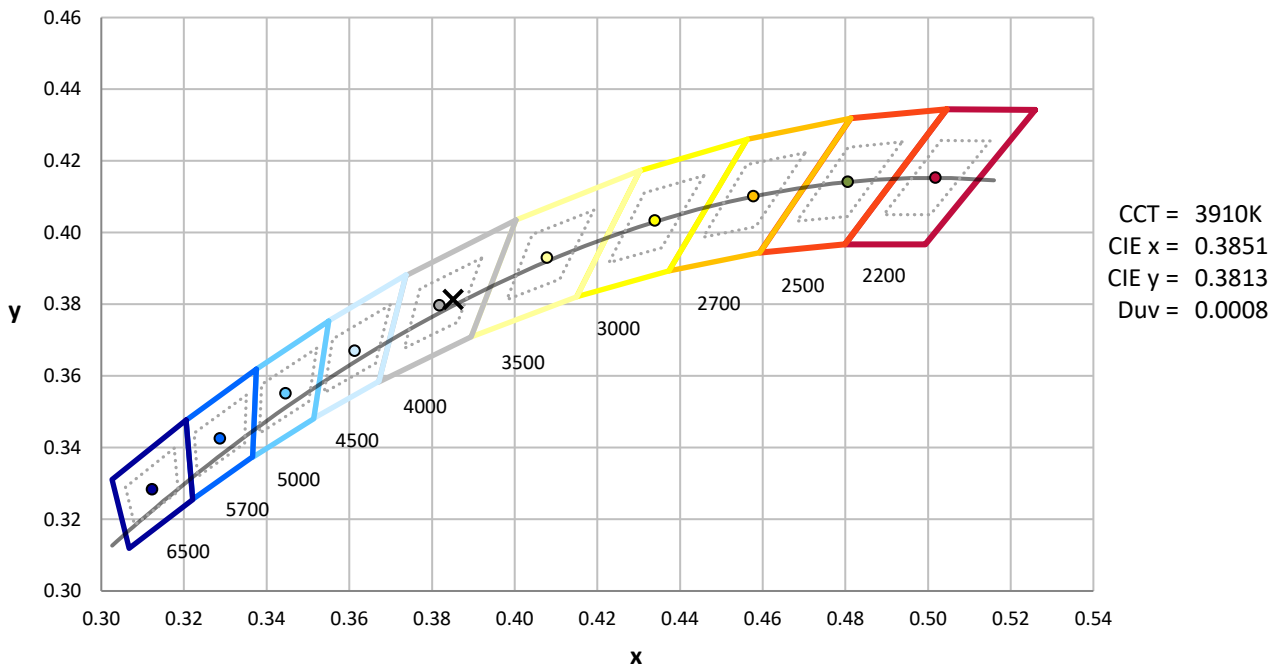

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-11

### Photopic Flux vs. Wavelength

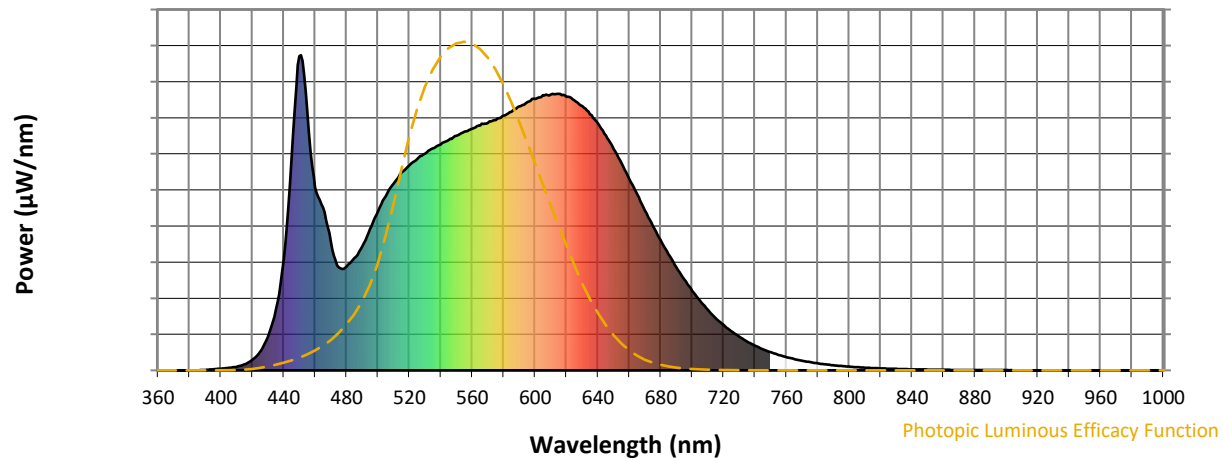


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 394                                  | NR                             | 620               | 868                                  | NR                             | 750               | 58                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 449                                  | NR                             | 625               | 858                                  | NR                             | 755               | 49                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 505                                  | NR                             | 630               | 839                                  | NR                             | 760               | 42                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 553                                  | NR                             | 635               | 813                                  | NR                             | 765               | 36                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 593                                  | NR                             | 640               | 783                                  | NR                             | 770               | 31                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 628                                  | NR                             | 645               | 746                                  | NR                             | 775               | 26                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 651                                  | NR                             | 650               | 702                                  | NR                             | 780               | 22                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 670                                  | NR                             | 655               | 657                                  | NR                             | 785               | 19                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 5                                    | NR                             | 530               | 687                                  | NR                             | 660               | 607                                  | NR                             | 790               | 16                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 8                                    | NR                             | 535               | 705                                  | NR                             | 665               | 559                                  | NR                             | 795               | 14                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 12                                   | NR                             | 540               | 717                                  | NR                             | 670               | 507                                  | NR                             | 800               | 12                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 19                                   | NR                             | 545               | 731                                  | NR                             | 675               | 458                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 34                                   | NR                             | 550               | 745                                  | NR                             | 680               | 413                                  | NR                             | 810               | 9                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 60                                   | NR                             | 555               | 757                                  | NR                             | 685               | 367                                  | NR                             | 815               | 7                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 107                                  | NR                             | 560               | 767                                  | NR                             | 690               | 328                                  | NR                             | 820               | 6                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 194                                  | NR                             | 565               | 777                                  | NR                             | 695               | 289                                  | NR                             | 825               | 5                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 349                                  | NR                             | 570               | 785                                  | NR                             | 700               | 253                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 678                                  | NR                             | 575               | 794                                  | NR                             | 705               | 221                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 997                                  | NR                             | 580               | 809                                  | NR                             | 710               | 192                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 819                                  | NR                             | 585               | 820                                  | NR                             | 715               | 165                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 581                                  | NR                             | 590               | 838                                  | NR                             | 720               | 144                                  | NR                             | 850               | 2                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 517                                  | NR                             | 595               | 851                                  | NR                             | 725               | 124                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 406                                  | NR                             | 600               | 861                                  | NR                             | 730               | 107                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 327                                  | NR                             | 605               | 873                                  | NR                             | 735               | 91                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 330                                  | NR                             | 610               | 875                                  | NR                             | 740               | 78                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 356                                  | NR                             | 615               | 877                                  | NR                             | 745               | 67                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-11

### Scotopic Flux vs. Wavelength

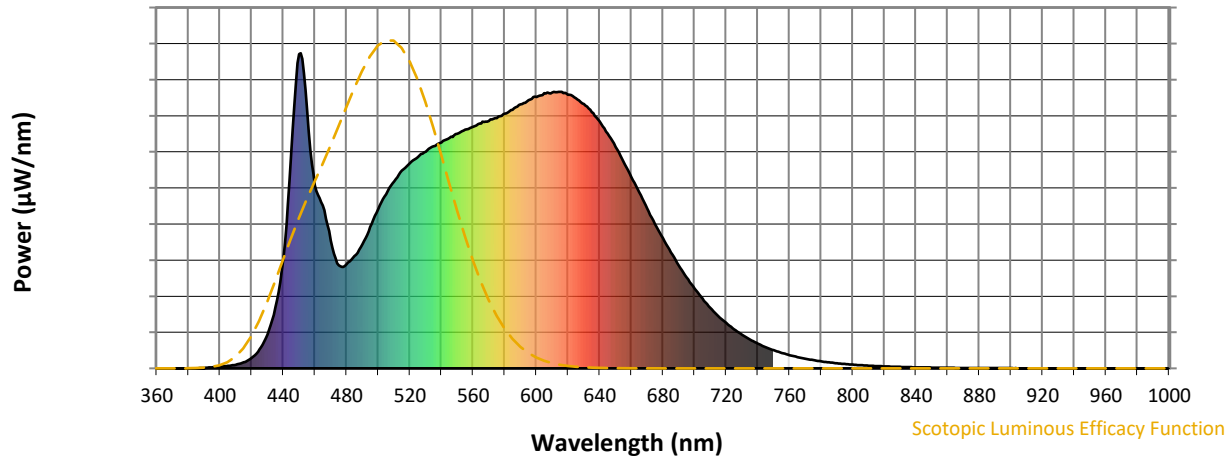


Scotopic Lumens: NR

S/P: 1.75

| λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 394                      | NR            | 620    | 868                      | NR            | 750    | 58                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 449                      | NR            | 625    | 858                      | NR            | 755    | 49                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 505                      | NR            | 630    | 839                      | NR            | 760    | 42                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 553                      | NR            | 635    | 813                      | NR            | 765    | 36                       | NR            | 895    | 1                        | NR            |
| 380    | 0                        | NR            | 510    | 593                      | NR            | 640    | 783                      | NR            | 770    | 31                       | NR            | 900    | 1                        | NR            |
| 385    | 0                        | NR            | 515    | 628                      | NR            | 645    | 746                      | NR            | 775    | 26                       | NR            | 905    | 1                        | NR            |
| 390    | 1                        | NR            | 520    | 651                      | NR            | 650    | 702                      | NR            | 780    | 22                       | NR            | 910    | 0                        | NR            |
| 395    | 4                        | NR            | 525    | 670                      | NR            | 655    | 657                      | NR            | 785    | 19                       | NR            | 915    | 0                        | NR            |
| 400    | 5                        | NR            | 530    | 687                      | NR            | 660    | 607                      | NR            | 790    | 16                       | NR            | 920    | 0                        | NR            |
| 405    | 8                        | NR            | 535    | 705                      | NR            | 665    | 559                      | NR            | 795    | 14                       | NR            | 925    | 0                        | NR            |
| 410    | 12                       | NR            | 540    | 717                      | NR            | 670    | 507                      | NR            | 800    | 12                       | NR            | 930    | 0                        | NR            |
| 415    | 19                       | NR            | 545    | 731                      | NR            | 675    | 458                      | NR            | 805    | 10                       | NR            | 935    | 0                        | NR            |
| 420    | 34                       | NR            | 550    | 745                      | NR            | 680    | 413                      | NR            | 810    | 9                        | NR            | 940    | 0                        | NR            |
| 425    | 60                       | NR            | 555    | 757                      | NR            | 685    | 367                      | NR            | 815    | 7                        | NR            | 945    | 0                        | NR            |
| 430    | 107                      | NR            | 560    | 767                      | NR            | 690    | 328                      | NR            | 820    | 6                        | NR            | 950    | 0                        | NR            |
| 435    | 194                      | NR            | 565    | 777                      | NR            | 695    | 289                      | NR            | 825    | 5                        | NR            | 955    | 0                        | NR            |
| 440    | 349                      | NR            | 570    | 785                      | NR            | 700    | 253                      | NR            | 830    | 5                        | NR            | 960    | 0                        | NR            |
| 445    | 678                      | NR            | 575    | 794                      | NR            | 705    | 221                      | NR            | 835    | 4                        | NR            | 965    | 0                        | NR            |
| 450    | 997                      | NR            | 580    | 809                      | NR            | 710    | 192                      | NR            | 840    | 3                        | NR            | 970    | 0                        | NR            |
| 455    | 819                      | NR            | 585    | 820                      | NR            | 715    | 165                      | NR            | 845    | 3                        | NR            | 975    | 0                        | NR            |
| 460    | 581                      | NR            | 590    | 838                      | NR            | 720    | 144                      | NR            | 850    | 2                        | NR            | 980    | 0                        | NR            |
| 465    | 517                      | NR            | 595    | 851                      | NR            | 725    | 124                      | NR            | 855    | 2                        | NR            | 985    | 0                        | NR            |
| 470    | 406                      | NR            | 600    | 861                      | NR            | 730    | 107                      | NR            | 860    | 2                        | NR            | 990    | 0                        | NR            |
| 475    | 327                      | NR            | 605    | 873                      | NR            | 735    | 91                       | NR            | 865    | 2                        | NR            | 995    | 0                        | NR            |
| 480    | 330                      | NR            | 610    | 875                      | NR            | 740    | 78                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 356                      | NR            | 615    | 877                      | NR            | 745    | 67                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2506-458-11

### Melanopic Flux vs. Wavelength

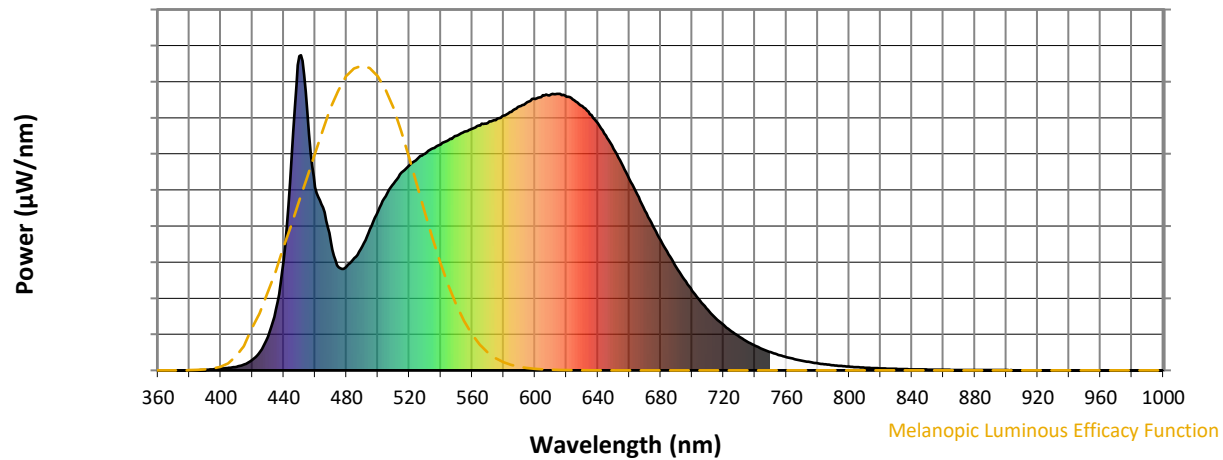
**Melanopic Lumens: NR**
**M/P: 3.61**


| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 394                                  | NR                             | 620               | 868                                  | NR                             | 750               | 58                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 449                                  | NR                             | 625               | 858                                  | NR                             | 755               | 49                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 505                                  | NR                             | 630               | 839                                  | NR                             | 760               | 42                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 553                                  | NR                             | 635               | 813                                  | NR                             | 765               | 36                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 593                                  | NR                             | 640               | 783                                  | NR                             | 770               | 31                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 628                                  | NR                             | 645               | 746                                  | NR                             | 775               | 26                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 651                                  | NR                             | 650               | 702                                  | NR                             | 780               | 22                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 670                                  | NR                             | 655               | 657                                  | NR                             | 785               | 19                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 5                                    | NR                             | 530               | 687                                  | NR                             | 660               | 607                                  | NR                             | 790               | 16                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 8                                    | NR                             | 535               | 705                                  | NR                             | 665               | 559                                  | NR                             | 795               | 14                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 12                                   | NR                             | 540               | 717                                  | NR                             | 670               | 507                                  | NR                             | 800               | 12                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 19                                   | NR                             | 545               | 731                                  | NR                             | 675               | 458                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 34                                   | NR                             | 550               | 745                                  | NR                             | 680               | 413                                  | NR                             | 810               | 9                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 60                                   | NR                             | 555               | 757                                  | NR                             | 685               | 367                                  | NR                             | 815               | 7                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 107                                  | NR                             | 560               | 767                                  | NR                             | 690               | 328                                  | NR                             | 820               | 6                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 194                                  | NR                             | 565               | 777                                  | NR                             | 695               | 289                                  | NR                             | 825               | 5                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 349                                  | NR                             | 570               | 785                                  | NR                             | 700               | 253                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 678                                  | NR                             | 575               | 794                                  | NR                             | 705               | 221                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 997                                  | NR                             | 580               | 809                                  | NR                             | 710               | 192                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 819                                  | NR                             | 585               | 820                                  | NR                             | 715               | 165                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 581                                  | NR                             | 590               | 838                                  | NR                             | 720               | 144                                  | NR                             | 850               | 2                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 517                                  | NR                             | 595               | 851                                  | NR                             | 725               | 124                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 406                                  | NR                             | 600               | 861                                  | NR                             | 730               | 107                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 327                                  | NR                             | 605               | 873                                  | NR                             | 735               | 91                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 330                                  | NR                             | 610               | 875                                  | NR                             | 740               | 78                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 356                                  | NR                             | 615               | 877                                  | NR                             | 745               | 67                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-11





TM-30-18

### Summary

$R_f = 90.8$   
 $R_g = 98.8$   
 $CIE R_a = 92.4$   
 $R_9 = 62.0$

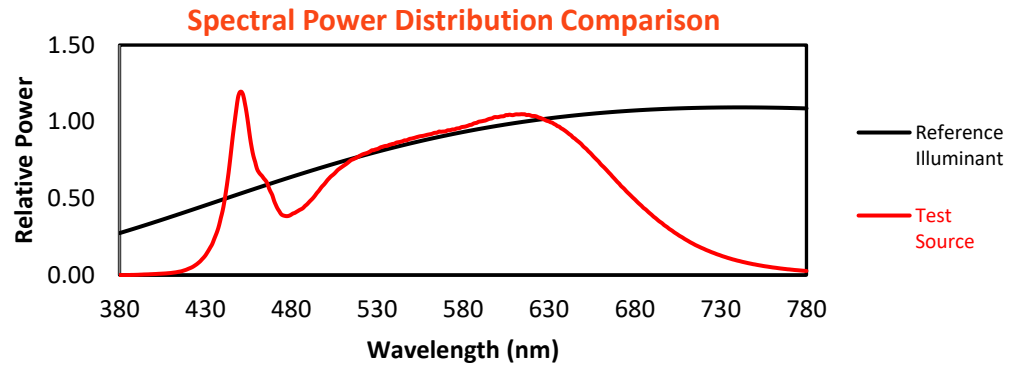


### Color Vector Graphics

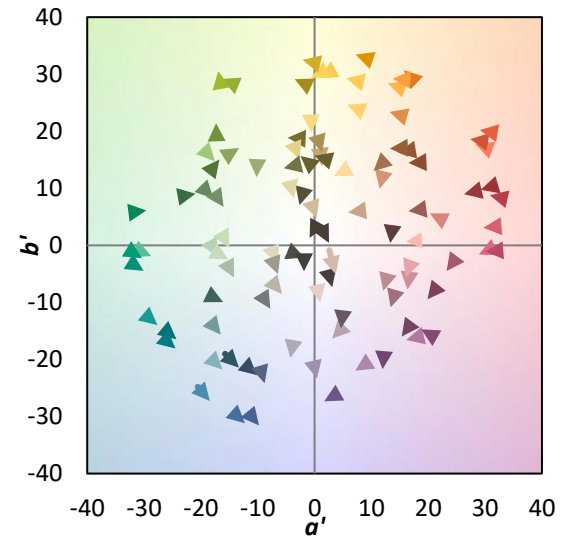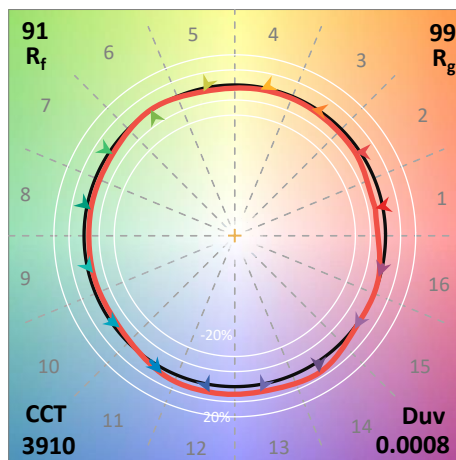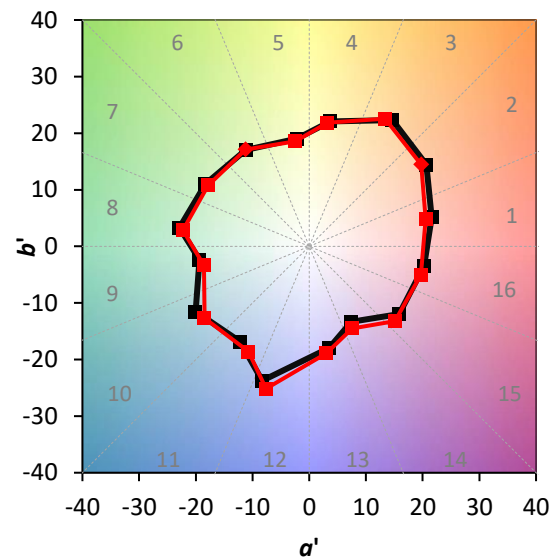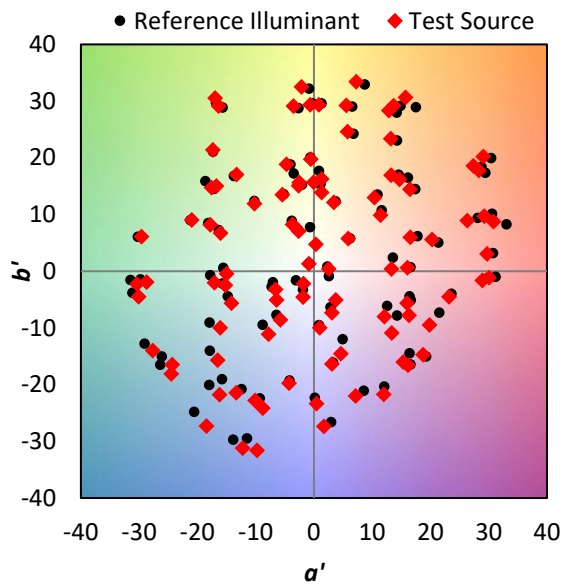






**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 93 | CES51 = 96 | CES76 = 85 |
| CES02 = 62 | CES27 = 90 | CES52 = 98 | CES77 = 88 |
| CES03 = 31 | CES28 = 96 | CES53 = 96 | CES78 = 82 |
| CES04 = 69 | CES29 = 96 | CES54 = 92 | CES79 = 96 |
| CES05 = 49 | CES30 = 90 | CES55 = 90 | CES80 = 93 |
| CES06 = 50 | CES31 = 97 | CES56 = 93 | CES81 = 89 |
| CES07 = 42 | CES32 = 91 | CES57 = 91 | CES82 = 97 |
| CES08 = 41 | CES33 = 98 | CES58 = 92 | CES83 = 98 |
| CES09 = 29 | CES34 = 93 | CES59 = 96 | CES84 = 93 |
| CES10 = 74 | CES35 = 96 | CES60 = 91 | CES85 = 83 |
| CES11 = 57 | CES36 = 79 | CES61 = 91 | CES86 = 88 |
| CES12 = 63 | CES37 = 95 | CES62 = 84 | CES87 = 91 |
| CES13 = 43 | CES38 = 85 | CES63 = 91 | CES88 = 96 |
| CES14 = 74 | CES39 = 99 | CES64 = 87 | CES89 = 87 |
| CES15 = 71 | CES40 = 98 | CES65 = 87 | CES90 = 96 |
| CES16 = 47 | CES41 = 96 | CES66 = 84 | CES91 = 71 |
| CES17 = 49 | CES42 = 95 | CES67 = 83 | CES92 = 79 |
| CES18 = 56 | CES43 = 95 | CES68 = 86 | CES93 = 87 |
| CES19 = 71 | CES44 = 99 | CES69 = 87 | CES94 = 81 |
| CES20 = 66 | CES45 = 98 | CES70 = 84 | CES95 = 82 |
| CES21 = 85 | CES46 = 97 | CES71 = 77 | CES96 = 91 |
| CES22 = 78 | CES47 = 97 | CES72 = 93 | CES97 = 96 |
| CES23 = 91 | CES48 = 90 | CES73 = 78 | CES98 = 94 |
| CES24 = 90 | CES49 = 96 | CES74 = 91 | CES99 = 91 |
| CES25 = 71 | CES50 = 97 | CES75 = 80 |            |

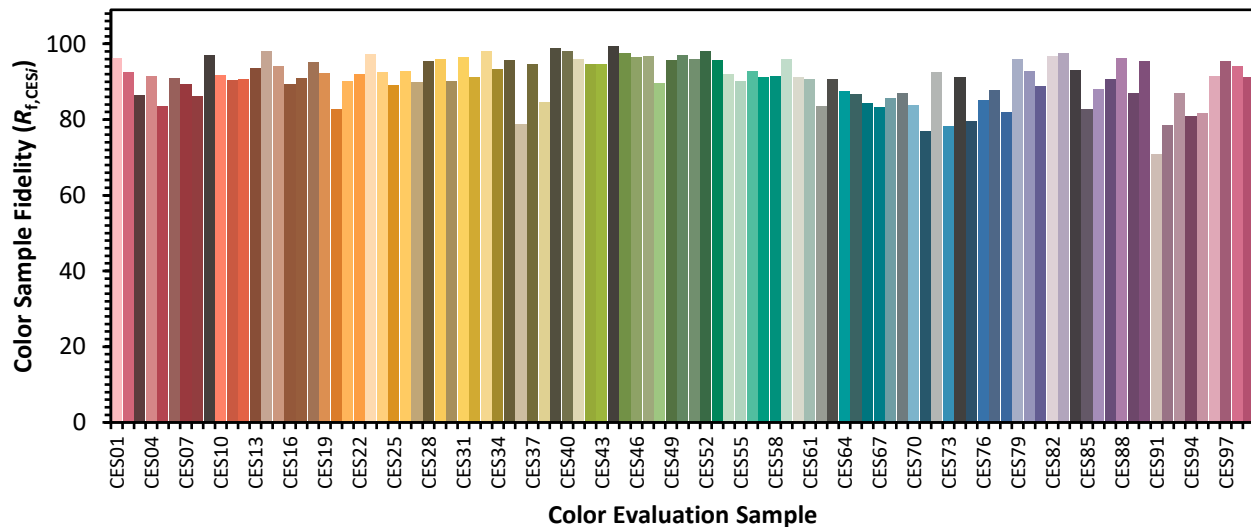

Color Rendition by Hue-Angle Bin

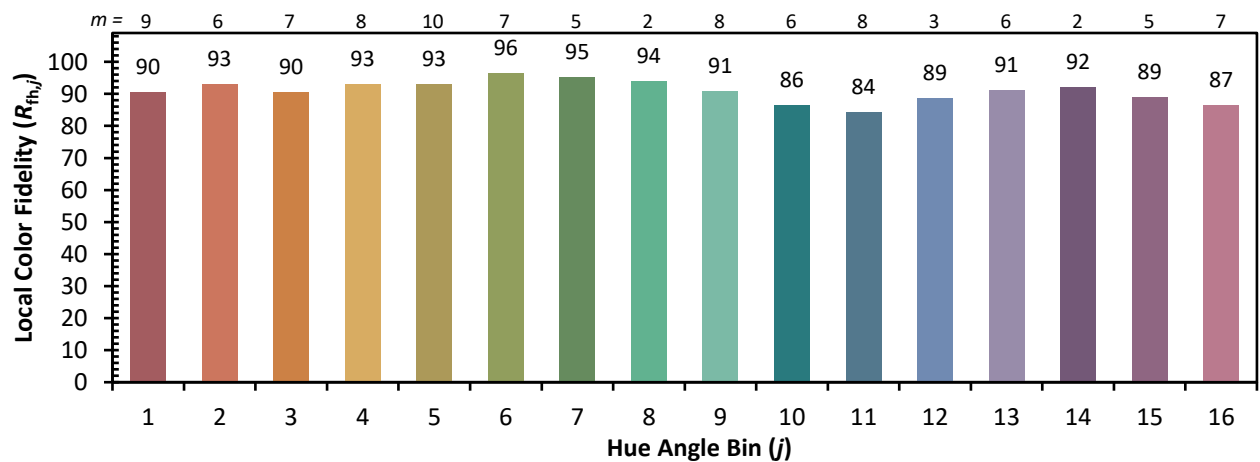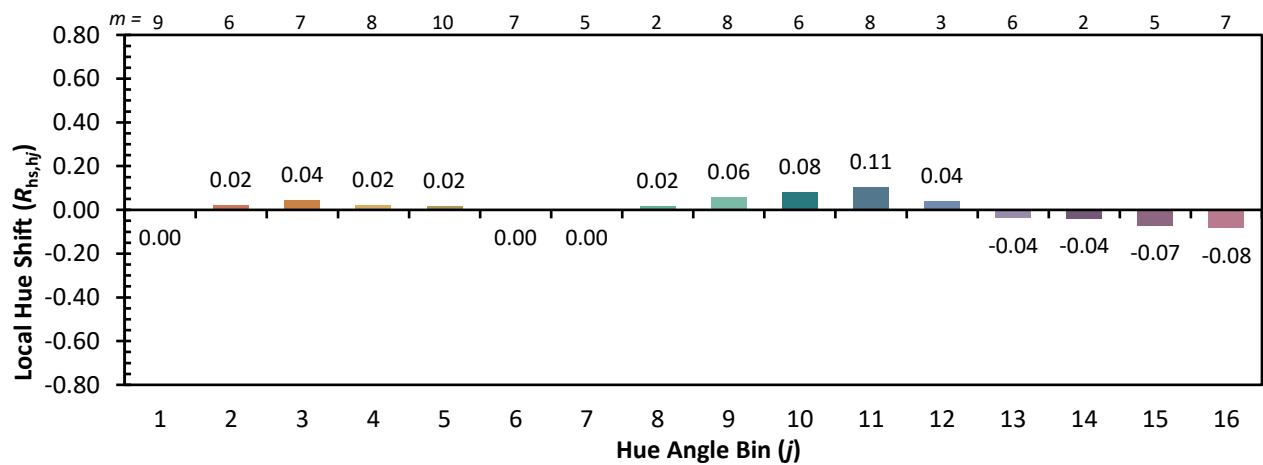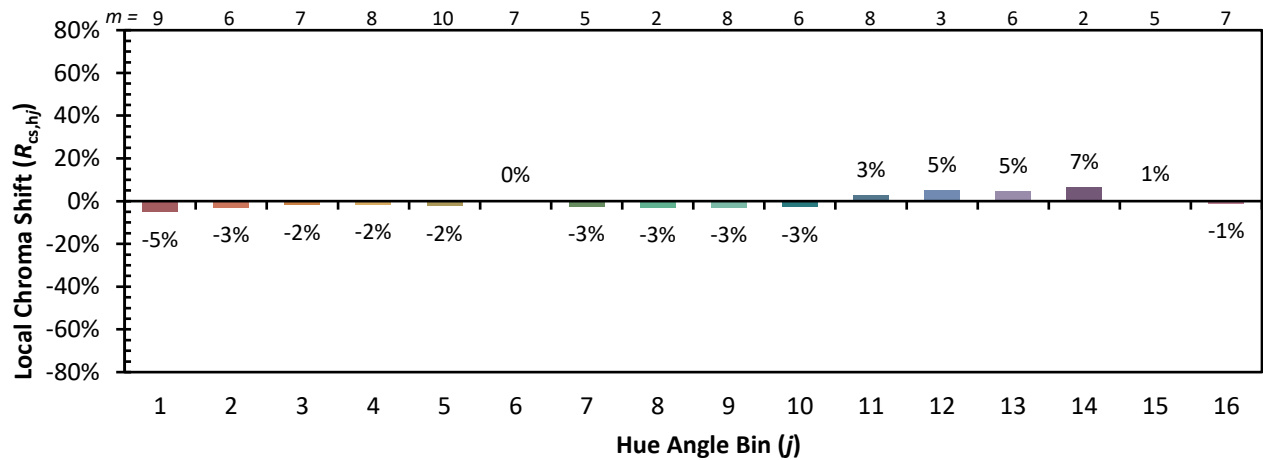

**Measure Comparisons**

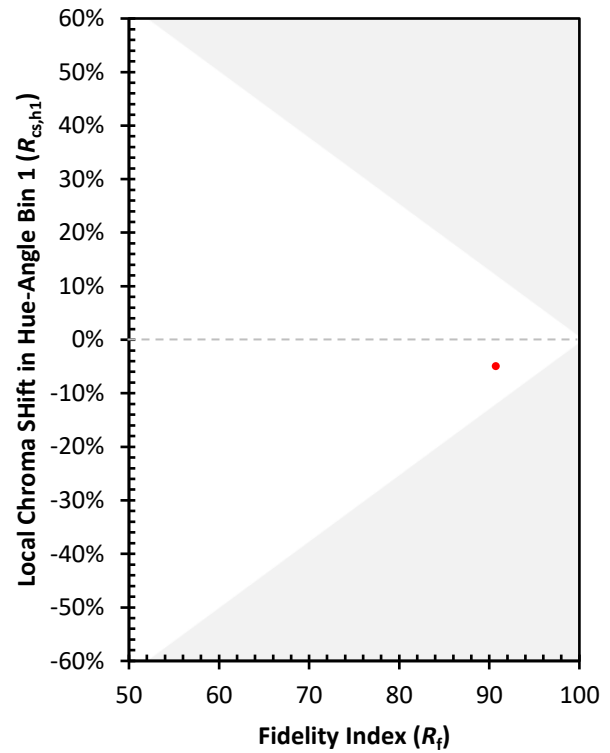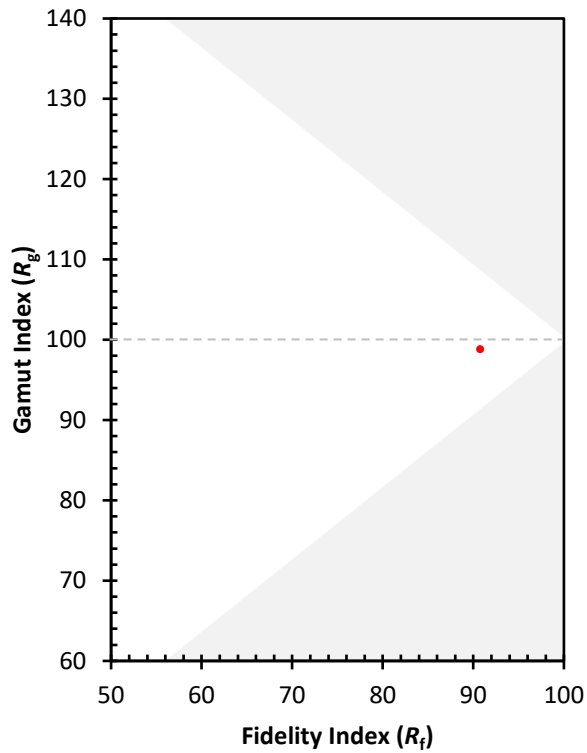

(END OF REPORT)