

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1214685

Luminaire Tested: 22-ID2-50-CFR2-L930-U

Issue Date: 12/4/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1214685  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2506-458-11)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/4/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 22-ID2-50-CFR2-L930-U  
Description: 2X2 IN DEPTH TROFFER WITH 2INCH CUBE REGRESS LENS  
Light Source: 3000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 4501.0 lumens  
Efficiency: N/A  
Efficacy: 100.5 lumens/watt  
Spacing Criteria (0/90/45): 1.18 / 1.17 / 1.27  
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')  
CIE Type: Direct

Input Watts (W): 44.8  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1214685  
CATALOG NUMBER: 22-ID2-50-CFR2-L930-U

### Luminous Intensity Polar Plot

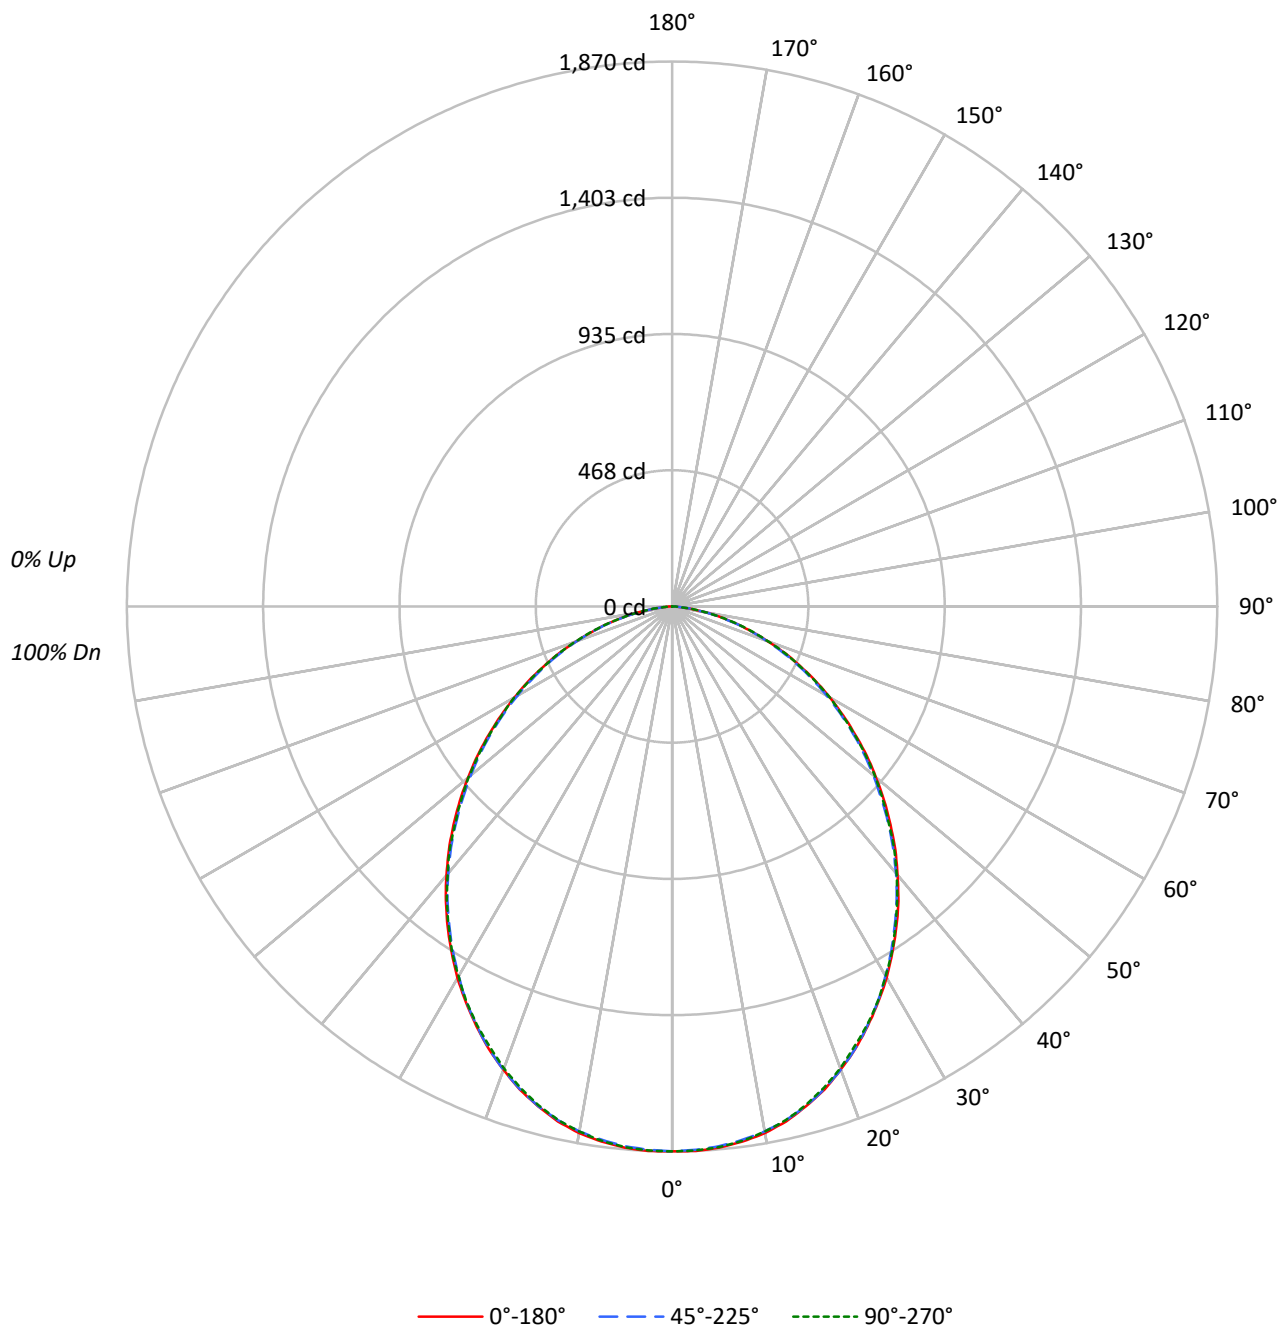

TEST NUMBER: P1214685

CATALOG NUMBER: 22-ID2-50-CFR2-L930-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 110 | 105 | 101 | 98  | 107 | 103 | 99  | 96  | 99  | 96  | 93  |  | 95  | 92  | 90  |  | 85  |
| 2   | 100 | 92  | 86  | 81  | 98  | 91  | 85  | 80  | 87  | 82  | 78  |  | 84  | 80  | 76  |  | 72  |
| 3   | 92  | 82  | 74  | 68  | 89  | 80  | 73  | 67  | 77  | 71  | 66  |  | 75  | 69  | 65  |  | 62  |
| 4   | 84  | 73  | 64  | 58  | 82  | 72  | 64  | 58  | 69  | 62  | 57  |  | 67  | 61  | 56  |  | 53  |
| 5   | 78  | 65  | 57  | 50  | 76  | 64  | 56  | 50  | 62  | 55  | 50  |  | 60  | 54  | 49  |  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 50  | 44  | 56  | 49  | 44  |  | 55  | 48  | 43  |  | 41  |
| 7   | 67  | 54  | 45  | 39  | 65  | 53  | 45  | 39  | 51  | 44  | 39  |  | 50  | 44  | 39  |  | 36  |
| 8   | 62  | 49  | 41  | 35  | 61  | 49  | 41  | 35  | 47  | 40  | 35  |  | 46  | 40  | 35  |  | 33  |
| 9   | 58  | 45  | 37  | 32  | 57  | 45  | 37  | 32  | 44  | 37  | 32  |  | 43  | 36  | 31  |  | 30  |
| 10  | 55  | 42  | 34  | 29  | 54  | 41  | 34  | 29  | 40  | 34  | 29  |  | 39  | 33  | 29  |  | 27  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 5032 | 5032 | 5032 |
| 5°  | 5035 | 5022 | 5031 |
| 10° | 5014 | 4999 | 5000 |
| 15° | 4946 | 4944 | 4935 |
| 20° | 4844 | 4846 | 4830 |
| 25° | 4717 | 4710 | 4702 |
| 30° | 4573 | 4550 | 4552 |
| 35° | 4408 | 4377 | 4390 |
| 40° | 4228 | 4196 | 4208 |
| 45° | 4033 | 3986 | 4000 |
| 50° | 3824 | 3770 | 3810 |
| 55° | 3600 | 3547 | 3576 |
| 60° | 3358 | 3295 | 3362 |
| 65° | 3086 | 3028 | 3075 |
| 70° | 2751 | 2720 | 2765 |
| 75° | 2367 | 2326 | 2390 |
| 80° | 1804 | 1804 | 1874 |
| 85° | 988  | 1059 | 1041 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 4033 cd/sqm

TEST NUMBER: P1214685  
 CATALOG NUMBER: 22-ID2-50-CFR2-L930-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 176.7  | 3.9       |
| 10°-20°   | 499.3  | 11.1      |
| 20°-30°   | 730.5  | 16.2      |
| 30°-40°   | 836.3  | 18.6      |
| 40°-50°   | 812.3  | 18.0      |
| 50°-60°   | 680.8  | 15.1      |
| 60°-70°   | 475.7  | 10.6      |
| 70°-80°   | 241.4  | 5.4       |
| 80°-90°   | 48.2   | 1.1       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1406.5 | 31.2      |
| 0°-40°    | 2242.7 | 49.8      |
| 0°-60°    | 3735.8 | 83.0      |
| 0°-90°    | 4501.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 4501.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1870 | 1870  | 1870 | 1870  | 1870 |      |
| 5°  | 1864 | 1861  | 1859 | 1860  | 1862 | 177  |
| 15° | 1775 | 1775  | 1775 | 1771  | 1771 | 500  |
| 25° | 1589 | 1592  | 1586 | 1588  | 1584 | 731  |
| 35° | 1342 | 1341  | 1332 | 1338  | 1336 | 839  |
| 45° | 1060 | 1056  | 1047 | 1052  | 1051 | 817  |
| 55° | 767  | 760   | 756  | 762   | 762  | 687  |
| 65° | 485  | 478   | 476  | 479   | 483  | 481  |
| 75° | 228  | 225   | 224  | 227   | 230  | 243  |
| 85° | 32   | 33    | 34   | 35    | 34   | 47   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1214685

CATALOG NUMBER: 22-ID2-50-CFR2-L930-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1869.8 | 1869.8 | 1869.8 | 1869.8 | 1869.8 |
| 2.5°  | 1870.3 | 1868.6 | 1865.8 | 1866.9 | 1868.6 |
| 5°    | 1864.1 | 1861.3 | 1859.1 | 1859.6 | 1862.4 |
| 7.5°  | 1852.3 | 1849.0 | 1846.1 | 1847.3 | 1849.5 |
| 10°   | 1834.9 | 1831.5 | 1829.3 | 1829.3 | 1829.8 |
| 12.5° | 1810.2 | 1806.8 | 1805.7 | 1804.0 | 1805.1 |
| 15°   | 1775.3 | 1774.7 | 1774.7 | 1770.8 | 1771.4 |
| 17.5° | 1738.2 | 1736.5 | 1736.5 | 1732.0 | 1731.5 |
| 20°   | 1691.5 | 1691.5 | 1692.1 | 1689.3 | 1686.5 |
| 22.5° | 1643.2 | 1643.8 | 1642.6 | 1639.8 | 1634.2 |
| 25°   | 1588.7 | 1591.5 | 1586.4 | 1587.5 | 1583.6 |
| 27.5° | 1531.3 | 1531.9 | 1528.0 | 1529.6 | 1528.0 |
| 30°   | 1471.7 | 1471.7 | 1464.4 | 1470.6 | 1465.0 |
| 32.5° | 1407.1 | 1409.3 | 1399.8 | 1404.8 | 1404.3 |
| 35°   | 1341.9 | 1341.3 | 1332.3 | 1337.9 | 1336.3 |
| 37.5° | 1275.0 | 1272.2 | 1265.4 | 1268.8 | 1268.8 |
| 40°   | 1203.6 | 1200.2 | 1194.6 | 1199.7 | 1198.0 |
| 42.5° | 1133.3 | 1128.8 | 1121.5 | 1124.9 | 1128.3 |
| 45°   | 1059.7 | 1055.7 | 1047.3 | 1051.8 | 1051.2 |
| 47.5° | 986.6  | 982.7  | 973.1  | 978.2  | 980.4  |
| 50°   | 913.5  | 909.6  | 900.6  | 905.6  | 910.1  |
| 52.5° | 841.6  | 834.8  | 829.2  | 835.4  | 835.4  |
| 55°   | 767.4  | 760.0  | 756.1  | 761.7  | 762.3  |
| 57.5° | 695.4  | 689.2  | 684.2  | 689.2  | 689.8  |
| 60°   | 624.0  | 618.9  | 612.2  | 617.8  | 624.6  |
| 62.5° | 555.4  | 549.2  | 543.6  | 548.1  | 551.5  |
| 65°   | 484.6  | 477.8  | 475.6  | 479.0  | 482.9  |
| 67.5° | 419.9  | 413.2  | 409.3  | 410.9  | 418.2  |
| 70°   | 349.7  | 349.1  | 345.7  | 346.3  | 351.4  |
| 72.5° | 286.7  | 285.0  | 284.5  | 286.7  | 291.2  |
| 75°   | 227.7  | 224.9  | 223.7  | 227.1  | 229.9  |
| 77.5° | 173.1  | 171.5  | 168.6  | 170.3  | 171.5  |
| 80°   | 116.4  | 115.8  | 116.4  | 120.3  | 120.9  |
| 82.5° | 70.8   | 70.8   | 71.4   | 74.8   | 72.5   |
| 85°   | 32.0   | 32.6   | 34.3   | 34.9   | 33.7   |
| 87.5° | 11.8   | 12.4   | 11.8   | 13.5   | 12.4   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1214685

CATALOG NUMBER: 22-ID2-50-CFR2-L930-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 16.30            | 17.87 | 16.66 | 18.18 | 18.50 | 16.29          | 17.86 | 16.65 | 18.17 | 18.49 |
|                 | 3H   | 17.83            | 19.25 | 18.21 | 19.58 | 19.94 | 17.82          | 19.23 | 18.19 | 19.56 | 19.92 |
|                 | 4H   | 18.34            | 19.67 | 18.74 | 20.02 | 20.39 | 18.34          | 19.67 | 18.74 | 20.01 | 20.39 |
|                 | 6H   | 18.65            | 19.88 | 19.06 | 20.24 | 20.64 | 18.65          | 19.88 | 19.06 | 20.25 | 20.64 |
|                 | 8H   | 18.71            | 19.88 | 19.14 | 20.27 | 20.67 | 18.72          | 19.89 | 19.15 | 20.28 | 20.68 |
|                 | 12H  | 18.73            | 19.85 | 19.16 | 20.23 | 20.66 | 18.74          | 19.86 | 19.17 | 20.24 | 20.67 |
| 4H              | 2H   | 16.83            | 18.16 | 17.23 | 18.51 | 18.88 | 16.82          | 18.15 | 17.22 | 18.50 | 18.88 |
|                 | 3H   | 18.57            | 19.68 | 18.98 | 20.08 | 20.48 | 18.56          | 19.66 | 18.97 | 20.06 | 20.46 |
|                 | 4H   | 19.18            | 20.18 | 19.62 | 20.59 | 21.03 | 19.19          | 20.18 | 19.62 | 20.60 | 21.03 |
|                 | 6H   | 19.59            | 20.46 | 20.05 | 20.90 | 21.36 | 19.60          | 20.47 | 20.06 | 20.91 | 21.37 |
|                 | 8H   | 19.68            | 20.49 | 20.14 | 20.93 | 21.40 | 19.70          | 20.51 | 20.16 | 20.95 | 21.42 |
|                 | 12H  | 19.71            | 20.44 | 20.20 | 20.92 | 21.39 | 19.74          | 20.46 | 20.22 | 20.94 | 21.41 |
| 8H              | 4H   | 19.40            | 20.21 | 19.86 | 20.66 | 21.12 | 19.40          | 20.21 | 19.86 | 20.66 | 21.12 |
|                 | 6H   | 19.89            | 20.55 | 20.38 | 21.04 | 21.52 | 19.90          | 20.57 | 20.39 | 21.06 | 21.53 |
|                 | 8H   | 20.01            | 20.61 | 20.52 | 21.12 | 21.61 | 20.04          | 20.64 | 20.55 | 21.15 | 21.63 |
|                 | 12H  | 20.08            | 20.61 | 20.59 | 21.10 | 21.66 | 20.11          | 20.64 | 20.62 | 21.13 | 21.70 |
| 12H             | 4H   | 19.41            | 20.14 | 19.89 | 20.61 | 21.08 | 19.41          | 20.14 | 19.89 | 20.61 | 21.08 |
|                 | 6H   | 19.90            | 20.50 | 20.41 | 21.01 | 21.50 | 19.91          | 20.51 | 20.42 | 21.02 | 21.51 |
|                 | 8H   | 20.06            | 20.59 | 20.57 | 21.08 | 21.65 | 20.09          | 20.62 | 20.60 | 21.11 | 21.67 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-9

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L930-U

Data in this report applies to families of products including 22ID2-55-CFR1-L930-U




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-9  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L930-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3000K 90CRI

### Spectral Parameters

CCT (K): 3003  
 CIE  $u'$ : 0.2507  
 CIE  $v'$ : 0.5202  
 Duv: -0.0008  
 CIE x: 0.4356  
 CIE y: 0.4017  
 CIE z: 0.1627  
 Peak Wavelength (nm): 618  
 Dominant Wavelength (nm): 583  
 Purity: 51.31044  
 R<sub>f</sub>: 91.9  
 R<sub>g</sub>: 99.2

CRI (Ra): 93.2  
 R1: 93.7  
 R2: 97.2  
 R3: 98.7  
 R4: 93.5  
 R5: 93.6  
 R6: 96.3  
 R7: 91.5  
 R8: 81.5  
 R9: 59.0  
 R10: 92.7  
 R11: 94.9  
 R12: 82.6  
 R13: 94.8  
 R14: 99.1  
 R15: 89.5

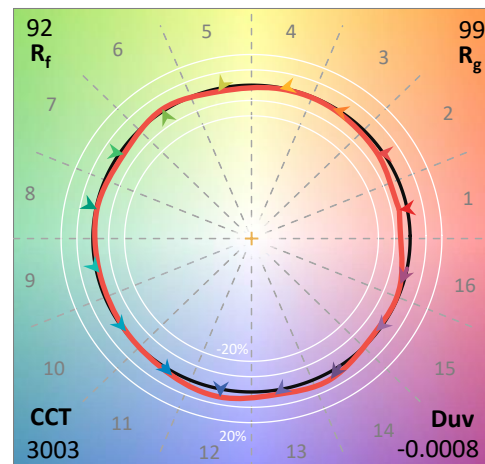

### Test Conditions


Stabilization Time: 32M  
 Operation Time: 1H 32M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2506-458-9


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-9

**CIE 1931 Chromaticity Diagram**

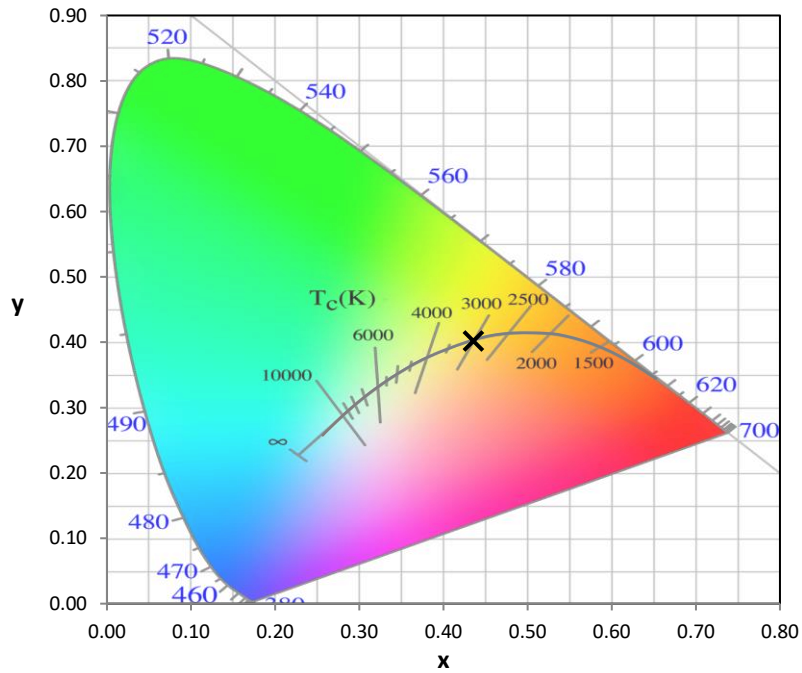


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

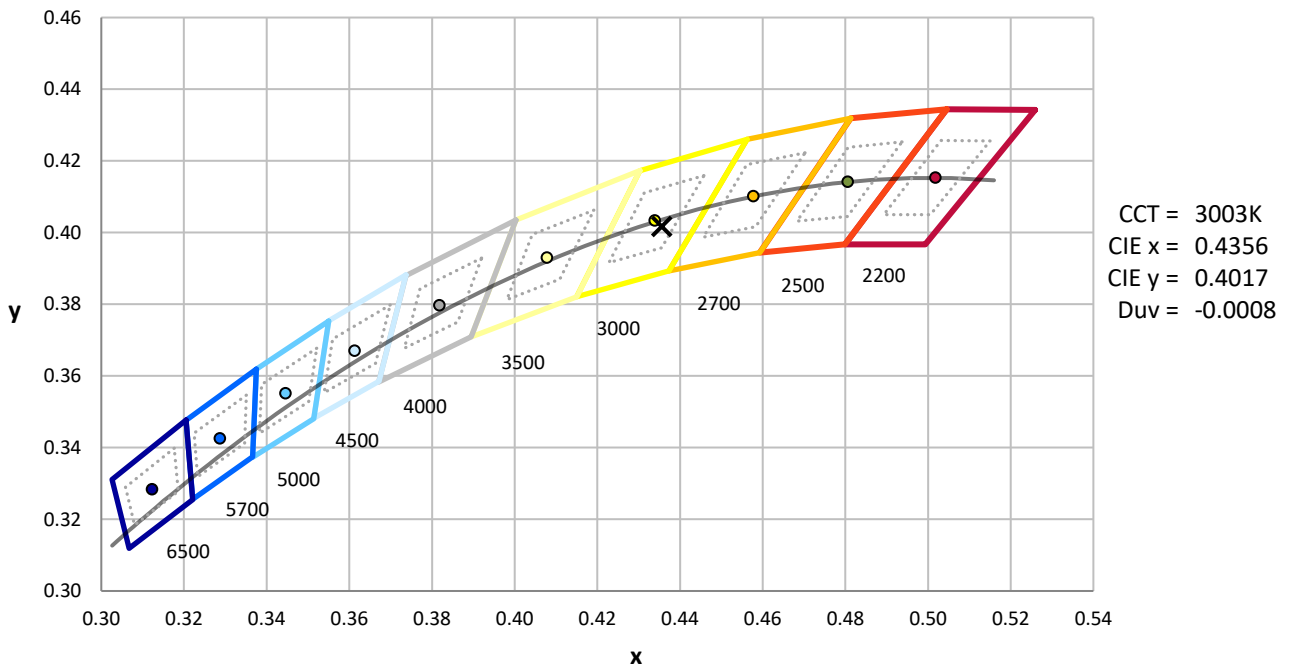

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-9

### Photopic Flux vs. Wavelength

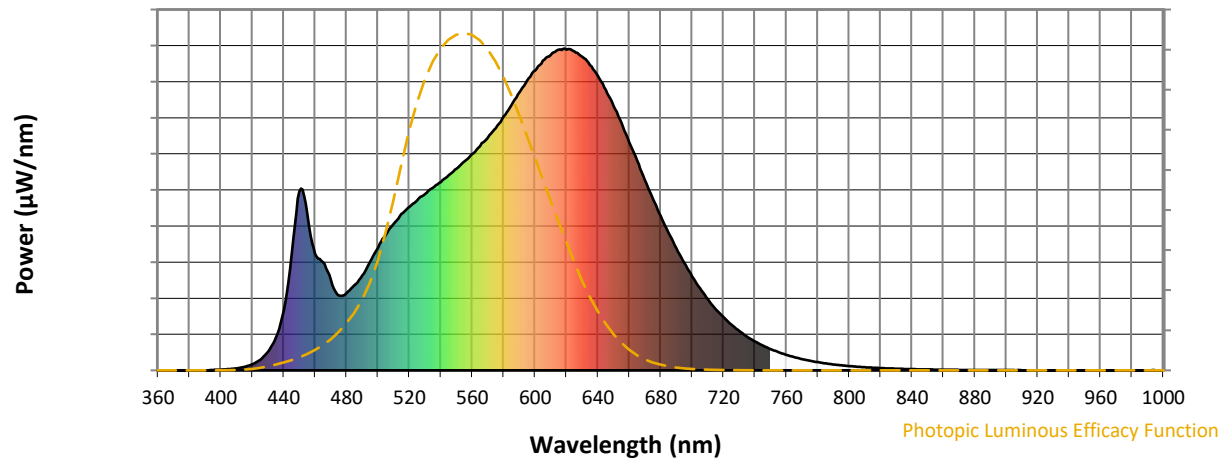


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 296                                  | NR                             | 620               | 997                                  | NR                             | 750               | 66                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 338                                  | NR                             | 625               | 992                                  | NR                             | 755               | 56                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 381                                  | NR                             | 630               | 975                                  | NR                             | 760               | 48                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 421                                  | NR                             | 635               | 949                                  | NR                             | 765               | 41                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 456                                  | NR                             | 640               | 916                                  | NR                             | 770               | 35                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 487                                  | NR                             | 645               | 871                                  | NR                             | 775               | 30                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 508                                  | NR                             | 650               | 821                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 529                                  | NR                             | 655               | 769                                  | NR                             | 785               | 22                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 2                                    | NR                             | 530               | 548                                  | NR                             | 660               | 709                                  | NR                             | 790               | 18                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 4                                    | NR                             | 535               | 568                                  | NR                             | 665               | 652                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 6                                    | NR                             | 540               | 585                                  | NR                             | 670               | 591                                  | NR                             | 800               | 13                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 11                                   | NR                             | 545               | 607                                  | NR                             | 675               | 534                                  | NR                             | 805               | 11                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 19                                   | NR                             | 550               | 627                                  | NR                             | 680               | 480                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 33                                   | NR                             | 555               | 649                                  | NR                             | 685               | 427                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 58                                   | NR                             | 560               | 673                                  | NR                             | 690               | 380                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 103                                  | NR                             | 565               | 697                                  | NR                             | 695               | 334                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 184                                  | NR                             | 570               | 723                                  | NR                             | 700               | 292                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 360                                  | NR                             | 575               | 753                                  | NR                             | 705               | 255                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 557                                  | NR                             | 580               | 789                                  | NR                             | 710               | 221                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 486                                  | NR                             | 585               | 825                                  | NR                             | 715               | 190                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 362                                  | NR                             | 590               | 864                                  | NR                             | 720               | 166                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 337                                  | NR                             | 595               | 902                                  | NR                             | 725               | 143                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 279                                  | NR                             | 600               | 932                                  | NR                             | 730               | 122                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 233                                  | NR                             | 605               | 963                                  | NR                             | 735               | 105                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 241                                  | NR                             | 610               | 981                                  | NR                             | 740               | 90                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 264                                  | NR                             | 615               | 997                                  | NR                             | 745               | 77                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-9

### Scotopic Flux vs. Wavelength

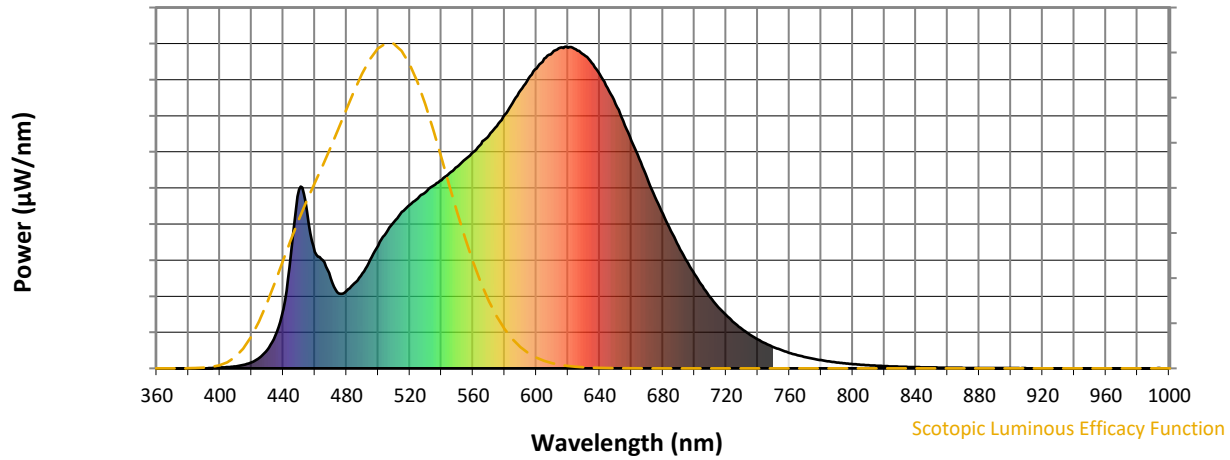


Scotopic Lumens: NR

S/P: 1.43

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 296                         | NR               | 620       | 997                         | NR               | 750       | 66                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 338                         | NR               | 625       | 992                         | NR               | 755       | 56                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 381                         | NR               | 630       | 975                         | NR               | 760       | 48                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 421                         | NR               | 635       | 949                         | NR               | 765       | 41                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 456                         | NR               | 640       | 916                         | NR               | 770       | 35                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 487                         | NR               | 645       | 871                         | NR               | 775       | 30                          | NR               | 905       | 1                           | NR               |
| 390       | 0                           | NR               | 520       | 508                         | NR               | 650       | 821                         | NR               | 780       | 26                          | NR               | 910       | 1                           | NR               |
| 395       | 1                           | NR               | 525       | 529                         | NR               | 655       | 769                         | NR               | 785       | 22                          | NR               | 915       | 0                           | NR               |
| 400       | 2                           | NR               | 530       | 548                         | NR               | 660       | 709                         | NR               | 790       | 18                          | NR               | 920       | 0                           | NR               |
| 405       | 4                           | NR               | 535       | 568                         | NR               | 665       | 652                         | NR               | 795       | 16                          | NR               | 925       | 0                           | NR               |
| 410       | 6                           | NR               | 540       | 585                         | NR               | 670       | 591                         | NR               | 800       | 13                          | NR               | 930       | 0                           | NR               |
| 415       | 11                          | NR               | 545       | 607                         | NR               | 675       | 534                         | NR               | 805       | 11                          | NR               | 935       | 0                           | NR               |
| 420       | 19                          | NR               | 550       | 627                         | NR               | 680       | 480                         | NR               | 810       | 10                          | NR               | 940       | 0                           | NR               |
| 425       | 33                          | NR               | 555       | 649                         | NR               | 685       | 427                         | NR               | 815       | 8                           | NR               | 945       | 0                           | NR               |
| 430       | 58                          | NR               | 560       | 673                         | NR               | 690       | 380                         | NR               | 820       | 7                           | NR               | 950       | 0                           | NR               |
| 435       | 103                         | NR               | 565       | 697                         | NR               | 695       | 334                         | NR               | 825       | 6                           | NR               | 955       | 0                           | NR               |
| 440       | 184                         | NR               | 570       | 723                         | NR               | 700       | 292                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 360                         | NR               | 575       | 753                         | NR               | 705       | 255                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 557                         | NR               | 580       | 789                         | NR               | 710       | 221                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 486                         | NR               | 585       | 825                         | NR               | 715       | 190                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 362                         | NR               | 590       | 864                         | NR               | 720       | 166                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 337                         | NR               | 595       | 902                         | NR               | 725       | 143                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 279                         | NR               | 600       | 932                         | NR               | 730       | 122                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 233                         | NR               | 605       | 963                         | NR               | 735       | 105                         | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 241                         | NR               | 610       | 981                         | NR               | 740       | 90                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 264                         | NR               | 615       | 997                         | NR               | 745       | 77                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-9

### Melanopic Flux vs. Wavelength

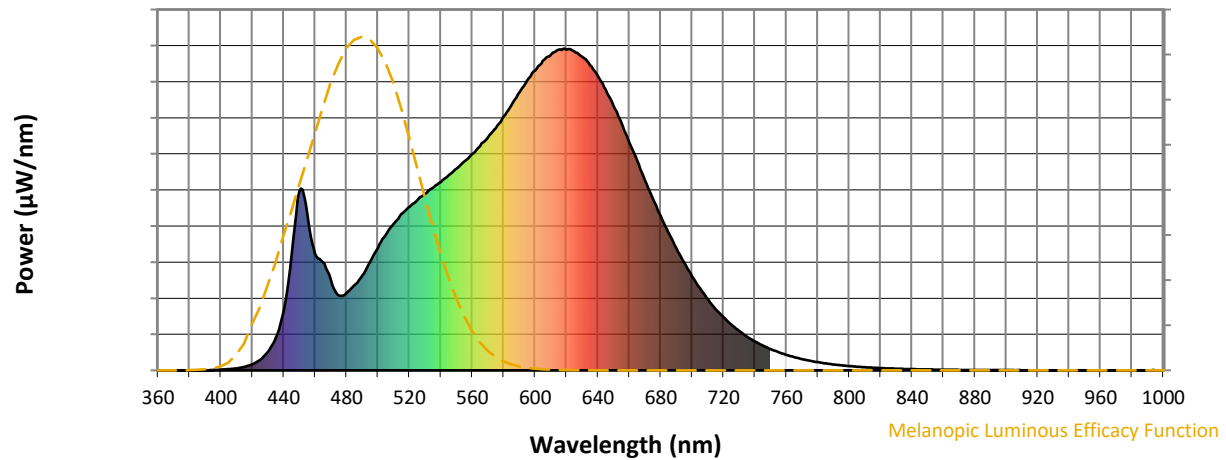
**Melanopic Lumens: NR**
**M/P: 2.82**


| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 296                                  | NR                             | 620               | 997                                  | NR                             | 750               | 66                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 338                                  | NR                             | 625               | 992                                  | NR                             | 755               | 56                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 381                                  | NR                             | 630               | 975                                  | NR                             | 760               | 48                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 421                                  | NR                             | 635               | 949                                  | NR                             | 765               | 41                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 456                                  | NR                             | 640               | 916                                  | NR                             | 770               | 35                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 487                                  | NR                             | 645               | 871                                  | NR                             | 775               | 30                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 508                                  | NR                             | 650               | 821                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 529                                  | NR                             | 655               | 769                                  | NR                             | 785               | 22                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 2                                    | NR                             | 530               | 548                                  | NR                             | 660               | 709                                  | NR                             | 790               | 18                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 4                                    | NR                             | 535               | 568                                  | NR                             | 665               | 652                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 6                                    | NR                             | 540               | 585                                  | NR                             | 670               | 591                                  | NR                             | 800               | 13                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 11                                   | NR                             | 545               | 607                                  | NR                             | 675               | 534                                  | NR                             | 805               | 11                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 19                                   | NR                             | 550               | 627                                  | NR                             | 680               | 480                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 33                                   | NR                             | 555               | 649                                  | NR                             | 685               | 427                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 58                                   | NR                             | 560               | 673                                  | NR                             | 690               | 380                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 103                                  | NR                             | 565               | 697                                  | NR                             | 695               | 334                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 184                                  | NR                             | 570               | 723                                  | NR                             | 700               | 292                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 360                                  | NR                             | 575               | 753                                  | NR                             | 705               | 255                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 557                                  | NR                             | 580               | 789                                  | NR                             | 710               | 221                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 486                                  | NR                             | 585               | 825                                  | NR                             | 715               | 190                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 362                                  | NR                             | 590               | 864                                  | NR                             | 720               | 166                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 337                                  | NR                             | 595               | 902                                  | NR                             | 725               | 143                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 279                                  | NR                             | 600               | 932                                  | NR                             | 730               | 122                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 233                                  | NR                             | 605               | 963                                  | NR                             | 735               | 105                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 241                                  | NR                             | 610               | 981                                  | NR                             | 740               | 90                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 264                                  | NR                             | 615               | 997                                  | NR                             | 745               | 77                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-9





TM-30-18

### Summary

$R_f = 91.9$   
 $R_g = 99.2$   
 $\text{CIE } R_a = 93.2$   
 $R_9 = 59.0$

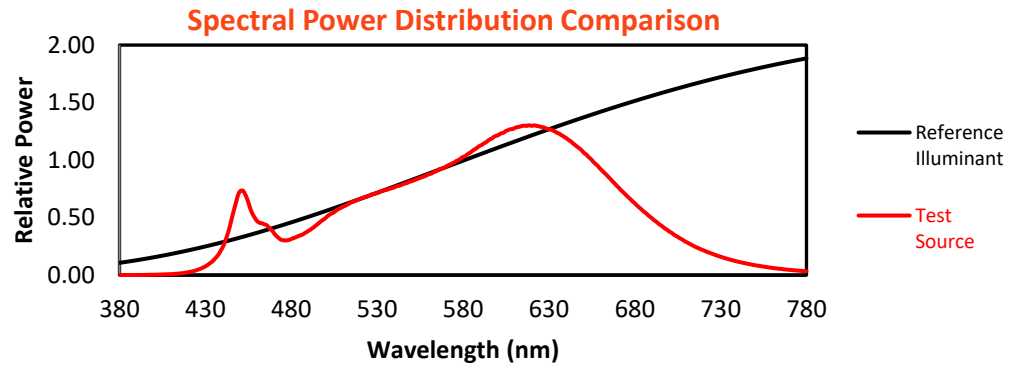


### Color Vector Graphics

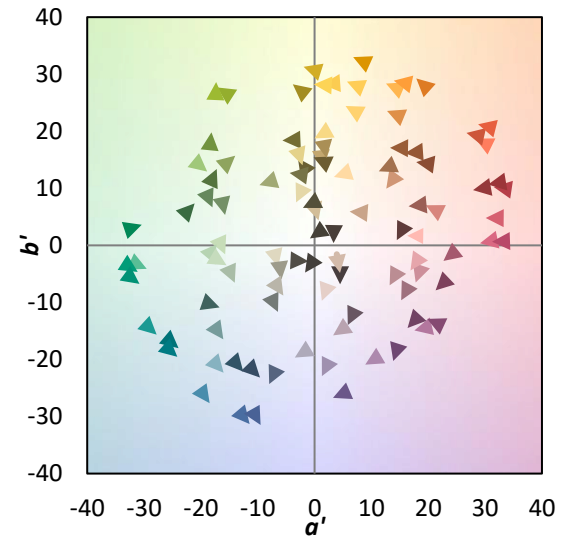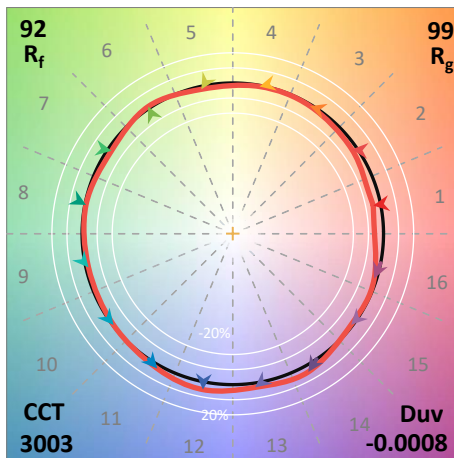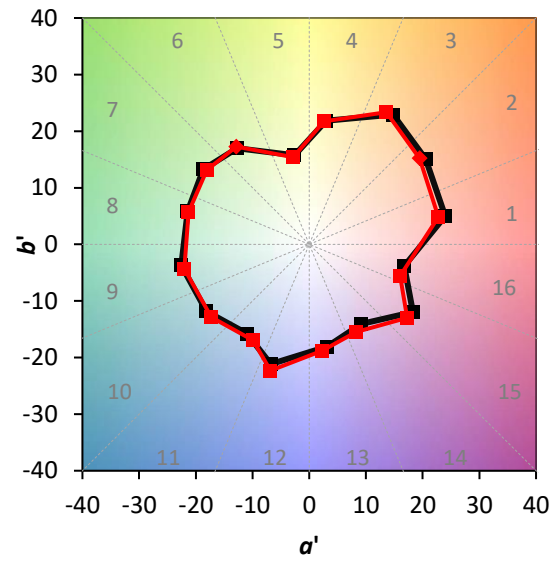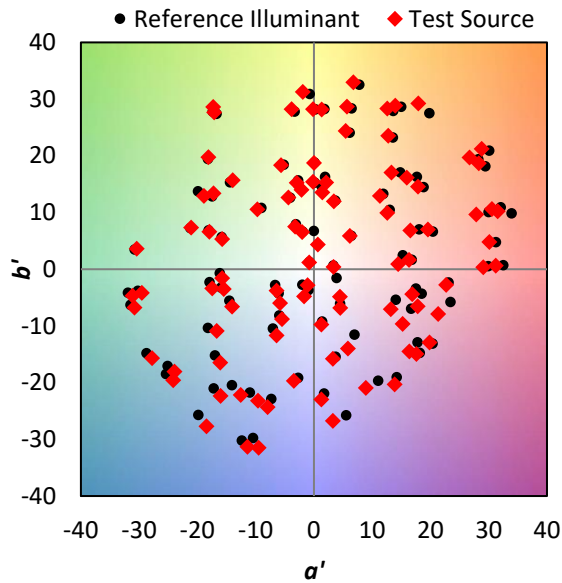




**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 94 | CES51 = 97 | CES76 = 90 |
| CES02 = 63 | CES27 = 92 | CES52 = 99 | CES77 = 89 |
| CES03 = 32 | CES28 = 97 | CES53 = 97 | CES78 = 87 |
| CES04 = 70 | CES29 = 97 | CES54 = 94 | CES79 = 93 |
| CES05 = 51 | CES30 = 93 | CES55 = 92 | CES80 = 93 |
| CES06 = 51 | CES31 = 97 | CES56 = 95 | CES81 = 82 |
| CES07 = 43 | CES32 = 91 | CES57 = 94 | CES82 = 97 |
| CES08 = 42 | CES33 = 99 | CES58 = 94 | CES83 = 96 |
| CES09 = 29 | CES34 = 95 | CES59 = 97 | CES84 = 95 |
| CES10 = 76 | CES35 = 97 | CES60 = 93 | CES85 = 82 |
| CES11 = 59 | CES36 = 83 | CES61 = 93 | CES86 = 83 |
| CES12 = 65 | CES37 = 97 | CES62 = 88 | CES87 = 91 |
| CES13 = 44 | CES38 = 89 | CES63 = 94 | CES88 = 96 |
| CES14 = 74 | CES39 = 99 | CES64 = 91 | CES89 = 85 |
| CES15 = 72 | CES40 = 98 | CES65 = 90 | CES90 = 96 |
| CES16 = 48 | CES41 = 97 | CES66 = 90 | CES91 = 78 |
| CES17 = 50 | CES42 = 96 | CES67 = 89 | CES92 = 79 |
| CES18 = 57 | CES43 = 94 | CES68 = 90 | CES93 = 87 |
| CES19 = 72 | CES44 = 99 | CES69 = 91 | CES94 = 79 |
| CES20 = 67 | CES45 = 98 | CES70 = 88 | CES95 = 84 |
| CES21 = 86 | CES46 = 96 | CES71 = 85 | CES96 = 92 |
| CES22 = 79 | CES47 = 94 | CES72 = 95 | CES97 = 96 |
| CES23 = 92 | CES48 = 91 | CES73 = 84 | CES98 = 94 |
| CES24 = 91 | CES49 = 96 | CES74 = 91 | CES99 = 91 |
| CES25 = 72 | CES50 = 98 | CES75 = 87 |            |


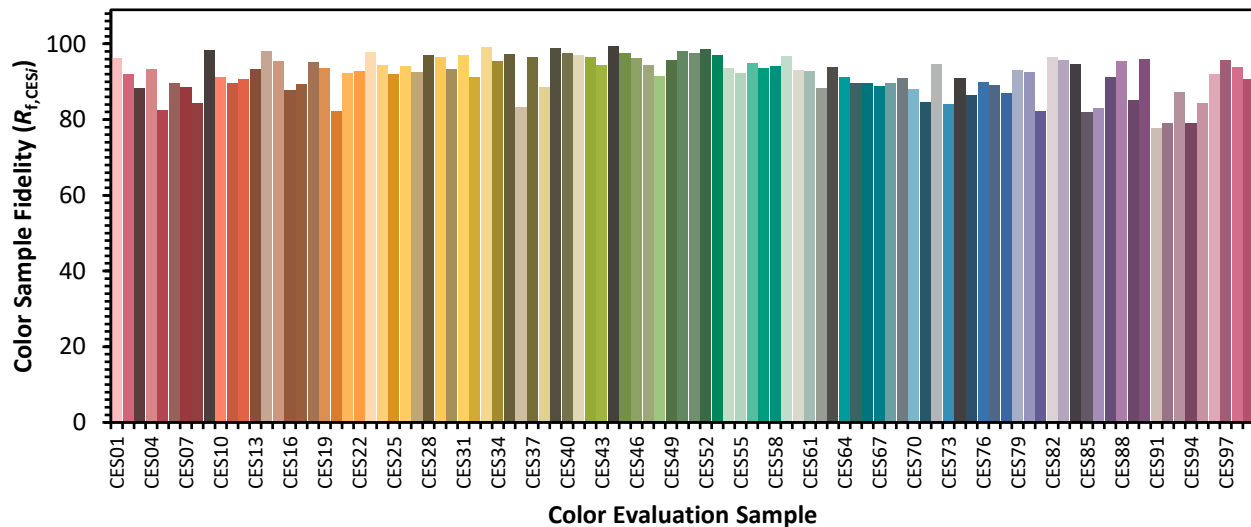




Color Rendition by Hue-Angle Bin

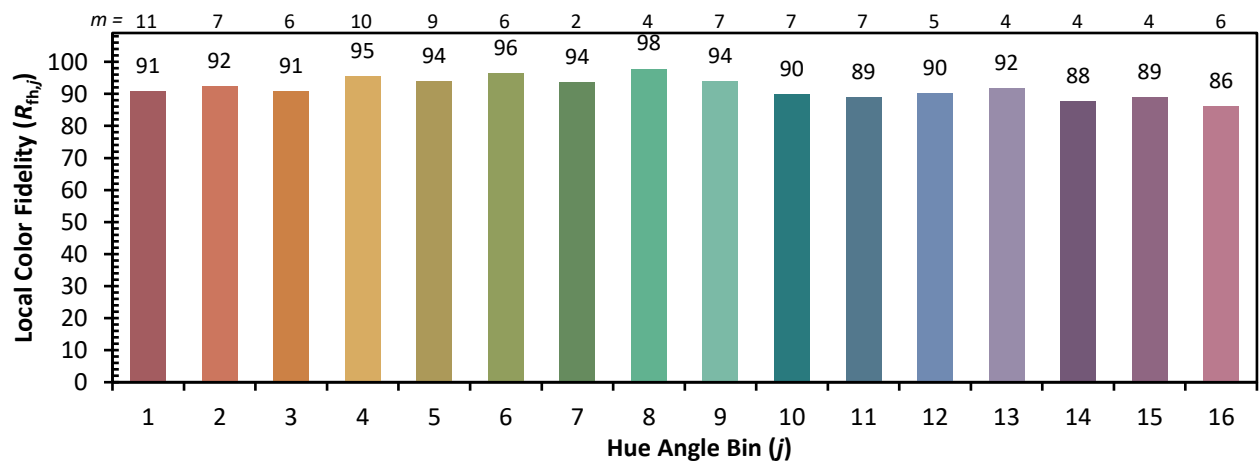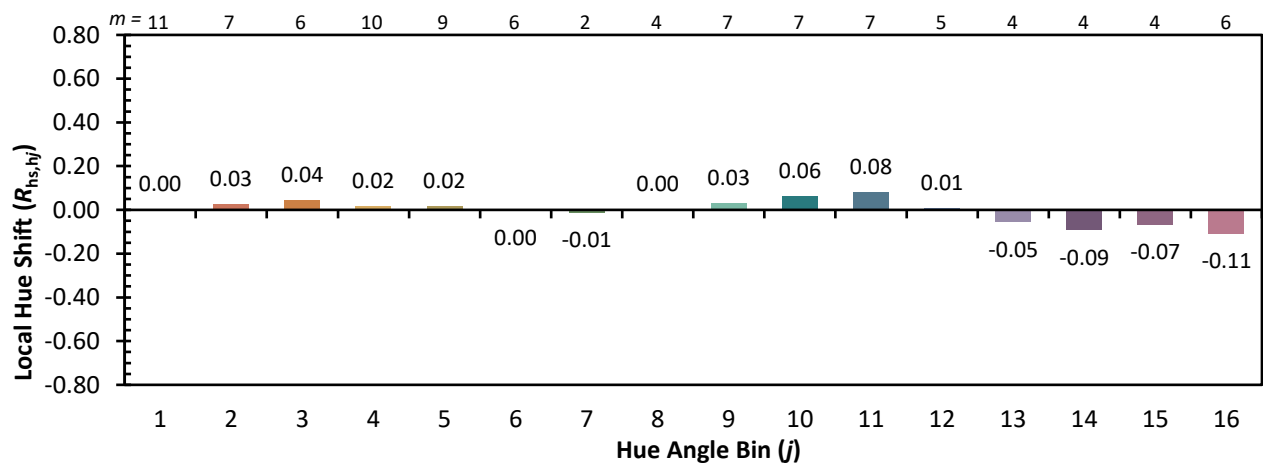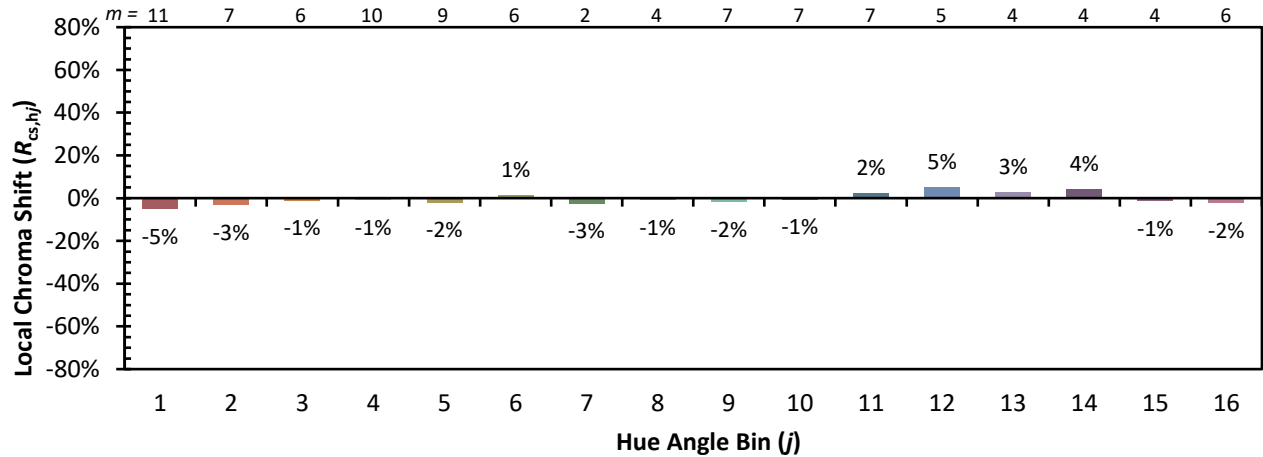

**Measure Comparisons**

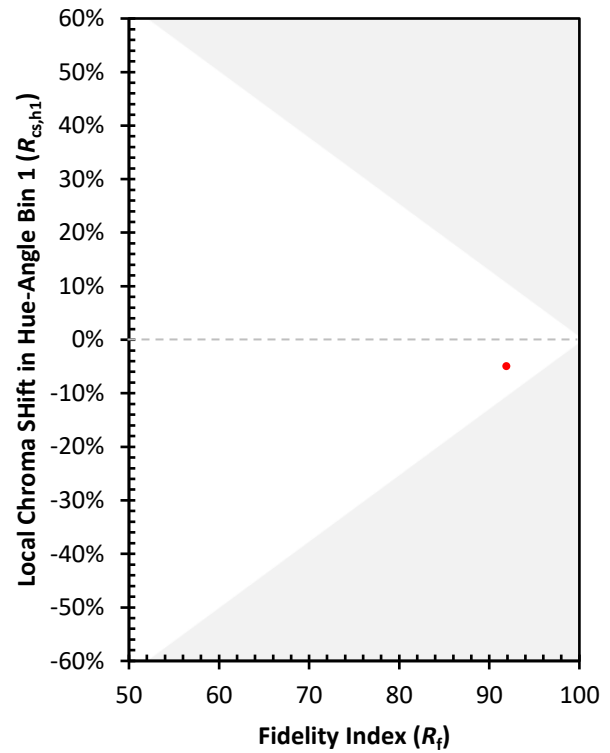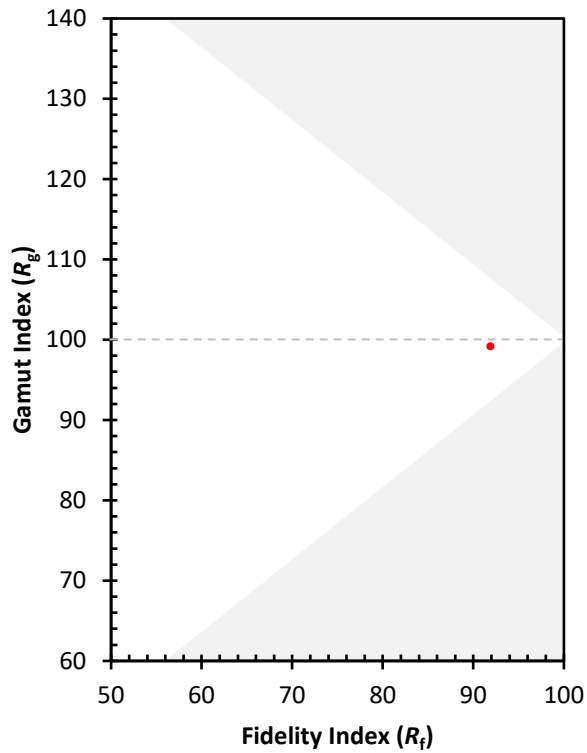

(END OF REPORT)