

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1214626

Luminaire Tested: 22-ID2-80-CFR1-L835-U

Issue Date: 12/4/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1214626  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2506-458-3)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/4/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 22-ID2-80-CFR1-L835-U  
Description: 2X2 IN DEPTH TROFFER WITH 1INCH CUBE REGRESS LENS  
Light Source: 3500K CCT, 80 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 7494.2 lumens  
Efficiency: N/A  
Efficacy: 109.2 lumens/watt  
Spacing Criteria (0/90/45): 1.19 / 1.19 / 1.29  
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')  
CIE Type: Direct

Input Watts (W): 68.6  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1214626  
CATALOG NUMBER: 22-ID2-80-CFR1-L835-U

### Luminous Intensity Polar Plot

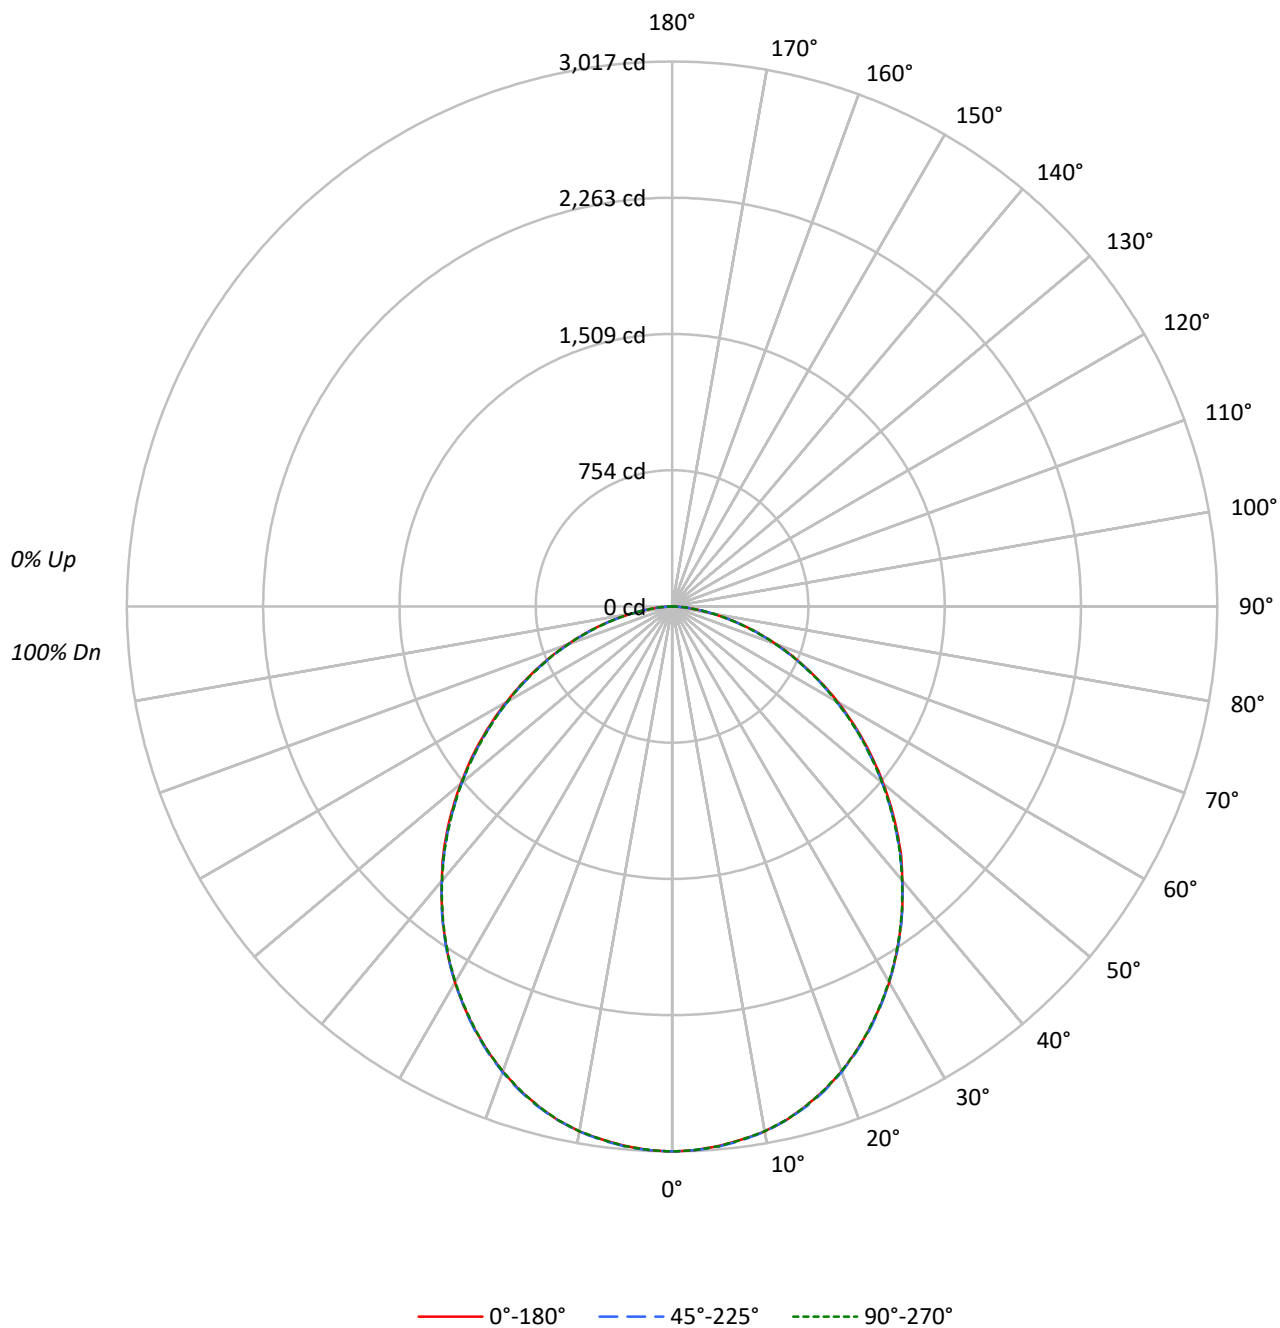

TEST NUMBER: P1214626

CATALOG NUMBER: 22-ID2-80-CFR1-L835-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 105 | 101 | 97  | 107 | 103 | 99  | 96  | 98  | 95  | 93  |  | 94  | 92  | 90  |  | 85  |
| 2   | 100 | 92  | 85  | 80  | 97  | 90  | 84  | 79  | 87  | 82  | 77  |  | 83  | 79  | 75  |  | 72  |
| 3   | 91  | 81  | 73  | 67  | 89  | 80  | 72  | 67  | 77  | 70  | 65  |  | 74  | 69  | 64  |  | 61  |
| 4   | 84  | 72  | 64  | 57  | 82  | 71  | 63  | 57  | 68  | 62  | 56  |  | 66  | 60  | 55  |  | 53  |
| 5   | 77  | 65  | 56  | 50  | 75  | 64  | 56  | 49  | 62  | 54  | 49  |  | 60  | 53  | 48  |  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 49  | 43  | 56  | 48  | 43  |  | 54  | 48  | 43  |  | 40  |
| 7   | 66  | 53  | 45  | 39  | 65  | 52  | 44  | 39  | 51  | 44  | 38  |  | 49  | 43  | 38  |  | 36  |
| 8   | 62  | 49  | 40  | 35  | 60  | 48  | 40  | 35  | 47  | 39  | 34  |  | 45  | 39  | 34  |  | 32  |
| 9   | 58  | 45  | 37  | 31  | 57  | 44  | 36  | 31  | 43  | 36  | 31  |  | 42  | 36  | 31  |  | 29  |
| 10  | 54  | 41  | 34  | 28  | 53  | 41  | 33  | 28  | 40  | 33  | 28  |  | 39  | 33  | 28  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 8119 | 8119 | 8119 |
| 5°  | 8095 | 8108 | 8101 |
| 10° | 8064 | 8067 | 8062 |
| 15° | 7977 | 7987 | 7977 |
| 20° | 7847 | 7858 | 7844 |
| 25° | 7667 | 7679 | 7661 |
| 30° | 7467 | 7464 | 7455 |
| 35° | 7226 | 7236 | 7220 |
| 40° | 6965 | 6962 | 6955 |
| 45° | 6701 | 6672 | 6668 |
| 50° | 6391 | 6354 | 6354 |
| 55° | 6062 | 6012 | 6012 |
| 60° | 5703 | 5646 | 5646 |
| 65° | 5304 | 5242 | 5242 |
| 70° | 4840 | 4793 | 4809 |
| 75° | 4270 | 4230 | 4240 |
| 80° | 3498 | 3467 | 3498 |
| 85° | 2482 | 2452 | 2541 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 6701 cd/sqm

TEST NUMBER: P1214626  
 CATALOG NUMBER: 22-ID2-80-CFR1-L835-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 284.9  | 3.8       |
| 10°-20°   | 807.3  | 10.8      |
| 20°-30°   | 1189.1 | 15.9      |
| 30°-40°   | 1374.1 | 18.3      |
| 40°-50°   | 1350.3 | 18.0      |
| 50°-60°   | 1145.5 | 15.3      |
| 60°-70°   | 815.6  | 10.9      |
| 70°-80°   | 429.8  | 5.7       |
| 80°-90°   | 97.7   | 1.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 2281.2 | 30.4      |
| 0°-40°    | 3655.4 | 48.8      |
| 0°-60°    | 6151.2 | 82.1      |
| 0°-90°    | 7494.2 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 7494.2 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 3017 | 3017  | 3017 | 3017  | 3017 |      |
| 5°  | 2997 | 3002  | 3002 | 3001  | 2999 | 285  |
| 15° | 2863 | 2867  | 2867 | 2865  | 2863 | 807  |
| 25° | 2582 | 2586  | 2586 | 2581  | 2580 | 1189 |
| 35° | 2200 | 2203  | 2203 | 2193  | 2198 | 1375 |
| 45° | 1761 | 1751  | 1753 | 1742  | 1752 | 1357 |
| 55° | 1292 | 1280  | 1282 | 1274  | 1282 | 1155 |
| 65° | 833  | 822   | 823  | 816   | 823  | 826  |
| 75° | 411  | 402   | 407  | 398   | 408  | 437  |
| 85° | 80   | 76    | 79   | 78    | 82   | 100  |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1214626

CATALOG NUMBER: 22-ID2-80-CFR1-L835-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 3017.2 | 3017.2 | 3017.2 | 3017.2 | 3017.2 |
| 2.5°  | 3012.3 | 3014.3 | 3013.3 | 3014.3 | 3011.4 |
| 5°    | 2996.8 | 3001.7 | 3001.7 | 3000.7 | 2998.8 |
| 7.5°  | 2976.5 | 2981.3 | 2980.4 | 2980.4 | 2976.5 |
| 10°   | 2951.3 | 2953.3 | 2952.3 | 2952.3 | 2950.4 |
| 12.5° | 2913.5 | 2915.5 | 2914.5 | 2914.5 | 2912.6 |
| 15°   | 2863.2 | 2867.1 | 2867.1 | 2865.1 | 2863.2 |
| 17.5° | 2806.0 | 2808.9 | 2809.9 | 2806.0 | 2805.1 |
| 20°   | 2740.2 | 2743.1 | 2744.0 | 2739.2 | 2739.2 |
| 22.5° | 2664.6 | 2668.5 | 2668.5 | 2663.6 | 2664.6 |
| 25°   | 2582.3 | 2586.2 | 2586.2 | 2581.3 | 2580.3 |
| 27.5° | 2495.1 | 2498.0 | 2497.0 | 2492.2 | 2492.2 |
| 30°   | 2403.1 | 2404.1 | 2402.1 | 2393.4 | 2399.2 |
| 32.5° | 2303.3 | 2305.3 | 2306.2 | 2296.5 | 2300.4 |
| 35°   | 2199.7 | 2202.6 | 2202.6 | 2192.9 | 2197.7 |
| 37.5° | 2093.1 | 2094.1 | 2094.1 | 2084.4 | 2090.2 |
| 40°   | 1982.7 | 1982.7 | 1981.8 | 1972.1 | 1979.8 |
| 42.5° | 1876.2 | 1866.5 | 1868.4 | 1858.7 | 1867.5 |
| 45°   | 1760.9 | 1751.2 | 1753.2 | 1742.5 | 1752.2 |
| 47.5° | 1643.7 | 1634.0 | 1635.0 | 1628.2 | 1635.0 |
| 50°   | 1526.5 | 1516.8 | 1517.8 | 1510.0 | 1517.8 |
| 52.5° | 1409.3 | 1398.7 | 1398.7 | 1391.9 | 1398.7 |
| 55°   | 1292.1 | 1280.5 | 1281.5 | 1273.7 | 1281.5 |
| 57.5° | 1174.9 | 1163.3 | 1164.3 | 1157.5 | 1164.3 |
| 60°   | 1059.6 | 1048.0 | 1049.0 | 1042.2 | 1049.0 |
| 62.5° | 945.4  | 933.7  | 934.7  | 927.9  | 940.5  |
| 65°   | 833.0  | 822.3  | 823.3  | 816.5  | 823.3  |
| 67.5° | 723.5  | 712.9  | 713.9  | 704.2  | 718.7  |
| 70°   | 615.1  | 605.4  | 609.2  | 597.6  | 611.2  |
| 72.5° | 511.4  | 501.7  | 505.6  | 495.0  | 507.5  |
| 75°   | 410.7  | 402.0  | 406.8  | 398.1  | 407.8  |
| 77.5° | 314.8  | 308.0  | 311.9  | 305.1  | 312.9  |
| 80°   | 225.7  | 219.9  | 223.7  | 217.0  | 225.7  |
| 82.5° | 146.3  | 141.4  | 146.3  | 142.4  | 147.2  |
| 85°   | 80.4   | 75.6   | 79.4   | 77.5   | 82.3   |
| 87.5° | 27.1   | 24.2   | 27.1   | 24.2   | 28.1   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1214626

CATALOG NUMBER: 22-ID2-80-CFR1-L835-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 18.15            | 19.73 | 18.51 | 20.05 | 20.36 | 18.11          | 19.69 | 18.47 | 20.01 | 20.32 |
|                 | 3H   | 19.75            | 21.18 | 20.13 | 21.51 | 21.87 | 19.70          | 21.13 | 20.08 | 21.46 | 21.82 |
|                 | 4H   | 20.31            | 21.66 | 20.71 | 22.00 | 22.38 | 20.26          | 21.60 | 20.66 | 21.95 | 22.33 |
|                 | 6H   | 20.68            | 21.92 | 21.09 | 22.29 | 22.68 | 20.63          | 21.87 | 21.04 | 22.24 | 22.63 |
|                 | 8H   | 20.77            | 21.96 | 21.20 | 22.35 | 22.75 | 20.72          | 21.91 | 21.15 | 22.30 | 22.70 |
|                 | 12H  | 20.82            | 21.96 | 21.25 | 22.34 | 22.77 | 20.78          | 21.91 | 21.21 | 22.29 | 22.72 |
| 4H              | 2H   | 18.71            | 20.06 | 19.11 | 20.41 | 20.78 | 18.68          | 20.03 | 19.08 | 20.37 | 20.75 |
|                 | 3H   | 20.53            | 21.65 | 20.94 | 22.05 | 22.45 | 20.48          | 21.60 | 20.89 | 22.00 | 22.40 |
|                 | 4H   | 21.20            | 22.21 | 21.63 | 22.62 | 23.06 | 21.15          | 22.16 | 21.58 | 22.57 | 23.01 |
|                 | 6H   | 21.67            | 22.55 | 22.12 | 22.99 | 23.45 | 21.62          | 22.50 | 22.07 | 22.94 | 23.40 |
|                 | 8H   | 21.79            | 22.62 | 22.26 | 23.06 | 23.53 | 21.75          | 22.57 | 22.21 | 23.01 | 23.48 |
|                 | 12H  | 21.87            | 22.61 | 22.35 | 23.08 | 23.55 | 21.83          | 22.57 | 22.31 | 23.04 | 23.51 |
| 8H              | 4H   | 21.44            | 22.27 | 21.90 | 22.71 | 23.17 | 21.40          | 22.22 | 21.86 | 22.67 | 23.13 |
|                 | 6H   | 22.00            | 22.69 | 22.50 | 23.18 | 23.65 | 21.96          | 22.64 | 22.45 | 23.13 | 23.61 |
|                 | 8H   | 22.18            | 22.79 | 22.69 | 23.30 | 23.79 | 22.14          | 22.75 | 22.65 | 23.26 | 23.75 |
|                 | 12H  | 22.30            | 22.84 | 22.81 | 23.33 | 23.89 | 22.27          | 22.81 | 22.77 | 23.30 | 23.86 |
| 12H             | 4H   | 21.46            | 22.19 | 21.94 | 22.67 | 23.14 | 21.41          | 22.15 | 21.90 | 22.63 | 23.10 |
|                 | 6H   | 22.03            | 22.64 | 22.54 | 23.15 | 23.64 | 21.99          | 22.60 | 22.50 | 23.11 | 23.60 |
|                 | 8H   | 22.25            | 22.79 | 22.76 | 23.28 | 23.85 | 22.21          | 22.75 | 22.72 | 23.24 | 23.81 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-1

Test Date: 07/23/2025

Luminaire Tested: 22ID2-55-CFR1-L835-U

Data in this report applies to families of products including 22ID2-55-CFR1-L835-U

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-1  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L835-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3500K 80CRI

### Spectral Parameters

CCT (K): 3440  
 CIE  $u'$ : 0.2370  
 CIE  $v'$ : 0.5132  
 Duv: 0.0005  
 CIE x: 0.4093  
 CIE y: 0.3940  
 CIE z: 0.1967  
 Peak Wavelength (nm): 599  
 Dominant Wavelength (nm): 580  
 Purity: 41.09375  
 R<sub>f</sub>: 84.9  
 R<sub>g</sub>: 94.6

CRI (Ra): 84.2  
 R1: 82.8  
 R2: 91.7  
 R3: 96.7  
 R4: 81.9  
 R5: 82.6  
 R6: 88.8  
 R7: 85.0  
 R8: 63.7  
 R9: 13.6  
 R10: 80.1  
 R11: 81.1  
 R12: 65.8  
 R13: 85.2  
 R14: 98.7  
 R15: 76.2



### Test Conditions

Stabilization Time: 36M  
 Operation Time: 1H 36M  
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2506-458-1

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-1

**CIE 1931 Chromaticity Diagram**




**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-1

### Photopic Flux vs. Wavelength

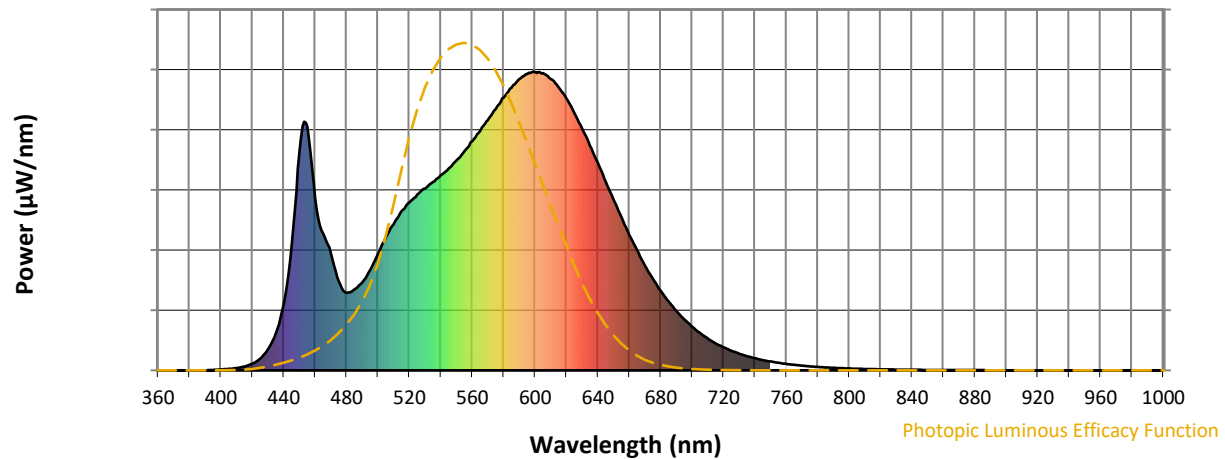

### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 295                                    | NR                             | 620               | 910                                    | NR                             | 750               | 30                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 335                                    | NR                             | 625               | 862                                    | NR                             | 755               | 25                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 390                                    | NR                             | 630               | 809                                    | NR                             | 760               | 21                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 445                                    | NR                             | 635               | 752                                    | NR                             | 765               | 18                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 490                                    | NR                             | 640               | 694                                    | NR                             | 770               | 16                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 532                                    | NR                             | 645               | 630                                    | NR                             | 775               | 13                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 563                                    | NR                             | 650               | 571                                    | NR                             | 780               | 12                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 2                                      | NR                             | 525               | 588                                    | NR                             | 655               | 512                                    | NR                             | 785               | 10                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 3                                      | NR                             | 530               | 609                                    | NR                             | 660               | 453                                    | NR                             | 790               | 8                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 5                                      | NR                             | 535               | 631                                    | NR                             | 665               | 401                                    | NR                             | 795               | 7                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 8                                      | NR                             | 540               | 654                                    | NR                             | 670               | 351                                    | NR                             | 800               | 6                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 13                                     | NR                             | 545               | 677                                    | NR                             | 675               | 306                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 23                                     | NR                             | 550               | 702                                    | NR                             | 680               | 267                                    | NR                             | 810               | 5                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 40                                     | NR                             | 555               | 734                                    | NR                             | 685               | 230                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 70                                     | NR                             | 560               | 767                                    | NR                             | 690               | 199                                    | NR                             | 820               | 4                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 126                                    | NR                             | 565               | 802                                    | NR                             | 695               | 171                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 221                                    | NR                             | 570               | 838                                    | NR                             | 700               | 146                                    | NR                             | 830               | 3                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 418                                    | NR                             | 575               | 875                                    | NR                             | 705               | 125                                    | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 729                                    | NR                             | 580               | 913                                    | NR                             | 710               | 107                                    | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 816                                    | NR                             | 585               | 946                                    | NR                             | 715               | 90                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 578                                    | NR                             | 590               | 976                                    | NR                             | 720               | 77                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 458                                    | NR                             | 595               | 992                                    | NR                             | 725               | 66                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 390                                    | NR                             | 600               | 999                                    | NR                             | 730               | 56                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 299                                    | NR                             | 605               | 995                                    | NR                             | 735               | 47                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 260                                    | NR                             | 610               | 975                                    | NR                             | 740               | 40                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 271                                    | NR                             | 615               | 948                                    | NR                             | 745               | 34                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2506-458-1

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.53

| λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (Φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 295                      | NR            | 620    | 910                      | NR            | 750    | 30                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 335                      | NR            | 625    | 862                      | NR            | 755    | 25                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 390                      | NR            | 630    | 809                      | NR            | 760    | 21                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 445                      | NR            | 635    | 752                      | NR            | 765    | 18                       | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 490                      | NR            | 640    | 694                      | NR            | 770    | 16                       | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 532                      | NR            | 645    | 630                      | NR            | 775    | 13                       | NR            | 905    | 0                        | NR            |
| 390    | 0                        | NR            | 520    | 563                      | NR            | 650    | 571                      | NR            | 780    | 12                       | NR            | 910    | 0                        | NR            |
| 395    | 2                        | NR            | 525    | 588                      | NR            | 655    | 512                      | NR            | 785    | 10                       | NR            | 915    | 0                        | NR            |
| 400    | 3                        | NR            | 530    | 609                      | NR            | 660    | 453                      | NR            | 790    | 8                        | NR            | 920    | 0                        | NR            |
| 405    | 5                        | NR            | 535    | 631                      | NR            | 665    | 401                      | NR            | 795    | 7                        | NR            | 925    | 0                        | NR            |
| 410    | 8                        | NR            | 540    | 654                      | NR            | 670    | 351                      | NR            | 800    | 6                        | NR            | 930    | 0                        | NR            |
| 415    | 13                       | NR            | 545    | 677                      | NR            | 675    | 306                      | NR            | 805    | 5                        | NR            | 935    | 0                        | NR            |
| 420    | 23                       | NR            | 550    | 702                      | NR            | 680    | 267                      | NR            | 810    | 5                        | NR            | 940    | 0                        | NR            |
| 425    | 40                       | NR            | 555    | 734                      | NR            | 685    | 230                      | NR            | 815    | 4                        | NR            | 945    | 0                        | NR            |
| 430    | 70                       | NR            | 560    | 767                      | NR            | 690    | 199                      | NR            | 820    | 4                        | NR            | 950    | 0                        | NR            |
| 435    | 126                      | NR            | 565    | 802                      | NR            | 695    | 171                      | NR            | 825    | 3                        | NR            | 955    | 0                        | NR            |
| 440    | 221                      | NR            | 570    | 838                      | NR            | 700    | 146                      | NR            | 830    | 3                        | NR            | 960    | 0                        | NR            |
| 445    | 418                      | NR            | 575    | 875                      | NR            | 705    | 125                      | NR            | 835    | 2                        | NR            | 965    | 0                        | NR            |
| 450    | 729                      | NR            | 580    | 913                      | NR            | 710    | 107                      | NR            | 840    | 2                        | NR            | 970    | 0                        | NR            |
| 455    | 816                      | NR            | 585    | 946                      | NR            | 715    | 90                       | NR            | 845    | 2                        | NR            | 975    | 0                        | NR            |
| 460    | 578                      | NR            | 590    | 976                      | NR            | 720    | 77                       | NR            | 850    | 1                        | NR            | 980    | 0                        | NR            |
| 465    | 458                      | NR            | 595    | 992                      | NR            | 725    | 66                       | NR            | 855    | 1                        | NR            | 985    | 0                        | NR            |
| 470    | 390                      | NR            | 600    | 999                      | NR            | 730    | 56                       | NR            | 860    | 1                        | NR            | 990    | 0                        | NR            |
| 475    | 299                      | NR            | 605    | 995                      | NR            | 735    | 47                       | NR            | 865    | 1                        | NR            | 995    | 0                        | NR            |
| 480    | 260                      | NR            | 610    | 975                      | NR            | 740    | 40                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 271                      | NR            | 615    | 948                      | NR            | 745    | 34                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2506-458-1

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.07

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 295                         | NR               | 620       | 910                         | NR               | 750       | 30                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 335                         | NR               | 625       | 862                         | NR               | 755       | 25                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 390                         | NR               | 630       | 809                         | NR               | 760       | 21                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 445                         | NR               | 635       | 752                         | NR               | 765       | 18                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 490                         | NR               | 640       | 694                         | NR               | 770       | 16                          | NR               | 900       | 0                           | NR               |
| 385       | 0                           | NR               | 515       | 532                         | NR               | 645       | 630                         | NR               | 775       | 13                          | NR               | 905       | 0                           | NR               |
| 390       | 0                           | NR               | 520       | 563                         | NR               | 650       | 571                         | NR               | 780       | 12                          | NR               | 910       | 0                           | NR               |
| 395       | 2                           | NR               | 525       | 588                         | NR               | 655       | 512                         | NR               | 785       | 10                          | NR               | 915       | 0                           | NR               |
| 400       | 3                           | NR               | 530       | 609                         | NR               | 660       | 453                         | NR               | 790       | 8                           | NR               | 920       | 0                           | NR               |
| 405       | 5                           | NR               | 535       | 631                         | NR               | 665       | 401                         | NR               | 795       | 7                           | NR               | 925       | 0                           | NR               |
| 410       | 8                           | NR               | 540       | 654                         | NR               | 670       | 351                         | NR               | 800       | 6                           | NR               | 930       | 0                           | NR               |
| 415       | 13                          | NR               | 545       | 677                         | NR               | 675       | 306                         | NR               | 805       | 5                           | NR               | 935       | 0                           | NR               |
| 420       | 23                          | NR               | 550       | 702                         | NR               | 680       | 267                         | NR               | 810       | 5                           | NR               | 940       | 0                           | NR               |
| 425       | 40                          | NR               | 555       | 734                         | NR               | 685       | 230                         | NR               | 815       | 4                           | NR               | 945       | 0                           | NR               |
| 430       | 70                          | NR               | 560       | 767                         | NR               | 690       | 199                         | NR               | 820       | 4                           | NR               | 950       | 0                           | NR               |
| 435       | 126                         | NR               | 565       | 802                         | NR               | 695       | 171                         | NR               | 825       | 3                           | NR               | 955       | 0                           | NR               |
| 440       | 221                         | NR               | 570       | 838                         | NR               | 700       | 146                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 418                         | NR               | 575       | 875                         | NR               | 705       | 125                         | NR               | 835       | 2                           | NR               | 965       | 0                           | NR               |
| 450       | 729                         | NR               | 580       | 913                         | NR               | 710       | 107                         | NR               | 840       | 2                           | NR               | 970       | 0                           | NR               |
| 455       | 816                         | NR               | 585       | 946                         | NR               | 715       | 90                          | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 578                         | NR               | 590       | 976                         | NR               | 720       | 77                          | NR               | 850       | 1                           | NR               | 980       | 0                           | NR               |
| 465       | 458                         | NR               | 595       | 992                         | NR               | 725       | 66                          | NR               | 855       | 1                           | NR               | 985       | 0                           | NR               |
| 470       | 390                         | NR               | 600       | 999                         | NR               | 730       | 56                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 299                         | NR               | 605       | 995                         | NR               | 735       | 47                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 260                         | NR               | 610       | 975                         | NR               | 740       | 40                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 271                         | NR               | 615       | 948                         | NR               | 745       | 34                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-1


TM-30-18

### Summary

$R_f = 84.9$   
 $R_g = 94.6$   
 $CIE R_a = 84.2$   
 $R_9 = 13.6$



### Color Vector Graphics

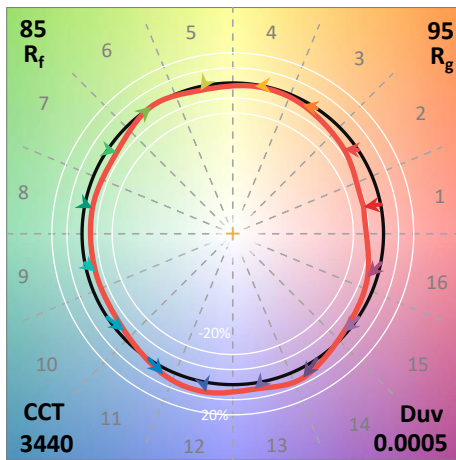

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 87 | CES51 = 92 | CES76 = 81 |
| CES02 = 62 | CES27 = 91 | CES52 = 93 | CES77 = 85 |
| CES03 = 31 | CES28 = 94 | CES53 = 90 | CES78 = 80 |
| CES04 = 70 | CES29 = 92 | CES54 = 89 | CES79 = 92 |
| CES05 = 49 | CES30 = 89 | CES55 = 86 | CES80 = 90 |
| CES06 = 51 | CES31 = 94 | CES56 = 85 | CES81 = 77 |
| CES07 = 41 | CES32 = 86 | CES57 = 83 | CES82 = 96 |
| CES08 = 40 | CES33 = 97 | CES58 = 84 | CES83 = 96 |
| CES09 = 29 | CES34 = 91 | CES59 = 91 | CES84 = 91 |
| CES10 = 75 | CES35 = 95 | CES60 = 89 | CES85 = 76 |
| CES11 = 58 | CES36 = 79 | CES61 = 87 | CES86 = 73 |
| CES12 = 64 | CES37 = 95 | CES62 = 81 | CES87 = 85 |
| CES13 = 43 | CES38 = 84 | CES63 = 85 | CES88 = 89 |
| CES14 = 74 | CES39 = 98 | CES64 = 78 | CES89 = 78 |
| CES15 = 71 | CES40 = 97 | CES65 = 78 | CES90 = 90 |
| CES16 = 47 | CES41 = 95 | CES66 = 75 | CES91 = 71 |
| CES17 = 50 | CES42 = 96 | CES67 = 74 | CES92 = 65 |
| CES18 = 56 | CES43 = 92 | CES68 = 79 | CES93 = 79 |
| CES19 = 72 | CES44 = 99 | CES69 = 83 | CES94 = 64 |
| CES20 = 66 | CES45 = 95 | CES70 = 77 | CES95 = 74 |
| CES21 = 86 | CES46 = 91 | CES71 = 71 | CES96 = 85 |
| CES22 = 78 | CES47 = 94 | CES72 = 90 | CES97 = 90 |
| CES23 = 92 | CES48 = 83 | CES73 = 72 | CES98 = 86 |
| CES24 = 90 | CES49 = 92 | CES74 = 90 | CES99 = 79 |
| CES25 = 72 | CES50 = 93 | CES75 = 75 |            |



Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)