

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1214983

Luminaire Tested: 22-ID2-80-CNC-L940-U

Issue Date: 12/4/2025


**Test Information**

Test Method: LM-79-2019  
Report Number: P1214983  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2506-458-14)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/4/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 22-ID2-80-CNC-L940-U  
Description: 2X2 IN DEPTH TROFFER WITH 2INCH CURVE REGRESSED  
Light Source: 4000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 6838.9 lumens  
Efficiency: N/A  
Efficacy: 99.7 lumens/watt  
Spacing Criteria (0/90/45): 1.18 / 1.18 / 1.28  
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')  
CIE Type: Direct

Input Watts (W): 68.6  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

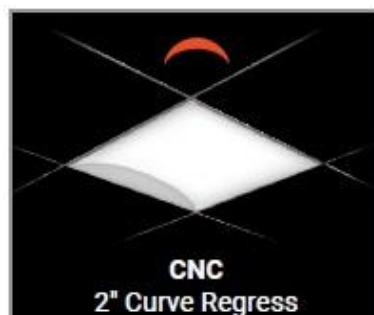

TEST NUMBER: P1214983  
CATALOG NUMBER: 22-ID2-80-CNC-L940-U

### Luminous Intensity Polar Plot

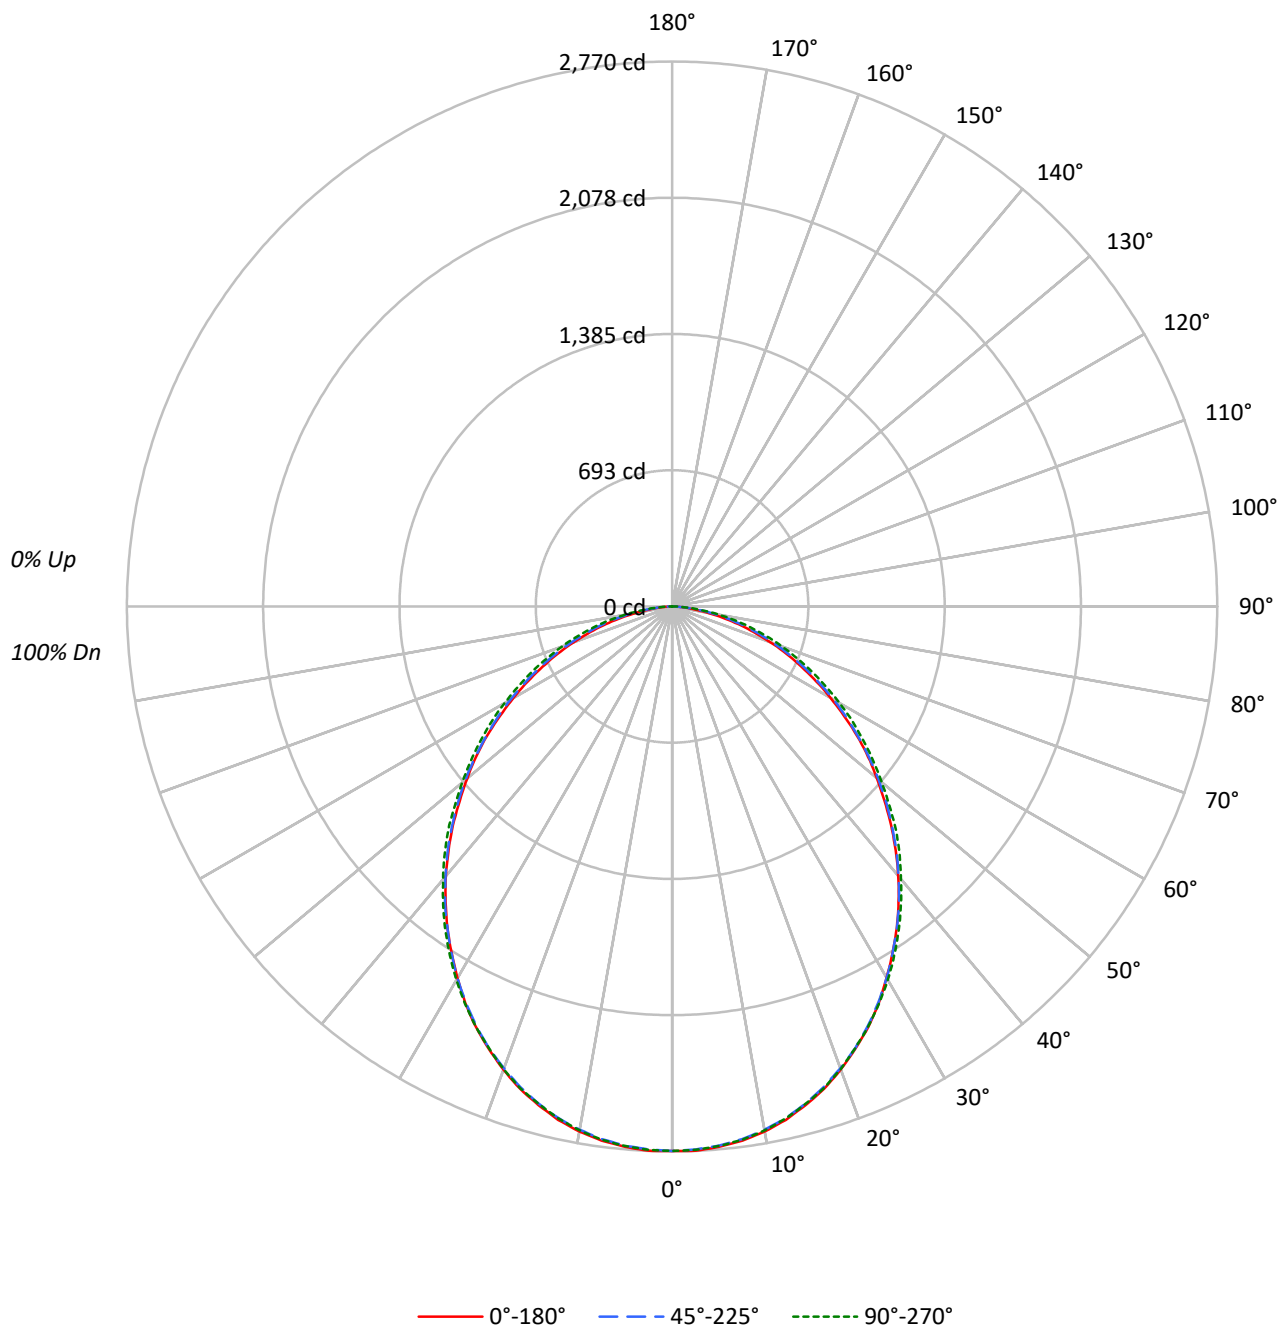

TEST NUMBER: P1214983

CATALOG NUMBER: 22-ID2-80-CNC-L940-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 105 | 101 | 97  | 107 | 103 | 99  | 95  | 98  | 95  | 92  |  | 94  | 92  | 90  |  | 85  |
| 2   | 100 | 92  | 85  | 80  | 97  | 90  | 84  | 79  | 87  | 81  | 77  |  | 83  | 79  | 75  |  | 72  |
| 3   | 91  | 81  | 73  | 67  | 89  | 80  | 72  | 66  | 77  | 70  | 65  |  | 74  | 69  | 64  |  | 61  |
| 4   | 84  | 72  | 64  | 57  | 82  | 71  | 63  | 57  | 68  | 61  | 56  |  | 66  | 60  | 55  |  | 52  |
| 5   | 77  | 65  | 56  | 50  | 75  | 64  | 55  | 49  | 62  | 54  | 49  |  | 60  | 53  | 48  |  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 49  | 43  | 56  | 48  | 43  |  | 54  | 48  | 43  |  | 40  |
| 7   | 66  | 53  | 45  | 39  | 65  | 52  | 44  | 38  | 51  | 44  | 38  |  | 49  | 43  | 38  |  | 36  |
| 8   | 62  | 49  | 40  | 35  | 60  | 48  | 40  | 35  | 47  | 39  | 34  |  | 45  | 39  | 34  |  | 32  |
| 9   | 58  | 45  | 37  | 31  | 57  | 44  | 36  | 31  | 43  | 36  | 31  |  | 42  | 36  | 31  |  | 29  |
| 10  | 54  | 41  | 34  | 28  | 53  | 41  | 33  | 28  | 40  | 33  | 28  |  | 39  | 33  | 28  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 7448 | 7448 | 7448 |
| 5°  | 7448 | 7430 | 7437 |
| 10° | 7406 | 7380 | 7389 |
| 15° | 7309 | 7289 | 7294 |
| 20° | 7174 | 7154 | 7167 |
| 25° | 7005 | 6987 | 7000 |
| 30° | 6774 | 6777 | 6812 |
| 35° | 6540 | 6542 | 6596 |
| 40° | 6281 | 6288 | 6358 |
| 45° | 5991 | 6017 | 6123 |
| 50° | 5684 | 5735 | 5823 |
| 55° | 5387 | 5416 | 5563 |
| 60° | 5011 | 5109 | 5292 |
| 65° | 4622 | 4760 | 4998 |
| 70° | 4186 | 4364 | 4678 |
| 75° | 3624 | 3923 | 4302 |
| 80° | 2856 | 3355 | 3772 |
| 85° | 1772 | 2362 | 2819 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 90°

Vertical Angle: 45°

Luminance: 6123 cd/sqm

TEST NUMBER: P1214983  
 CATALOG NUMBER: 22-ID2-80-CNC-L940-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 261.2  | 3.8       |
| 10°-20°   | 737.8  | 10.8      |
| 20°-30°   | 1083.8 | 15.8      |
| 30°-40°   | 1248.1 | 18.2      |
| 40°-50°   | 1224.2 | 17.9      |
| 50°-60°   | 1039.7 | 15.2      |
| 60°-70°   | 745.2  | 10.9      |
| 70°-80°   | 403.5  | 5.9       |
| 80°-90°   | 95.3   | 1.4       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 2082.8 | 30.5      |
| 0°-40°    | 3330.9 | 48.7      |
| 0°-60°    | 5594.8 | 81.8      |
| 0°-90°    | 6838.9 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 6838.9 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 2768 | 2768  | 2768 | 2768  | 2768 |      |
| 5°  | 2757 | 2755  | 2750 | 2751  | 2753 | 262  |
| 15° | 2624 | 2622  | 2616 | 2617  | 2618 | 739  |
| 25° | 2359 | 2351  | 2353 | 2360  | 2358 | 1085 |
| 35° | 1991 | 1991  | 1992 | 2005  | 2008 | 1244 |
| 45° | 1574 | 1574  | 1581 | 1603  | 1609 | 1214 |
| 55° | 1148 | 1148  | 1154 | 1176  | 1186 | 1025 |
| 65° | 726  | 731   | 748  | 774   | 785  | 720  |
| 75° | 349  | 356   | 377  | 403   | 414  | 370  |
| 85° | 57   | 64    | 76   | 88    | 91   | 77   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1214983

CATALOG NUMBER: 22-ID2-80-CNC-L940-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 2767.8 | 2767.8 | 2767.8 | 2767.8 | 2767.8 |
| 2.5°  | 2769.5 | 2765.2 | 2762.6 | 2763.5 | 2764.3 |
| 5°    | 2757.4 | 2754.8 | 2750.4 | 2751.3 | 2753.0 |
| 7.5°  | 2738.2 | 2734.8 | 2730.4 | 2731.3 | 2733.9 |
| 10°   | 2710.4 | 2706.1 | 2700.9 | 2701.7 | 2704.3 |
| 12.5° | 2673.0 | 2668.7 | 2664.4 | 2663.5 | 2666.1 |
| 15°   | 2623.5 | 2621.8 | 2616.5 | 2617.4 | 2618.3 |
| 17.5° | 2570.5 | 2564.4 | 2561.8 | 2563.5 | 2567.0 |
| 20°   | 2505.3 | 2499.2 | 2498.3 | 2500.1 | 2502.7 |
| 22.5° | 2434.0 | 2428.8 | 2430.5 | 2432.3 | 2430.5 |
| 25°   | 2359.2 | 2351.4 | 2353.2 | 2360.1 | 2357.5 |
| 27.5° | 2274.0 | 2271.4 | 2268.8 | 2277.5 | 2276.7 |
| 30°   | 2180.2 | 2181.0 | 2181.0 | 2192.3 | 2192.3 |
| 32.5° | 2085.4 | 2087.1 | 2087.1 | 2100.2 | 2101.9 |
| 35°   | 1990.7 | 1990.7 | 1991.5 | 2004.6 | 2008.0 |
| 37.5° | 1890.7 | 1892.4 | 1895.0 | 1904.6 | 1910.7 |
| 40°   | 1788.1 | 1788.1 | 1789.9 | 1807.2 | 1809.8 |
| 42.5° | 1681.2 | 1682.9 | 1687.3 | 1703.8 | 1710.8 |
| 45°   | 1574.3 | 1574.3 | 1581.2 | 1603.0 | 1609.0 |
| 47.5° | 1463.0 | 1469.1 | 1476.0 | 1497.8 | 1496.9 |
| 50°   | 1357.8 | 1365.6 | 1370.0 | 1388.2 | 1390.9 |
| 52.5° | 1256.1 | 1256.1 | 1262.2 | 1283.9 | 1289.1 |
| 55°   | 1148.3 | 1147.5 | 1154.4 | 1176.1 | 1185.7 |
| 57.5° | 1036.2 | 1041.4 | 1051.0 | 1076.2 | 1086.6 |
| 60°   | 931.0  | 935.3  | 949.3  | 972.7  | 983.2  |
| 62.5° | 826.7  | 833.6  | 844.1  | 871.0  | 879.7  |
| 65°   | 725.9  | 731.1  | 747.6  | 773.7  | 785.0  |
| 67.5° | 629.4  | 632.8  | 649.4  | 676.3  | 685.9  |
| 70°   | 532.0  | 539.0  | 554.6  | 581.6  | 594.6  |
| 72.5° | 434.6  | 445.1  | 465.1  | 492.0  | 503.3  |
| 75°   | 348.6  | 356.4  | 377.3  | 403.3  | 413.8  |
| 77.5° | 263.4  | 273.8  | 295.6  | 317.3  | 329.5  |
| 80°   | 184.3  | 197.3  | 216.5  | 235.6  | 243.4  |
| 82.5° | 115.6  | 126.9  | 144.3  | 158.2  | 162.6  |
| 85°   | 57.4   | 63.5   | 76.5   | 87.8   | 91.3   |
| 87.5° | 19.1   | 20.9   | 24.3   | 29.6   | 31.3   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1214983

CATALOG NUMBER: 22-ID2-80-CNC-L940-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 17.67            | 19.26 | 18.04 | 19.58 | 19.89 | 17.92          | 19.51 | 18.29 | 19.83 | 20.14 |
|                 | 3H   | 19.24            | 20.67 | 19.61 | 20.99 | 21.36 | 19.61          | 21.05 | 19.99 | 21.37 | 21.73 |
|                 | 4H   | 19.76            | 21.11 | 20.16 | 21.46 | 21.83 | 20.25          | 21.60 | 20.65 | 21.94 | 22.32 |
|                 | 6H   | 20.10            | 21.34 | 20.51 | 21.71 | 22.10 | 20.71          | 21.96 | 21.12 | 22.32 | 22.71 |
|                 | 8H   | 20.17            | 21.36 | 20.60 | 21.75 | 22.15 | 20.84          | 22.03 | 21.27 | 22.42 | 22.82 |
|                 | 12H  | 20.20            | 21.34 | 20.63 | 21.72 | 22.15 | 20.92          | 22.06 | 21.35 | 22.44 | 22.87 |
| 4H              | 2H   | 18.26            | 19.61 | 18.66 | 19.96 | 20.33 | 18.46          | 19.81 | 18.86 | 20.16 | 20.53 |
|                 | 3H   | 20.04            | 21.16 | 20.45 | 21.56 | 21.96 | 20.37          | 21.50 | 20.78 | 21.90 | 22.30 |
|                 | 4H   | 20.68            | 21.69 | 21.11 | 22.11 | 22.54 | 21.14          | 22.15 | 21.57 | 22.57 | 23.00 |
|                 | 6H   | 21.12            | 22.00 | 21.57 | 22.44 | 22.90 | 21.72          | 22.61 | 22.18 | 23.05 | 23.50 |
|                 | 8H   | 21.23            | 22.05 | 21.69 | 22.50 | 22.96 | 21.90          | 22.72 | 22.36 | 23.17 | 23.63 |
|                 | 12H  | 21.28            | 22.02 | 21.76 | 22.50 | 22.97 | 22.01          | 22.75 | 22.49 | 23.23 | 23.70 |
| 8H              | 4H   | 20.97            | 21.79 | 21.43 | 22.24 | 22.70 | 21.38          | 22.20 | 21.84 | 22.65 | 23.11 |
|                 | 6H   | 21.51            | 22.19 | 22.00 | 22.68 | 23.16 | 22.07          | 22.75 | 22.56 | 23.24 | 23.72 |
|                 | 8H   | 21.66            | 22.28 | 22.18 | 22.79 | 23.27 | 22.31          | 22.92 | 22.82 | 23.43 | 23.92 |
|                 | 12H  | 21.76            | 22.30 | 22.27 | 22.79 | 23.36 | 22.48          | 23.02 | 22.99 | 23.51 | 24.08 |
| 12H             | 4H   | 21.00            | 21.74 | 21.48 | 22.21 | 22.68 | 21.39          | 22.13 | 21.87 | 22.61 | 23.08 |
|                 | 6H   | 21.55            | 22.17 | 22.06 | 22.68 | 23.16 | 22.09          | 22.71 | 22.60 | 23.22 | 23.70 |
|                 | 8H   | 21.76            | 22.30 | 22.27 | 22.79 | 23.36 | 22.38          | 22.93 | 22.89 | 23.42 | 23.98 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-11

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L940-U

Data in this report applies to families of products including 22ID2-55-CFR1-L940-U




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-11  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L940-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 4000K 90CRI

### Spectral Parameters

CCT (K): 3910  
 CIE  $u'$ : 0.2263  
 CIE  $v'$ : 0.5043  
 Duv: 0.0008  
 CIE x: 0.3851  
 CIE y: 0.3813  
 CIE z: 0.2336  
 Peak Wavelength (nm): 451  
 Dominant Wavelength (nm): 578  
 Purity: 30.01895  
 R<sub>f</sub>: 90.8  
 R<sub>g</sub>: 98.8

CRI (Ra): 92.4  
 R1: 92.5  
 R2: 94.9  
 R3: 95.8  
 R4: 92.7  
 R5: 91.7  
 R6: 92.1  
 R7: 94.3  
 R8: 85.2  
 R9: 62.0  
 R10: 87.0  
 R11: 92.8  
 R12: 71.7  
 R13: 93.2  
 R14: 97.3  
 R15: 89.6

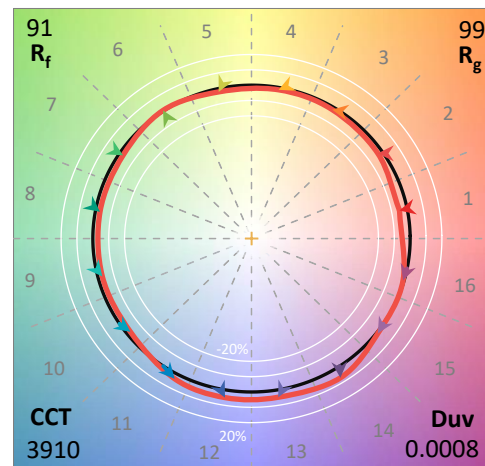

### Test Conditions


Stabilization Time: 31M  
 Operation Time: 1H 31M  
 Sphere Temperature (°C): 25.2.

REPORT NUMBER: SP1-2506-458-11


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-11

**CIE 1931 Chromaticity Diagram**

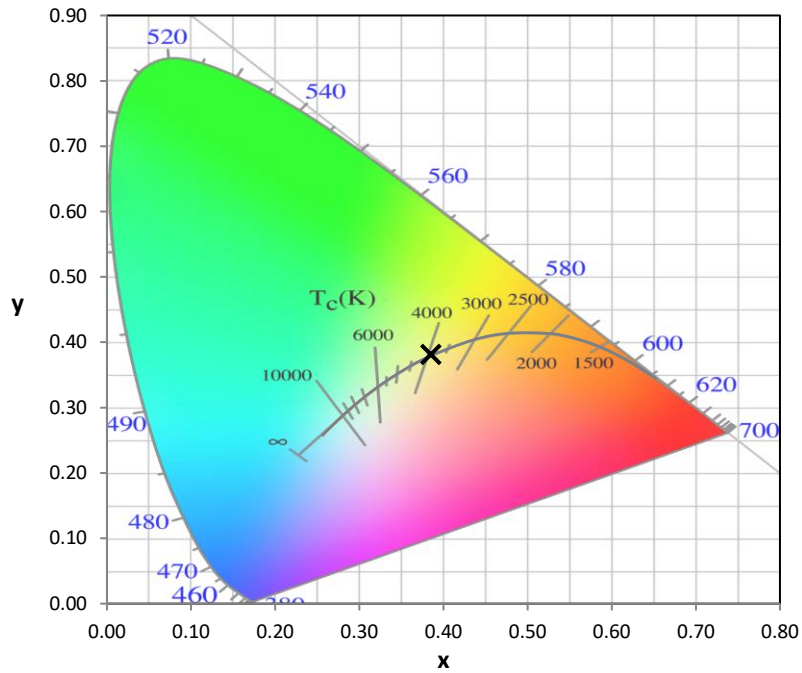


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

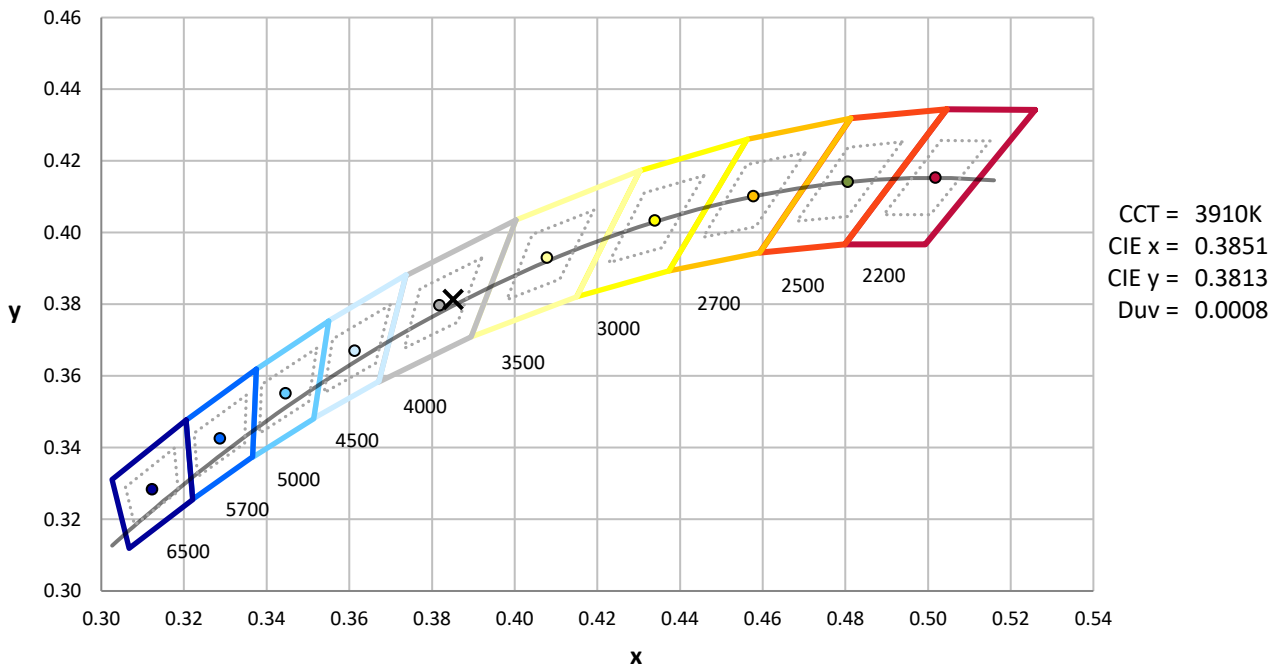

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-11

### Photopic Flux vs. Wavelength

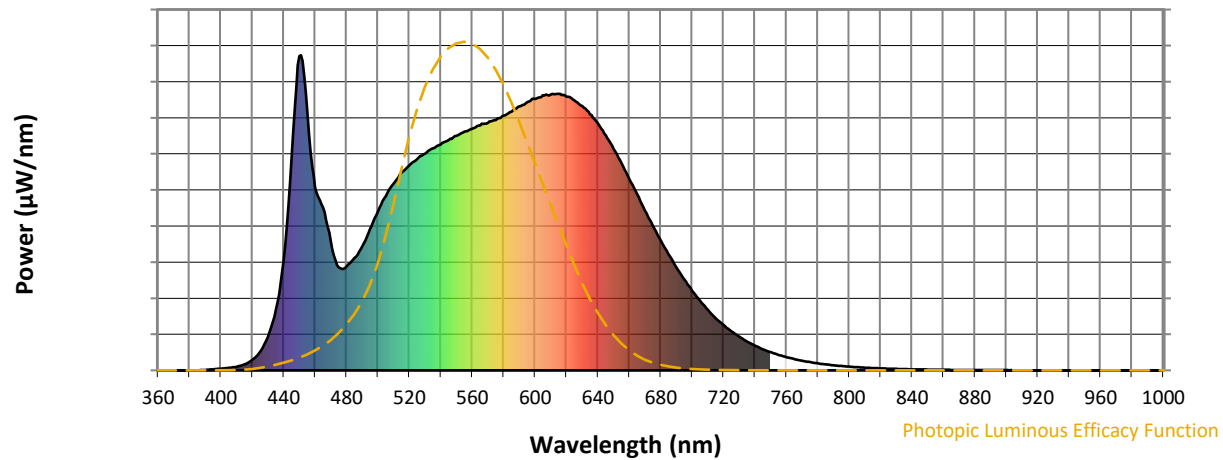


### Photopic Lumens: NR

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11

### Scotopic Flux vs. Wavelength

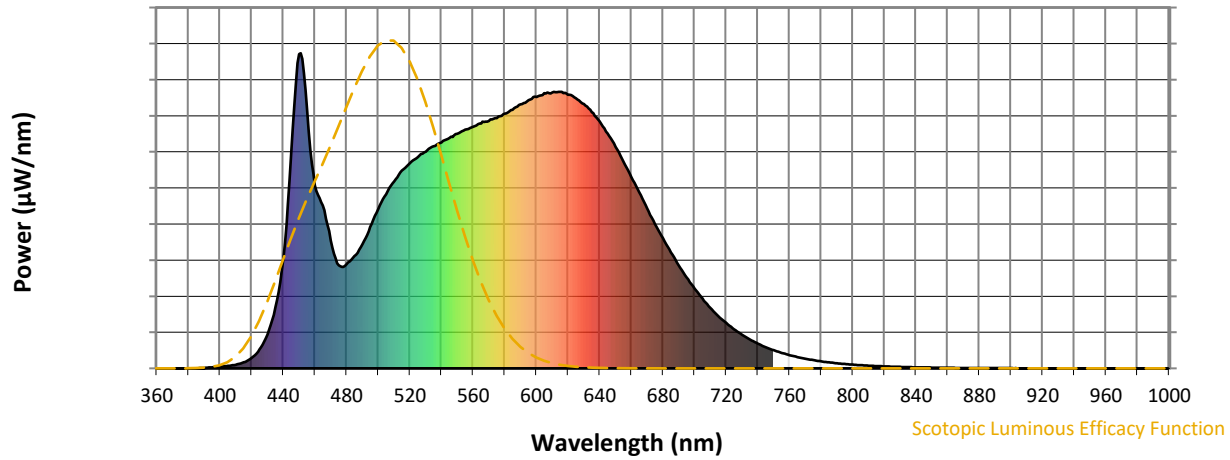


Scotopic Lumens: NR

S/P: 1.75

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11

### Melanopic Flux vs. Wavelength

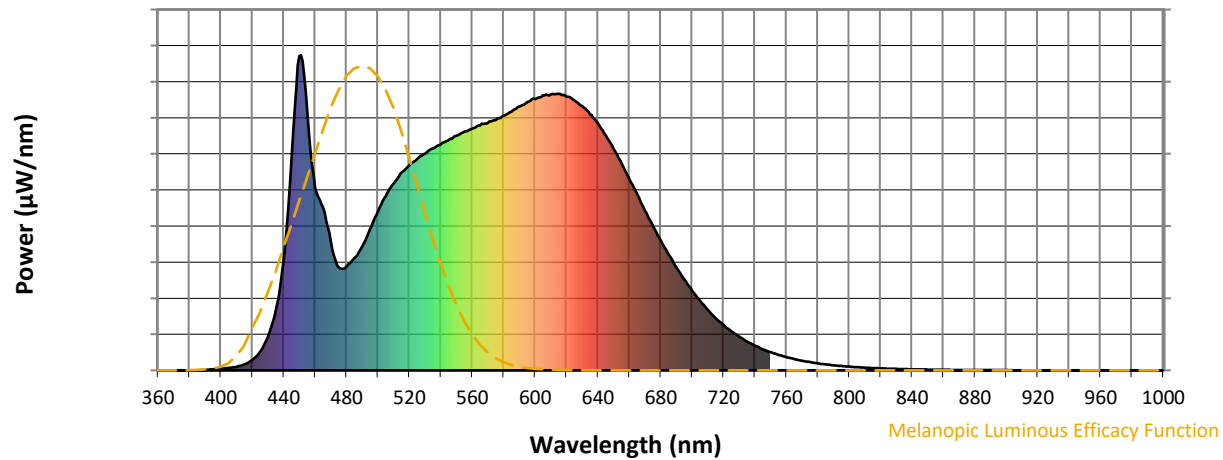

Melanopic Lumens: NR

M/P: 3.61


| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 394                         | NR               | 620       | 868                         | NR               | 750       | 58                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 449                         | NR               | 625       | 858                         | NR               | 755       | 49                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 505                         | NR               | 630       | 839                         | NR               | 760       | 42                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 553                         | NR               | 635       | 813                         | NR               | 765       | 36                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 593                         | NR               | 640       | 783                         | NR               | 770       | 31                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 628                         | NR               | 645       | 746                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 651                         | NR               | 650       | 702                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 670                         | NR               | 655       | 657                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 5                           | NR               | 530       | 687                         | NR               | 660       | 607                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 8                           | NR               | 535       | 705                         | NR               | 665       | 559                         | NR               | 795       | 14                          | NR               | 925       | 0                           | NR               |
| 410       | 12                          | NR               | 540       | 717                         | NR               | 670       | 507                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 19                          | NR               | 545       | 731                         | NR               | 675       | 458                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 34                          | NR               | 550       | 745                         | NR               | 680       | 413                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 60                          | NR               | 555       | 757                         | NR               | 685       | 367                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 107                         | NR               | 560       | 767                         | NR               | 690       | 328                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 194                         | NR               | 565       | 777                         | NR               | 695       | 289                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 349                         | NR               | 570       | 785                         | NR               | 700       | 253                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 678                         | NR               | 575       | 794                         | NR               | 705       | 221                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 997                         | NR               | 580       | 809                         | NR               | 710       | 192                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 819                         | NR               | 585       | 820                         | NR               | 715       | 165                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 581                         | NR               | 590       | 838                         | NR               | 720       | 144                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 517                         | NR               | 595       | 851                         | NR               | 725       | 124                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 406                         | NR               | 600       | 861                         | NR               | 730       | 107                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 327                         | NR               | 605       | 873                         | NR               | 735       | 91                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 330                         | NR               | 610       | 875                         | NR               | 740       | 78                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 356                         | NR               | 615       | 877                         | NR               | 745       | 67                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-11





TM-30-18

### Summary

$R_f = 90.8$   
 $R_g = 98.8$   
 $CIE R_a = 92.4$   
 $R_9 = 62.0$

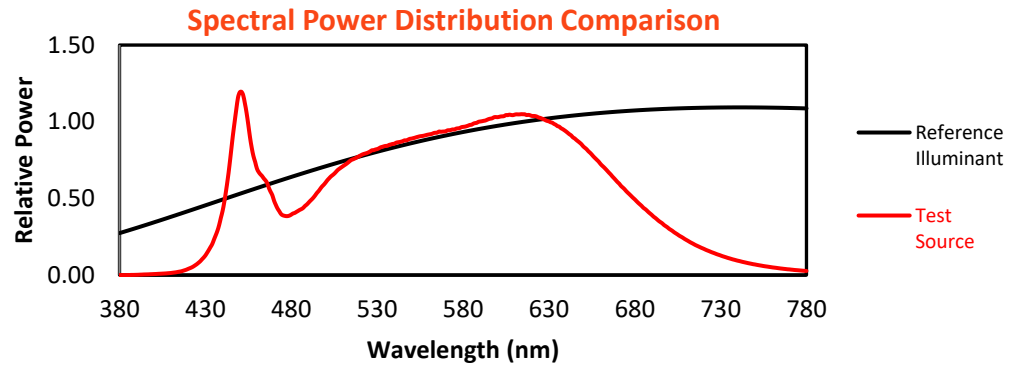


### Color Vector Graphics

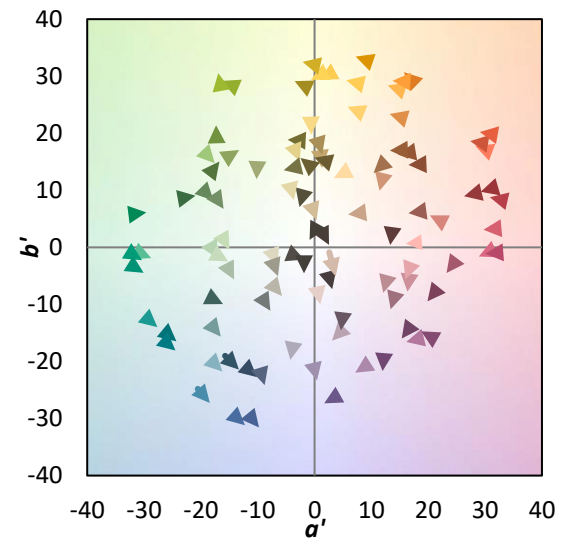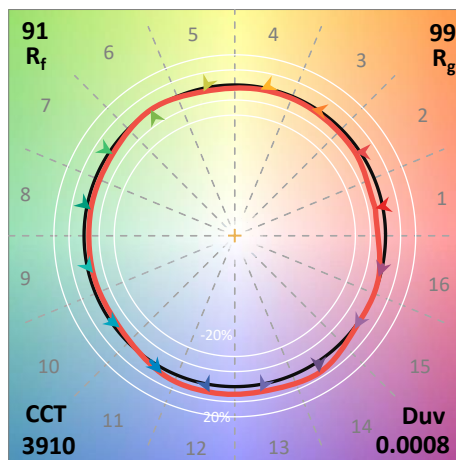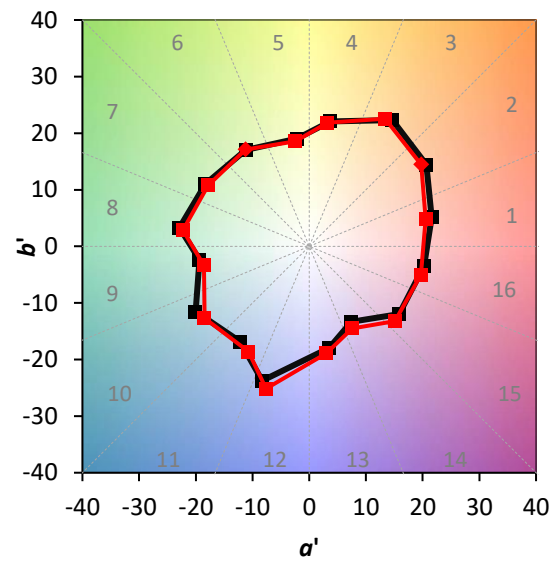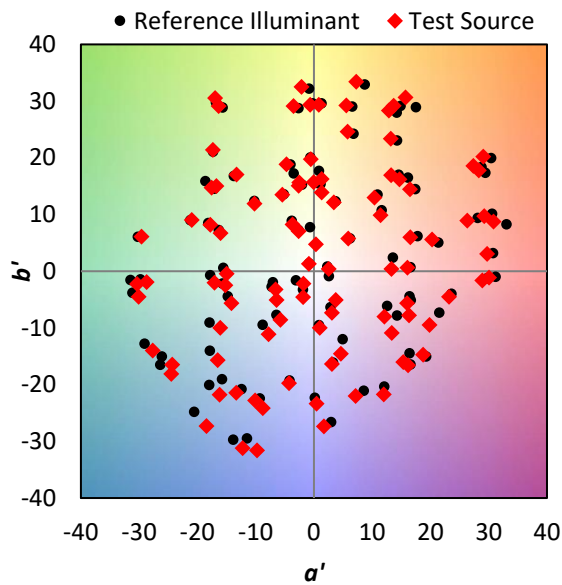




**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 93 | CES51 = 96 | CES76 = 85 |
| CES02 = 62 | CES27 = 90 | CES52 = 98 | CES77 = 88 |
| CES03 = 31 | CES28 = 96 | CES53 = 96 | CES78 = 82 |
| CES04 = 69 | CES29 = 96 | CES54 = 92 | CES79 = 96 |
| CES05 = 49 | CES30 = 90 | CES55 = 90 | CES80 = 93 |
| CES06 = 50 | CES31 = 97 | CES56 = 93 | CES81 = 89 |
| CES07 = 42 | CES32 = 91 | CES57 = 91 | CES82 = 97 |
| CES08 = 41 | CES33 = 98 | CES58 = 92 | CES83 = 98 |
| CES09 = 29 | CES34 = 93 | CES59 = 96 | CES84 = 93 |
| CES10 = 74 | CES35 = 96 | CES60 = 91 | CES85 = 83 |
| CES11 = 57 | CES36 = 79 | CES61 = 91 | CES86 = 88 |
| CES12 = 63 | CES37 = 95 | CES62 = 84 | CES87 = 91 |
| CES13 = 43 | CES38 = 85 | CES63 = 91 | CES88 = 96 |
| CES14 = 74 | CES39 = 99 | CES64 = 87 | CES89 = 87 |
| CES15 = 71 | CES40 = 98 | CES65 = 87 | CES90 = 96 |
| CES16 = 47 | CES41 = 96 | CES66 = 84 | CES91 = 71 |
| CES17 = 49 | CES42 = 95 | CES67 = 83 | CES92 = 79 |
| CES18 = 56 | CES43 = 95 | CES68 = 86 | CES93 = 87 |
| CES19 = 71 | CES44 = 99 | CES69 = 87 | CES94 = 81 |
| CES20 = 66 | CES45 = 98 | CES70 = 84 | CES95 = 82 |
| CES21 = 85 | CES46 = 97 | CES71 = 77 | CES96 = 91 |
| CES22 = 78 | CES47 = 97 | CES72 = 93 | CES97 = 96 |
| CES23 = 91 | CES48 = 90 | CES73 = 78 | CES98 = 94 |
| CES24 = 90 | CES49 = 96 | CES74 = 91 | CES99 = 91 |
| CES25 = 71 | CES50 = 97 | CES75 = 80 |            |


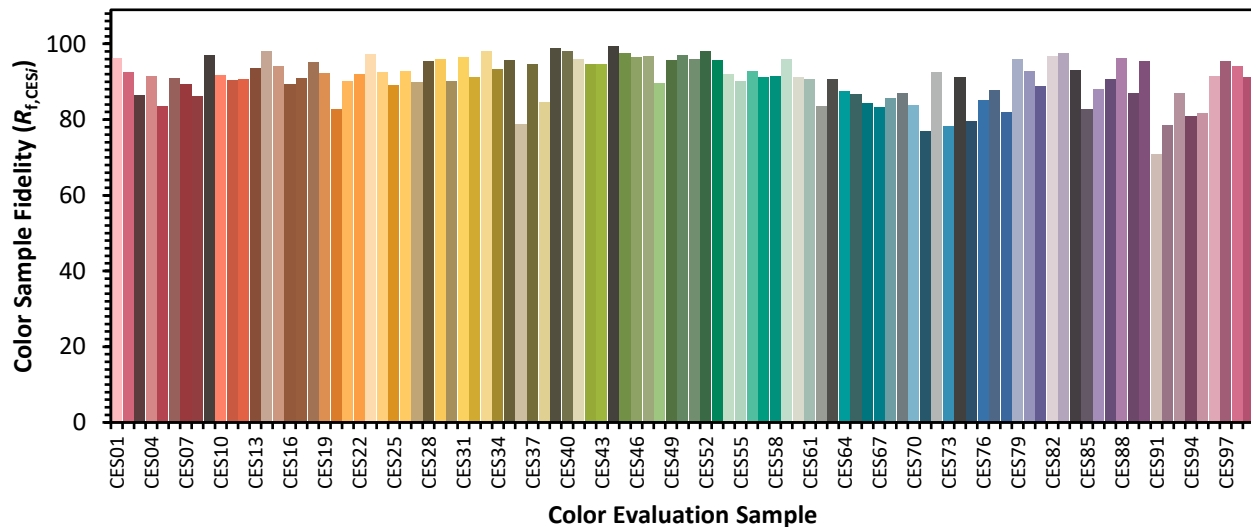




Color Rendition by Hue-Angle Bin

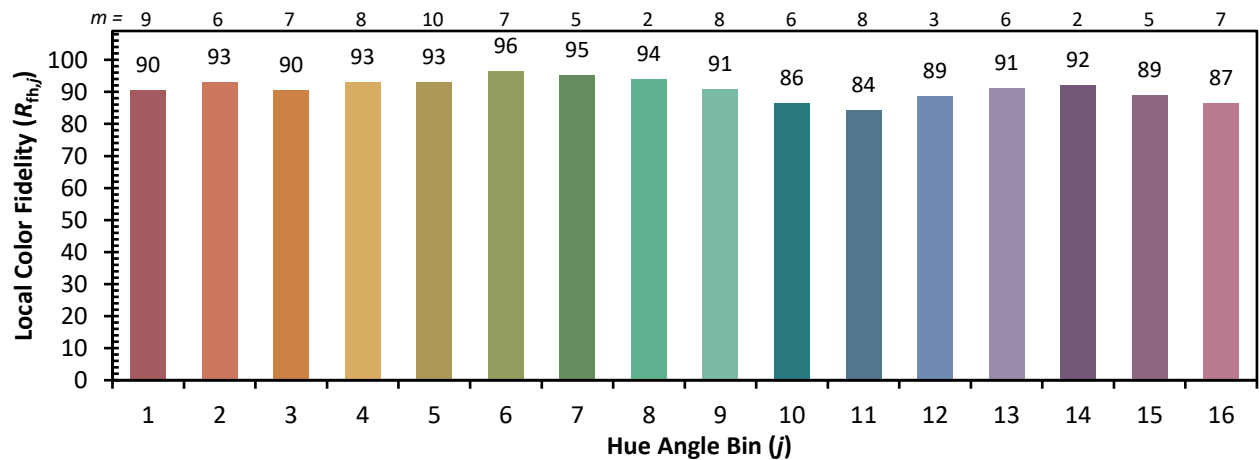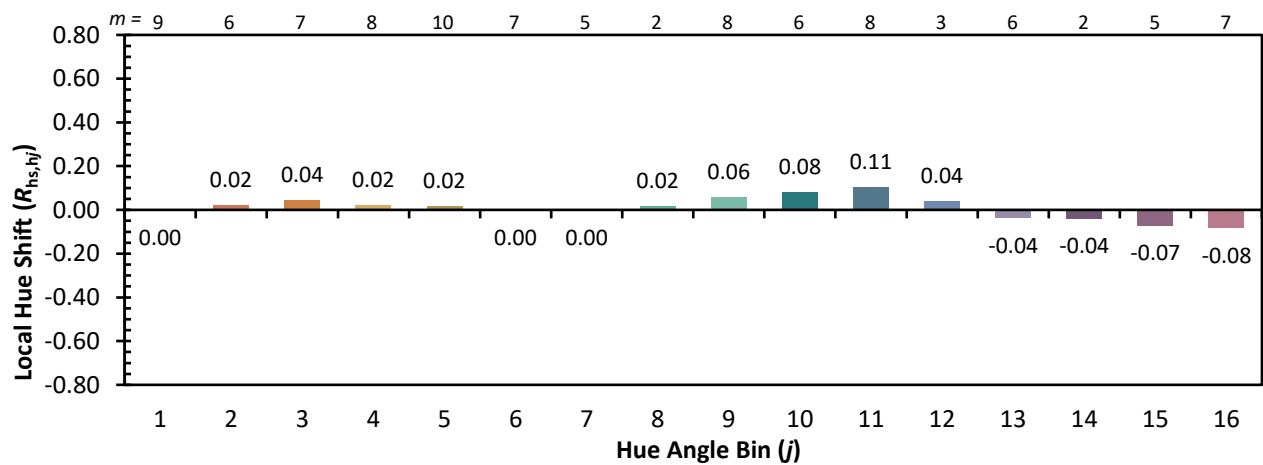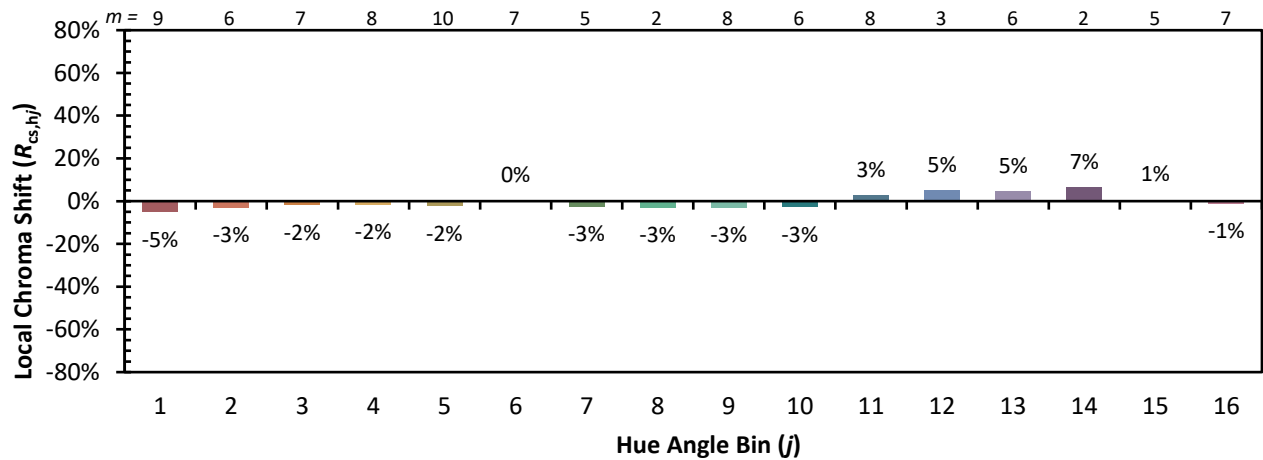

**Measure Comparisons**

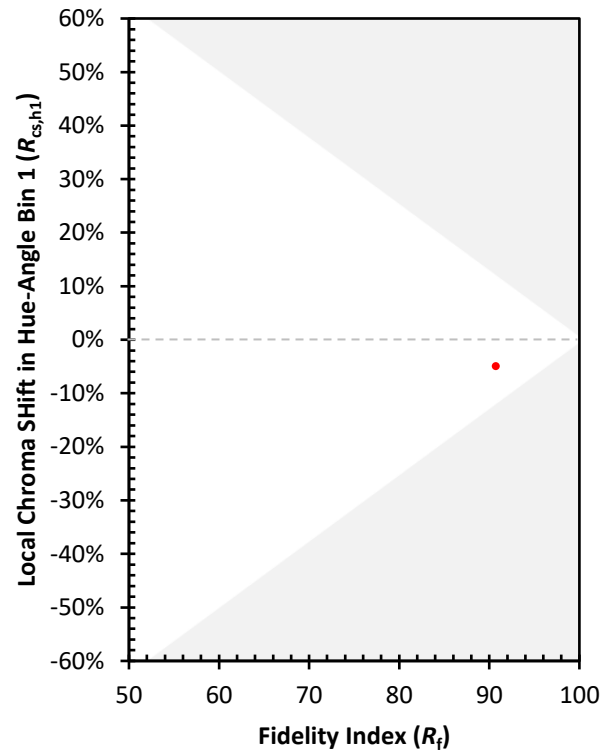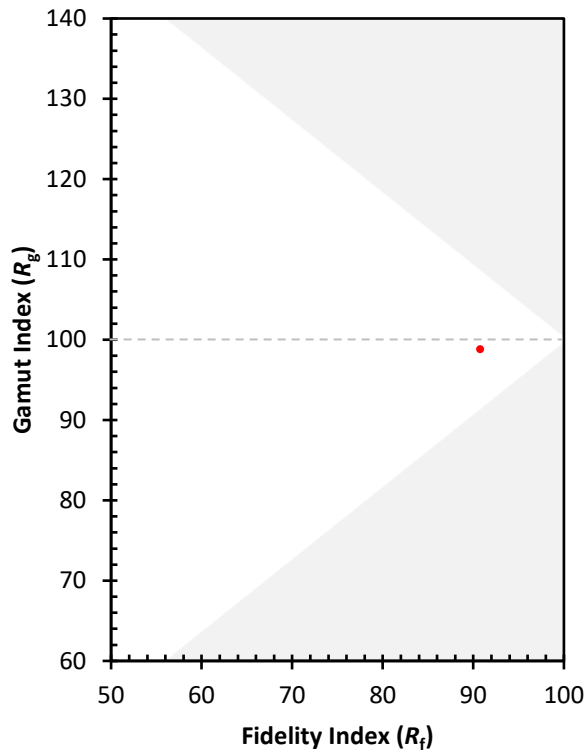

(END OF REPORT)