

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1215641

Luminaire Tested: 24-ID2-20-CFR2-L830-U

Issue Date: 12/5/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1215641  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2508-510-7)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 24-ID2-20-CFR2-L830-U  
Description: 2X4 IN DEPTH TROFFER WITH 2INCH CUBE REGRESS LENS  
Light Source: 3000K CCT, 80 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2120.1 lumens  
Efficiency: N/A  
Efficacy: 121.1 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.18 / 1.29  
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 17.5  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1215641  
CATALOG NUMBER: 24-ID2-20-CFR2-L830-U

### Luminous Intensity Polar Plot

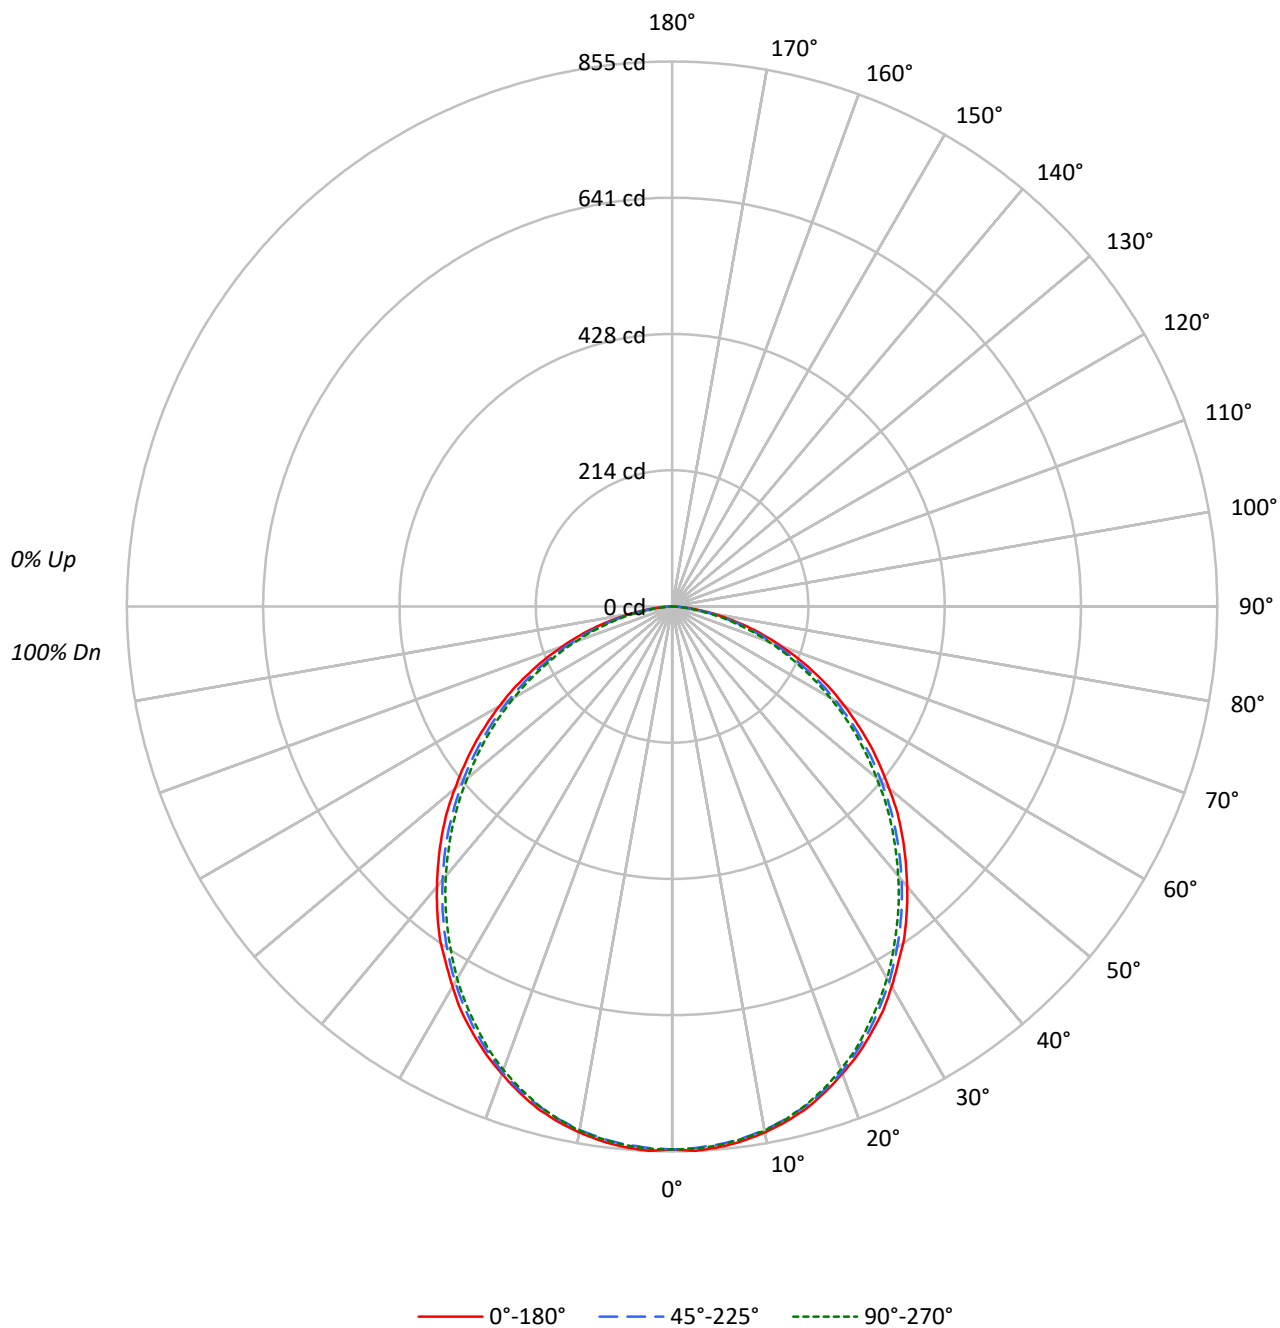

TEST NUMBER: P1215641

CATALOG NUMBER: 24-ID2-20-CFR2-L830-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |     | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 102 | 102 | 100 |
| 1   | 109 | 105 | 101 | 97  | 107 | 103 | 99  | 96  | 98  | 95  | 93  | 95  | 92  | 90  | 91  | 89  | 87  | 87  | 87  | 85  |
| 2   | 100 | 92  | 86  | 80  | 97  | 90  | 84  | 79  | 87  | 82  | 77  | 83  | 79  | 76  | 80  | 77  | 74  | 74  | 74  | 72  |
| 3   | 91  | 81  | 74  | 67  | 89  | 80  | 73  | 67  | 77  | 71  | 65  | 74  | 69  | 64  | 72  | 67  | 63  | 63  | 63  | 61  |
| 4   | 84  | 72  | 64  | 57  | 82  | 71  | 63  | 57  | 69  | 62  | 56  | 66  | 60  | 55  | 64  | 59  | 55  | 55  | 55  | 53  |
| 5   | 77  | 65  | 56  | 50  | 75  | 64  | 56  | 49  | 62  | 54  | 49  | 60  | 53  | 48  | 58  | 52  | 48  | 48  | 48  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 49  | 43  | 56  | 49  | 43  | 54  | 48  | 43  | 53  | 47  | 42  | 42  | 42  | 40  |
| 7   | 67  | 53  | 45  | 39  | 65  | 53  | 44  | 39  | 51  | 44  | 38  | 50  | 43  | 38  | 48  | 42  | 38  | 38  | 38  | 36  |
| 8   | 62  | 49  | 40  | 35  | 60  | 48  | 40  | 35  | 47  | 40  | 34  | 46  | 39  | 34  | 44  | 38  | 34  | 34  | 34  | 32  |
| 9   | 58  | 45  | 37  | 31  | 57  | 44  | 37  | 31  | 43  | 36  | 31  | 42  | 36  | 31  | 41  | 35  | 31  | 31  | 31  | 29  |
| 10  | 54  | 41  | 34  | 29  | 53  | 41  | 33  | 28  | 40  | 33  | 28  | 39  | 33  | 28  | 38  | 32  | 28  | 28  | 28  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1146 | 1146 | 1146 |
| 5°  | 1150 | 1144 | 1146 |
| 10° | 1145 | 1139 | 1141 |
| 15° | 1136 | 1129 | 1128 |
| 20° | 1117 | 1113 | 1108 |
| 25° | 1097 | 1088 | 1079 |
| 30° | 1070 | 1057 | 1047 |
| 35° | 1043 | 1022 | 1009 |
| 40° | 1008 | 983  | 970  |
| 45° | 972  | 942  | 926  |
| 50° | 930  | 898  | 877  |
| 55° | 890  | 849  | 828  |
| 60° | 841  | 797  | 769  |
| 65° | 786  | 738  | 704  |
| 70° | 718  | 671  | 634  |
| 75° | 635  | 578  | 536  |
| 80° | 511  | 456  | 417  |
| 85° | 340  | 290  | 236  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°  
 Vertical Angle: 45°  
 Luminance: 972 cd/sqm

TEST NUMBER: P1215641  
 CATALOG NUMBER: 24-ID2-20-CFR2-L830-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 80.5   | 3.8       |
| 10°-20°   | 228.5  | 10.8      |
| 20°-30°   | 337.2  | 15.9      |
| 30°-40°   | 389.9  | 18.4      |
| 40°-50°   | 383.5  | 18.1      |
| 50°-60°   | 325.7  | 15.4      |
| 60°-70°   | 230.8  | 10.9      |
| 70°-80°   | 119.0  | 5.6       |
| 80°-90°   | 25.0   | 1.2       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 646.2  | 30.5      |
| 0°-40°    | 1036.1 | 48.9      |
| 0°-60°    | 1745.2 | 82.3      |
| 0°-90°    | 2120.1 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2120.1 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 852 | 852   | 852 | 852   | 852 |      |
| 5°  | 852 | 848   | 847 | 846   | 848 | 81   |
| 15° | 815 | 812   | 811 | 809   | 810 | 230  |
| 25° | 739 | 736   | 733 | 728   | 727 | 340  |
| 35° | 635 | 632   | 622 | 617   | 614 | 396  |
| 45° | 511 | 507   | 495 | 488   | 487 | 394  |
| 55° | 379 | 373   | 362 | 356   | 353 | 339  |
| 65° | 247 | 241   | 232 | 224   | 221 | 245  |
| 75° | 122 | 117   | 111 | 105   | 103 | 129  |
| 85° | 22  | 21    | 19  | 17    | 15  | 28   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |

TEST NUMBER: P1215641

CATALOG NUMBER: 24-ID2-20-CFR2-L830-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 851.9 | 851.9 | 851.9 | 851.9 | 851.9 |
| 2.5°  | 854.8 | 851.9 | 850.2 | 849.6 | 851.6 |
| 5°    | 851.6 | 848.5 | 847.3 | 846.4 | 848.2 |
| 7.5°  | 846.1 | 843.0 | 841.8 | 840.9 | 842.7 |
| 10°   | 838.0 | 835.1 | 834.0 | 833.1 | 835.1 |
| 12.5° | 827.9 | 825.0 | 823.6 | 822.7 | 824.1 |
| 15°   | 815.2 | 812.0 | 810.8 | 809.1 | 810.0 |
| 17.5° | 799.0 | 796.6 | 795.8 | 792.6 | 792.9 |
| 20°   | 780.4 | 778.7 | 777.5 | 772.9 | 773.5 |
| 22.5° | 761.3 | 759.0 | 756.1 | 752.1 | 752.1 |
| 25°   | 739.0 | 736.4 | 732.7 | 728.0 | 726.6 |
| 27.5° | 715.9 | 713.0 | 706.9 | 702.8 | 701.4 |
| 30°   | 688.7 | 686.9 | 680.6 | 675.3 | 674.2 |
| 32.5° | 660.9 | 659.7 | 651.6 | 647.3 | 644.4 |
| 35°   | 635.1 | 631.6 | 622.4 | 616.9 | 614.3 |
| 37.5° | 604.7 | 601.5 | 591.7 | 586.8 | 583.9 |
| 40°   | 573.7 | 569.7 | 559.8 | 555.8 | 552.0 |
| 42.5° | 542.2 | 539.3 | 528.0 | 521.6 | 519.0 |
| 45°   | 510.9 | 506.6 | 495.3 | 488.3 | 486.9 |
| 47.5° | 479.4 | 473.3 | 462.3 | 455.1 | 453.6 |
| 50°   | 444.3 | 440.0 | 429.0 | 421.5 | 418.9 |
| 52.5° | 411.3 | 406.1 | 396.3 | 389.1 | 385.6 |
| 55°   | 379.2 | 373.4 | 362.1 | 355.8 | 352.9 |
| 57.5° | 345.3 | 340.1 | 330.0 | 321.9 | 319.6 |
| 60°   | 312.6 | 306.0 | 296.1 | 289.5 | 285.7 |
| 62.5° | 280.5 | 273.8 | 264.3 | 255.9 | 254.2 |
| 65°   | 246.9 | 240.8 | 231.9 | 224.3 | 221.2 |
| 67.5° | 214.5 | 208.4 | 199.7 | 193.9 | 191.1 |
| 70°   | 182.4 | 177.4 | 170.5 | 163.0 | 161.2 |
| 72.5° | 151.7 | 147.1 | 139.8 | 133.4 | 132.0 |
| 75°   | 122.2 | 116.9 | 111.2 | 104.8 | 103.1 |
| 77.5° | 92.3  | 89.7  | 83.7  | 80.2  | 78.2  |
| 80°   | 66.0  | 62.8  | 58.8  | 55.6  | 53.8  |
| 82.5° | 41.1  | 39.9  | 37.3  | 34.4  | 32.7  |
| 85°   | 22.0  | 20.8  | 18.8  | 16.8  | 15.3  |
| 87.5° | 6.1   | 6.7   | 6.7   | 6.4   | 6.4   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |

TEST NUMBER: P1215641

CATALOG NUMBER: 24-ID2-20-CFR2-L830-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 11.59            | 13.17 | 11.95 | 13.49 | 13.80 | 11.18          | 12.76 | 11.54 | 13.08 | 13.39 |
|                 | 3H   | 13.21            | 14.64 | 13.59 | 14.97 | 15.33 | 12.70          | 14.13 | 13.08 | 14.45 | 14.81 |
|                 | 4H   | 13.78            | 15.12 | 14.18 | 15.47 | 15.85 | 13.19          | 14.54 | 13.59 | 14.88 | 15.26 |
|                 | 6H   | 14.14            | 15.38 | 14.55 | 15.75 | 16.14 | 13.50          | 14.74 | 13.91 | 15.10 | 15.50 |
|                 | 8H   | 14.23            | 15.41 | 14.65 | 15.80 | 16.20 | 13.56          | 14.74 | 13.99 | 15.13 | 15.53 |
|                 | 12H  | 14.27            | 15.40 | 14.70 | 15.78 | 16.21 | 13.58          | 14.71 | 14.01 | 15.10 | 15.52 |
| 4H              | 2H   | 12.11            | 13.45 | 12.50 | 13.80 | 14.17 | 11.77          | 13.12 | 12.17 | 13.46 | 13.84 |
|                 | 3H   | 13.94            | 15.06 | 14.35 | 15.46 | 15.86 | 13.50          | 14.62 | 13.91 | 15.01 | 15.41 |
|                 | 4H   | 14.62            | 15.63 | 15.05 | 16.04 | 16.48 | 14.10          | 15.10 | 14.53 | 15.52 | 15.95 |
|                 | 6H   | 15.09            | 15.97 | 15.54 | 16.41 | 16.86 | 14.50          | 15.37 | 14.95 | 15.82 | 16.27 |
|                 | 8H   | 15.21            | 16.03 | 15.67 | 16.47 | 16.94 | 14.59          | 15.41 | 15.05 | 15.85 | 16.32 |
|                 | 12H  | 15.27            | 16.01 | 15.75 | 16.48 | 16.95 | 14.63          | 15.36 | 15.11 | 15.84 | 16.31 |
| 8H              | 4H   | 14.83            | 15.65 | 15.29 | 16.09 | 16.55 | 14.35          | 15.17 | 14.82 | 15.62 | 16.08 |
|                 | 6H   | 15.38            | 16.06 | 15.87 | 16.55 | 17.02 | 14.84          | 15.52 | 15.33 | 16.00 | 16.48 |
|                 | 8H   | 15.54            | 16.15 | 16.06 | 16.66 | 17.15 | 14.97          | 15.57 | 15.48 | 16.08 | 16.57 |
|                 | 12H  | 15.65            | 16.19 | 16.16 | 16.68 | 17.24 | 15.04          | 15.58 | 15.55 | 16.07 | 16.63 |
| 12H             | 4H   | 14.83            | 15.57 | 15.31 | 16.04 | 16.51 | 14.37          | 15.11 | 14.85 | 15.58 | 16.05 |
|                 | 6H   | 15.39            | 16.00 | 15.90 | 16.51 | 16.99 | 14.86          | 15.47 | 15.37 | 15.98 | 16.47 |
|                 | 8H   | 15.60            | 16.14 | 16.11 | 16.63 | 17.19 | 15.04          | 15.57 | 15.54 | 16.06 | 16.63 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-3

Test Date: 07/24/2025

Luminaire Tested: 22ID2-55-CFR1-L830-U

Data in this report applies to families of products including 22ID2-55-CFR1-L830-U




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-3  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L830-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3000K 80CRI

### Spectral Parameters

CCT (K): 3031  
 CIE  $u'$ : 0.2493  
 CIE  $v'$ : 0.5215  
 Duv: 0.0005  
 CIE x: 0.4355  
 CIE y: 0.4049  
 CIE z: 0.1596  
 Peak Wavelength (nm): 603  
 Dominant Wavelength (nm): 582  
 Purity: 52.24762  
 Rf: 84.8  
 Rg: 95.8

CRI (Ra): 82.5  
 R1: 80.7  
 R2: 90.5  
 R3: 96.7  
 R4: 80.7  
 R5: 80.9  
 R6: 88.5  
 R7: 83.0  
 R8: 58.8  
 R9: 5.8  
 R10: 78.6  
 R11: 80.2  
 R12: 69.8  
 R13: 83.0  
 R14: 98.8  
 R15: 73.0

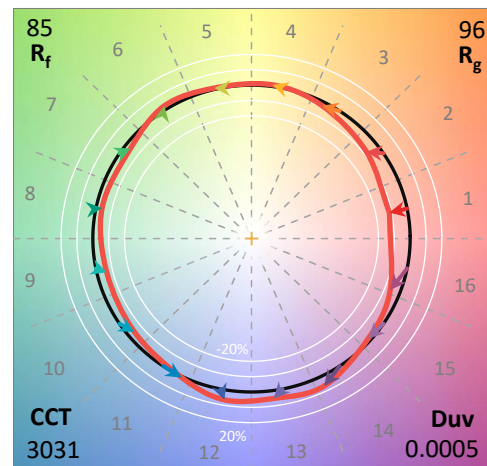

### Test Conditions


Stabilization Time: 38M  
 Operation Time: 1H 38M  
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2506-458-3


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-3

**CIE 1931 Chromaticity Diagram**

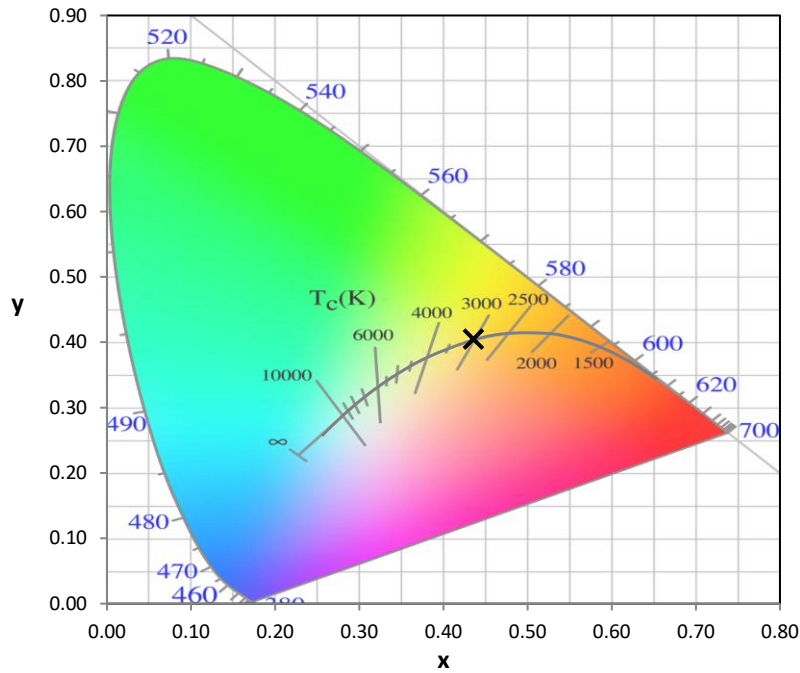


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

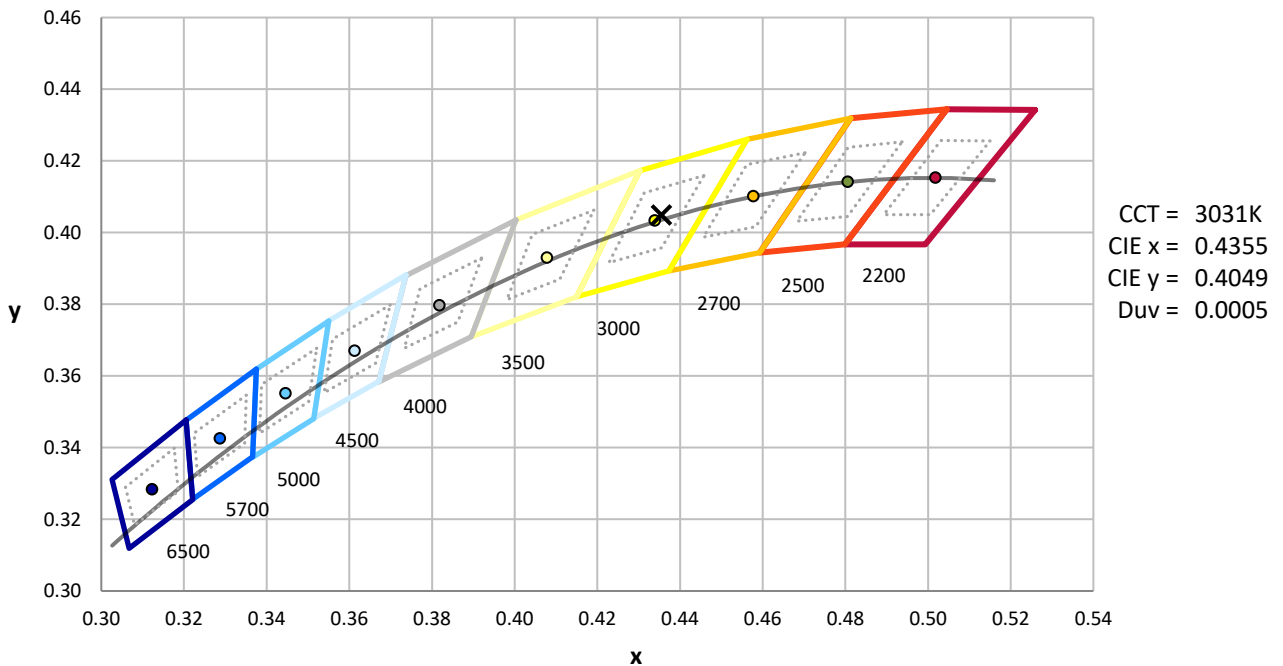

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-3

### Photopic Flux vs. Wavelength

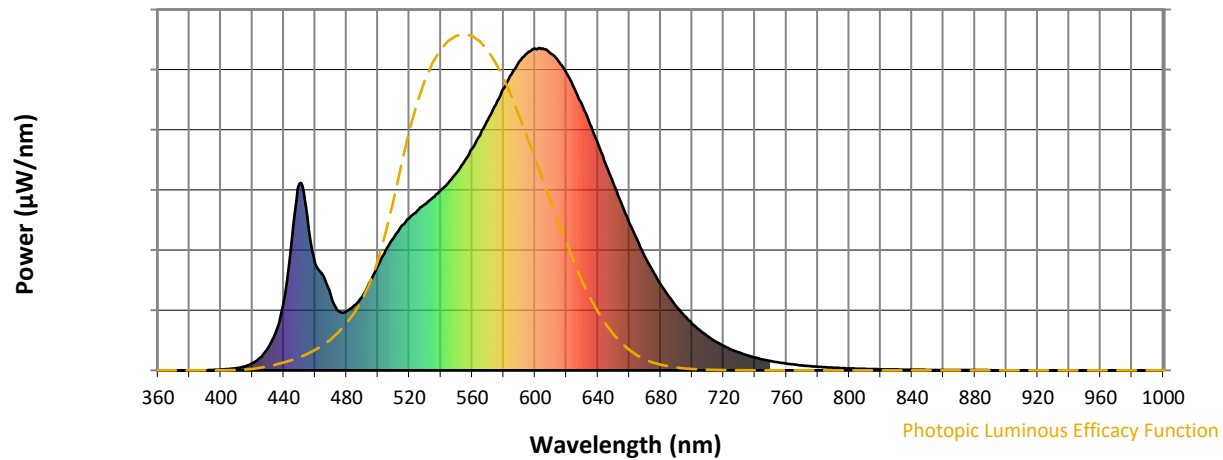


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 229                                  | NR                             | 620               | 922                                  | NR                             | 750               | 29                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 275                                  | NR                             | 625               | 875                                  | NR                             | 755               | 25                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 326                                  | NR                             | 630               | 822                                  | NR                             | 760               | 21                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 372                                  | NR                             | 635               | 764                                  | NR                             | 765               | 18                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 411                                  | NR                             | 640               | 704                                  | NR                             | 770               | 15                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 447                                  | NR                             | 645               | 638                                  | NR                             | 775               | 13                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 473                                  | NR                             | 650               | 577                                  | NR                             | 780               | 11                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 495                                  | NR                             | 655               | 517                                  | NR                             | 785               | 10                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 3                                    | NR                             | 530               | 515                                  | NR                             | 660               | 457                                  | NR                             | 790               | 8                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 4                                    | NR                             | 535               | 537                                  | NR                             | 665               | 404                                  | NR                             | 795               | 7                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 559                                  | NR                             | 670               | 353                                  | NR                             | 800               | 6                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 12                                   | NR                             | 545               | 584                                  | NR                             | 675               | 307                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 22                                   | NR                             | 550               | 612                                  | NR                             | 680               | 267                                  | NR                             | 810               | 5                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 40                                   | NR                             | 555               | 648                                  | NR                             | 685               | 230                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 69                                   | NR                             | 560               | 688                                  | NR                             | 690               | 199                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 120                                  | NR                             | 565               | 730                                  | NR                             | 695               | 170                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 212                                  | NR                             | 570               | 777                                  | NR                             | 700               | 145                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 400                                  | NR                             | 575               | 824                                  | NR                             | 705               | 124                                  | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 578                                  | NR                             | 580               | 873                                  | NR                             | 710               | 106                                  | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 478                                  | NR                             | 585               | 918                                  | NR                             | 715               | 90                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 332                                  | NR                             | 590               | 958                                  | NR                             | 720               | 76                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 295                                  | NR                             | 595               | 983                                  | NR                             | 725               | 65                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 231                                  | NR                             | 600               | 997                                  | NR                             | 730               | 55                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 183                                  | NR                             | 605               | 998                                  | NR                             | 735               | 47                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 184                                  | NR                             | 610               | 982                                  | NR                             | 740               | 40                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 201                                  | NR                             | 615               | 958                                  | NR                             | 745               | 34                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-3

### Scotopic Flux vs. Wavelength

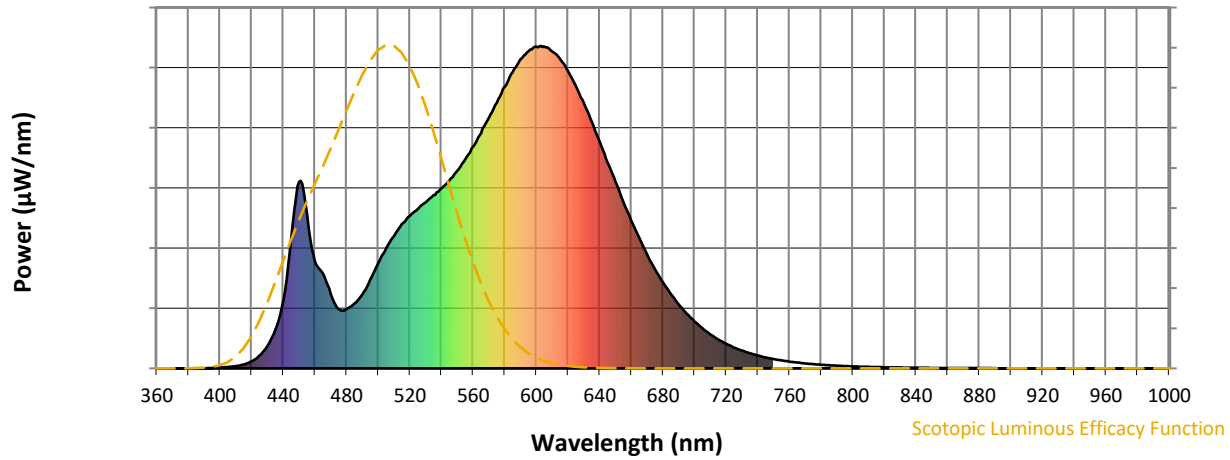


Scotopic Lumens: NR

S/P: 1.35

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 229                                  | NR                             | 620               | 922                                  | NR                             | 750               | 29                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 275                                  | NR                             | 625               | 875                                  | NR                             | 755               | 25                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 326                                  | NR                             | 630               | 822                                  | NR                             | 760               | 21                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 372                                  | NR                             | 635               | 764                                  | NR                             | 765               | 18                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 411                                  | NR                             | 640               | 704                                  | NR                             | 770               | 15                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 447                                  | NR                             | 645               | 638                                  | NR                             | 775               | 13                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 473                                  | NR                             | 650               | 577                                  | NR                             | 780               | 11                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 495                                  | NR                             | 655               | 517                                  | NR                             | 785               | 10                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 3                                    | NR                             | 530               | 515                                  | NR                             | 660               | 457                                  | NR                             | 790               | 8                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 4                                    | NR                             | 535               | 537                                  | NR                             | 665               | 404                                  | NR                             | 795               | 7                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 559                                  | NR                             | 670               | 353                                  | NR                             | 800               | 6                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 12                                   | NR                             | 545               | 584                                  | NR                             | 675               | 307                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 22                                   | NR                             | 550               | 612                                  | NR                             | 680               | 267                                  | NR                             | 810               | 5                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 40                                   | NR                             | 555               | 648                                  | NR                             | 685               | 230                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 69                                   | NR                             | 560               | 688                                  | NR                             | 690               | 199                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 120                                  | NR                             | 565               | 730                                  | NR                             | 695               | 170                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 212                                  | NR                             | 570               | 777                                  | NR                             | 700               | 145                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 400                                  | NR                             | 575               | 824                                  | NR                             | 705               | 124                                  | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 578                                  | NR                             | 580               | 873                                  | NR                             | 710               | 106                                  | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 478                                  | NR                             | 585               | 918                                  | NR                             | 715               | 90                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 332                                  | NR                             | 590               | 958                                  | NR                             | 720               | 76                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 295                                  | NR                             | 595               | 983                                  | NR                             | 725               | 65                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 231                                  | NR                             | 600               | 997                                  | NR                             | 730               | 55                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 183                                  | NR                             | 605               | 998                                  | NR                             | 735               | 47                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 184                                  | NR                             | 610               | 982                                  | NR                             | 740               | 40                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 201                                  | NR                             | 615               | 958                                  | NR                             | 745               | 34                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-3

### Melanopic Flux vs. Wavelength

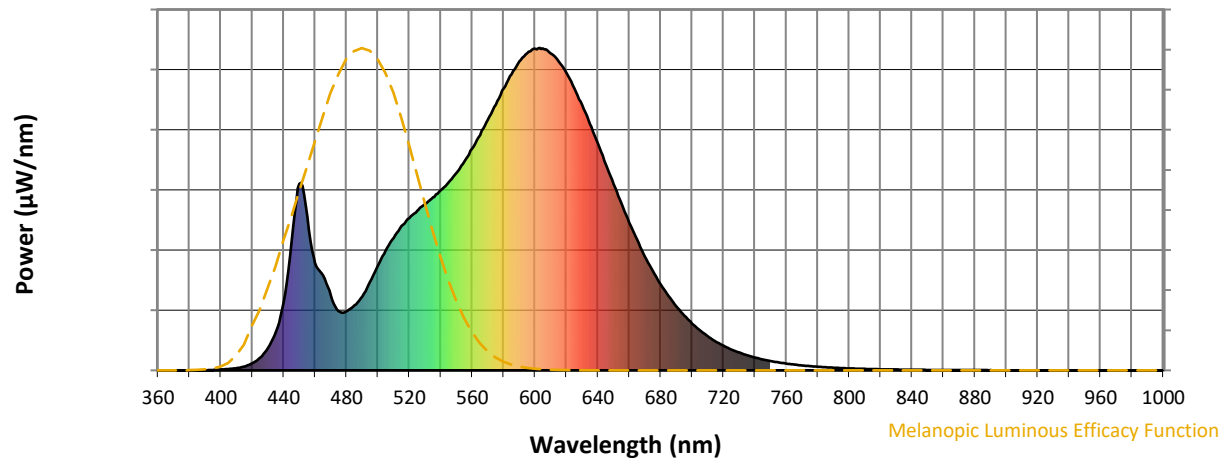
**Melanopic Lumens: NR**
**M/P: 2.59**


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 229                                    | NR                             | 620               | 922                                    | NR                             | 750               | 29                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 275                                    | NR                             | 625               | 875                                    | NR                             | 755               | 25                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 326                                    | NR                             | 630               | 822                                    | NR                             | 760               | 21                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 372                                    | NR                             | 635               | 764                                    | NR                             | 765               | 18                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 411                                    | NR                             | 640               | 704                                    | NR                             | 770               | 15                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 447                                    | NR                             | 645               | 638                                    | NR                             | 775               | 13                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 473                                    | NR                             | 650               | 577                                    | NR                             | 780               | 11                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 1                                      | NR                             | 525               | 495                                    | NR                             | 655               | 517                                    | NR                             | 785               | 10                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 3                                      | NR                             | 530               | 515                                    | NR                             | 660               | 457                                    | NR                             | 790               | 8                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 4                                      | NR                             | 535               | 537                                    | NR                             | 665               | 404                                    | NR                             | 795               | 7                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 7                                      | NR                             | 540               | 559                                    | NR                             | 670               | 353                                    | NR                             | 800               | 6                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 12                                     | NR                             | 545               | 584                                    | NR                             | 675               | 307                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 22                                     | NR                             | 550               | 612                                    | NR                             | 680               | 267                                    | NR                             | 810               | 5                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 40                                     | NR                             | 555               | 648                                    | NR                             | 685               | 230                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 69                                     | NR                             | 560               | 688                                    | NR                             | 690               | 199                                    | NR                             | 820               | 3                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 120                                    | NR                             | 565               | 730                                    | NR                             | 695               | 170                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 212                                    | NR                             | 570               | 777                                    | NR                             | 700               | 145                                    | NR                             | 830               | 3                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 400                                    | NR                             | 575               | 824                                    | NR                             | 705               | 124                                    | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 578                                    | NR                             | 580               | 873                                    | NR                             | 710               | 106                                    | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 478                                    | NR                             | 585               | 918                                    | NR                             | 715               | 90                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 332                                    | NR                             | 590               | 958                                    | NR                             | 720               | 76                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 295                                    | NR                             | 595               | 983                                    | NR                             | 725               | 65                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 231                                    | NR                             | 600               | 997                                    | NR                             | 730               | 55                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 183                                    | NR                             | 605               | 998                                    | NR                             | 735               | 47                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 184                                    | NR                             | 610               | 982                                    | NR                             | 740               | 40                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 201                                    | NR                             | 615               | 958                                    | NR                             | 745               | 34                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2506-458-3





TM-30-18

### Summary

$R_f = 84.8$   
 $R_g = 95.8$   
 $CIE R_a = 82.5$   
 $R_9 = 5.8$

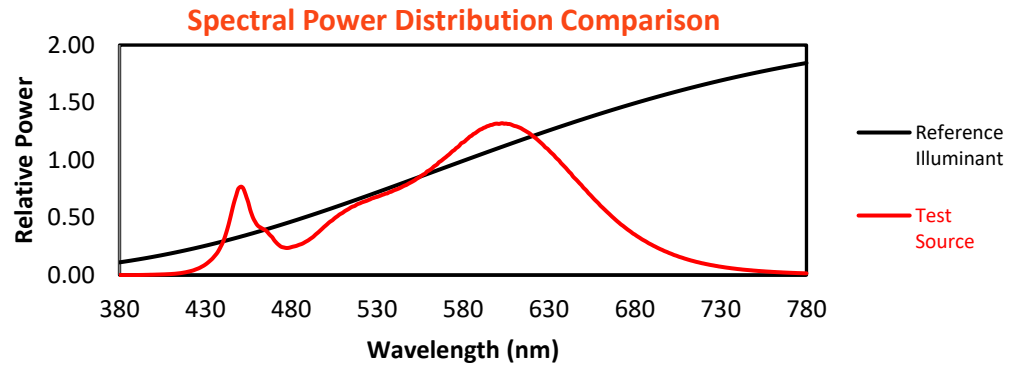


### Color Vector Graphics

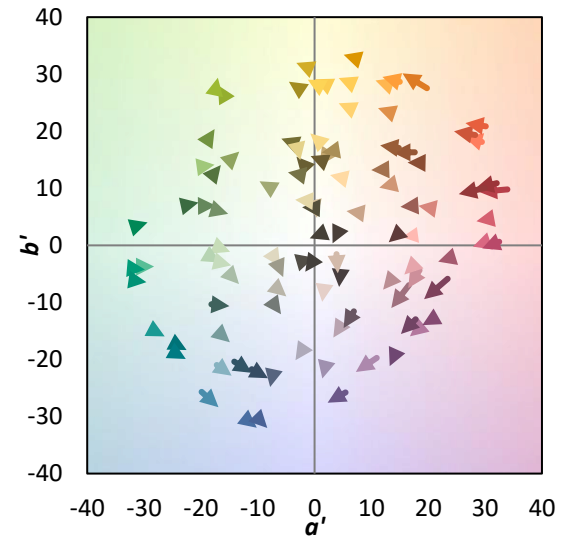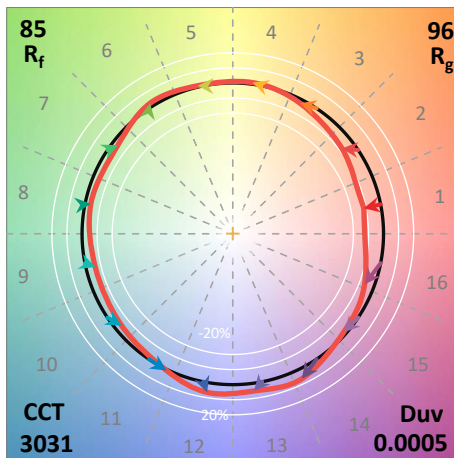
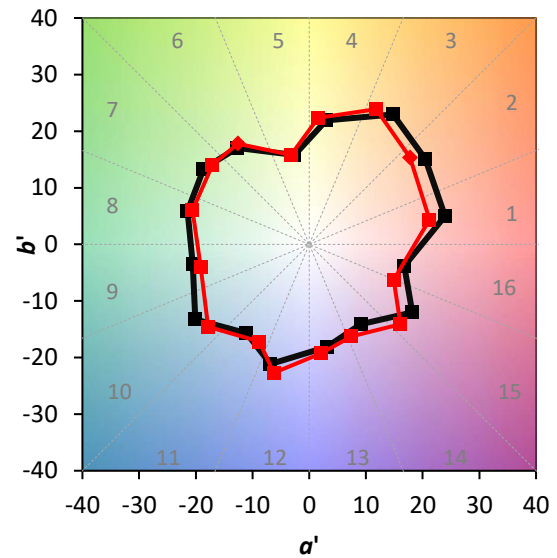
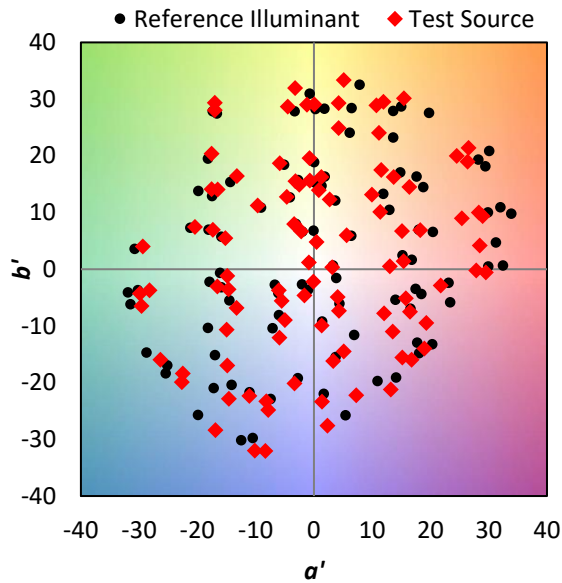


**Individual Sample Fidelity Index ( $R_{f,i}$ )**


|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 84 | CES51 = 94 | CES76 = 80 |
| CES02 = 63 | CES27 = 94 | CES52 = 94 | CES77 = 85 |
| CES03 = 31 | CES28 = 93 | CES53 = 89 | CES78 = 79 |
| CES04 = 70 | CES29 = 87 | CES54 = 91 | CES79 = 91 |
| CES05 = 50 | CES30 = 96 | CES55 = 90 | CES80 = 90 |
| CES06 = 51 | CES31 = 89 | CES56 = 87 | CES81 = 74 |
| CES07 = 42 | CES32 = 82 | CES57 = 86 | CES82 = 95 |
| CES08 = 41 | CES33 = 92 | CES58 = 87 | CES83 = 94 |
| CES09 = 29 | CES34 = 90 | CES59 = 91 | CES84 = 92 |
| CES10 = 76 | CES35 = 94 | CES60 = 92 | CES85 = 77 |
| CES11 = 59 | CES36 = 86 | CES61 = 88 | CES86 = 69 |
| CES12 = 65 | CES37 = 94 | CES62 = 90 | CES87 = 84 |
| CES13 = 43 | CES38 = 95 | CES63 = 87 | CES88 = 88 |
| CES14 = 74 | CES39 = 98 | CES64 = 81 | CES89 = 75 |
| CES15 = 72 | CES40 = 95 | CES65 = 79 | CES90 = 89 |
| CES16 = 47 | CES41 = 97 | CES66 = 79 | CES91 = 77 |
| CES17 = 50 | CES42 = 95 | CES67 = 78 | CES92 = 65 |
| CES18 = 56 | CES43 = 90 | CES68 = 81 | CES93 = 79 |
| CES19 = 72 | CES44 = 99 | CES69 = 86 | CES94 = 62 |
| CES20 = 67 | CES45 = 93 | CES70 = 78 | CES95 = 74 |
| CES21 = 87 | CES46 = 90 | CES71 = 75 | CES96 = 84 |
| CES22 = 79 | CES47 = 94 | CES72 = 91 | CES97 = 89 |
| CES23 = 92 | CES48 = 85 | CES73 = 73 | CES98 = 85 |
| CES24 = 91 | CES49 = 90 | CES74 = 92 | CES99 = 77 |
| CES25 = 72 | CES50 = 94 | CES75 = 78 |            |

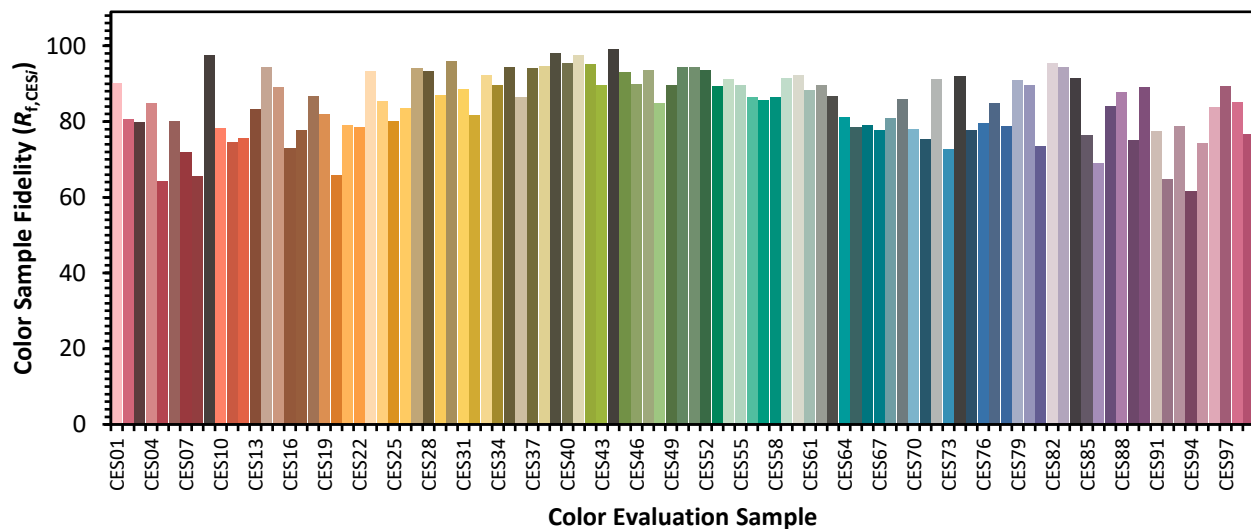

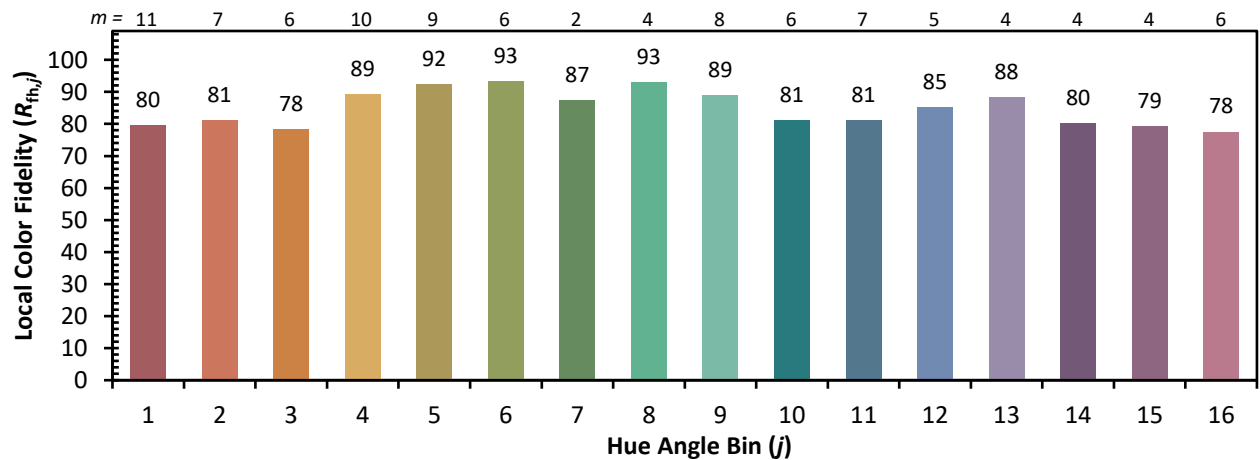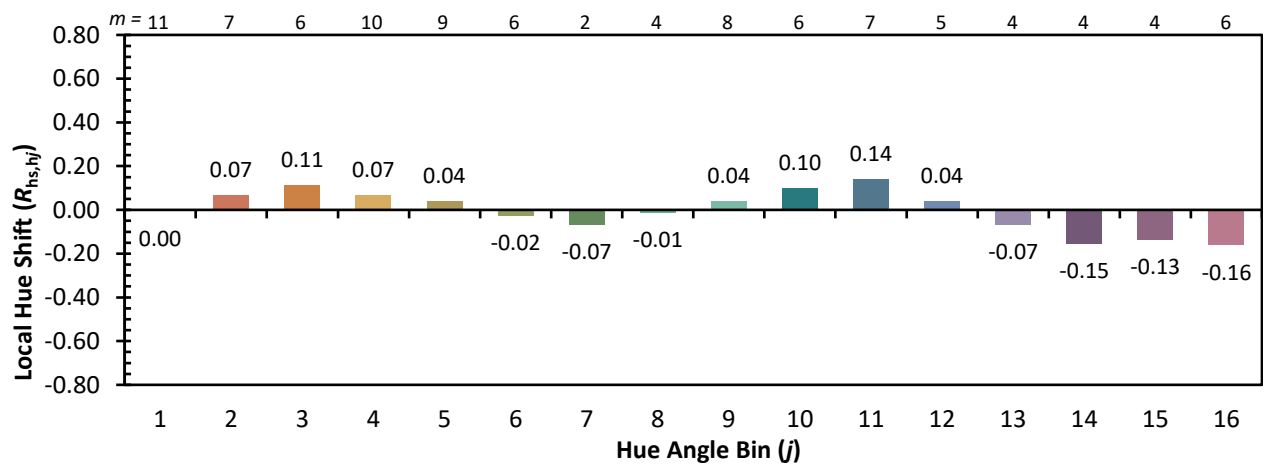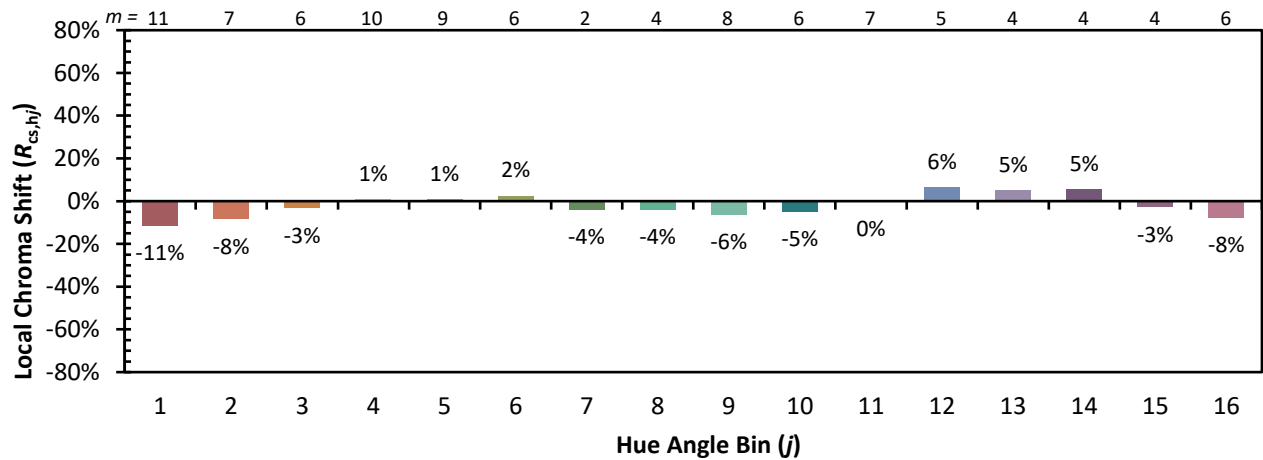

**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**

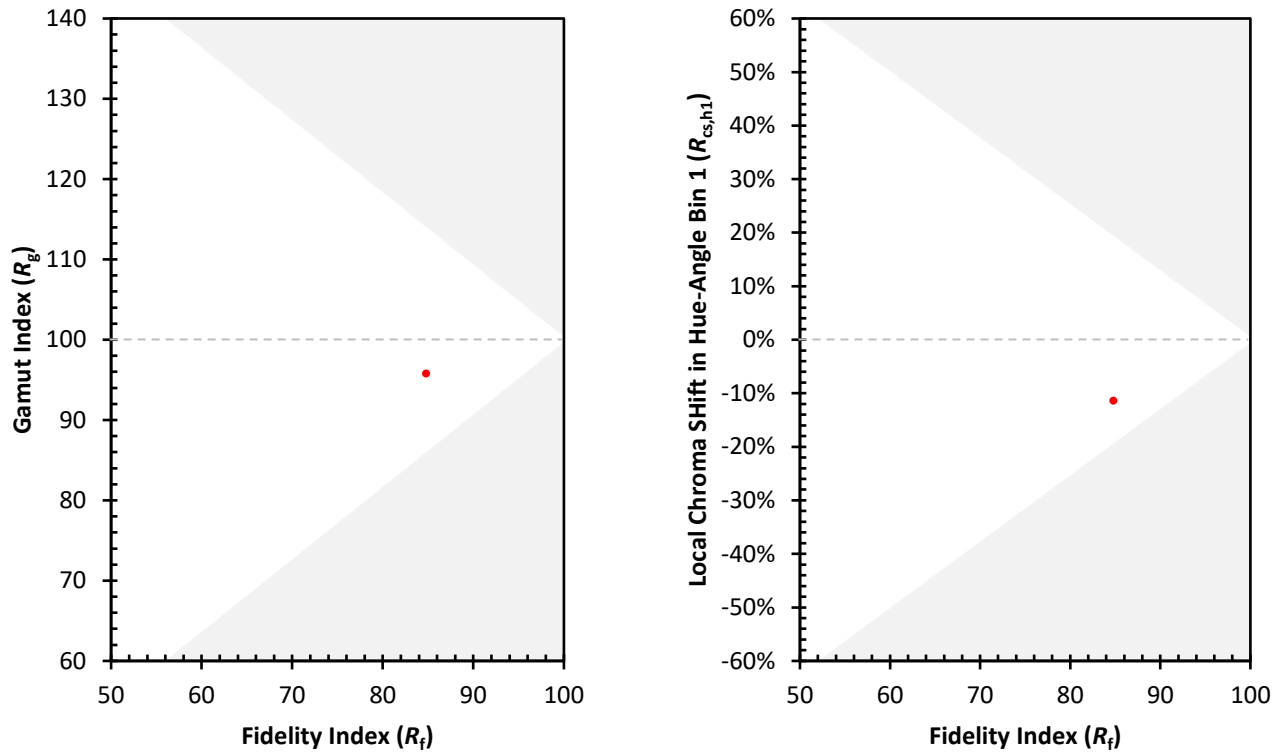

(END OF REPORT)