

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1215670

Luminaire Tested: 24-ID2-35-CFR2-L935-U

Issue Date: 12/5/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1215670  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2508-510-7)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 24-ID2-35-CFR2-L935-U  
Description: 2X4 IN DEPTH TROFFER WITH 2INCH CUBE REGRESS LENS  
Light Source: 3500K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3178.2 lumens  
Efficiency: N/A  
Efficacy: 104.5 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.18 / 1.29  
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 30.4  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1215670  
CATALOG NUMBER: 24-ID2-35-CFR2-L935-U

### Luminous Intensity Polar Plot

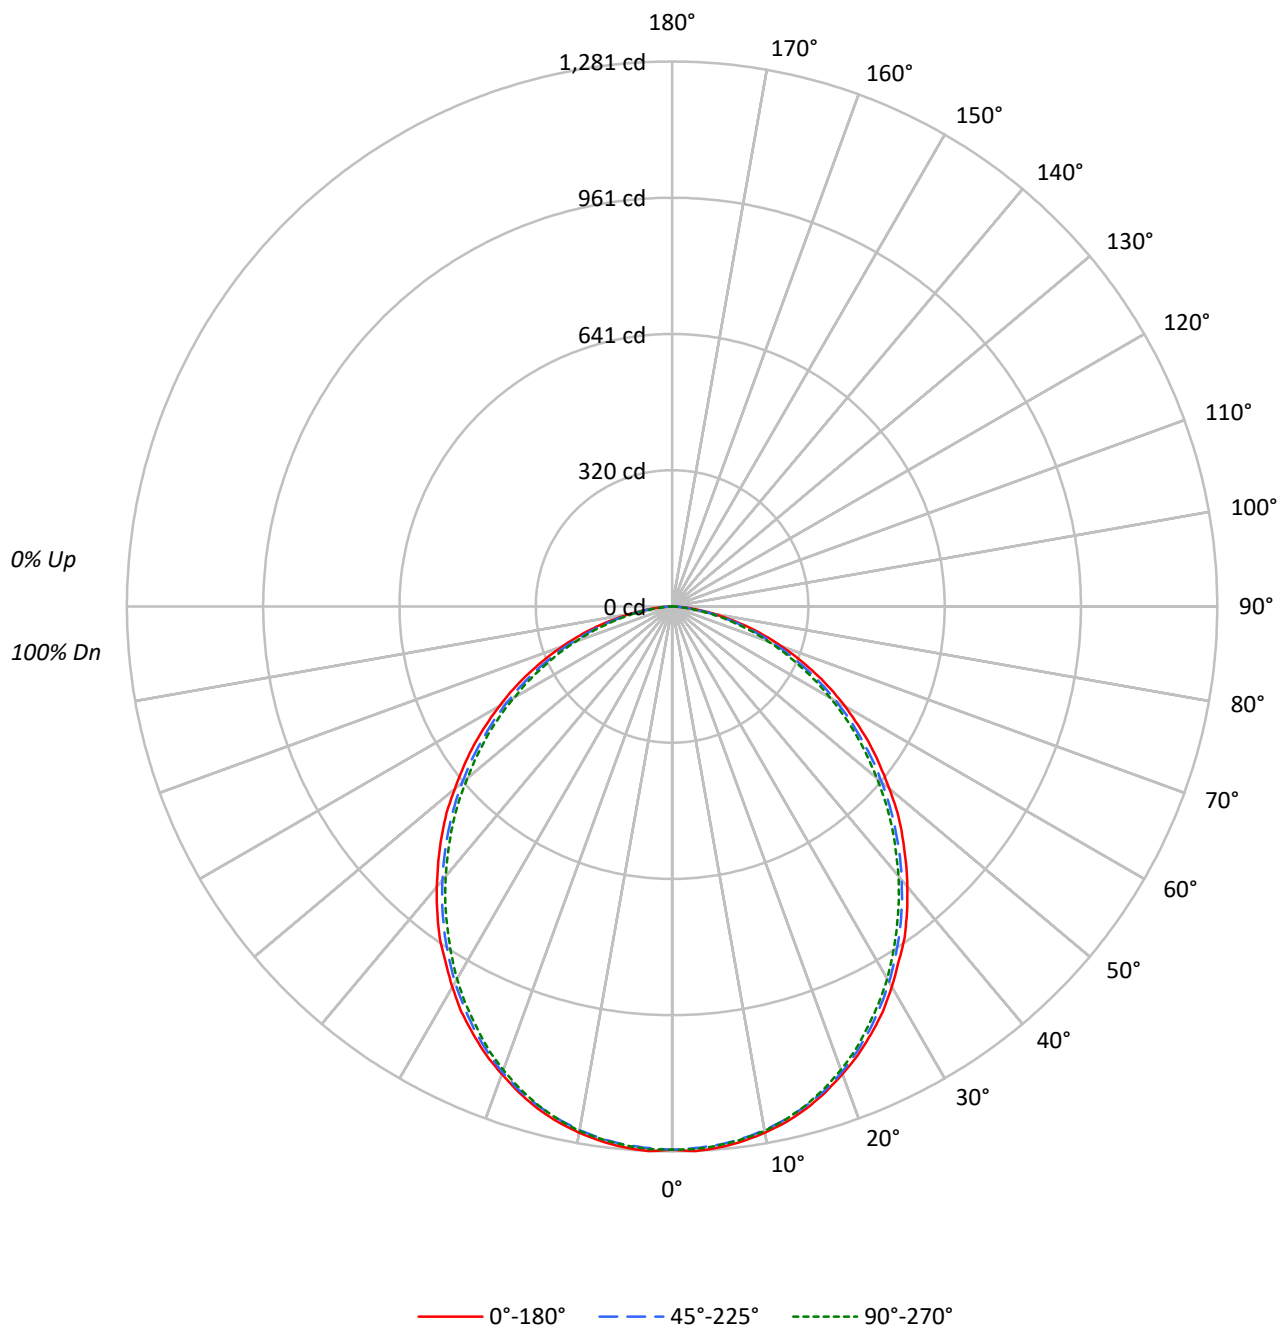

TEST NUMBER: P1215670

CATALOG NUMBER: 24-ID2-35-CFR2-L935-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |     | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 102 | 102 | 100 |
| 1   | 109 | 105 | 101 | 97  | 107 | 103 | 99  | 96  | 98  | 95  | 93  | 95  | 92  | 90  | 91  | 89  | 87  | 87  | 87  | 85  |
| 2   | 100 | 92  | 86  | 80  | 97  | 90  | 84  | 79  | 87  | 82  | 77  | 83  | 79  | 76  | 80  | 77  | 74  | 74  | 74  | 72  |
| 3   | 91  | 81  | 74  | 67  | 89  | 80  | 73  | 67  | 77  | 71  | 65  | 74  | 69  | 64  | 72  | 67  | 63  | 63  | 63  | 61  |
| 4   | 84  | 72  | 64  | 57  | 82  | 71  | 63  | 57  | 69  | 62  | 56  | 66  | 60  | 55  | 64  | 59  | 55  | 55  | 55  | 53  |
| 5   | 77  | 65  | 56  | 50  | 75  | 64  | 56  | 49  | 62  | 54  | 49  | 60  | 53  | 48  | 58  | 52  | 48  | 48  | 48  | 46  |
| 6   | 72  | 59  | 50  | 44  | 70  | 58  | 49  | 43  | 56  | 49  | 43  | 54  | 48  | 43  | 53  | 47  | 42  | 42  | 42  | 40  |
| 7   | 67  | 53  | 45  | 39  | 65  | 53  | 44  | 39  | 51  | 44  | 38  | 50  | 43  | 38  | 48  | 42  | 38  | 38  | 38  | 36  |
| 8   | 62  | 49  | 40  | 35  | 60  | 48  | 40  | 35  | 47  | 40  | 34  | 46  | 39  | 34  | 44  | 38  | 34  | 34  | 34  | 32  |
| 9   | 58  | 45  | 37  | 31  | 57  | 44  | 37  | 31  | 43  | 36  | 31  | 42  | 36  | 31  | 41  | 35  | 31  | 31  | 31  | 29  |
| 10  | 54  | 41  | 34  | 29  | 53  | 41  | 33  | 28  | 40  | 33  | 28  | 39  | 33  | 28  | 38  | 32  | 28  | 28  | 28  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1718 | 1718 | 1718 |
| 5°  | 1724 | 1716 | 1717 |
| 10° | 1716 | 1708 | 1710 |
| 15° | 1702 | 1693 | 1691 |
| 20° | 1675 | 1669 | 1660 |
| 25° | 1645 | 1631 | 1617 |
| 30° | 1604 | 1585 | 1570 |
| 35° | 1564 | 1532 | 1512 |
| 40° | 1511 | 1474 | 1453 |
| 45° | 1457 | 1413 | 1389 |
| 50° | 1394 | 1346 | 1314 |
| 55° | 1334 | 1274 | 1241 |
| 60° | 1261 | 1195 | 1153 |
| 65° | 1179 | 1107 | 1055 |
| 70° | 1076 | 1006 | 951  |
| 75° | 952  | 866  | 803  |
| 80° | 766  | 683  | 625  |
| 85° | 509  | 435  | 355  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 1457 cd/sqm

TEST NUMBER: P1215670  
 CATALOG NUMBER: 24-ID2-35-CFR2-L935-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 120.7  | 3.8       |
| 10°-20°   | 342.5  | 10.8      |
| 20°-30°   | 505.5  | 15.9      |
| 30°-40°   | 584.5  | 18.4      |
| 40°-50°   | 574.8  | 18.1      |
| 50°-60°   | 488.2  | 15.4      |
| 60°-70°   | 346.1  | 10.9      |
| 70°-80°   | 178.4  | 5.6       |
| 80°-90°   | 37.5   | 1.2       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 968.7  | 30.5      |
| 0°-40°    | 1553.2 | 48.9      |
| 0°-60°    | 2616.2 | 82.3      |
| 0°-90°    | 3178.2 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3178.2 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1277 | 1277  | 1277 | 1277  | 1277 |      |
| 5°  | 1277 | 1272  | 1270 | 1269  | 1272 | 121  |
| 15° | 1222 | 1217  | 1216 | 1213  | 1214 | 344  |
| 25° | 1108 | 1104  | 1098 | 1091  | 1089 | 510  |
| 35° | 952  | 947   | 933  | 925   | 921  | 594  |
| 45° | 766  | 759   | 742  | 732   | 730  | 591  |
| 55° | 568  | 560   | 543  | 533   | 529  | 507  |
| 65° | 370  | 361   | 348  | 336   | 332  | 367  |
| 75° | 183  | 175   | 167  | 157   | 154  | 194  |
| 85° | 33   | 31    | 28   | 25    | 23   | 42   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1215670

CATALOG NUMBER: 24-ID2-35-CFR2-L935-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1277.1 | 1277.1 | 1277.1 | 1277.1 | 1277.1 |
| 2.5°  | 1281.4 | 1277.1 | 1274.5 | 1273.6 | 1276.7 |
| 5°    | 1276.7 | 1271.9 | 1270.2 | 1268.9 | 1271.5 |
| 7.5°  | 1268.4 | 1263.6 | 1261.9 | 1260.6 | 1263.2 |
| 10°   | 1256.3 | 1251.9 | 1250.2 | 1248.9 | 1251.9 |
| 12.5° | 1241.1 | 1236.7 | 1234.6 | 1233.3 | 1235.4 |
| 15°   | 1222.0 | 1217.2 | 1215.5 | 1212.9 | 1214.2 |
| 17.5° | 1197.7 | 1194.2 | 1192.9 | 1188.1 | 1188.6 |
| 20°   | 1169.9 | 1167.3 | 1165.6 | 1158.6 | 1159.5 |
| 22.5° | 1141.3 | 1137.8 | 1133.5 | 1127.4 | 1127.4 |
| 25°   | 1107.9 | 1104.0 | 1098.3 | 1091.4 | 1089.2 |
| 27.5° | 1073.1 | 1068.8 | 1059.7 | 1053.6 | 1051.4 |
| 30°   | 1032.4 | 1029.7 | 1020.2 | 1012.4 | 1010.7 |
| 32.5° | 990.7  | 989.0  | 976.8  | 970.3  | 966.0  |
| 35°   | 952.1  | 946.9  | 933.0  | 924.7  | 920.8  |
| 37.5° | 906.5  | 901.7  | 887.0  | 879.6  | 875.3  |
| 40°   | 860.1  | 854.0  | 839.2  | 833.2  | 827.5  |
| 42.5° | 812.8  | 808.4  | 791.5  | 782.0  | 778.1  |
| 45°   | 765.9  | 759.4  | 742.5  | 732.1  | 729.9  |
| 47.5° | 718.6  | 709.5  | 693.0  | 682.2  | 680.0  |
| 50°   | 666.1  | 659.6  | 643.1  | 631.8  | 627.9  |
| 52.5° | 616.6  | 608.8  | 594.1  | 583.2  | 578.0  |
| 55°   | 568.5  | 559.8  | 542.9  | 533.3  | 529.0  |
| 57.5° | 517.7  | 509.9  | 494.7  | 482.5  | 479.1  |
| 60°   | 468.7  | 458.7  | 443.9  | 433.9  | 428.3  |
| 62.5° | 420.5  | 410.5  | 396.2  | 383.6  | 381.0  |
| 65°   | 370.2  | 361.0  | 347.6  | 336.3  | 331.5  |
| 67.5° | 321.6  | 312.4  | 299.4  | 290.7  | 286.4  |
| 70°   | 273.4  | 266.0  | 255.6  | 244.3  | 241.7  |
| 72.5° | 227.4  | 220.4  | 209.6  | 200.0  | 197.9  |
| 75°   | 183.1  | 175.3  | 166.6  | 157.1  | 154.5  |
| 77.5° | 138.4  | 134.5  | 125.4  | 120.2  | 117.2  |
| 80°   | 98.9   | 94.2   | 88.1   | 83.3   | 80.7   |
| 82.5° | 61.6   | 59.9   | 56.0   | 51.6   | 49.0   |
| 85°   | 33.0   | 31.2   | 28.2   | 25.2   | 23.0   |
| 87.5° | 9.1    | 10.0   | 10.0   | 9.5    | 9.5    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1215670

CATALOG NUMBER: 24-ID2-35-CFR2-L935-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 13.00            | 14.58 | 13.36 | 14.90 | 15.21 | 12.58          | 14.17 | 12.95 | 14.48 | 14.80 |
|                 | 3H   | 14.62            | 16.05 | 15.00 | 16.38 | 16.74 | 14.10          | 15.53 | 14.48 | 15.86 | 16.22 |
|                 | 4H   | 15.19            | 16.53 | 15.59 | 16.88 | 17.25 | 14.60          | 15.94 | 15.00 | 16.29 | 16.67 |
|                 | 6H   | 15.55            | 16.79 | 15.96 | 17.16 | 17.55 | 14.90          | 16.15 | 15.32 | 16.51 | 16.90 |
|                 | 8H   | 15.64            | 16.82 | 16.06 | 17.21 | 17.61 | 14.97          | 16.15 | 15.39 | 16.54 | 16.94 |
|                 | 12H  | 15.68            | 16.81 | 16.11 | 17.19 | 17.62 | 14.99          | 16.12 | 15.42 | 16.50 | 16.93 |
| 4H              | 2H   | 13.51            | 14.85 | 13.91 | 15.20 | 15.58 | 13.18          | 14.52 | 13.58 | 14.87 | 15.25 |
|                 | 3H   | 15.35            | 16.46 | 15.76 | 16.86 | 17.26 | 14.90          | 16.02 | 15.31 | 16.42 | 16.82 |
|                 | 4H   | 16.03            | 17.03 | 16.46 | 17.45 | 17.88 | 15.50          | 16.51 | 15.93 | 16.92 | 17.36 |
|                 | 6H   | 16.49            | 17.37 | 16.95 | 17.81 | 18.27 | 15.90          | 16.78 | 16.36 | 17.22 | 17.68 |
|                 | 8H   | 16.61            | 17.43 | 17.08 | 17.88 | 18.34 | 15.99          | 16.81 | 16.45 | 17.26 | 17.72 |
|                 | 12H  | 16.68            | 17.41 | 17.16 | 17.89 | 18.36 | 16.03          | 16.77 | 16.51 | 17.24 | 17.71 |
| 8H              | 4H   | 16.23            | 17.05 | 16.69 | 17.50 | 17.96 | 15.76          | 16.58 | 16.22 | 17.02 | 17.49 |
|                 | 6H   | 16.79            | 17.46 | 17.28 | 17.95 | 18.43 | 16.24          | 16.92 | 16.74 | 17.41 | 17.89 |
|                 | 8H   | 16.95            | 17.56 | 17.46 | 18.07 | 18.55 | 16.37          | 16.98 | 16.88 | 17.49 | 17.98 |
|                 | 12H  | 17.06            | 17.60 | 17.57 | 18.09 | 18.65 | 16.45          | 16.98 | 16.95 | 17.47 | 18.04 |
| 12H             | 4H   | 16.24            | 16.97 | 16.72 | 17.45 | 17.92 | 15.78          | 16.51 | 16.26 | 16.99 | 17.46 |
|                 | 6H   | 16.80            | 17.41 | 17.31 | 17.91 | 18.40 | 16.27          | 16.88 | 16.78 | 17.39 | 17.87 |
|                 | 8H   | 17.01            | 17.54 | 17.51 | 18.03 | 18.60 | 16.44          | 16.98 | 16.95 | 17.47 | 18.03 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-10

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L935-U

Data in this report applies to families of products including 22ID2-55-CFR1-L935-U

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-10  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L935-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3500K 90CRI

### Spectral Parameters

CCT (K): 3377  
 CIE  $u'$ : 0.2392  
 CIE  $v'$ : 0.5128  
 Duv: -0.0007  
 CIE x: 0.4116  
 CIE y: 0.3922  
 CIE z: 0.1962  
 Peak Wavelength (nm): 618  
 Dominant Wavelength (nm): 581  
 Purity: 41.24368  
 R<sub>f</sub>: 91.8  
 R<sub>g</sub>: 99.6

CRI (Ra): 93.6  
 R1: 94.1  
 R2: 96.6  
 R3: 97.5  
 R4: 94.0  
 R5: 93.6  
 R6: 94.8  
 R7: 93.4  
 R8: 84.8  
 R9: 64.2  
 R10: 91.1  
 R11: 94.7  
 R12: 78.5  
 R13: 95.0  
 R14: 98.1  
 R15: 91.0



### Test Conditions

Stabilization Time: 32M  
 Operation Time: 1H 32M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2506-458-10

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-10

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-10

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 362                                  | NR                             | 620               | 996                                  | NR                             | 750               | 68                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 412                                  | NR                             | 625               | 989                                  | NR                             | 755               | 58                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 463                                  | NR                             | 630               | 973                                  | NR                             | 760               | 49                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 509                                  | NR                             | 635               | 947                                  | NR                             | 765               | 42                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 548                                  | NR                             | 640               | 914                                  | NR                             | 770               | 36                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 582                                  | NR                             | 645               | 872                                  | NR                             | 775               | 31                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 605                                  | NR                             | 650               | 822                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 626                                  | NR                             | 655               | 770                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 646                                  | NR                             | 660               | 712                                  | NR                             | 790               | 19                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 6                                    | NR                             | 535               | 666                                  | NR                             | 665               | 656                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 683                                  | NR                             | 670               | 596                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 15                                   | NR                             | 545               | 702                                  | NR                             | 675               | 538                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 27                                   | NR                             | 550               | 720                                  | NR                             | 680               | 486                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 48                                   | NR                             | 555               | 740                                  | NR                             | 685               | 432                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 85                                   | NR                             | 560               | 757                                  | NR                             | 690               | 385                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 152                                  | NR                             | 565               | 776                                  | NR                             | 695               | 339                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 274                                  | NR                             | 570               | 794                                  | NR                             | 700               | 297                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 536                                  | NR                             | 575               | 816                                  | NR                             | 705               | 260                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 793                                  | NR                             | 580               | 842                                  | NR                             | 710               | 225                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 659                                  | NR                             | 585               | 867                                  | NR                             | 715               | 194                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 484                                  | NR                             | 590               | 899                                  | NR                             | 720               | 169                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 441                                  | NR                             | 595               | 927                                  | NR                             | 725               | 146                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 353                                  | NR                             | 600               | 950                                  | NR                             | 730               | 125                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 293                                  | NR                             | 605               | 974                                  | NR                             | 735               | 107                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 300                                  | NR                             | 610               | 986                                  | NR                             | 740               | 92                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 998                                  | NR                             | 745               | 79                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-10

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.58

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 362                                  | NR                             | 620               | 996                                  | NR                             | 750               | 68                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 412                                  | NR                             | 625               | 989                                  | NR                             | 755               | 58                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 463                                  | NR                             | 630               | 973                                  | NR                             | 760               | 49                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 509                                  | NR                             | 635               | 947                                  | NR                             | 765               | 42                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 548                                  | NR                             | 640               | 914                                  | NR                             | 770               | 36                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 582                                  | NR                             | 645               | 872                                  | NR                             | 775               | 31                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 605                                  | NR                             | 650               | 822                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 626                                  | NR                             | 655               | 770                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 646                                  | NR                             | 660               | 712                                  | NR                             | 790               | 19                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 6                                    | NR                             | 535               | 666                                  | NR                             | 665               | 656                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 683                                  | NR                             | 670               | 596                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 15                                   | NR                             | 545               | 702                                  | NR                             | 675               | 538                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 27                                   | NR                             | 550               | 720                                  | NR                             | 680               | 486                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 48                                   | NR                             | 555               | 740                                  | NR                             | 685               | 432                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 85                                   | NR                             | 560               | 757                                  | NR                             | 690               | 385                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 152                                  | NR                             | 565               | 776                                  | NR                             | 695               | 339                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 274                                  | NR                             | 570               | 794                                  | NR                             | 700               | 297                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 536                                  | NR                             | 575               | 816                                  | NR                             | 705               | 260                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 793                                  | NR                             | 580               | 842                                  | NR                             | 710               | 225                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 659                                  | NR                             | 585               | 867                                  | NR                             | 715               | 194                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 484                                  | NR                             | 590               | 899                                  | NR                             | 720               | 169                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 441                                  | NR                             | 595               | 927                                  | NR                             | 725               | 146                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 353                                  | NR                             | 600               | 950                                  | NR                             | 730               | 125                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 293                                  | NR                             | 605               | 974                                  | NR                             | 735               | 107                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 300                                  | NR                             | 610               | 986                                  | NR                             | 740               | 92                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 998                                  | NR                             | 745               | 79                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-10

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 3.19**

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 362                                  | NR                             | 620               | 996                                  | NR                             | 750               | 68                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 412                                  | NR                             | 625               | 989                                  | NR                             | 755               | 58                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 463                                  | NR                             | 630               | 973                                  | NR                             | 760               | 49                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 509                                  | NR                             | 635               | 947                                  | NR                             | 765               | 42                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 548                                  | NR                             | 640               | 914                                  | NR                             | 770               | 36                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 582                                  | NR                             | 645               | 872                                  | NR                             | 775               | 31                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 605                                  | NR                             | 650               | 822                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 626                                  | NR                             | 655               | 770                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 646                                  | NR                             | 660               | 712                                  | NR                             | 790               | 19                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 6                                    | NR                             | 535               | 666                                  | NR                             | 665               | 656                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 683                                  | NR                             | 670               | 596                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 15                                   | NR                             | 545               | 702                                  | NR                             | 675               | 538                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 27                                   | NR                             | 550               | 720                                  | NR                             | 680               | 486                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 48                                   | NR                             | 555               | 740                                  | NR                             | 685               | 432                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 85                                   | NR                             | 560               | 757                                  | NR                             | 690               | 385                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 152                                  | NR                             | 565               | 776                                  | NR                             | 695               | 339                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 274                                  | NR                             | 570               | 794                                  | NR                             | 700               | 297                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 536                                  | NR                             | 575               | 816                                  | NR                             | 705               | 260                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 793                                  | NR                             | 580               | 842                                  | NR                             | 710               | 225                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 659                                  | NR                             | 585               | 867                                  | NR                             | 715               | 194                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 484                                  | NR                             | 590               | 899                                  | NR                             | 720               | 169                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 441                                  | NR                             | 595               | 927                                  | NR                             | 725               | 146                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 353                                  | NR                             | 600               | 950                                  | NR                             | 730               | 125                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 293                                  | NR                             | 605               | 974                                  | NR                             | 735               | 107                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 300                                  | NR                             | 610               | 986                                  | NR                             | 740               | 92                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 998                                  | NR                             | 745               | 79                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-10



TM-30-18

### Summary

$R_f = 91.8$   
 $R_g = 99.6$   
 $CIE R_a = 93.6$   
 $R_9 = 64.2$



### Color Vector Graphics

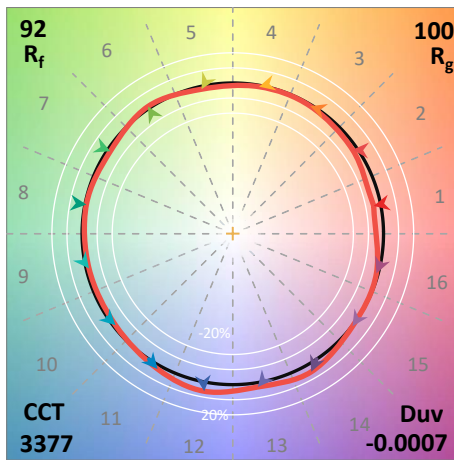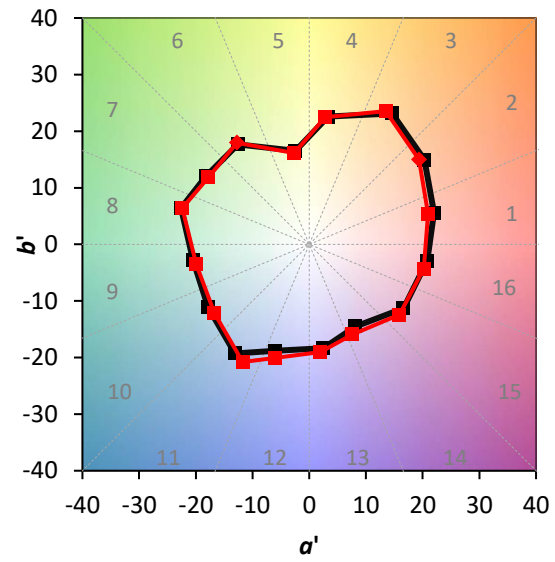


**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 94 | CES51 = 97 | CES76 = 88 |
| CES02 = 62 | CES27 = 92 | CES52 = 99 | CES77 = 89 |
| CES03 = 31 | CES28 = 96 | CES53 = 97 | CES78 = 85 |
| CES04 = 70 | CES29 = 96 | CES54 = 93 | CES79 = 95 |
| CES05 = 50 | CES30 = 92 | CES55 = 92 | CES80 = 93 |
| CES06 = 51 | CES31 = 97 | CES56 = 95 | CES81 = 86 |
| CES07 = 43 | CES32 = 91 | CES57 = 93 | CES82 = 97 |
| CES08 = 42 | CES33 = 99 | CES58 = 94 | CES83 = 97 |
| CES09 = 29 | CES34 = 94 | CES59 = 97 | CES84 = 94 |
| CES10 = 75 | CES35 = 96 | CES60 = 92 | CES85 = 83 |
| CES11 = 58 | CES36 = 82 | CES61 = 92 | CES86 = 86 |
| CES12 = 64 | CES37 = 95 | CES62 = 87 | CES87 = 91 |
| CES13 = 43 | CES38 = 87 | CES63 = 93 | CES88 = 97 |
| CES14 = 74 | CES39 = 99 | CES64 = 90 | CES89 = 87 |
| CES15 = 72 | CES40 = 98 | CES65 = 89 | CES90 = 96 |
| CES16 = 48 | CES41 = 97 | CES66 = 88 | CES91 = 75 |
| CES17 = 50 | CES42 = 95 | CES67 = 87 | CES92 = 80 |
| CES18 = 56 | CES43 = 94 | CES68 = 88 | CES93 = 88 |
| CES19 = 71 | CES44 = 99 | CES69 = 89 | CES94 = 81 |
| CES20 = 67 | CES45 = 97 | CES70 = 86 | CES95 = 84 |
| CES21 = 86 | CES46 = 97 | CES71 = 82 | CES96 = 92 |
| CES22 = 78 | CES47 = 96 | CES72 = 94 | CES97 = 96 |
| CES23 = 91 | CES48 = 92 | CES73 = 82 | CES98 = 95 |
| CES24 = 90 | CES49 = 96 | CES74 = 92 | CES99 = 92 |
| CES25 = 71 | CES50 = 98 | CES75 = 84 |            |



### Color Rendition by Hue-Angle Bin

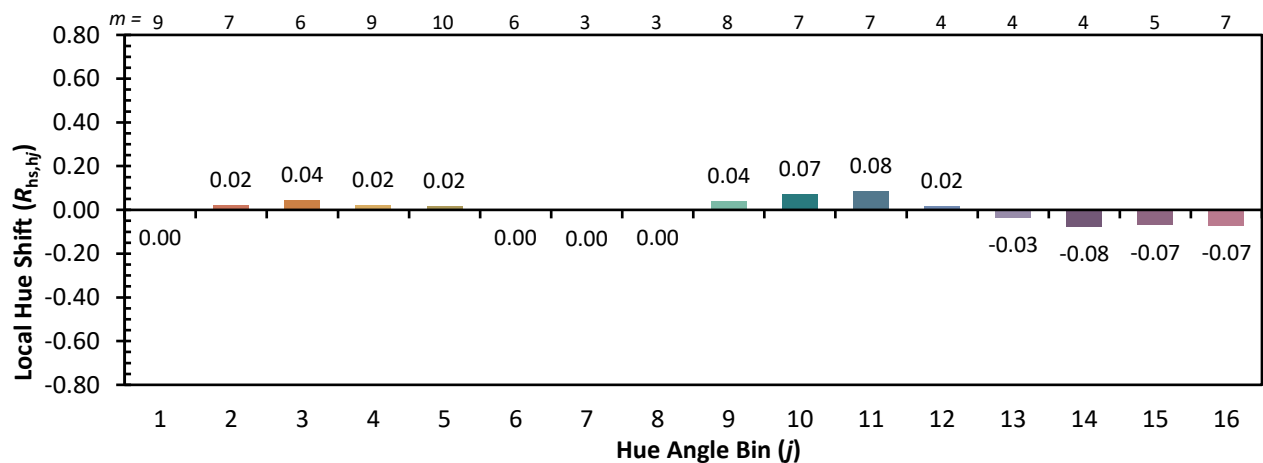

**Measure Comparisons**



(END OF REPORT)