

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1216386

Luminaire Tested: 24-ID2-35-DBR-L835-U

Issue Date: 12/5/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1216386  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2508-510-10)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 24-ID2-35-DBR-L835-U  
Description: 2X4 IN DEPTH TROFFER WITH 2INCH DOUBLE BARREL REGRESSED  
Light Source: 3500K CCT, 80 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3705.3 lumens  
Efficiency: N/A  
Efficacy: 121.9 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.2 / 1.3  
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 30.4  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1216386  
CATALOG NUMBER: 24-ID2-35-DBR-L835-U

### Luminous Intensity Polar Plot

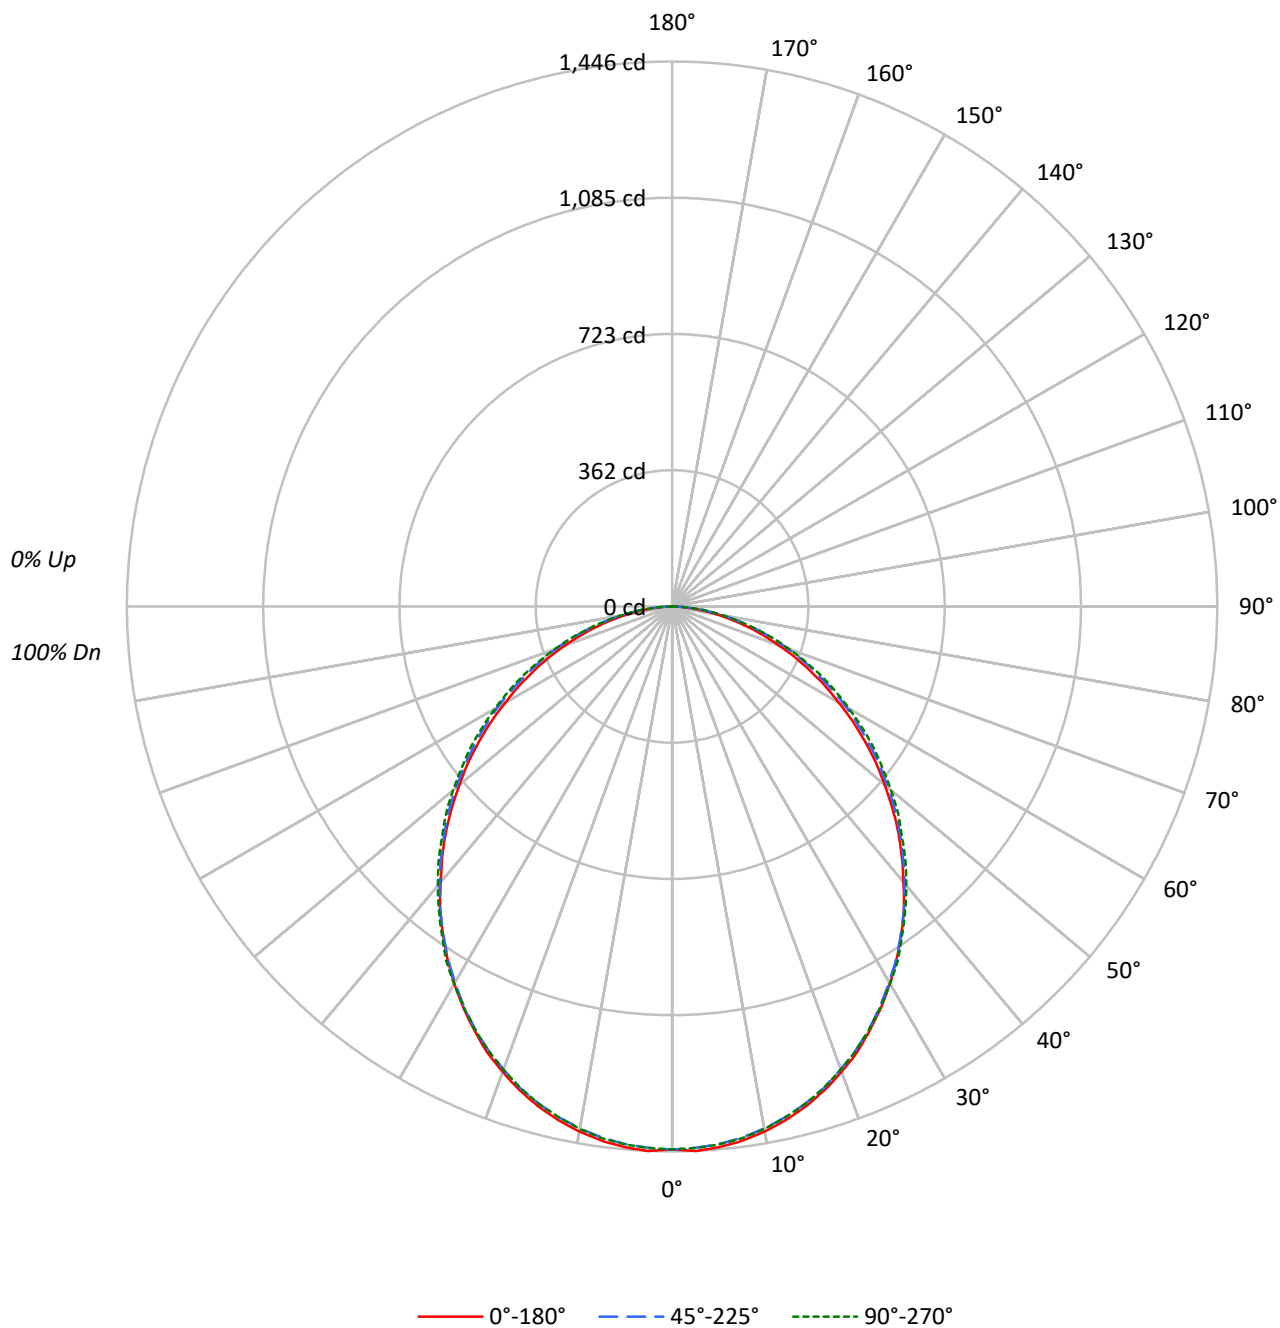

TEST NUMBER: P1216386

CATALOG NUMBER: 24-ID2-35-DBR-L835-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 104 | 100 | 96  | 106 | 102 | 98  | 95  | 98  | 95  | 92  |  | 94  | 91  | 89  |  | 84  |
| 2   | 99  | 91  | 85  | 79  | 97  | 89  | 83  | 78  | 86  | 81  | 76  |  | 83  | 78  | 74  |  | 71  |
| 3   | 91  | 80  | 72  | 66  | 88  | 79  | 71  | 65  | 76  | 70  | 64  |  | 73  | 68  | 63  |  | 60  |
| 4   | 83  | 71  | 63  | 56  | 81  | 70  | 62  | 56  | 68  | 61  | 55  |  | 65  | 59  | 54  |  | 51  |
| 5   | 77  | 64  | 55  | 49  | 75  | 63  | 55  | 48  | 61  | 53  | 48  |  | 59  | 52  | 47  |  | 45  |
| 6   | 71  | 58  | 49  | 43  | 69  | 57  | 48  | 42  | 55  | 48  | 42  |  | 53  | 47  | 42  |  | 39  |
| 7   | 66  | 52  | 44  | 38  | 64  | 52  | 43  | 38  | 50  | 43  | 37  |  | 49  | 42  | 37  |  | 35  |
| 8   | 61  | 48  | 40  | 34  | 60  | 47  | 39  | 34  | 46  | 39  | 33  |  | 45  | 38  | 33  |  | 31  |
| 9   | 57  | 44  | 36  | 31  | 56  | 44  | 36  | 30  | 42  | 35  | 30  |  | 41  | 35  | 30  |  | 28  |
| 10  | 54  | 41  | 33  | 28  | 53  | 40  | 33  | 28  | 39  | 32  | 28  |  | 38  | 32  | 27  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1939 | 1939 | 1939 |
| 5°  | 1945 | 1934 | 1935 |
| 10° | 1933 | 1922 | 1924 |
| 15° | 1912 | 1902 | 1903 |
| 20° | 1881 | 1872 | 1873 |
| 25° | 1842 | 1836 | 1838 |
| 30° | 1795 | 1789 | 1797 |
| 35° | 1741 | 1739 | 1748 |
| 40° | 1676 | 1686 | 1698 |
| 45° | 1615 | 1627 | 1641 |
| 50° | 1540 | 1564 | 1587 |
| 55° | 1465 | 1500 | 1530 |
| 60° | 1375 | 1435 | 1458 |
| 65° | 1287 | 1354 | 1393 |
| 70° | 1184 | 1279 | 1301 |
| 75° | 1068 | 1190 | 1201 |
| 80° | 907  | 1062 | 1073 |
| 85° | 695  | 875  | 900  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 67.5°

Vertical Angle: 45°

Luminance: 1641 cd/sqm

TEST NUMBER: P1216386  
 CATALOG NUMBER: 24-ID2-35-DBR-L835-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 136.0  | 3.7       |
| 10°-20°   | 385.1  | 10.4      |
| 20°-30°   | 569.6  | 15.4      |
| 30°-40°   | 663.0  | 17.9      |
| 40°-50°   | 659.6  | 17.8      |
| 50°-60°   | 570.8  | 15.4      |
| 60°-70°   | 419.8  | 11.3      |
| 70°-80°   | 237.1  | 6.4       |
| 80°-90°   | 64.3   | 1.7       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1090.7 | 29.4      |
| 0°-40°    | 1753.6 | 47.3      |
| 0°-60°    | 2984.1 | 80.5      |
| 0°-90°    | 3705.3 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3705.3 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1441 | 1441  | 1441 | 1441  | 1441 |      |
| 5°  | 1440 | 1435  | 1432 | 1430  | 1433 | 137  |
| 15° | 1373 | 1369  | 1366 | 1363  | 1366 | 387  |
| 25° | 1241 | 1237  | 1237 | 1235  | 1238 | 571  |
| 35° | 1060 | 1058  | 1058 | 1063  | 1064 | 662  |
| 45° | 849  | 849   | 855  | 862   | 862  | 654  |
| 55° | 625  | 628   | 639  | 648   | 652  | 558  |
| 65° | 404  | 412   | 425  | 433   | 438  | 401  |
| 75° | 206  | 217   | 229  | 230   | 231  | 218  |
| 85° | 45   | 53    | 57   | 58    | 58   | 54   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1216386

CATALOG NUMBER: 24-ID2-35-DBR-L835-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1440.8 | 1440.8 | 1440.8 | 1440.8 | 1440.8 |
| 2.5°  | 1446.4 | 1440.8 | 1437.7 | 1436.2 | 1438.2 |
| 5°    | 1440.3 | 1435.1 | 1432.1 | 1430.0 | 1432.6 |
| 7.5°  | 1430.0 | 1424.4 | 1421.3 | 1419.3 | 1422.9 |
| 10°   | 1414.7 | 1409.1 | 1406.5 | 1405.0 | 1408.1 |
| 12.5° | 1395.8 | 1391.2 | 1388.1 | 1386.1 | 1388.1 |
| 15°   | 1372.8 | 1368.7 | 1365.6 | 1363.1 | 1366.2 |
| 17.5° | 1345.7 | 1340.6 | 1339.6 | 1336.5 | 1339.1 |
| 20°   | 1314.0 | 1309.9 | 1307.4 | 1305.8 | 1307.9 |
| 22.5° | 1281.3 | 1275.7 | 1274.2 | 1272.6 | 1274.7 |
| 25°   | 1240.9 | 1237.4 | 1236.8 | 1235.3 | 1237.9 |
| 27.5° | 1200.0 | 1198.0 | 1195.4 | 1196.5 | 1197.0 |
| 30°   | 1155.1 | 1152.5 | 1151.5 | 1153.5 | 1156.6 |
| 32.5° | 1108.6 | 1106.5 | 1107.0 | 1109.1 | 1114.7 |
| 35°   | 1060.0 | 1058.0 | 1058.5 | 1063.1 | 1064.1 |
| 37.5° | 1010.4 | 1006.9 | 1010.4 | 1013.5 | 1016.1 |
| 40°   | 954.2  | 954.7  | 959.8  | 963.9  | 966.5  |
| 42.5° | 902.1  | 902.1  | 907.2  | 913.3  | 916.4  |
| 45°   | 848.9  | 848.9  | 855.1  | 862.2  | 862.2  |
| 47.5° | 792.7  | 791.7  | 802.9  | 810.6  | 813.1  |
| 50°   | 735.5  | 737.5  | 747.2  | 754.9  | 758.0  |
| 52.5° | 681.8  | 682.8  | 693.6  | 701.7  | 703.3  |
| 55°   | 624.6  | 627.6  | 639.4  | 648.1  | 652.2  |
| 57.5° | 568.3  | 573.4  | 585.2  | 595.9  | 597.0  |
| 60°   | 511.1  | 519.3  | 533.1  | 538.7  | 541.8  |
| 62.5° | 459.0  | 467.1  | 478.4  | 487.6  | 489.6  |
| 65°   | 404.3  | 412.5  | 425.2  | 433.4  | 437.5  |
| 67.5° | 353.2  | 362.9  | 375.7  | 381.8  | 381.8  |
| 70°   | 301.0  | 311.8  | 325.1  | 330.2  | 330.7  |
| 72.5° | 252.0  | 264.2  | 276.0  | 280.1  | 281.1  |
| 75°   | 205.5  | 216.7  | 229.0  | 230.5  | 231.0  |
| 77.5° | 160.0  | 171.7  | 180.9  | 184.0  | 182.5  |
| 80°   | 117.0  | 128.8  | 137.0  | 139.0  | 138.5  |
| 82.5° | 79.7   | 89.4   | 97.1   | 97.1   | 97.1   |
| 85°   | 45.0   | 53.2   | 56.7   | 57.8   | 58.3   |
| 87.5° | 14.8   | 21.0   | 24.0   | 24.0   | 24.0   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1216386

CATALOG NUMBER: 24-ID2-35-DBR-L835-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 13.22            | 14.83 | 13.59 | 15.14 | 15.46 | 13.50          | 15.11 | 13.87 | 15.42 | 15.74 |
|                 | 3H   | 14.87            | 16.33 | 15.25 | 16.65 | 17.01 | 15.24          | 16.69 | 15.61 | 17.01 | 17.38 |
|                 | 4H   | 15.47            | 16.84 | 15.87 | 17.19 | 17.56 | 15.89          | 17.25 | 16.28 | 17.60 | 17.98 |
|                 | 6H   | 15.88            | 17.15 | 16.30 | 17.52 | 17.91 | 16.36          | 17.63 | 16.77 | 17.99 | 18.38 |
|                 | 8H   | 16.00            | 17.21 | 16.43 | 17.60 | 18.00 | 16.51          | 17.72 | 16.94 | 18.11 | 18.51 |
|                 | 12H  | 16.07            | 17.23 | 16.50 | 17.61 | 18.04 | 16.61          | 17.77 | 17.04 | 18.15 | 18.58 |
| 4H              | 2H   | 13.86            | 15.22 | 14.25 | 15.57 | 15.95 | 14.08          | 15.45 | 14.48 | 15.79 | 16.17 |
|                 | 3H   | 15.74            | 16.88 | 16.15 | 17.28 | 17.68 | 16.04          | 17.19 | 16.45 | 17.59 | 17.99 |
|                 | 4H   | 16.47            | 17.50 | 16.90 | 17.91 | 18.35 | 16.83          | 17.86 | 17.26 | 18.27 | 18.71 |
|                 | 6H   | 17.01            | 17.91 | 17.46 | 18.35 | 18.81 | 17.43          | 18.33 | 17.89 | 18.78 | 19.23 |
|                 | 8H   | 17.17            | 18.01 | 17.63 | 18.46 | 18.92 | 17.63          | 18.48 | 18.09 | 18.92 | 19.38 |
|                 | 12H  | 17.27            | 18.03 | 17.75 | 18.51 | 18.98 | 17.77          | 18.53 | 18.25 | 19.01 | 19.48 |
| 8H              | 4H   | 16.80            | 17.64 | 17.26 | 18.08 | 18.55 | 17.11          | 17.96 | 17.57 | 18.40 | 18.87 |
|                 | 6H   | 17.46            | 18.16 | 17.95 | 18.65 | 19.13 | 17.84          | 18.54 | 18.34 | 19.03 | 19.51 |
|                 | 8H   | 17.69            | 18.32 | 18.20 | 18.83 | 19.32 | 18.12          | 18.75 | 18.63 | 19.25 | 19.74 |
|                 | 12H  | 17.87            | 18.42 | 18.37 | 18.91 | 19.48 | 18.33          | 18.89 | 18.84 | 19.38 | 19.94 |
| 12H             | 4H   | 16.83            | 17.59 | 17.31 | 18.07 | 18.54 | 17.14          | 17.90 | 17.62 | 18.37 | 18.84 |
|                 | 6H   | 17.52            | 18.15 | 18.03 | 18.66 | 19.15 | 17.89          | 18.52 | 18.40 | 19.03 | 19.51 |
|                 | 8H   | 17.82            | 18.37 | 18.32 | 18.86 | 19.43 | 18.22          | 18.78 | 18.73 | 19.27 | 19.83 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-1

Test Date: 07/23/2025

Luminaire Tested: 22ID2-55-CFR1-L835-U

Data in this report applies to families of products including 22ID2-55-CFR1-L835-U

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-1  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L835-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3500K 80CRI

### Spectral Parameters

CCT (K): 3440  
 CIE  $u'$ : 0.2370  
 CIE  $v'$ : 0.5132  
 Duv: 0.0005  
 CIE x: 0.4093  
 CIE y: 0.3940  
 CIE z: 0.1967  
 Peak Wavelength (nm): 599  
 Dominant Wavelength (nm): 580  
 Purity: 41.09375  
 R<sub>f</sub>: 84.9  
 R<sub>g</sub>: 94.6

CRI (Ra): 84.2  
 R1: 82.8  
 R2: 91.7  
 R3: 96.7  
 R4: 81.9  
 R5: 82.6  
 R6: 88.8  
 R7: 85.0  
 R8: 63.7  
 R9: 13.6  
 R10: 80.1  
 R11: 81.1  
 R12: 65.8  
 R13: 85.2  
 R14: 98.7  
 R15: 76.2



### Test Conditions

Stabilization Time: 36M  
 Operation Time: 1H 36M  
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2506-458-1

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-1

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-1

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 295                                    | NR                             | 620               | 910                                    | NR                             | 750               | 30                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 335                                    | NR                             | 625               | 862                                    | NR                             | 755               | 25                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 390                                    | NR                             | 630               | 809                                    | NR                             | 760               | 21                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 445                                    | NR                             | 635               | 752                                    | NR                             | 765               | 18                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 490                                    | NR                             | 640               | 694                                    | NR                             | 770               | 16                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 532                                    | NR                             | 645               | 630                                    | NR                             | 775               | 13                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 563                                    | NR                             | 650               | 571                                    | NR                             | 780               | 12                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 2                                      | NR                             | 525               | 588                                    | NR                             | 655               | 512                                    | NR                             | 785               | 10                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 3                                      | NR                             | 530               | 609                                    | NR                             | 660               | 453                                    | NR                             | 790               | 8                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 5                                      | NR                             | 535               | 631                                    | NR                             | 665               | 401                                    | NR                             | 795               | 7                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 8                                      | NR                             | 540               | 654                                    | NR                             | 670               | 351                                    | NR                             | 800               | 6                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 13                                     | NR                             | 545               | 677                                    | NR                             | 675               | 306                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 23                                     | NR                             | 550               | 702                                    | NR                             | 680               | 267                                    | NR                             | 810               | 5                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 40                                     | NR                             | 555               | 734                                    | NR                             | 685               | 230                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 70                                     | NR                             | 560               | 767                                    | NR                             | 690               | 199                                    | NR                             | 820               | 4                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 126                                    | NR                             | 565               | 802                                    | NR                             | 695               | 171                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 221                                    | NR                             | 570               | 838                                    | NR                             | 700               | 146                                    | NR                             | 830               | 3                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 418                                    | NR                             | 575               | 875                                    | NR                             | 705               | 125                                    | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 729                                    | NR                             | 580               | 913                                    | NR                             | 710               | 107                                    | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 816                                    | NR                             | 585               | 946                                    | NR                             | 715               | 90                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 578                                    | NR                             | 590               | 976                                    | NR                             | 720               | 77                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 458                                    | NR                             | 595               | 992                                    | NR                             | 725               | 66                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 390                                    | NR                             | 600               | 999                                    | NR                             | 730               | 56                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 299                                    | NR                             | 605               | 995                                    | NR                             | 735               | 47                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 260                                    | NR                             | 610               | 975                                    | NR                             | 740               | 40                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 271                                    | NR                             | 615               | 948                                    | NR                             | 745               | 34                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2506-458-1

### Scotopic Flux vs. Wavelength




Scotopic Lumens: NR

S/P: 1.53

| λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 295                      | NR            | 620    | 910                      | NR            | 750    | 30                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 335                      | NR            | 625    | 862                      | NR            | 755    | 25                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 390                      | NR            | 630    | 809                      | NR            | 760    | 21                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 445                      | NR            | 635    | 752                      | NR            | 765    | 18                       | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 490                      | NR            | 640    | 694                      | NR            | 770    | 16                       | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 532                      | NR            | 645    | 630                      | NR            | 775    | 13                       | NR            | 905    | 0                        | NR            |
| 390    | 0                        | NR            | 520    | 563                      | NR            | 650    | 571                      | NR            | 780    | 12                       | NR            | 910    | 0                        | NR            |
| 395    | 2                        | NR            | 525    | 588                      | NR            | 655    | 512                      | NR            | 785    | 10                       | NR            | 915    | 0                        | NR            |
| 400    | 3                        | NR            | 530    | 609                      | NR            | 660    | 453                      | NR            | 790    | 8                        | NR            | 920    | 0                        | NR            |
| 405    | 5                        | NR            | 535    | 631                      | NR            | 665    | 401                      | NR            | 795    | 7                        | NR            | 925    | 0                        | NR            |
| 410    | 8                        | NR            | 540    | 654                      | NR            | 670    | 351                      | NR            | 800    | 6                        | NR            | 930    | 0                        | NR            |
| 415    | 13                       | NR            | 545    | 677                      | NR            | 675    | 306                      | NR            | 805    | 5                        | NR            | 935    | 0                        | NR            |
| 420    | 23                       | NR            | 550    | 702                      | NR            | 680    | 267                      | NR            | 810    | 5                        | NR            | 940    | 0                        | NR            |
| 425    | 40                       | NR            | 555    | 734                      | NR            | 685    | 230                      | NR            | 815    | 4                        | NR            | 945    | 0                        | NR            |
| 430    | 70                       | NR            | 560    | 767                      | NR            | 690    | 199                      | NR            | 820    | 4                        | NR            | 950    | 0                        | NR            |
| 435    | 126                      | NR            | 565    | 802                      | NR            | 695    | 171                      | NR            | 825    | 3                        | NR            | 955    | 0                        | NR            |
| 440    | 221                      | NR            | 570    | 838                      | NR            | 700    | 146                      | NR            | 830    | 3                        | NR            | 960    | 0                        | NR            |
| 445    | 418                      | NR            | 575    | 875                      | NR            | 705    | 125                      | NR            | 835    | 2                        | NR            | 965    | 0                        | NR            |
| 450    | 729                      | NR            | 580    | 913                      | NR            | 710    | 107                      | NR            | 840    | 2                        | NR            | 970    | 0                        | NR            |
| 455    | 816                      | NR            | 585    | 946                      | NR            | 715    | 90                       | NR            | 845    | 2                        | NR            | 975    | 0                        | NR            |
| 460    | 578                      | NR            | 590    | 976                      | NR            | 720    | 77                       | NR            | 850    | 1                        | NR            | 980    | 0                        | NR            |
| 465    | 458                      | NR            | 595    | 992                      | NR            | 725    | 66                       | NR            | 855    | 1                        | NR            | 985    | 0                        | NR            |
| 470    | 390                      | NR            | 600    | 999                      | NR            | 730    | 56                       | NR            | 860    | 1                        | NR            | 990    | 0                        | NR            |
| 475    | 299                      | NR            | 605    | 995                      | NR            | 735    | 47                       | NR            | 865    | 1                        | NR            | 995    | 0                        | NR            |
| 480    | 260                      | NR            | 610    | 975                      | NR            | 740    | 40                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 271                      | NR            | 615    | 948                      | NR            | 745    | 34                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2506-458-1

### Melanopic Flux vs. Wavelength

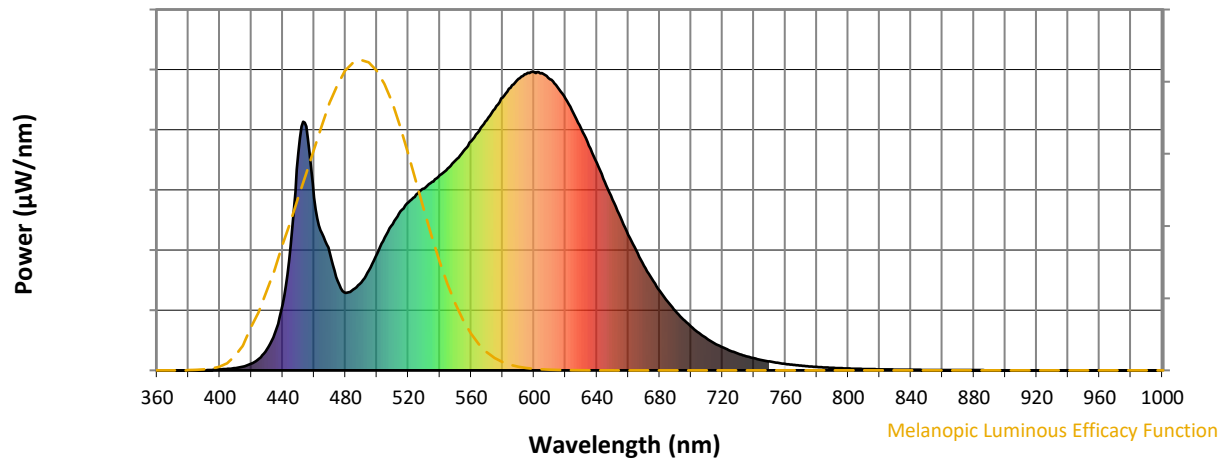

Melanopic Lumens: NR

M/P: 3.07

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 295                                    | NR                             | 620               | 910                                    | NR                             | 750               | 30                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 335                                    | NR                             | 625               | 862                                    | NR                             | 755               | 25                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 390                                    | NR                             | 630               | 809                                    | NR                             | 760               | 21                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 445                                    | NR                             | 635               | 752                                    | NR                             | 765               | 18                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 490                                    | NR                             | 640               | 694                                    | NR                             | 770               | 16                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 532                                    | NR                             | 645               | 630                                    | NR                             | 775               | 13                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 563                                    | NR                             | 650               | 571                                    | NR                             | 780               | 12                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 2                                      | NR                             | 525               | 588                                    | NR                             | 655               | 512                                    | NR                             | 785               | 10                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 3                                      | NR                             | 530               | 609                                    | NR                             | 660               | 453                                    | NR                             | 790               | 8                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 5                                      | NR                             | 535               | 631                                    | NR                             | 665               | 401                                    | NR                             | 795               | 7                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 8                                      | NR                             | 540               | 654                                    | NR                             | 670               | 351                                    | NR                             | 800               | 6                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 13                                     | NR                             | 545               | 677                                    | NR                             | 675               | 306                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 23                                     | NR                             | 550               | 702                                    | NR                             | 680               | 267                                    | NR                             | 810               | 5                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 40                                     | NR                             | 555               | 734                                    | NR                             | 685               | 230                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 70                                     | NR                             | 560               | 767                                    | NR                             | 690               | 199                                    | NR                             | 820               | 4                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 126                                    | NR                             | 565               | 802                                    | NR                             | 695               | 171                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 221                                    | NR                             | 570               | 838                                    | NR                             | 700               | 146                                    | NR                             | 830               | 3                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 418                                    | NR                             | 575               | 875                                    | NR                             | 705               | 125                                    | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 729                                    | NR                             | 580               | 913                                    | NR                             | 710               | 107                                    | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 816                                    | NR                             | 585               | 946                                    | NR                             | 715               | 90                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 578                                    | NR                             | 590               | 976                                    | NR                             | 720               | 77                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 458                                    | NR                             | 595               | 992                                    | NR                             | 725               | 66                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 390                                    | NR                             | 600               | 999                                    | NR                             | 730               | 56                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 299                                    | NR                             | 605               | 995                                    | NR                             | 735               | 47                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 260                                    | NR                             | 610               | 975                                    | NR                             | 740               | 40                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 271                                    | NR                             | 615               | 948                                    | NR                             | 745               | 34                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2506-458-1

TM-30-18

### Summary

$R_f = 84.9$   
 $R_g = 94.6$   
 $CIE R_a = 84.2$   
 $R_9 = 13.6$



### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 87 | CES51 = 92 | CES76 = 81 |
| CES02 = 62 | CES27 = 91 | CES52 = 93 | CES77 = 85 |
| CES03 = 31 | CES28 = 94 | CES53 = 90 | CES78 = 80 |
| CES04 = 70 | CES29 = 92 | CES54 = 89 | CES79 = 92 |
| CES05 = 49 | CES30 = 89 | CES55 = 86 | CES80 = 90 |
| CES06 = 51 | CES31 = 94 | CES56 = 85 | CES81 = 77 |
| CES07 = 41 | CES32 = 86 | CES57 = 83 | CES82 = 96 |
| CES08 = 40 | CES33 = 97 | CES58 = 84 | CES83 = 96 |
| CES09 = 29 | CES34 = 91 | CES59 = 91 | CES84 = 91 |
| CES10 = 75 | CES35 = 95 | CES60 = 89 | CES85 = 76 |
| CES11 = 58 | CES36 = 79 | CES61 = 87 | CES86 = 73 |
| CES12 = 64 | CES37 = 95 | CES62 = 81 | CES87 = 85 |
| CES13 = 43 | CES38 = 84 | CES63 = 85 | CES88 = 89 |
| CES14 = 74 | CES39 = 98 | CES64 = 78 | CES89 = 78 |
| CES15 = 71 | CES40 = 97 | CES65 = 78 | CES90 = 90 |
| CES16 = 47 | CES41 = 95 | CES66 = 75 | CES91 = 71 |
| CES17 = 50 | CES42 = 96 | CES67 = 74 | CES92 = 65 |
| CES18 = 56 | CES43 = 92 | CES68 = 79 | CES93 = 79 |
| CES19 = 72 | CES44 = 99 | CES69 = 83 | CES94 = 64 |
| CES20 = 66 | CES45 = 95 | CES70 = 77 | CES95 = 74 |
| CES21 = 86 | CES46 = 91 | CES71 = 71 | CES96 = 85 |
| CES22 = 78 | CES47 = 94 | CES72 = 90 | CES97 = 90 |
| CES23 = 92 | CES48 = 83 | CES73 = 72 | CES98 = 86 |
| CES24 = 90 | CES49 = 92 | CES74 = 90 | CES99 = 79 |
| CES25 = 72 | CES50 = 93 | CES75 = 75 |            |



**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**



(END OF REPORT)