

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1216400

Luminaire Tested: 24-ID2-40-DBR-L950-U

Issue Date: 12/5/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1216400  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2508-510-10)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 24-ID2-40-DBR-L950-U  
Description: 2X4 IN DEPTH TROFFER WITH 2INCH DOUBLE BARREL REGRESSED  
Light Source: 5000K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3669.8 lumens  
Efficiency: N/A  
Efficacy: 105.8 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.2 / 1.3  
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 34.7  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT



TEST NUMBER: P1216400  
CATALOG NUMBER: 24-ID2-40-DBR-L950-U

### Luminous Intensity Polar Plot

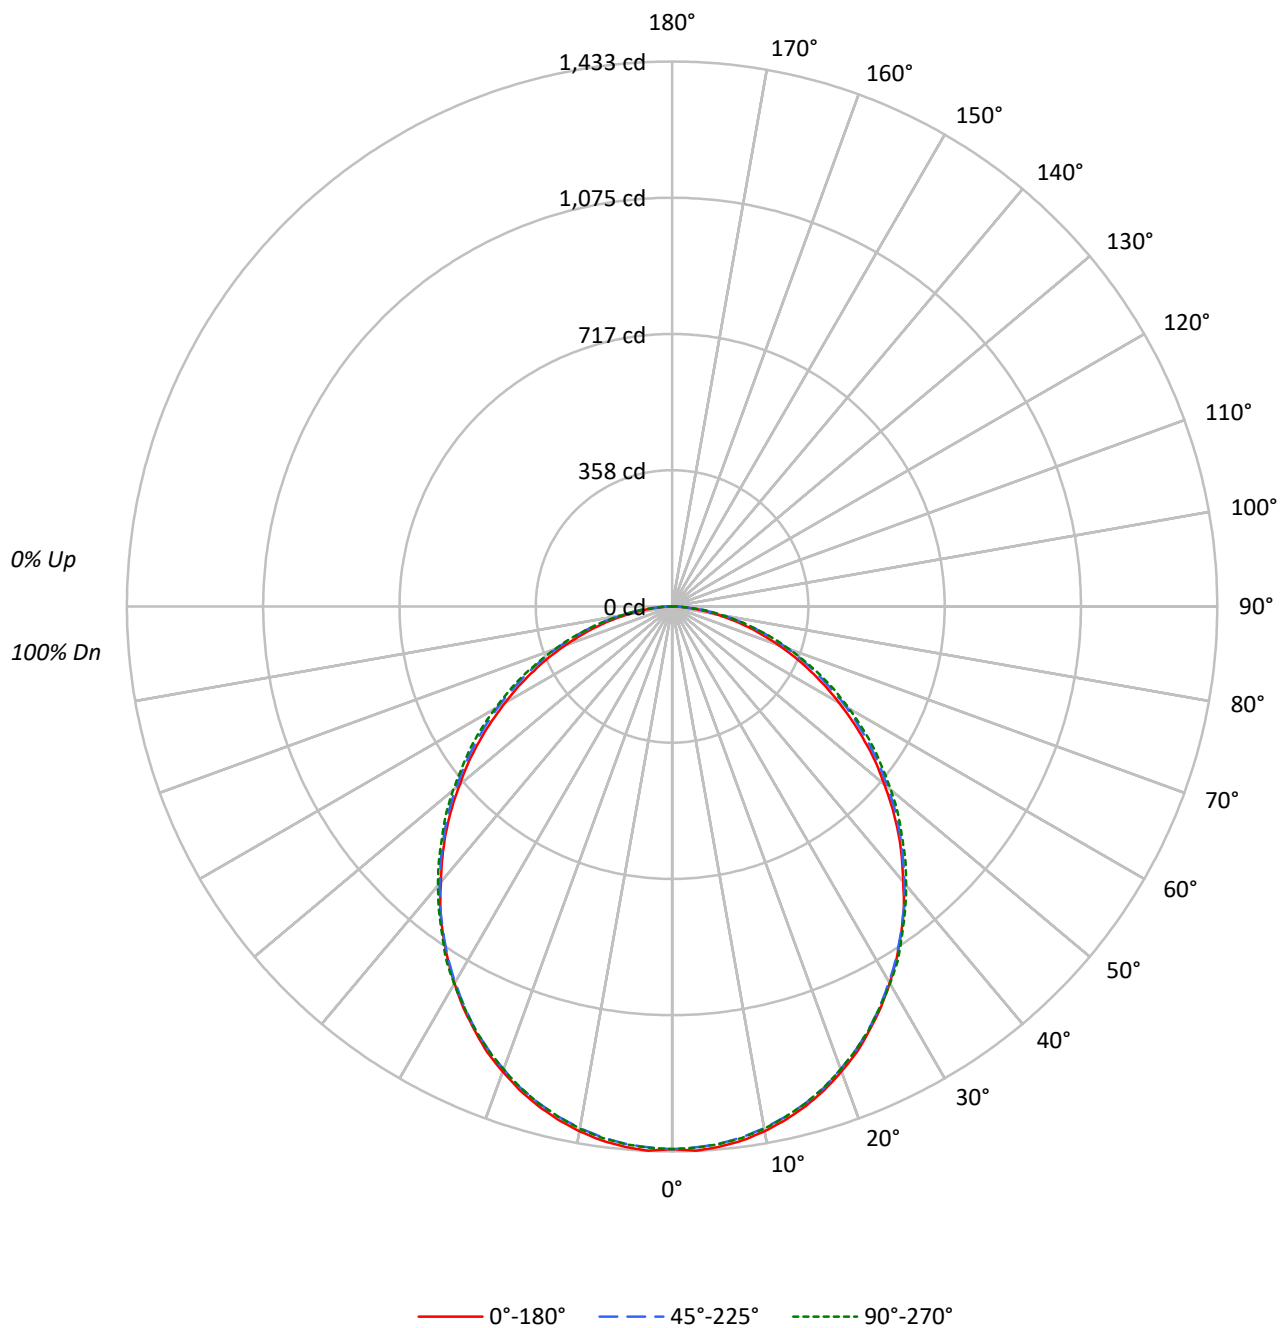

TEST NUMBER: P1216400

CATALOG NUMBER: 24-ID2-40-DBR-L950-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 100 |
| 1   | 109 | 104 | 100 | 96  | 106 | 102 | 98  | 95  | 98  | 95  | 92  |  | 94  | 91  | 89  |  | 84  |
| 2   | 99  | 91  | 85  | 79  | 97  | 89  | 83  | 78  | 86  | 81  | 76  |  | 83  | 78  | 74  |  | 71  |
| 3   | 91  | 80  | 72  | 66  | 88  | 79  | 71  | 65  | 76  | 70  | 64  |  | 73  | 68  | 63  |  | 60  |
| 4   | 83  | 71  | 63  | 56  | 81  | 70  | 62  | 56  | 68  | 61  | 55  |  | 65  | 59  | 54  |  | 51  |
| 5   | 77  | 64  | 55  | 49  | 75  | 63  | 55  | 48  | 61  | 53  | 48  |  | 59  | 52  | 47  |  | 45  |
| 6   | 71  | 58  | 49  | 43  | 69  | 57  | 48  | 42  | 55  | 48  | 42  |  | 53  | 47  | 42  |  | 39  |
| 7   | 66  | 52  | 44  | 38  | 64  | 52  | 43  | 38  | 50  | 43  | 37  |  | 49  | 42  | 37  |  | 35  |
| 8   | 61  | 48  | 40  | 34  | 60  | 47  | 39  | 34  | 46  | 39  | 33  |  | 45  | 38  | 33  |  | 31  |
| 9   | 57  | 44  | 36  | 31  | 56  | 44  | 36  | 30  | 42  | 35  | 30  |  | 41  | 35  | 30  |  | 28  |
| 10  | 54  | 41  | 33  | 28  | 53  | 40  | 33  | 28  | 39  | 32  | 28  |  | 38  | 32  | 27  |  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1920 | 1920 | 1920 |
| 5°  | 1927 | 1916 | 1916 |
| 10° | 1914 | 1903 | 1905 |
| 15° | 1894 | 1884 | 1885 |
| 20° | 1864 | 1854 | 1855 |
| 25° | 1825 | 1819 | 1820 |
| 30° | 1777 | 1772 | 1780 |
| 35° | 1725 | 1722 | 1731 |
| 40° | 1660 | 1670 | 1681 |
| 45° | 1600 | 1611 | 1625 |
| 50° | 1525 | 1549 | 1571 |
| 55° | 1451 | 1486 | 1515 |
| 60° | 1362 | 1421 | 1444 |
| 65° | 1275 | 1341 | 1379 |
| 70° | 1173 | 1266 | 1288 |
| 75° | 1058 | 1179 | 1189 |
| 80° | 898  | 1051 | 1063 |
| 85° | 687  | 868  | 891  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 67.5°

Vertical Angle: 45°

Luminance: 1625 cd/sqm

TEST NUMBER: P1216400  
 CATALOG NUMBER: 24-ID2-40-DBR-L950-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 134.7  | 3.7       |
| 10°-20°   | 381.4  | 10.4      |
| 20°-30°   | 564.1  | 15.4      |
| 30°-40°   | 656.6  | 17.9      |
| 40°-50°   | 653.3  | 17.8      |
| 50°-60°   | 565.4  | 15.4      |
| 60°-70°   | 415.7  | 11.3      |
| 70°-80°   | 234.8  | 6.4       |
| 80°-90°   | 63.7   | 1.7       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1080.2 | 29.4      |
| 0°-40°    | 1736.9 | 47.3      |
| 0°-60°    | 2955.6 | 80.5      |
| 0°-90°    | 3669.8 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3669.8 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1427 | 1427  | 1427 | 1427  | 1427 |      |
| 5°  | 1426 | 1421  | 1418 | 1416  | 1419 | 135  |
| 15° | 1360 | 1356  | 1353 | 1350  | 1353 | 383  |
| 25° | 1229 | 1226  | 1225 | 1224  | 1226 | 566  |
| 35° | 1050 | 1048  | 1048 | 1053  | 1054 | 656  |
| 45° | 841  | 841   | 847  | 854   | 854  | 647  |
| 55° | 619  | 622   | 633  | 642   | 646  | 553  |
| 65° | 400  | 408   | 421  | 429   | 433  | 397  |
| 75° | 204  | 215   | 227  | 228   | 229  | 216  |
| 85° | 44   | 53    | 56   | 57    | 58   | 53   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P1216400

CATALOG NUMBER: 24-ID2-40-DBR-L950-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1427.0 | 1427.0 | 1427.0 | 1427.0 | 1427.0 |
| 2.5°  | 1432.6 | 1427.0 | 1424.0 | 1422.4 | 1424.5 |
| 5°    | 1426.5 | 1421.4 | 1418.4 | 1416.4 | 1418.9 |
| 7.5°  | 1416.4 | 1410.8 | 1407.8 | 1405.7 | 1409.3 |
| 10°   | 1401.2 | 1395.6 | 1393.1 | 1391.6 | 1394.6 |
| 12.5° | 1382.4 | 1377.9 | 1374.9 | 1372.8 | 1374.9 |
| 15°   | 1359.7 | 1355.6 | 1352.6 | 1350.0 | 1353.1 |
| 17.5° | 1332.8 | 1327.8 | 1326.8 | 1323.7 | 1326.3 |
| 20°   | 1301.5 | 1297.4 | 1294.9 | 1293.4 | 1295.4 |
| 22.5° | 1269.1 | 1263.5 | 1262.0 | 1260.5 | 1262.5 |
| 25°   | 1229.1 | 1225.5 | 1225.0 | 1223.5 | 1226.0 |
| 27.5° | 1188.6 | 1186.5 | 1184.0 | 1185.0 | 1185.5 |
| 30°   | 1144.0 | 1141.5 | 1140.5 | 1142.5 | 1145.5 |
| 32.5° | 1098.0 | 1095.9 | 1096.4 | 1098.5 | 1104.0 |
| 35°   | 1049.9 | 1047.8 | 1048.4 | 1052.9 | 1053.9 |
| 37.5° | 1000.8 | 997.2  | 1000.8 | 1003.8 | 1006.3 |
| 40°   | 945.1  | 945.6  | 950.7  | 954.7  | 957.2  |
| 42.5° | 893.5  | 893.5  | 898.5  | 904.6  | 907.6  |
| 45°   | 840.8  | 840.8  | 846.9  | 854.0  | 854.0  |
| 47.5° | 785.1  | 784.1  | 795.2  | 802.8  | 805.4  |
| 50°   | 728.4  | 730.5  | 740.1  | 747.7  | 750.7  |
| 52.5° | 675.3  | 676.3  | 686.9  | 695.0  | 696.5  |
| 55°   | 618.6  | 621.6  | 633.3  | 641.9  | 645.9  |
| 57.5° | 562.9  | 568.0  | 579.6  | 590.2  | 591.2  |
| 60°   | 506.2  | 514.3  | 528.0  | 533.5  | 536.6  |
| 62.5° | 454.6  | 462.7  | 473.8  | 482.9  | 484.9  |
| 65°   | 400.4  | 408.5  | 421.2  | 429.3  | 433.3  |
| 67.5° | 349.8  | 359.4  | 372.1  | 378.1  | 378.1  |
| 70°   | 298.2  | 308.8  | 321.9  | 327.0  | 327.5  |
| 72.5° | 249.6  | 261.7  | 273.4  | 277.4  | 278.4  |
| 75°   | 203.5  | 214.6  | 226.8  | 228.3  | 228.8  |
| 77.5° | 158.4  | 170.1  | 179.2  | 182.2  | 180.7  |
| 80°   | 115.9  | 127.6  | 135.7  | 137.7  | 137.2  |
| 82.5° | 79.0   | 88.6   | 96.2   | 96.2   | 96.2   |
| 85°   | 44.5   | 52.6   | 56.2   | 57.2   | 57.7   |
| 87.5° | 14.7   | 20.8   | 23.8   | 23.8   | 23.8   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

TEST NUMBER: P1216400

CATALOG NUMBER: 24-ID2-40-DBR-L950-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 13.19            | 14.80 | 13.55 | 15.11 | 15.42 | 13.47          | 15.08 | 13.83 | 15.39 | 15.70 |
|                 | 3H   | 14.84            | 16.29 | 15.22 | 16.62 | 16.98 | 15.20          | 16.65 | 15.58 | 16.98 | 17.34 |
|                 | 4H   | 15.44            | 16.81 | 15.84 | 17.15 | 17.53 | 15.85          | 17.22 | 16.25 | 17.57 | 17.94 |
|                 | 6H   | 15.85            | 17.12 | 16.26 | 17.48 | 17.87 | 16.33          | 17.59 | 16.74 | 17.96 | 18.35 |
|                 | 8H   | 15.97            | 17.18 | 16.40 | 17.57 | 17.97 | 16.48          | 17.69 | 16.90 | 18.08 | 18.48 |
|                 | 12H  | 16.04            | 17.20 | 16.47 | 17.58 | 18.01 | 16.58          | 17.74 | 17.01 | 18.12 | 18.55 |
| 4H              | 2H   | 13.82            | 15.19 | 14.22 | 15.54 | 15.91 | 14.05          | 15.41 | 14.44 | 15.76 | 16.14 |
|                 | 3H   | 15.71            | 16.85 | 16.12 | 17.25 | 17.65 | 16.01          | 17.15 | 16.42 | 17.55 | 17.95 |
|                 | 4H   | 16.43            | 17.47 | 16.86 | 17.88 | 18.32 | 16.79          | 17.83 | 17.22 | 18.24 | 18.68 |
|                 | 6H   | 16.97            | 17.88 | 17.43 | 18.32 | 18.77 | 17.40          | 18.30 | 17.85 | 18.74 | 19.20 |
|                 | 8H   | 17.14            | 17.98 | 17.60 | 18.42 | 18.89 | 17.60          | 18.44 | 18.06 | 18.89 | 19.35 |
|                 | 12H  | 17.24            | 18.00 | 17.72 | 18.48 | 18.95 | 17.74          | 18.50 | 18.22 | 18.97 | 19.44 |
| 8H              | 4H   | 16.76            | 17.61 | 17.22 | 18.05 | 18.52 | 17.08          | 17.93 | 17.54 | 18.37 | 18.83 |
|                 | 6H   | 17.43            | 18.13 | 17.92 | 18.62 | 19.09 | 17.81          | 18.51 | 18.30 | 19.00 | 19.47 |
|                 | 8H   | 17.66            | 18.29 | 18.17 | 18.80 | 19.28 | 18.08          | 18.71 | 18.59 | 19.22 | 19.70 |
|                 | 12H  | 17.83            | 18.39 | 18.34 | 18.88 | 19.44 | 18.30          | 18.85 | 18.80 | 19.34 | 19.90 |
| 12H             | 4H   | 16.80            | 17.56 | 17.28 | 18.03 | 18.50 | 17.11          | 17.87 | 17.59 | 18.34 | 18.81 |
|                 | 6H   | 17.49            | 18.12 | 18.00 | 18.63 | 19.11 | 17.86          | 18.49 | 18.37 | 19.00 | 19.48 |
|                 | 8H   | 17.78            | 18.34 | 18.29 | 18.83 | 19.39 | 18.19          | 18.75 | 18.70 | 19.24 | 19.80 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-13

Test Date: 08/27/2025

Luminaire Tested: 22ID2-55-CFR1-L950-U

Data in this report applies to families of products including 22ID2-55-CFR1-L950-U




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-13  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L950-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 5000K 90CRI

### Spectral Parameters

CCT (K): 4919  
 CIE  $u'$ : 0.2096  
 CIE  $v'$ : 0.4901  
 Duv: 0.0038  
 CIE x: 0.3483  
 CIE y: 0.3619  
 CIE z: 0.2898  
 Peak Wavelength (nm): 453  
 Dominant Wavelength (nm): 570  
 Purity: 13.10873  
 R<sub>f</sub>: 90.8  
 R<sub>g</sub>: 97.4

CRI (Ra): 94.0  
 R1: 94.8  
 R2: 97.7  
 R3: 98.4  
 R4: 90.8  
 R5: 92.2  
 R6: 94.3  
 R7: 94.0  
 R8: 90.0  
 R9: 77.7  
 R10: 93.1  
 R11: 92.0  
 R12: 65.9  
 R13: 95.9  
 R14: 99.0  
 R15: 91.4

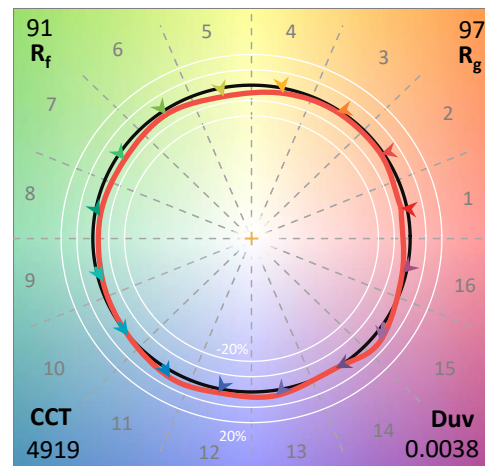

### Test Conditions


Stabilization Time: M  
 Operation Time: 1H 0M  
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP1-2506-458-13


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2506-458-13

**CIE 1931 Chromaticity Diagram**

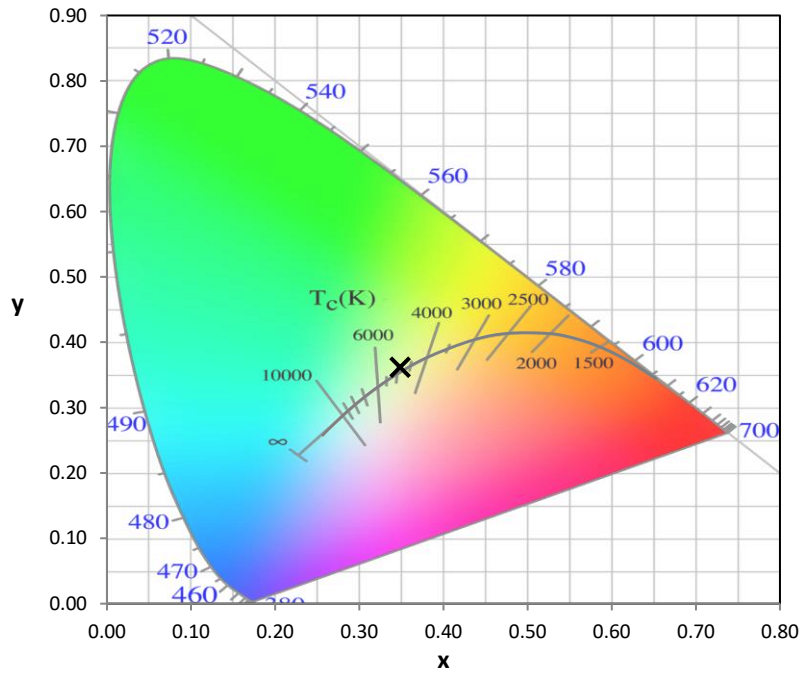


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

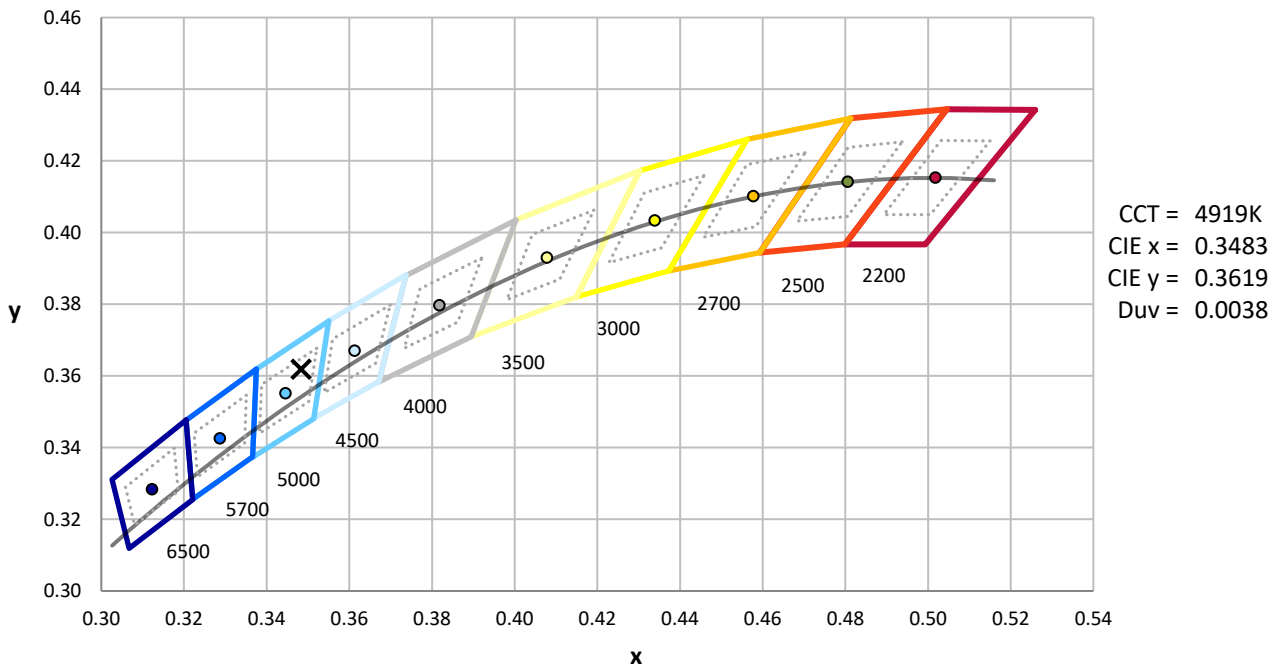

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2506-458-13

### Photopic Flux vs. Wavelength

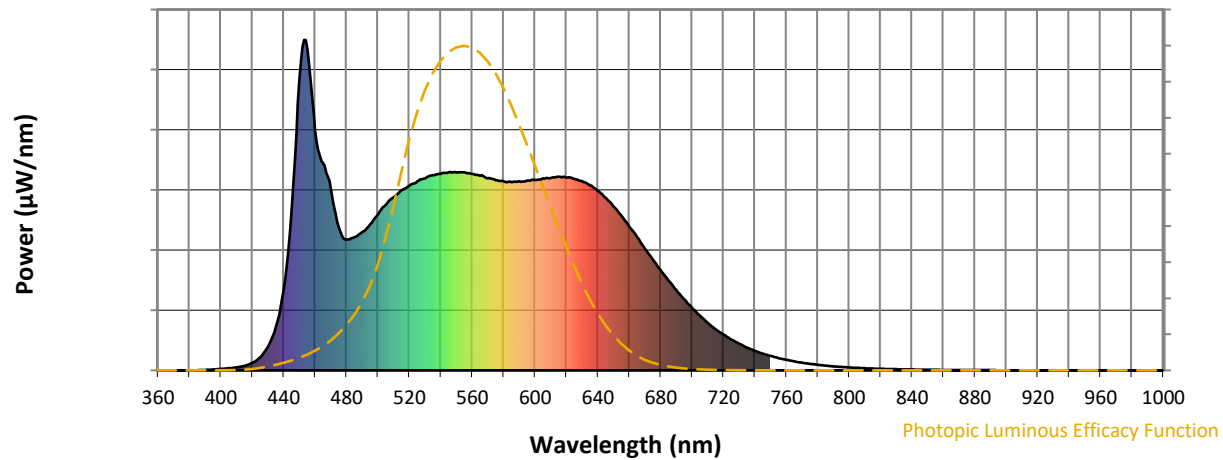


### Photopic Lumens: NR

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 419                         | NR               | 620       | 583                         | NR               | 750       | 44                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 441                         | NR               | 625       | 580                         | NR               | 755       | 37                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 472                         | NR               | 630       | 572                         | NR               | 760       | 32                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 501                         | NR               | 635       | 559                         | NR               | 765       | 27                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 524                         | NR               | 640       | 543                         | NR               | 770       | 23                          | NR               | 900       | 0                           | NR               |
| 385       | 0                           | NR               | 515       | 545                         | NR               | 645       | 522                         | NR               | 775       | 20                          | NR               | 905       | 0                           | NR               |
| 390       | 1                           | NR               | 520       | 559                         | NR               | 650       | 496                         | NR               | 780       | 17                          | NR               | 910       | 0                           | NR               |
| 395       | 3                           | NR               | 525       | 572                         | NR               | 655       | 468                         | NR               | 785       | 14                          | NR               | 915       | 0                           | NR               |
| 400       | 4                           | NR               | 530       | 581                         | NR               | 660       | 435                         | NR               | 790       | 12                          | NR               | 920       | 0                           | NR               |
| 405       | 7                           | NR               | 535       | 590                         | NR               | 665       | 403                         | NR               | 795       | 10                          | NR               | 925       | 0                           | NR               |
| 410       | 9                           | NR               | 540       | 595                         | NR               | 670       | 368                         | NR               | 800       | 9                           | NR               | 930       | 0                           | NR               |
| 415       | 14                          | NR               | 545       | 599                         | NR               | 675       | 335                         | NR               | 805       | 8                           | NR               | 935       | 0                           | NR               |
| 420       | 23                          | NR               | 550       | 599                         | NR               | 680       | 304                         | NR               | 810       | 6                           | NR               | 940       | 0                           | NR               |
| 425       | 40                          | NR               | 555       | 599                         | NR               | 685       | 271                         | NR               | 815       | 6                           | NR               | 945       | 0                           | NR               |
| 430       | 72                          | NR               | 560       | 595                         | NR               | 690       | 243                         | NR               | 820       | 5                           | NR               | 950       | 0                           | NR               |
| 435       | 132                         | NR               | 565       | 589                         | NR               | 695       | 215                         | NR               | 825       | 4                           | NR               | 955       | 0                           | NR               |
| 440       | 243                         | NR               | 570       | 581                         | NR               | 700       | 189                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 488                         | NR               | 575       | 575                         | NR               | 705       | 165                         | NR               | 835       | 3                           | NR               | 965       | 0                           | NR               |
| 450       | 879                         | NR               | 580       | 573                         | NR               | 710       | 144                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 974                         | NR               | 585       | 570                         | NR               | 715       | 124                         | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 726                         | NR               | 590       | 572                         | NR               | 720       | 108                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 627                         | NR               | 595       | 574                         | NR               | 725       | 93                          | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 546                         | NR               | 600       | 576                         | NR               | 730       | 80                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 434                         | NR               | 605       | 581                         | NR               | 735       | 69                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 395                         | NR               | 610       | 582                         | NR               | 740       | 59                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 403                         | NR               | 615       | 586                         | NR               | 745       | 51                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-13

### Scotopic Flux vs. Wavelength

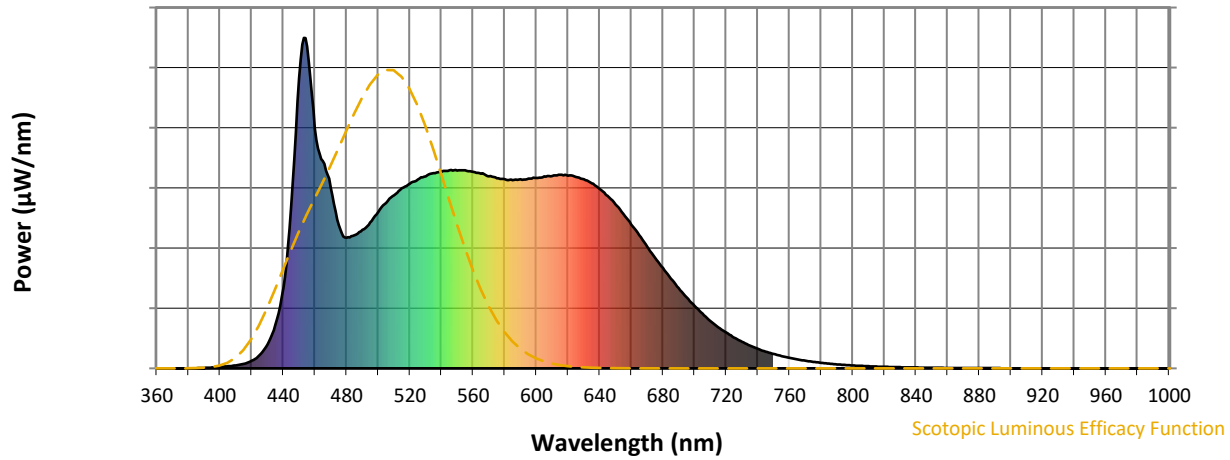


Scotopic Lumens: NR

S/P: 2.09

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 419                         | NR               | 620       | 583                         | NR               | 750       | 44                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 441                         | NR               | 625       | 580                         | NR               | 755       | 37                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 472                         | NR               | 630       | 572                         | NR               | 760       | 32                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 501                         | NR               | 635       | 559                         | NR               | 765       | 27                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 524                         | NR               | 640       | 543                         | NR               | 770       | 23                          | NR               | 900       | 0                           | NR               |
| 385       | 0                           | NR               | 515       | 545                         | NR               | 645       | 522                         | NR               | 775       | 20                          | NR               | 905       | 0                           | NR               |
| 390       | 1                           | NR               | 520       | 559                         | NR               | 650       | 496                         | NR               | 780       | 17                          | NR               | 910       | 0                           | NR               |
| 395       | 3                           | NR               | 525       | 572                         | NR               | 655       | 468                         | NR               | 785       | 14                          | NR               | 915       | 0                           | NR               |
| 400       | 4                           | NR               | 530       | 581                         | NR               | 660       | 435                         | NR               | 790       | 12                          | NR               | 920       | 0                           | NR               |
| 405       | 7                           | NR               | 535       | 590                         | NR               | 665       | 403                         | NR               | 795       | 10                          | NR               | 925       | 0                           | NR               |
| 410       | 9                           | NR               | 540       | 595                         | NR               | 670       | 368                         | NR               | 800       | 9                           | NR               | 930       | 0                           | NR               |
| 415       | 14                          | NR               | 545       | 599                         | NR               | 675       | 335                         | NR               | 805       | 8                           | NR               | 935       | 0                           | NR               |
| 420       | 23                          | NR               | 550       | 599                         | NR               | 680       | 304                         | NR               | 810       | 6                           | NR               | 940       | 0                           | NR               |
| 425       | 40                          | NR               | 555       | 599                         | NR               | 685       | 271                         | NR               | 815       | 6                           | NR               | 945       | 0                           | NR               |
| 430       | 72                          | NR               | 560       | 595                         | NR               | 690       | 243                         | NR               | 820       | 5                           | NR               | 950       | 0                           | NR               |
| 435       | 132                         | NR               | 565       | 589                         | NR               | 695       | 215                         | NR               | 825       | 4                           | NR               | 955       | 0                           | NR               |
| 440       | 243                         | NR               | 570       | 581                         | NR               | 700       | 189                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 488                         | NR               | 575       | 575                         | NR               | 705       | 165                         | NR               | 835       | 3                           | NR               | 965       | 0                           | NR               |
| 450       | 879                         | NR               | 580       | 573                         | NR               | 710       | 144                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 974                         | NR               | 585       | 570                         | NR               | 715       | 124                         | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 726                         | NR               | 590       | 572                         | NR               | 720       | 108                         | NR               | 850       | 2                           | NR               | 980       | 0                           | NR               |
| 465       | 627                         | NR               | 595       | 574                         | NR               | 725       | 93                          | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 546                         | NR               | 600       | 576                         | NR               | 730       | 80                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 434                         | NR               | 605       | 581                         | NR               | 735       | 69                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 395                         | NR               | 610       | 582                         | NR               | 740       | 59                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 403                         | NR               | 615       | 586                         | NR               | 745       | 51                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-13

### Melanopic Flux vs. Wavelength

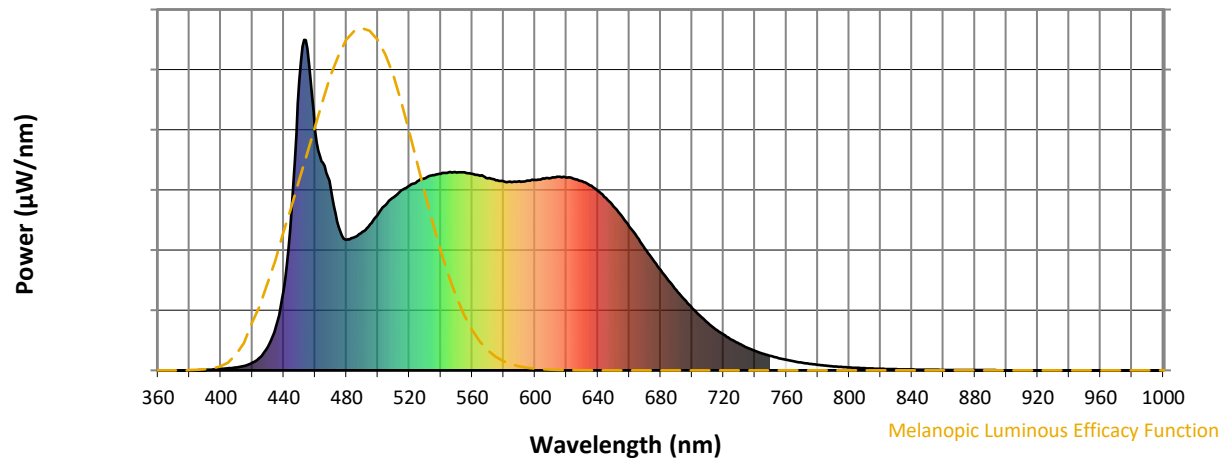

Melanopic Lumens: NR

M/P: 4.55


| λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 419                      | NR            | 620    | 583                      | NR            | 750    | 44                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 441                      | NR            | 625    | 580                      | NR            | 755    | 37                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 472                      | NR            | 630    | 572                      | NR            | 760    | 32                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 501                      | NR            | 635    | 559                      | NR            | 765    | 27                       | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 524                      | NR            | 640    | 543                      | NR            | 770    | 23                       | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 545                      | NR            | 645    | 522                      | NR            | 775    | 20                       | NR            | 905    | 0                        | NR            |
| 390    | 1                        | NR            | 520    | 559                      | NR            | 650    | 496                      | NR            | 780    | 17                       | NR            | 910    | 0                        | NR            |
| 395    | 3                        | NR            | 525    | 572                      | NR            | 655    | 468                      | NR            | 785    | 14                       | NR            | 915    | 0                        | NR            |
| 400    | 4                        | NR            | 530    | 581                      | NR            | 660    | 435                      | NR            | 790    | 12                       | NR            | 920    | 0                        | NR            |
| 405    | 7                        | NR            | 535    | 590                      | NR            | 665    | 403                      | NR            | 795    | 10                       | NR            | 925    | 0                        | NR            |
| 410    | 9                        | NR            | 540    | 595                      | NR            | 670    | 368                      | NR            | 800    | 9                        | NR            | 930    | 0                        | NR            |
| 415    | 14                       | NR            | 545    | 599                      | NR            | 675    | 335                      | NR            | 805    | 8                        | NR            | 935    | 0                        | NR            |
| 420    | 23                       | NR            | 550    | 599                      | NR            | 680    | 304                      | NR            | 810    | 6                        | NR            | 940    | 0                        | NR            |
| 425    | 40                       | NR            | 555    | 599                      | NR            | 685    | 271                      | NR            | 815    | 6                        | NR            | 945    | 0                        | NR            |
| 430    | 72                       | NR            | 560    | 595                      | NR            | 690    | 243                      | NR            | 820    | 5                        | NR            | 950    | 0                        | NR            |
| 435    | 132                      | NR            | 565    | 589                      | NR            | 695    | 215                      | NR            | 825    | 4                        | NR            | 955    | 0                        | NR            |
| 440    | 243                      | NR            | 570    | 581                      | NR            | 700    | 189                      | NR            | 830    | 3                        | NR            | 960    | 0                        | NR            |
| 445    | 488                      | NR            | 575    | 575                      | NR            | 705    | 165                      | NR            | 835    | 3                        | NR            | 965    | 0                        | NR            |
| 450    | 879                      | NR            | 580    | 573                      | NR            | 710    | 144                      | NR            | 840    | 3                        | NR            | 970    | 0                        | NR            |
| 455    | 974                      | NR            | 585    | 570                      | NR            | 715    | 124                      | NR            | 845    | 2                        | NR            | 975    | 0                        | NR            |
| 460    | 726                      | NR            | 590    | 572                      | NR            | 720    | 108                      | NR            | 850    | 2                        | NR            | 980    | 0                        | NR            |
| 465    | 627                      | NR            | 595    | 574                      | NR            | 725    | 93                       | NR            | 855    | 2                        | NR            | 985    | 0                        | NR            |
| 470    | 546                      | NR            | 600    | 576                      | NR            | 730    | 80                       | NR            | 860    | 1                        | NR            | 990    | 0                        | NR            |
| 475    | 434                      | NR            | 605    | 581                      | NR            | 735    | 69                       | NR            | 865    | 1                        | NR            | 995    | 0                        | NR            |
| 480    | 395                      | NR            | 610    | 582                      | NR            | 740    | 59                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 403                      | NR            | 615    | 586                      | NR            | 745    | 51                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2506-458-13





TM-30-18

### Summary

$R_f = 90.8$   
 $R_g = 97.4$   
 $CIE R_a = 94.0$   
 $R_9 = 77.7$

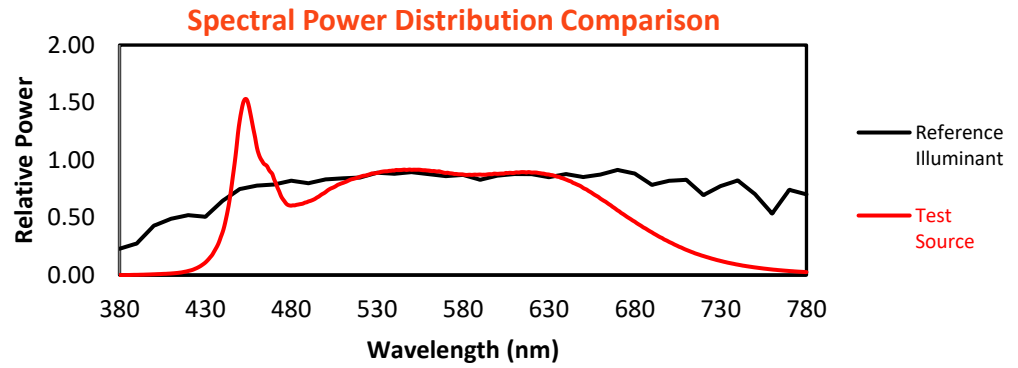


### Color Vector Graphics

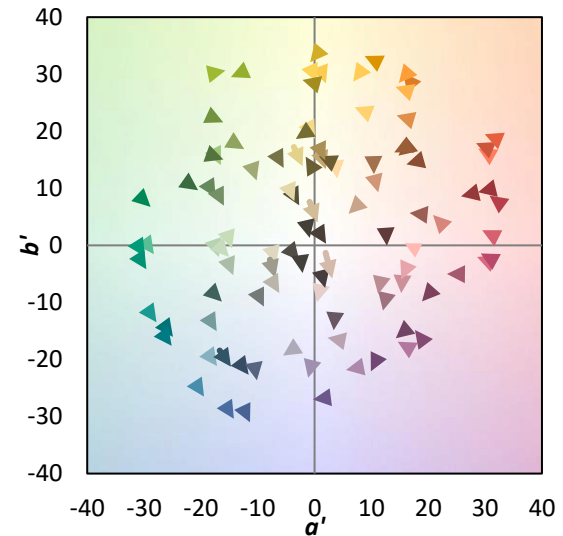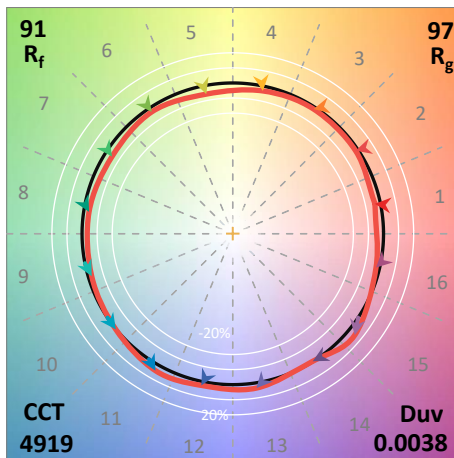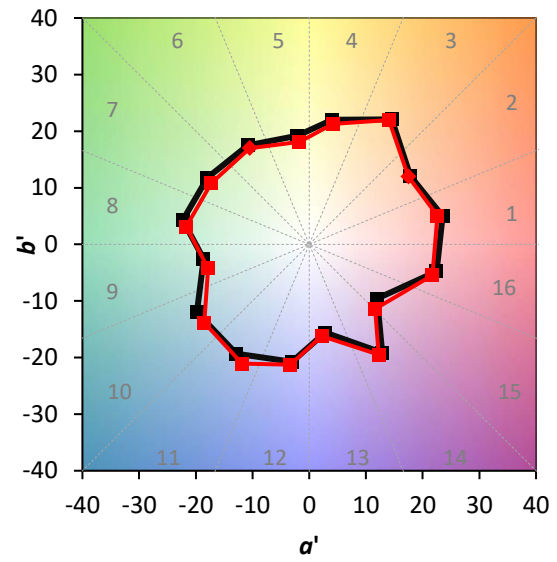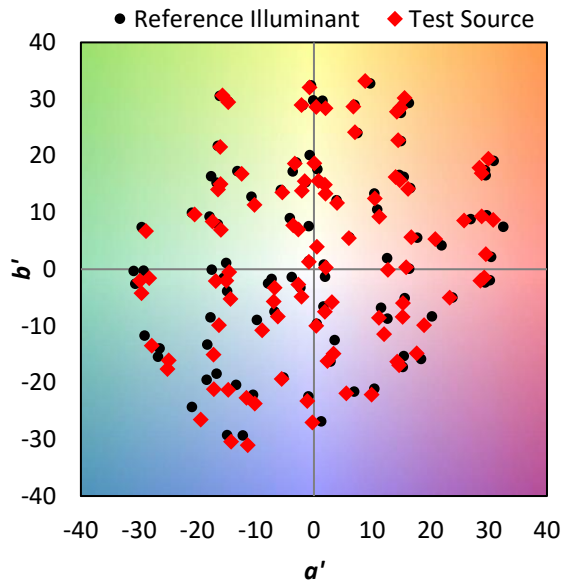




**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 98 | CES51 = 93 | CES76 = 91 |
| CES02 = 61 | CES27 = 86 | CES52 = 96 | CES77 = 89 |
| CES03 = 31 | CES28 = 98 | CES53 = 93 | CES78 = 87 |
| CES04 = 68 | CES29 = 90 | CES54 = 89 | CES79 = 97 |
| CES05 = 48 | CES30 = 80 | CES55 = 86 | CES80 = 94 |
| CES06 = 50 | CES31 = 92 | CES56 = 89 | CES81 = 89 |
| CES07 = 41 | CES32 = 97 | CES57 = 87 | CES82 = 97 |
| CES08 = 40 | CES33 = 89 | CES58 = 87 | CES83 = 96 |
| CES09 = 29 | CES34 = 98 | CES59 = 96 | CES84 = 94 |
| CES10 = 73 | CES35 = 98 | CES60 = 89 | CES85 = 84 |
| CES11 = 56 | CES36 = 74 | CES61 = 90 | CES86 = 90 |
| CES12 = 62 | CES37 = 97 | CES62 = 78 | CES87 = 92 |
| CES13 = 42 | CES38 = 75 | CES63 = 89 | CES88 = 95 |
| CES14 = 74 | CES39 = 97 | CES64 = 85 | CES89 = 90 |
| CES15 = 71 | CES40 = 97 | CES65 = 87 | CES90 = 92 |
| CES16 = 47 | CES41 = 91 | CES66 = 82 | CES91 = 69 |
| CES17 = 48 | CES42 = 99 | CES67 = 82 | CES92 = 81 |
| CES18 = 56 | CES43 = 97 | CES68 = 86 | CES93 = 88 |
| CES19 = 70 | CES44 = 99 | CES69 = 87 | CES94 = 86 |
| CES20 = 65 | CES45 = 97 | CES70 = 86 | CES95 = 83 |
| CES21 = 84 | CES46 = 94 | CES71 = 77 | CES96 = 94 |
| CES22 = 77 | CES47 = 90 | CES72 = 93 | CES97 = 97 |
| CES23 = 91 | CES48 = 83 | CES73 = 82 | CES98 = 94 |
| CES24 = 89 | CES49 = 95 | CES74 = 89 | CES99 = 92 |
| CES25 = 70 | CES50 = 94 | CES75 = 81 |            |

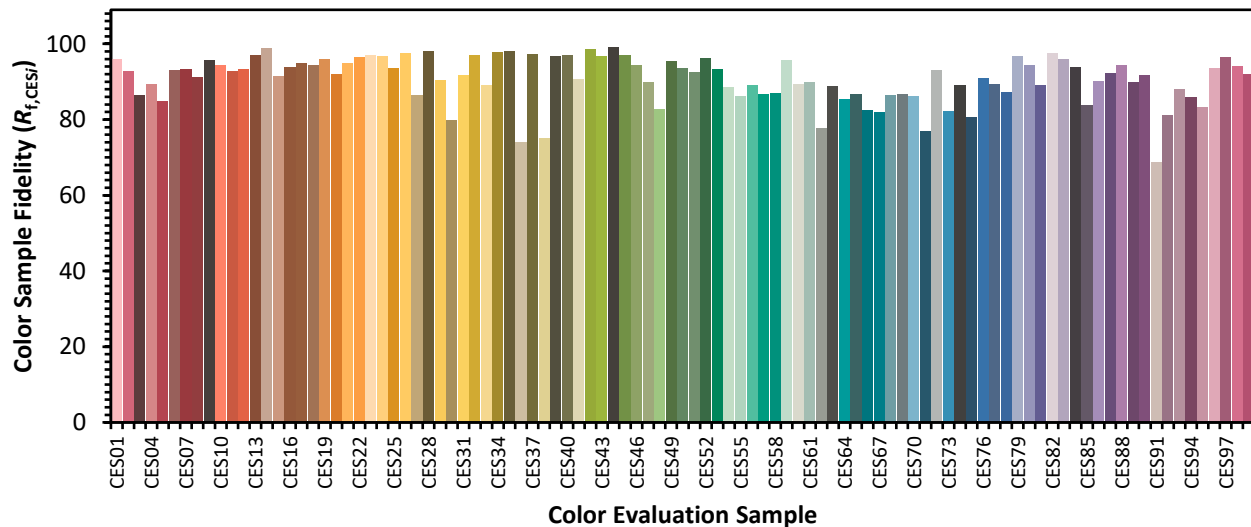




Color Rendition by Hue-Angle Bin

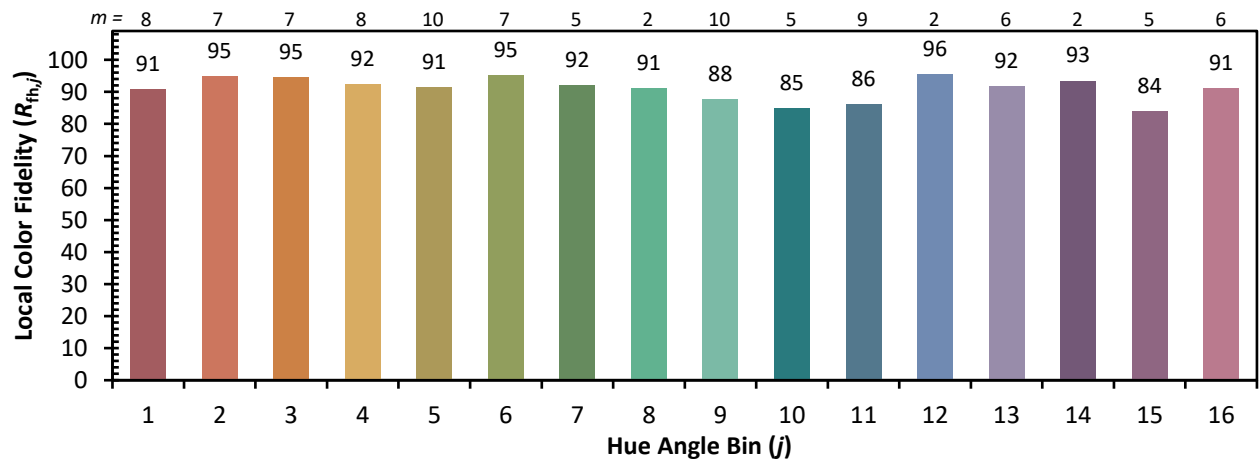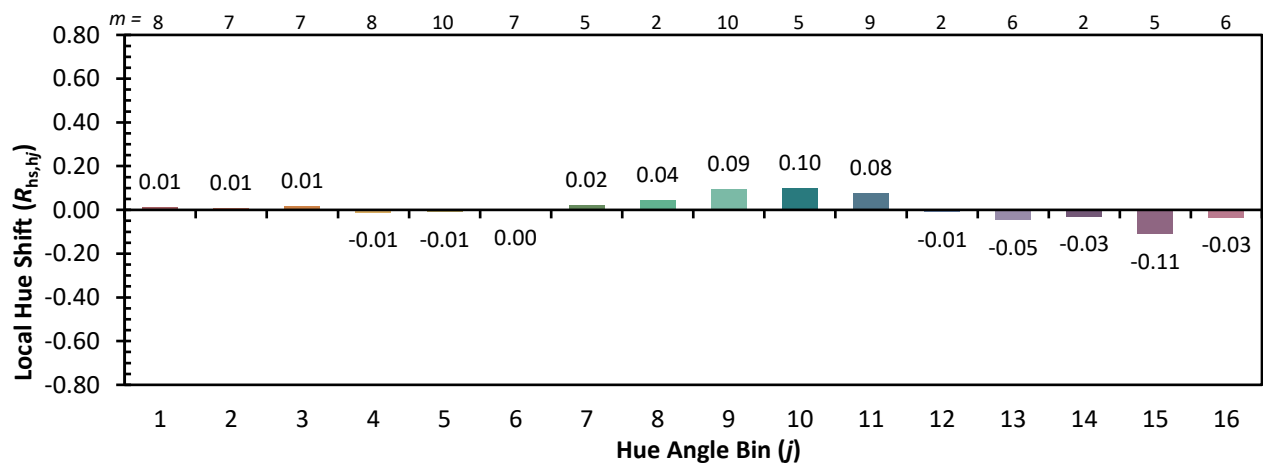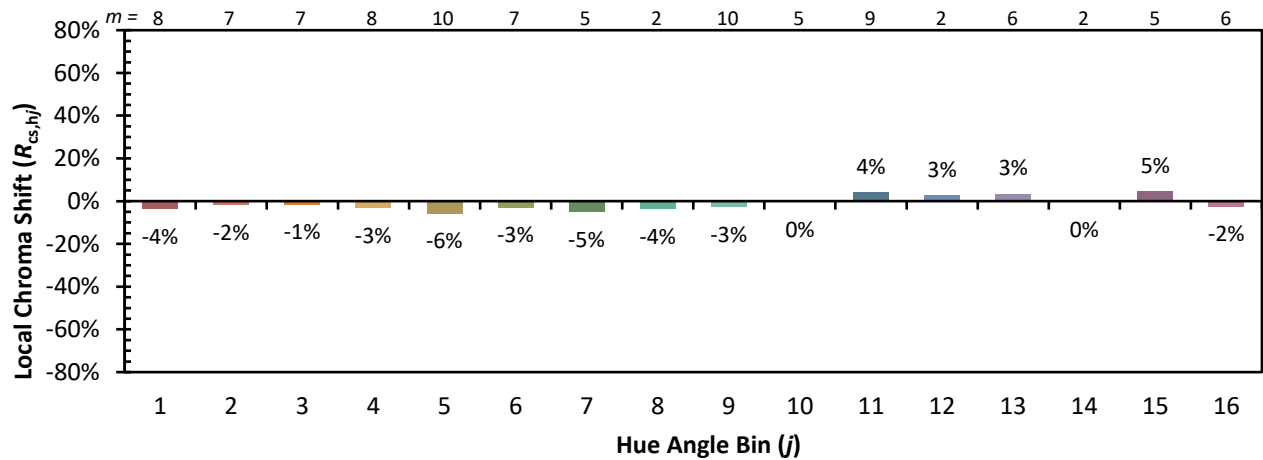

**Measure Comparisons**

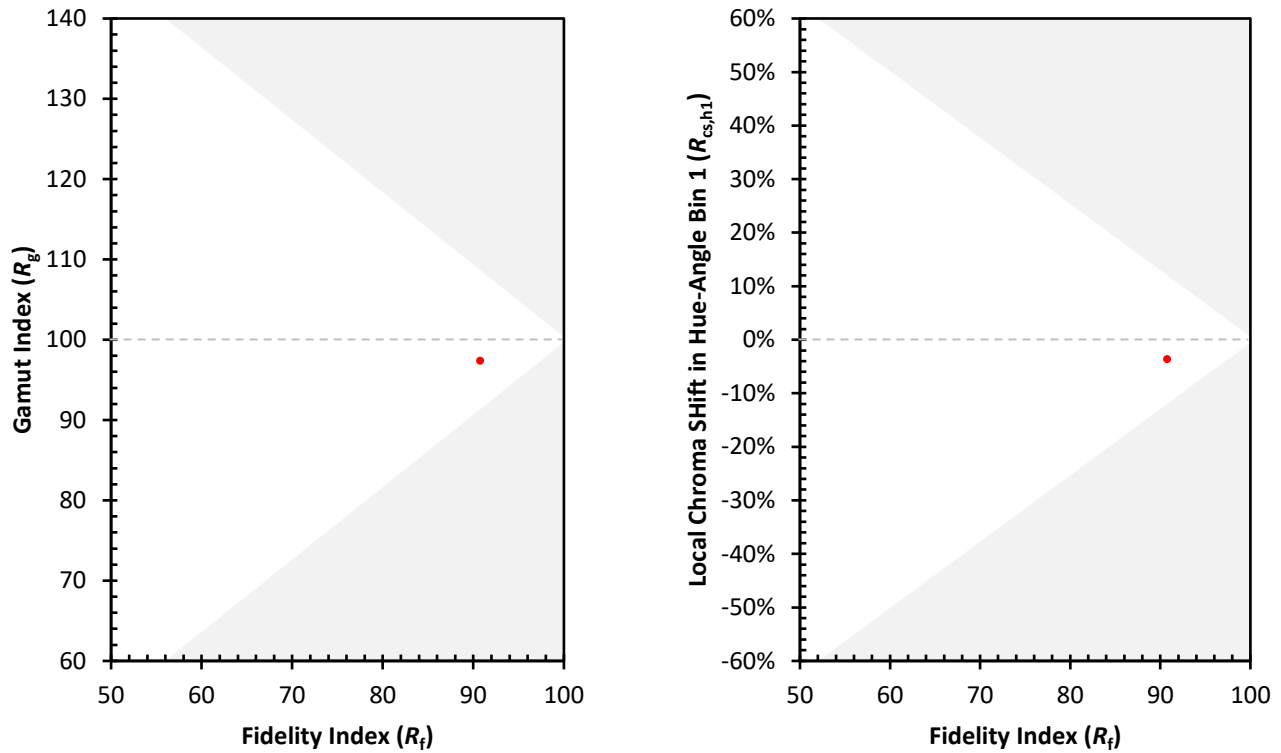

(END OF REPORT)