

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: CORELITE

Report Number: P1215854

Luminaire Tested: 24-ID2-72-CFD1-L935-U

Issue Date: 12/5/2025


**Test Information**

Test Method: LM-79-2019  
Report Number: P1215854  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2508-510-8)  
Test Lab: INNOVATION CENTER  
Issue Date: 12/5/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: CORELITE  
Catalog Number: 24-ID2-72-CFD1-L935-U  
Description: 2X4 IN DEPTH TROFFER WITH 1INCH CUBE DROP LENS  
Light Source: 3500K CCT, 90 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 6668.1 lumens  
Efficiency: N/A  
Efficacy: 103.1 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.2 / 1.31  
Luminous Opening: Rectangular w/ Sides (W: 2' x L: 4' x H: 0.08')  
CIE Type: Direct

Input Watts (W): 64.7  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

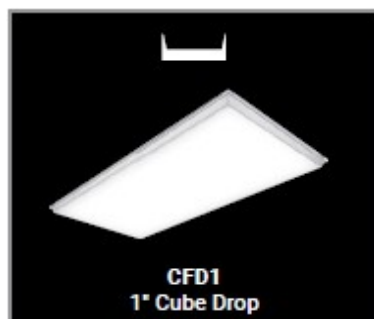

TEST NUMBER: P1215854  
CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

### Luminous Intensity Polar Plot

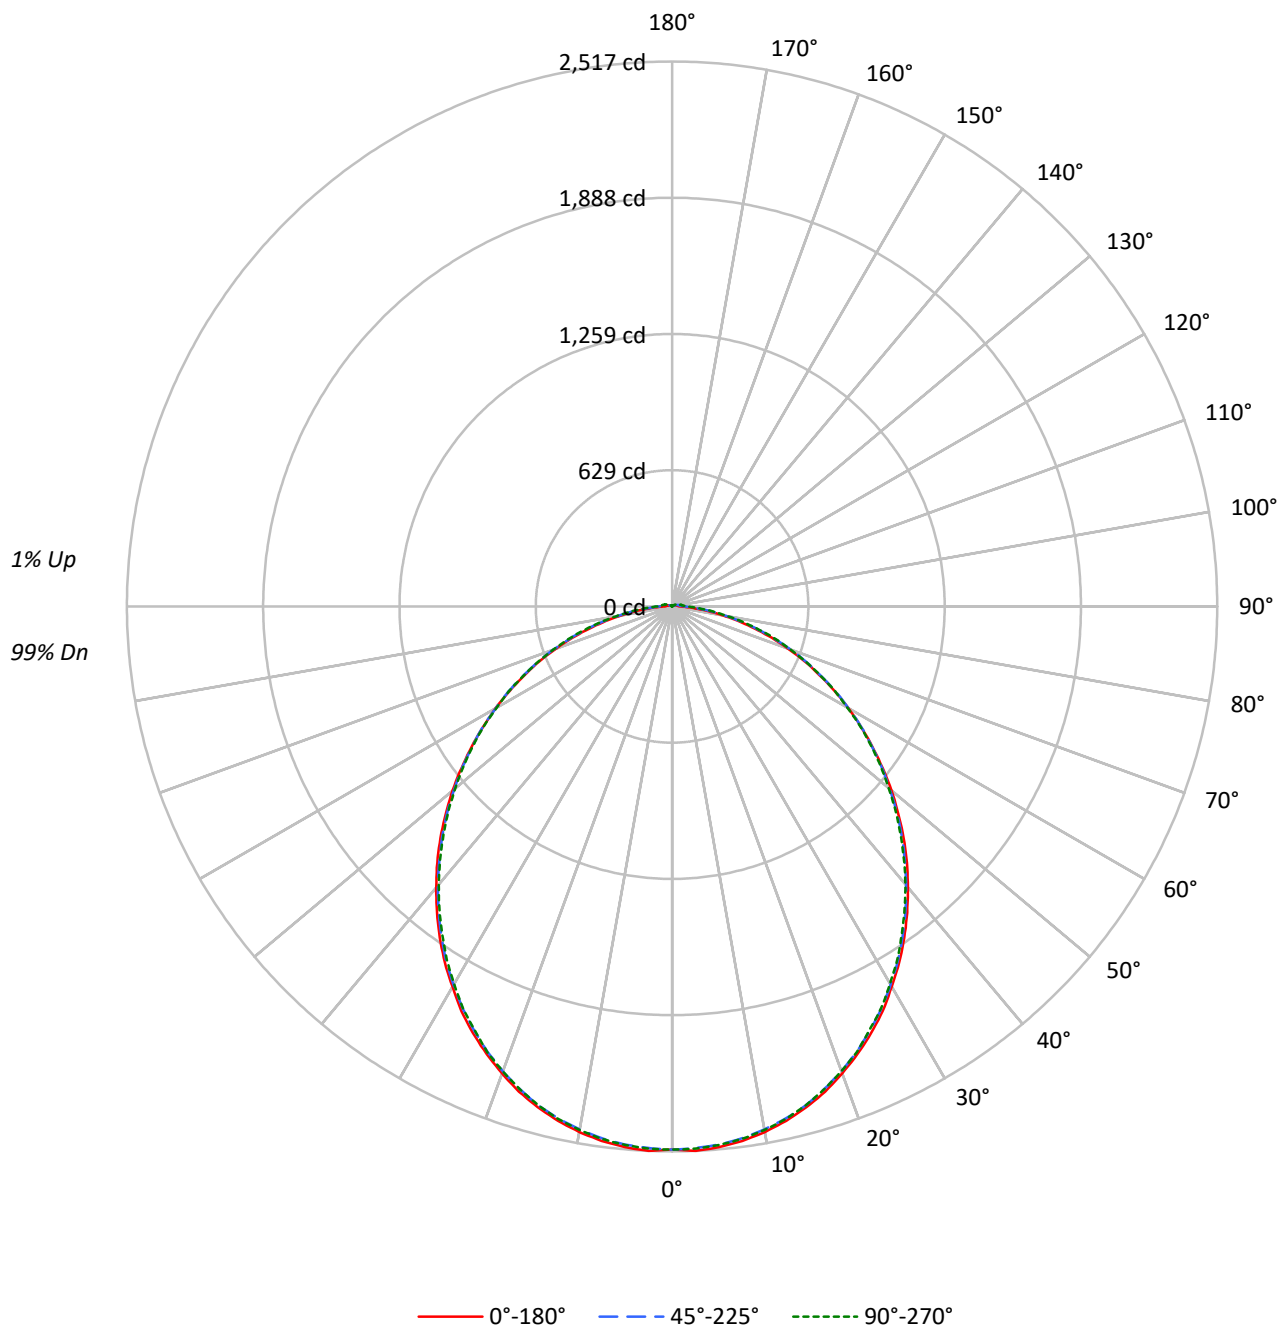

TEST NUMBER: P1215854

CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |     | 20  |     |     |     | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |     | 30  |     |     |     | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 110 | 110 | 110 | 105 | 105 | 105 | 101 | 101 | 101 |
| 1   | 108 | 104 | 99  | 96  | 106 | 101 | 97  | 94  | 97  | 94  | 91  | 93  | 90  | 88  | 89  | 87  | 85  |
| 2   | 99  | 91  | 84  | 78  | 96  | 89  | 82  | 77  | 85  | 80  | 75  | 81  | 77  | 73  | 78  | 74  | 71  |
| 3   | 90  | 80  | 72  | 65  | 88  | 78  | 71  | 65  | 75  | 68  | 63  | 72  | 66  | 62  | 69  | 65  | 61  |
| 4   | 83  | 71  | 62  | 55  | 80  | 69  | 61  | 55  | 67  | 60  | 54  | 64  | 58  | 53  | 62  | 57  | 52  |
| 5   | 76  | 63  | 54  | 48  | 74  | 62  | 54  | 48  | 60  | 53  | 47  | 58  | 51  | 46  | 56  | 50  | 46  |
| 6   | 70  | 57  | 48  | 42  | 68  | 56  | 48  | 42  | 54  | 47  | 41  | 52  | 46  | 41  | 51  | 45  | 40  |
| 7   | 65  | 52  | 43  | 37  | 64  | 51  | 43  | 37  | 49  | 42  | 37  | 48  | 41  | 36  | 46  | 40  | 36  |
| 8   | 61  | 47  | 39  | 33  | 59  | 47  | 39  | 33  | 45  | 38  | 33  | 44  | 37  | 33  | 43  | 37  | 32  |
| 9   | 57  | 44  | 35  | 30  | 55  | 43  | 35  | 30  | 42  | 35  | 30  | 41  | 34  | 29  | 39  | 34  | 29  |
| 10  | 53  | 40  | 32  | 27  | 52  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 27  | 37  | 31  | 27  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 3375 | 3375 | 3375 |
| 5°  | 3380 | 3357 | 3361 |
| 10° | 3356 | 3327 | 3332 |
| 15° | 3319 | 3285 | 3287 |
| 20° | 3263 | 3221 | 3224 |
| 25° | 3199 | 3146 | 3144 |
| 30° | 3115 | 3060 | 3056 |
| 35° | 3028 | 2963 | 2954 |
| 40° | 2926 | 2851 | 2848 |
| 45° | 2822 | 2739 | 2731 |
| 50° | 2704 | 2614 | 2609 |
| 55° | 2574 | 2488 | 2488 |
| 60° | 2447 | 2354 | 2352 |
| 65° | 2293 | 2213 | 2219 |
| 70° | 2125 | 2059 | 2068 |
| 75° | 1914 | 1841 | 1884 |
| 80° | 1648 | 1604 | 1667 |
| 85° | 1346 | 1378 | 1529 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 2822 cd/sqm

TEST NUMBER: P1215854  
 CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 237.0  | 3.6       |
| 10°-20°   | 672.3  | 10.1      |
| 20°-30°   | 996.1  | 14.9      |
| 30°-40°   | 1161.4 | 17.4      |
| 40°-50°   | 1157.8 | 17.4      |
| 50°-60°   | 1007.8 | 15.1      |
| 60°-70°   | 751.2  | 11.3      |
| 70°-80°   | 435.9  | 6.5       |
| 80°-90°   | 152.0  | 2.3       |
| 90°-100°  | 45.6   | 0.7       |
| 100°-110° | 27.3   | 0.4       |
| 110°-120° | 14.5   | 0.2       |
| 120°-130° | 6.2    | 0.1       |
| 130°-140° | 1.8    | 0.0       |
| 140°-150° | 0.6    | 0.0       |
| 150°-160° | 0.4    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1905.5 | 28.6      |
| 0°-40°    | 3066.9 | 46.0      |
| 0°-60°    | 5232.5 | 78.5      |
| 0°-90°    | 6571.7 | 98.6      |
| 90°-120°  | 87.4   | 1.3       |
| 90°-150°  | 96.0   | 1.4       |
| 90°-180°  | 96.0   | 1.4       |
| 0°-180°   | 6668.1 | 100.0     |

**CANDELA DISTRIBUTION:**

|      | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|------|------|-------|------|-------|------|------|
| 0°   | 2509 | 2509  | 2509 | 2509  | 2509 |      |
| 5°   | 2507 | 2499  | 2495 | 2492  | 2497 | 238  |
| 15°  | 2395 | 2387  | 2385 | 2380  | 2385 | 675  |
| 25°  | 2175 | 2168  | 2161 | 2158  | 2158 | 1001 |
| 35°  | 1869 | 1864  | 1857 | 1851  | 1849 | 1168 |
| 45°  | 1512 | 1506  | 1501 | 1495  | 1492 | 1166 |
| 55°  | 1129 | 1131  | 1125 | 1126  | 1121 | 1010 |
| 65°  | 751  | 756   | 758  | 760   | 757  | 746  |
| 75°  | 396  | 404   | 410  | 420   | 416  | 421  |
| 85°  | 107  | 120   | 132  | 141   | 144  | 115  |
| 90°  | 36   | 46    | 59   | 68    | 70   | 23   |
| 95°  | 27   | 33    | 43   | 48    | 50   | 21   |
| 105° | 18   | 18    | 26   | 32    | 34   | 19   |
| 115° | 11   | 9     | 14   | 18    | 22   | 11   |
| 125° | 6    | 4     | 4    | 9     | 12   | 6    |
| 135° | 3    | 2     | 1    | 3     | 4    | 2    |
| 145° | 1    | 1     | 1    | 1     | 1    | 1    |
| 155° | 1    | 1     | 1    | 1     | 1    | 0    |
| 165° | 0    | 0     | 0    | 0     | 0    | 0    |
| 175° | 0    | 0     | 0    | 0     | 0    | 0    |
| 180° | 0    | 0     | 0    | 0     | 0    | 0    |

TEST NUMBER: P1215854

CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

**CANDELA DISTRIBUTION (FULL):**

|        | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|--------|--------|--------|--------|--------|--------|
| 0°     | 2508.7 | 2508.7 | 2508.7 | 2508.7 | 2508.7 |
| 2.5°   | 2516.8 | 2509.6 | 2504.1 | 2502.3 | 2506.8 |
| 5°     | 2506.8 | 2498.7 | 2495.0 | 2492.3 | 2496.9 |
| 7.5°   | 2489.6 | 2483.3 | 2477.8 | 2475.1 | 2480.5 |
| 10°    | 2465.1 | 2456.9 | 2453.3 | 2450.6 | 2456.0 |
| 12.5°  | 2433.4 | 2426.1 | 2422.5 | 2419.7 | 2425.2 |
| 15°    | 2395.2 | 2387.1 | 2385.3 | 2379.8 | 2385.3 |
| 17.5°  | 2349.9 | 2342.6 | 2337.2 | 2335.4 | 2338.1 |
| 20°    | 2295.4 | 2290.9 | 2284.6 | 2282.7 | 2284.6 |
| 22.5°  | 2237.4 | 2231.9 | 2226.5 | 2222.9 | 2228.3 |
| 25°    | 2174.8 | 2168.4 | 2161.2 | 2158.4 | 2157.5 |
| 27.5°  | 2106.7 | 2098.6 | 2093.1 | 2087.7 | 2091.3 |
| 30°    | 2027.8 | 2024.2 | 2017.8 | 2014.2 | 2012.4 |
| 32.5°  | 1951.6 | 1948.9 | 1940.7 | 1933.4 | 1935.3 |
| 35°    | 1869.0 | 1863.6 | 1857.2 | 1850.9 | 1849.1 |
| 37.5°  | 1782.8 | 1777.4 | 1770.1 | 1764.7 | 1763.8 |
| 40°    | 1693.9 | 1690.3 | 1681.2 | 1675.8 | 1675.8 |
| 42.5°  | 1605.0 | 1600.5 | 1590.5 | 1587.8 | 1585.0 |
| 45°    | 1512.5 | 1506.1 | 1500.7 | 1495.2 | 1492.5 |
| 47.5°  | 1416.3 | 1412.7 | 1406.3 | 1402.7 | 1400.9 |
| 50°    | 1322.8 | 1318.3 | 1311.9 | 1309.2 | 1305.6 |
| 52.5°  | 1224.8 | 1224.8 | 1220.3 | 1217.6 | 1214.0 |
| 55°    | 1128.7 | 1131.4 | 1125.0 | 1125.9 | 1121.4 |
| 57.5°  | 1033.4 | 1036.1 | 1037.0 | 1030.7 | 1029.8 |
| 60°    | 940.9  | 941.8  | 939.0  | 939.0  | 934.5  |
| 62.5°  | 845.6  | 848.3  | 852.9  | 850.1  | 849.2  |
| 65°    | 751.2  | 755.8  | 758.5  | 760.3  | 756.7  |
| 67.5°  | 663.2  | 667.8  | 672.3  | 670.5  | 669.6  |
| 70°    | 569.8  | 575.2  | 584.3  | 587.9  | 583.4  |
| 72.5°  | 482.7  | 489.9  | 494.5  | 499.9  | 501.7  |
| 75°    | 395.6  | 403.7  | 410.1  | 420.1  | 416.4  |
| 77.5°  | 313.9  | 323.9  | 332.1  | 340.2  | 340.2  |
| 80°    | 236.8  | 246.8  | 256.8  | 265.8  | 264.0  |
| 82.5°  | 166.9  | 178.7  | 188.7  | 198.7  | 200.5  |
| 85°    | 107.1  | 119.8  | 132.5  | 140.6  | 144.3  |
| 87.5°  | 64.4   | 74.4   | 88.0   | 97.1   | 100.7  |
| 90°    | 36.3   | 46.3   | 59.0   | 68.0   | 69.9   |
| 92.5°  | 29.9   | 36.3   | 47.2   | 55.3   | 56.3   |
| 95°    | 27.2   | 32.7   | 42.6   | 48.1   | 49.9   |
| 97.5°  | 24.5   | 28.1   | 38.1   | 44.5   | 46.3   |
| 100°   | 22.7   | 24.5   | 33.6   | 39.9   | 41.7   |
| 102.5° | 20.0   | 21.8   | 29.9   | 35.4   | 38.1   |
| 105°   | 18.1   | 18.1   | 26.3   | 31.8   | 34.5   |
| 107.5° | 16.3   | 15.4   | 22.7   | 28.1   | 30.8   |
| 110°   | 14.5   | 12.7   | 20.0   | 24.5   | 28.1   |

TEST NUMBER: P1215854

CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

**CANDELA DISTRIBUTION (continued):**

|        | 0°   | 22.5° | 45°  | 67.5° | 90°  |
|--------|------|-------|------|-------|------|
| 112.5° | 12.7 | 10.9  | 16.3 | 20.9  | 24.5 |
| 115°   | 10.9 | 9.1   | 13.6 | 18.1  | 21.8 |
| 117.5° | 9.1  | 8.2   | 10.9 | 15.4  | 19.1 |
| 120°   | 8.2  | 6.4   | 9.1  | 13.6  | 16.3 |
| 122.5° | 7.3  | 5.4   | 6.4  | 10.9  | 13.6 |
| 125°   | 6.4  | 4.5   | 4.5  | 9.1   | 11.8 |
| 127.5° | 4.5  | 3.6   | 2.7  | 7.3   | 9.1  |
| 130°   | 4.5  | 2.7   | 1.8  | 5.4   | 7.3  |
| 132.5° | 3.6  | 2.7   | 0.9  | 3.6   | 5.4  |
| 135°   | 2.7  | 1.8   | 0.9  | 2.7   | 3.6  |
| 137.5° | 1.8  | 1.8   | 0.9  | 1.8   | 2.7  |
| 140°   | 1.8  | 0.9   | 0.9  | 0.9   | 1.8  |
| 142.5° | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 145°   | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 147.5° | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 150°   | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 152.5° | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 155°   | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 157.5° | 0.9  | 0.9   | 0.9  | 0.9   | 0.9  |
| 160°   | 1.8  | 0.9   | 0.9  | 0.9   | 0.9  |
| 162.5° | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 165°   | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 167.5° | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 170°   | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 172.5° | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 175°   | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 177.5° | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |
| 180°   | 0.0  | 0.0   | 0.0  | 0.0   | 0.0  |

TEST NUMBER: P1215854

CATALOG NUMBER: 24-ID2-72-CFD1-L935-U

**CIE UGR TABLE:**

| Reflectances:   |      |                  |       |       |       |       |                |       |       |       |       |
|-----------------|------|------------------|-------|-------|-------|-------|----------------|-------|-------|-------|-------|
| Ceiling         |      | 0.7              | 0.7   | 0.5   | 0.5   | 0.3   | 0.7            | 0.7   | 0.5   | 0.5   | 0.3   |
| Wall            |      | 0.5              | 0.3   | 0.5   | 0.3   | 0.3   | 0.5            | 0.3   | 0.5   | 0.3   | 0.3   |
| Reference plane |      | 0.2              | 0.2   | 0.2   | 0.2   | 0.2   | 0.2            | 0.2   | 0.2   | 0.2   | 0.2   |
| Room dimensions |      | Viewed crosswise |       |       |       |       | Viewed endwise |       |       |       |       |
| X=2H            | Y=2H | 15.00            | 16.58 | 15.39 | 16.93 | 17.28 | 15.03          | 16.62 | 15.42 | 16.96 | 17.31 |
|                 | 3H   | 16.68            | 18.11 | 17.08 | 18.47 | 18.87 | 16.79          | 18.22 | 17.19 | 18.58 | 18.98 |
|                 | 4H   | 17.29            | 18.64 | 17.71 | 19.01 | 19.42 | 17.46          | 18.81 | 17.89 | 19.19 | 19.60 |
|                 | 6H   | 17.71            | 18.96 | 18.15 | 19.36 | 19.78 | 17.98          | 19.23 | 18.41 | 19.62 | 20.05 |
|                 | 8H   | 17.84            | 19.03 | 18.29 | 19.45 | 19.88 | 18.17          | 19.36 | 18.61 | 19.78 | 20.21 |
|                 | 12H  | 17.92            | 19.06 | 18.37 | 19.47 | 19.94 | 18.32          | 19.46 | 18.77 | 19.87 | 20.34 |
| 4H              | 2H   | 15.60            | 16.95 | 16.02 | 17.33 | 17.74 | 15.62          | 16.97 | 16.05 | 17.35 | 17.76 |
|                 | 3H   | 17.50            | 18.63 | 17.93 | 19.06 | 19.49 | 17.60          | 18.73 | 18.03 | 19.16 | 19.59 |
|                 | 4H   | 18.23            | 19.25 | 18.68 | 19.69 | 20.16 | 18.40          | 19.43 | 18.86 | 19.87 | 20.34 |
|                 | 6H   | 18.77            | 19.67 | 19.25 | 20.14 | 20.63 | 19.05          | 19.95 | 19.53 | 20.42 | 20.91 |
|                 | 8H   | 18.95            | 19.79 | 19.43 | 20.26 | 20.75 | 19.29          | 20.13 | 19.78 | 20.60 | 21.10 |
|                 | 12H  | 19.07            | 19.82 | 19.57 | 20.33 | 20.83 | 19.50          | 20.25 | 20.00 | 20.76 | 21.26 |
| 8H              | 4H   | 18.53            | 19.37 | 19.01 | 19.84 | 20.34 | 18.69          | 19.52 | 19.17 | 19.99 | 20.49 |
|                 | 6H   | 19.19            | 19.89 | 19.71 | 20.41 | 20.92 | 19.46          | 20.16 | 19.97 | 20.67 | 21.18 |
|                 | 8H   | 19.44            | 20.06 | 19.97 | 20.60 | 21.11 | 19.78          | 20.41 | 20.31 | 20.94 | 21.46 |
|                 | 12H  | 19.63            | 20.19 | 20.16 | 20.70 | 21.29 | 20.08          | 20.64 | 20.61 | 21.15 | 21.75 |
| 12H             | 4H   | 18.56            | 19.32 | 19.07 | 19.82 | 20.32 | 18.71          | 19.47 | 19.21 | 19.97 | 20.47 |
|                 | 6H   | 19.25            | 19.88 | 19.79 | 20.41 | 20.93 | 19.51          | 20.13 | 20.04 | 20.67 | 21.19 |
|                 | 8H   | 19.55            | 20.11 | 20.08 | 20.63 | 21.22 | 19.89          | 20.44 | 20.41 | 20.96 | 21.55 |



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Corelite

Report Number: SP1-2506-458-10

Test Date: 08/26/2025

Luminaire Tested: 22ID2-55-CFR1-L935-U

Data in this report applies to families of products including 22ID2-55-CFR1-L935-U


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2506-458-10  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 08/27/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Corelite  
 Catalog Number: **22ID2-55-CFR1-L935-U**  
 Description: 2X2 CGTX WITH INDEPTH FRAME AND CFR1 LENS - 5500 LUMEN 3500K 90CRI

### Spectral Parameters

CCT (K): 3377  
 CIE  $u'$ : 0.2392  
 CIE  $v'$ : 0.5128  
 Duv: -0.0007  
 CIE x: 0.4116  
 CIE y: 0.3922  
 CIE z: 0.1962  
 Peak Wavelength (nm): 618  
 Dominant Wavelength (nm): 581  
 Purity: 41.24368  
 Rf: 91.8  
 Rg: 99.6

CRI (Ra): 93.6  
 R1: 94.1  
 R2: 96.6  
 R3: 97.5  
 R4: 94.0  
 R5: 93.6  
 R6: 94.8  
 R7: 93.4  
 R8: 84.8  
 R9: 64.2  
 R10: 91.1  
 R11: 94.7  
 R12: 78.5  
 R13: 95.0  
 R14: 98.1  
 R15: 91.0

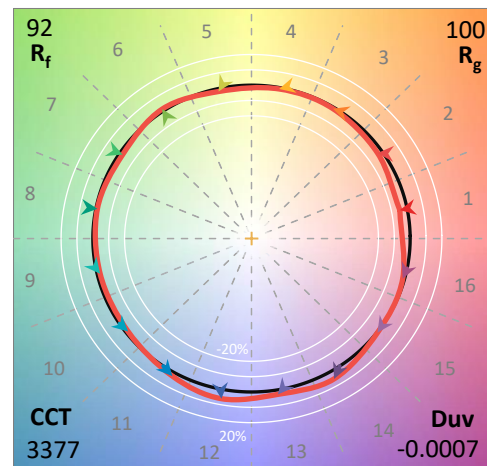

### Test Conditions

Stabilization Time: 32M  
 Operation Time: 1H 32M  
 Sphere Temperature (°C): 25.2


REPORT NUMBER: SP1-2506-458-10

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |



REPORT NUMBER: SP1-2506-458-10

### Photopic Flux vs. Wavelength

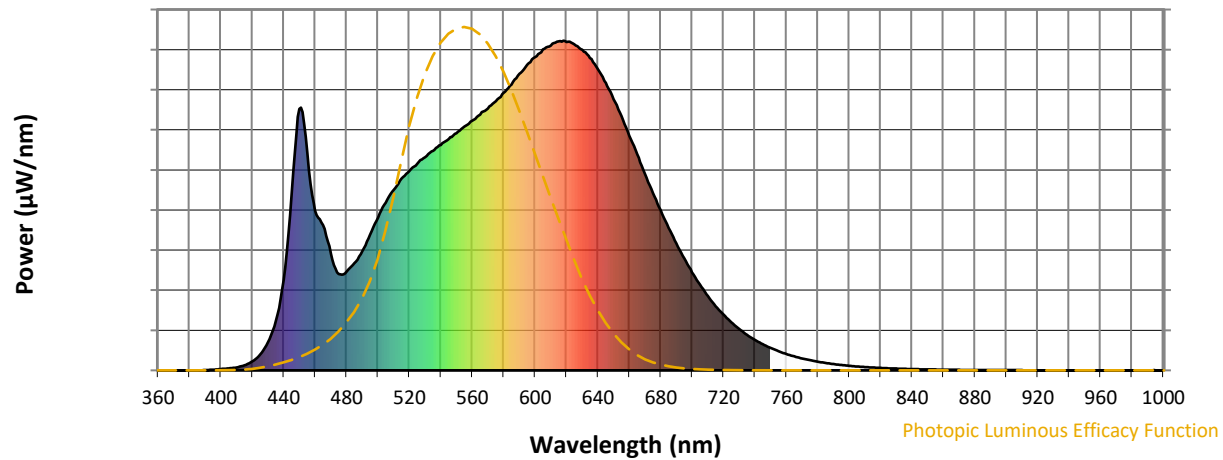


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 362                                  | NR                             | 620               | 996                                  | NR                             | 750               | 68                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 412                                  | NR                             | 625               | 989                                  | NR                             | 755               | 58                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 463                                  | NR                             | 630               | 973                                  | NR                             | 760               | 49                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 509                                  | NR                             | 635               | 947                                  | NR                             | 765               | 42                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 548                                  | NR                             | 640               | 914                                  | NR                             | 770               | 36                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 582                                  | NR                             | 645               | 872                                  | NR                             | 775               | 31                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 605                                  | NR                             | 650               | 822                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 626                                  | NR                             | 655               | 770                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 646                                  | NR                             | 660               | 712                                  | NR                             | 790               | 19                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 6                                    | NR                             | 535               | 666                                  | NR                             | 665               | 656                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 683                                  | NR                             | 670               | 596                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 15                                   | NR                             | 545               | 702                                  | NR                             | 675               | 538                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 27                                   | NR                             | 550               | 720                                  | NR                             | 680               | 486                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 48                                   | NR                             | 555               | 740                                  | NR                             | 685               | 432                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 85                                   | NR                             | 560               | 757                                  | NR                             | 690               | 385                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 152                                  | NR                             | 565               | 776                                  | NR                             | 695               | 339                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 274                                  | NR                             | 570               | 794                                  | NR                             | 700               | 297                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 536                                  | NR                             | 575               | 816                                  | NR                             | 705               | 260                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 793                                  | NR                             | 580               | 842                                  | NR                             | 710               | 225                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 659                                  | NR                             | 585               | 867                                  | NR                             | 715               | 194                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 484                                  | NR                             | 590               | 899                                  | NR                             | 720               | 169                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 441                                  | NR                             | 595               | 927                                  | NR                             | 725               | 146                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 353                                  | NR                             | 600               | 950                                  | NR                             | 730               | 125                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 293                                  | NR                             | 605               | 974                                  | NR                             | 735               | 107                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 300                                  | NR                             | 610               | 986                                  | NR                             | 740               | 92                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 998                                  | NR                             | 745               | 79                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-10

### Scotopic Flux vs. Wavelength

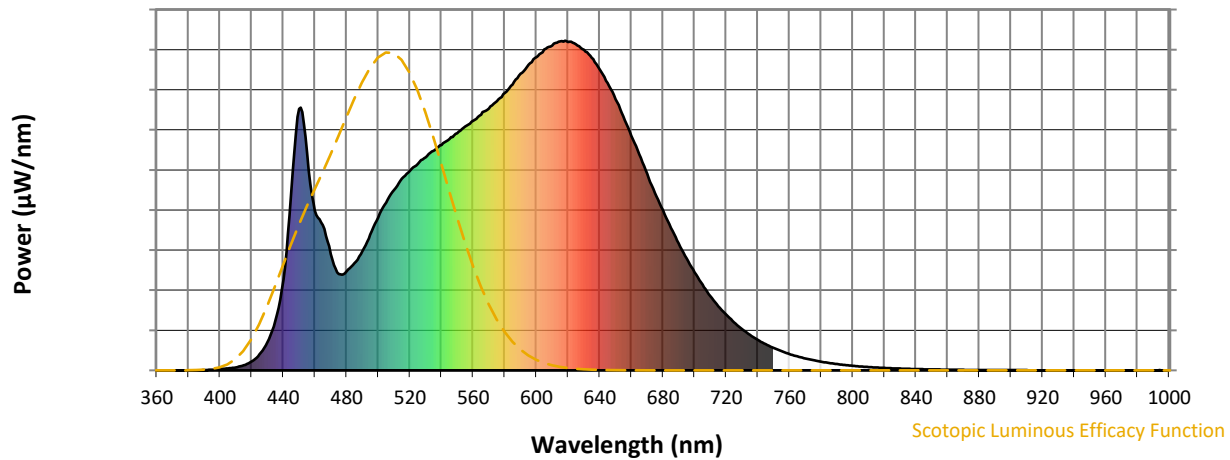


Scotopic Lumens: NR

S/P: 1.58

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 362                         | NR               | 620       | 996                         | NR               | 750       | 68                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 412                         | NR               | 625       | 989                         | NR               | 755       | 58                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 463                         | NR               | 630       | 973                         | NR               | 760       | 49                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 509                         | NR               | 635       | 947                         | NR               | 765       | 42                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 548                         | NR               | 640       | 914                         | NR               | 770       | 36                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 582                         | NR               | 645       | 872                         | NR               | 775       | 31                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 605                         | NR               | 650       | 822                         | NR               | 780       | 26                          | NR               | 910       | 1                           | NR               |
| 395       | 2                           | NR               | 525       | 626                         | NR               | 655       | 770                         | NR               | 785       | 22                          | NR               | 915       | 1                           | NR               |
| 400       | 4                           | NR               | 530       | 646                         | NR               | 660       | 712                         | NR               | 790       | 19                          | NR               | 920       | 0                           | NR               |
| 405       | 6                           | NR               | 535       | 666                         | NR               | 665       | 656                         | NR               | 795       | 16                          | NR               | 925       | 0                           | NR               |
| 410       | 9                           | NR               | 540       | 683                         | NR               | 670       | 596                         | NR               | 800       | 14                          | NR               | 930       | 0                           | NR               |
| 415       | 15                          | NR               | 545       | 702                         | NR               | 675       | 538                         | NR               | 805       | 12                          | NR               | 935       | 0                           | NR               |
| 420       | 27                          | NR               | 550       | 720                         | NR               | 680       | 486                         | NR               | 810       | 10                          | NR               | 940       | 0                           | NR               |
| 425       | 48                          | NR               | 555       | 740                         | NR               | 685       | 432                         | NR               | 815       | 9                           | NR               | 945       | 0                           | NR               |
| 430       | 85                          | NR               | 560       | 757                         | NR               | 690       | 385                         | NR               | 820       | 7                           | NR               | 950       | 0                           | NR               |
| 435       | 152                         | NR               | 565       | 776                         | NR               | 695       | 339                         | NR               | 825       | 6                           | NR               | 955       | 0                           | NR               |
| 440       | 274                         | NR               | 570       | 794                         | NR               | 700       | 297                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 536                         | NR               | 575       | 816                         | NR               | 705       | 260                         | NR               | 835       | 5                           | NR               | 965       | 0                           | NR               |
| 450       | 793                         | NR               | 580       | 842                         | NR               | 710       | 225                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 659                         | NR               | 585       | 867                         | NR               | 715       | 194                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 484                         | NR               | 590       | 899                         | NR               | 720       | 169                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 441                         | NR               | 595       | 927                         | NR               | 725       | 146                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 353                         | NR               | 600       | 950                         | NR               | 730       | 125                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 293                         | NR               | 605       | 974                         | NR               | 735       | 107                         | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 300                         | NR               | 610       | 986                         | NR               | 740       | 92                          | NR               | 870       | 2                           | NR               | 1000      | 0                           | NR               |
| 485       | 325                         | NR               | 615       | 998                         | NR               | 745       | 79                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2506-458-10

### Melanopic Flux vs. Wavelength

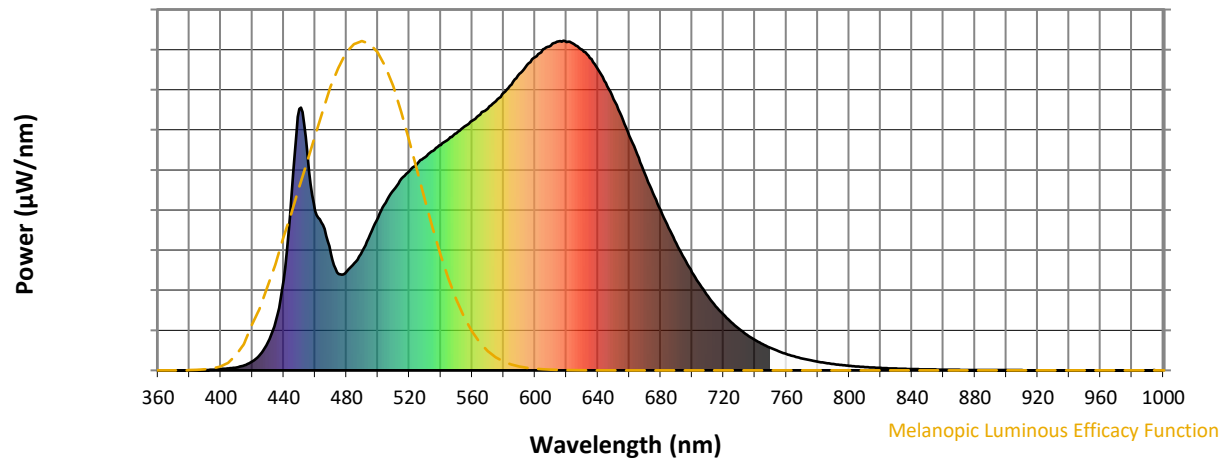
**Melanopic Lumens: NR**
**M/P: 3.19**


| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 362                                  | NR                             | 620               | 996                                  | NR                             | 750               | 68                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 412                                  | NR                             | 625               | 989                                  | NR                             | 755               | 58                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 463                                  | NR                             | 630               | 973                                  | NR                             | 760               | 49                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 509                                  | NR                             | 635               | 947                                  | NR                             | 765               | 42                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 548                                  | NR                             | 640               | 914                                  | NR                             | 770               | 36                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 582                                  | NR                             | 645               | 872                                  | NR                             | 775               | 31                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 605                                  | NR                             | 650               | 822                                  | NR                             | 780               | 26                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 626                                  | NR                             | 655               | 770                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 646                                  | NR                             | 660               | 712                                  | NR                             | 790               | 19                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 6                                    | NR                             | 535               | 666                                  | NR                             | 665               | 656                                  | NR                             | 795               | 16                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 9                                    | NR                             | 540               | 683                                  | NR                             | 670               | 596                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 15                                   | NR                             | 545               | 702                                  | NR                             | 675               | 538                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 27                                   | NR                             | 550               | 720                                  | NR                             | 680               | 486                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 48                                   | NR                             | 555               | 740                                  | NR                             | 685               | 432                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 85                                   | NR                             | 560               | 757                                  | NR                             | 690               | 385                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 152                                  | NR                             | 565               | 776                                  | NR                             | 695               | 339                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 274                                  | NR                             | 570               | 794                                  | NR                             | 700               | 297                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 536                                  | NR                             | 575               | 816                                  | NR                             | 705               | 260                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 793                                  | NR                             | 580               | 842                                  | NR                             | 710               | 225                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 659                                  | NR                             | 585               | 867                                  | NR                             | 715               | 194                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 484                                  | NR                             | 590               | 899                                  | NR                             | 720               | 169                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 441                                  | NR                             | 595               | 927                                  | NR                             | 725               | 146                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 353                                  | NR                             | 600               | 950                                  | NR                             | 730               | 125                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 293                                  | NR                             | 605               | 974                                  | NR                             | 735               | 107                                  | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 300                                  | NR                             | 610               | 986                                  | NR                             | 740               | 92                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 998                                  | NR                             | 745               | 79                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2506-458-10





TM-30-18

### Summary

$R_f = 91.8$   
 $R_g = 99.6$   
 $CIE R_a = 93.6$   
 $R_9 = 64.2$

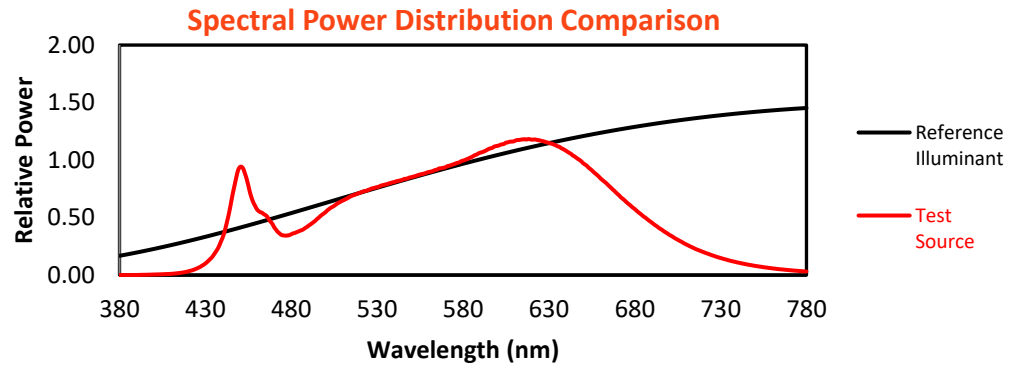


### Color Vector Graphics

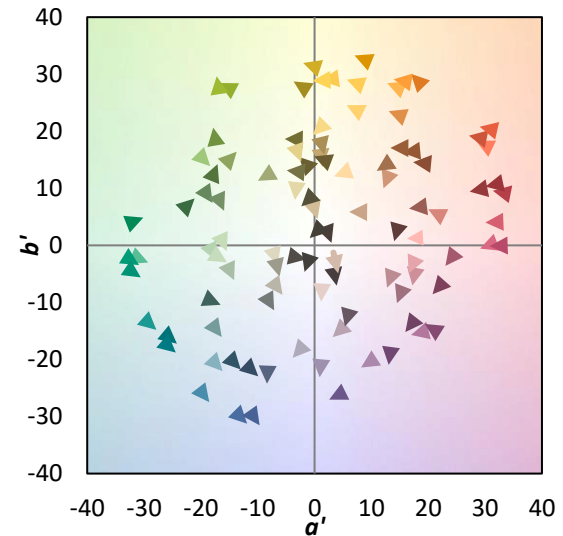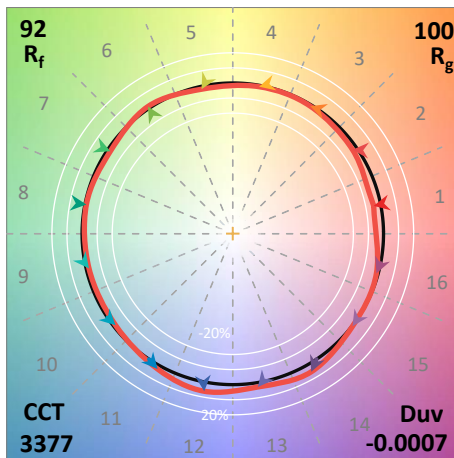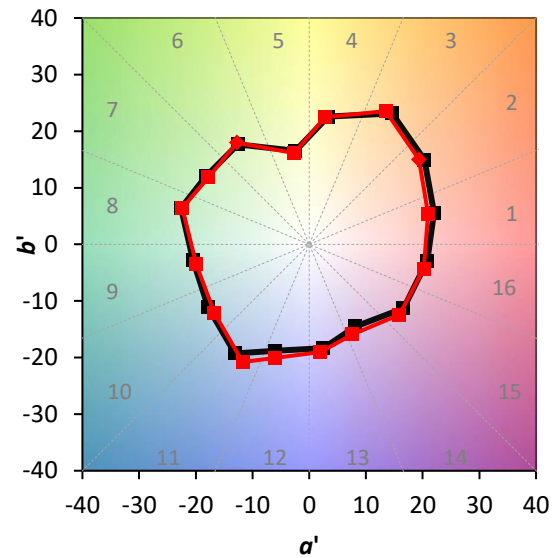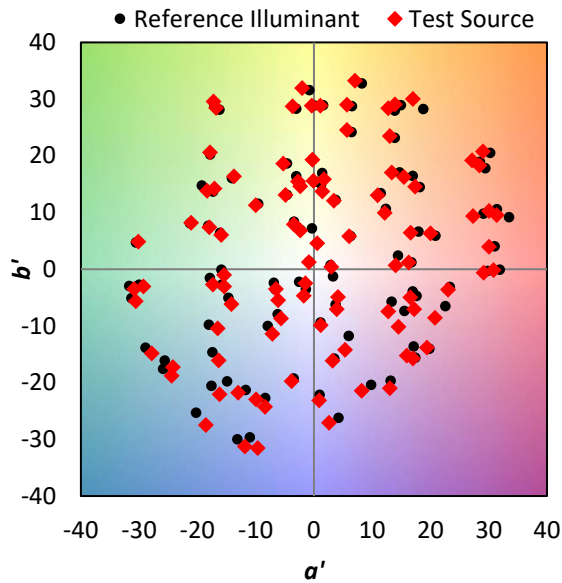






**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 94 | CES51 = 97 | CES76 = 88 |
| CES02 = 62 | CES27 = 92 | CES52 = 99 | CES77 = 89 |
| CES03 = 31 | CES28 = 96 | CES53 = 97 | CES78 = 85 |
| CES04 = 70 | CES29 = 96 | CES54 = 93 | CES79 = 95 |
| CES05 = 50 | CES30 = 92 | CES55 = 92 | CES80 = 93 |
| CES06 = 51 | CES31 = 97 | CES56 = 95 | CES81 = 86 |
| CES07 = 43 | CES32 = 91 | CES57 = 93 | CES82 = 97 |
| CES08 = 42 | CES33 = 99 | CES58 = 94 | CES83 = 97 |
| CES09 = 29 | CES34 = 94 | CES59 = 97 | CES84 = 94 |
| CES10 = 75 | CES35 = 96 | CES60 = 92 | CES85 = 83 |
| CES11 = 58 | CES36 = 82 | CES61 = 92 | CES86 = 86 |
| CES12 = 64 | CES37 = 95 | CES62 = 87 | CES87 = 91 |
| CES13 = 43 | CES38 = 87 | CES63 = 93 | CES88 = 97 |
| CES14 = 74 | CES39 = 99 | CES64 = 90 | CES89 = 87 |
| CES15 = 72 | CES40 = 98 | CES65 = 89 | CES90 = 96 |
| CES16 = 48 | CES41 = 97 | CES66 = 88 | CES91 = 75 |
| CES17 = 50 | CES42 = 95 | CES67 = 87 | CES92 = 80 |
| CES18 = 56 | CES43 = 94 | CES68 = 88 | CES93 = 88 |
| CES19 = 71 | CES44 = 99 | CES69 = 89 | CES94 = 81 |
| CES20 = 67 | CES45 = 97 | CES70 = 86 | CES95 = 84 |
| CES21 = 86 | CES46 = 97 | CES71 = 82 | CES96 = 92 |
| CES22 = 78 | CES47 = 96 | CES72 = 94 | CES97 = 96 |
| CES23 = 91 | CES48 = 92 | CES73 = 82 | CES98 = 95 |
| CES24 = 90 | CES49 = 96 | CES74 = 92 | CES99 = 92 |
| CES25 = 71 | CES50 = 98 | CES75 = 84 |            |

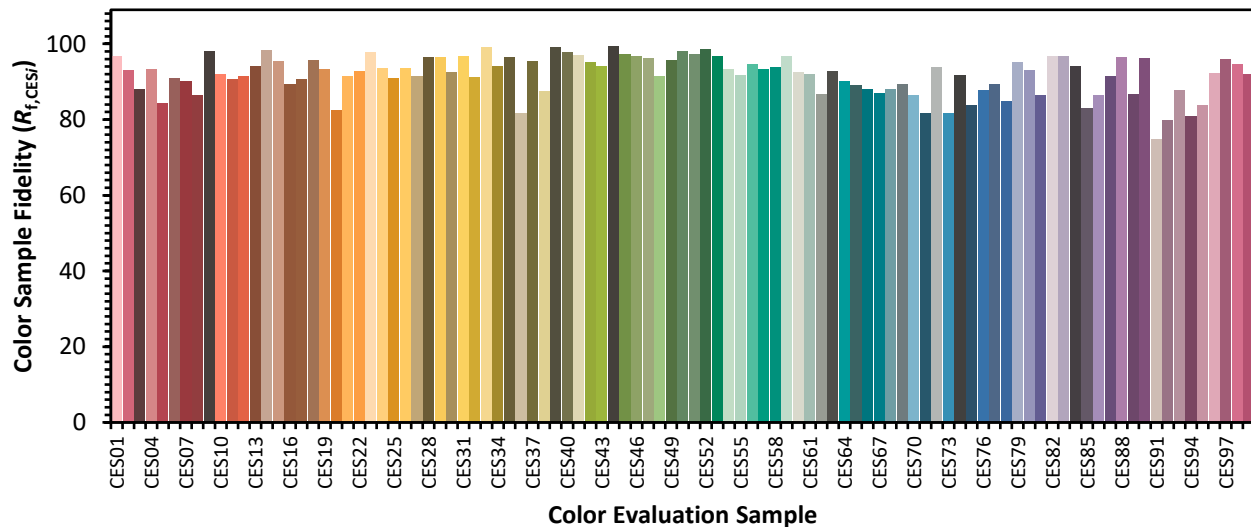

Color Rendition by Hue-Angle Bin

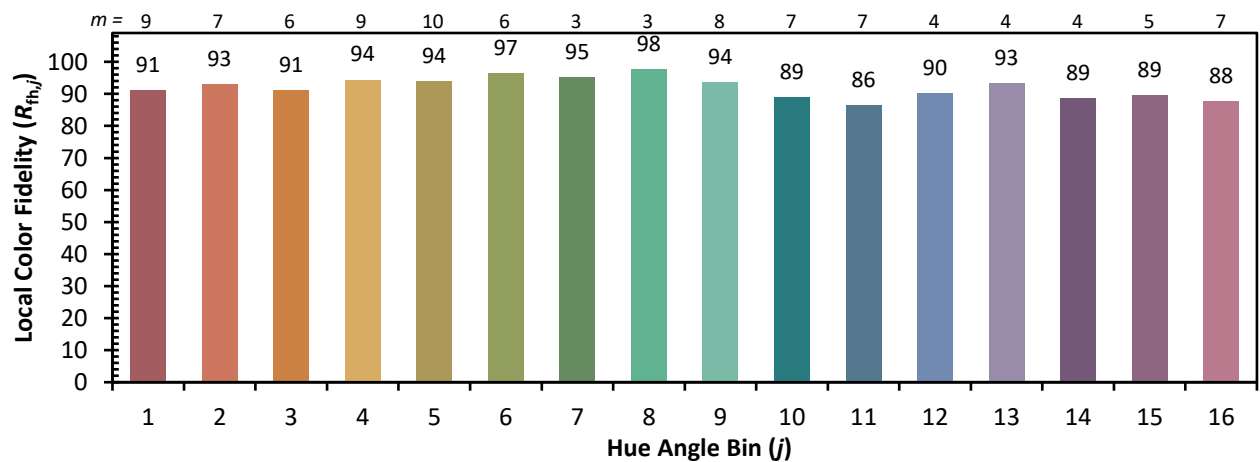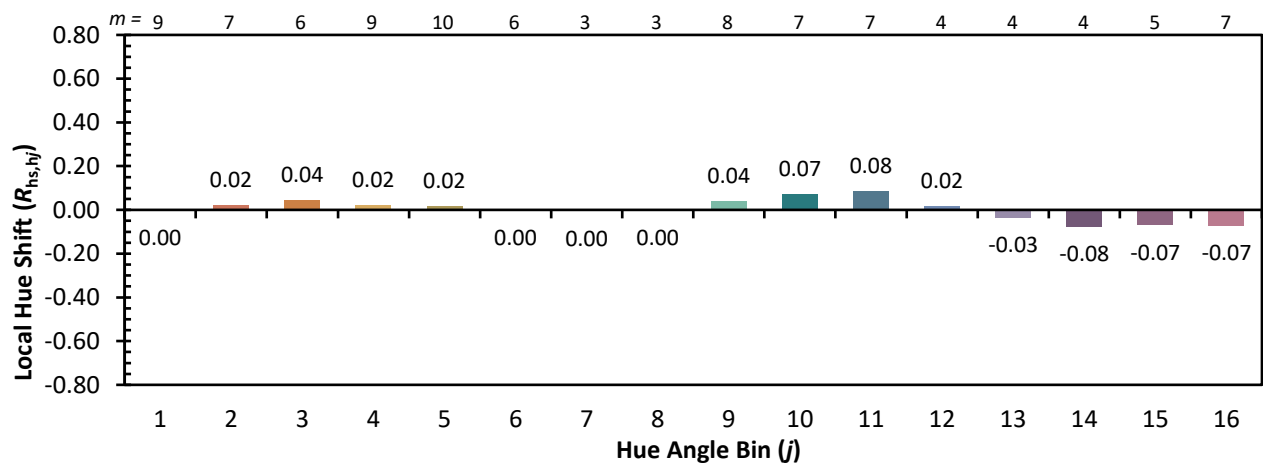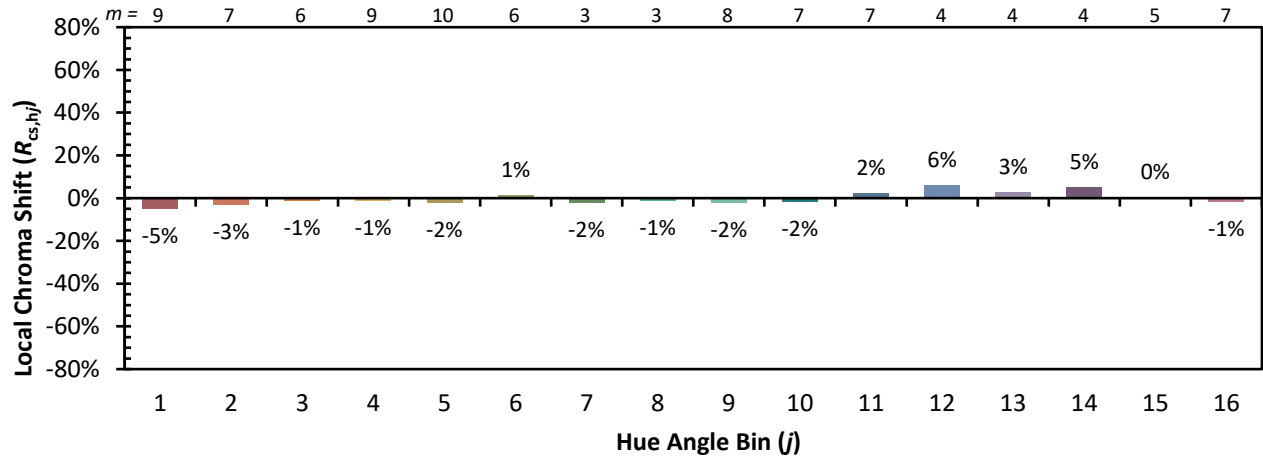

**Measure Comparisons**

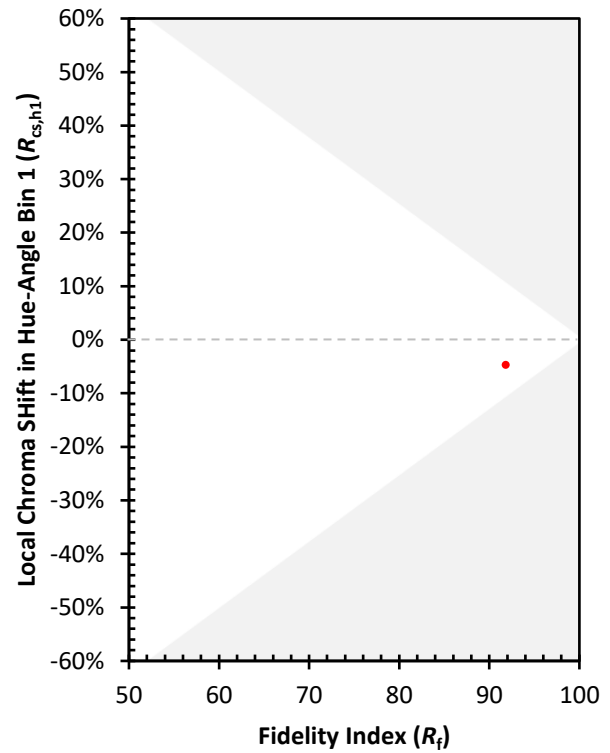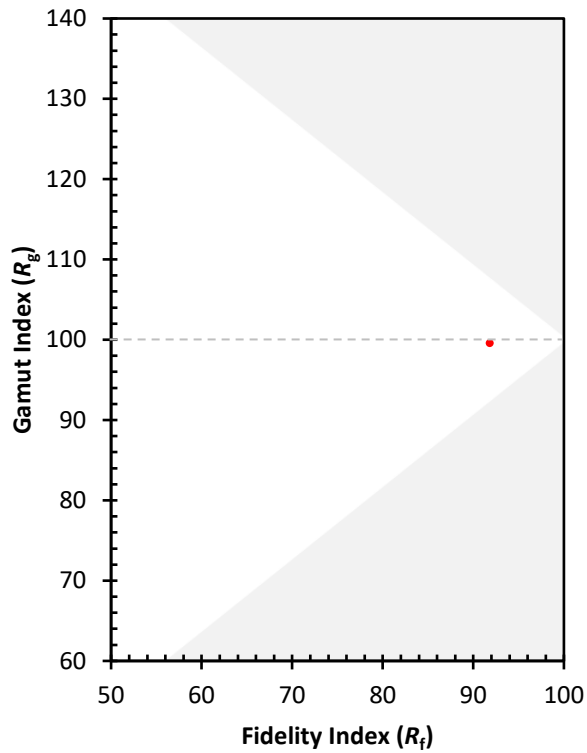

(END OF REPORT)