

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P735722

Luminaire Tested: **24APR-58-B2750-W2D-5000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P735722  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P708973)  
Test Lab: INNOVATION CENTER(G2)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 24APR-58-B2750-W2D-5000K  
Description: 2X4 5800 AMBIENT LUMEN OUTPUT APR TROFFER WITH BIO UP LEDS AT 5000K CCT

Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 5121.0 lumens  
Efficiency: N/A  
Efficacy: 89.8 lumens/watt  
Spacing Criteria (0/90/45): 1.21 / 1.2 / 1.32  
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')  
CIE Type: Direct

Input Watts (W): 57  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P735722

CATALOG NUMBER: 24APR-58-B2750-W2D-5000K

### Luminous Intensity Polar Plot

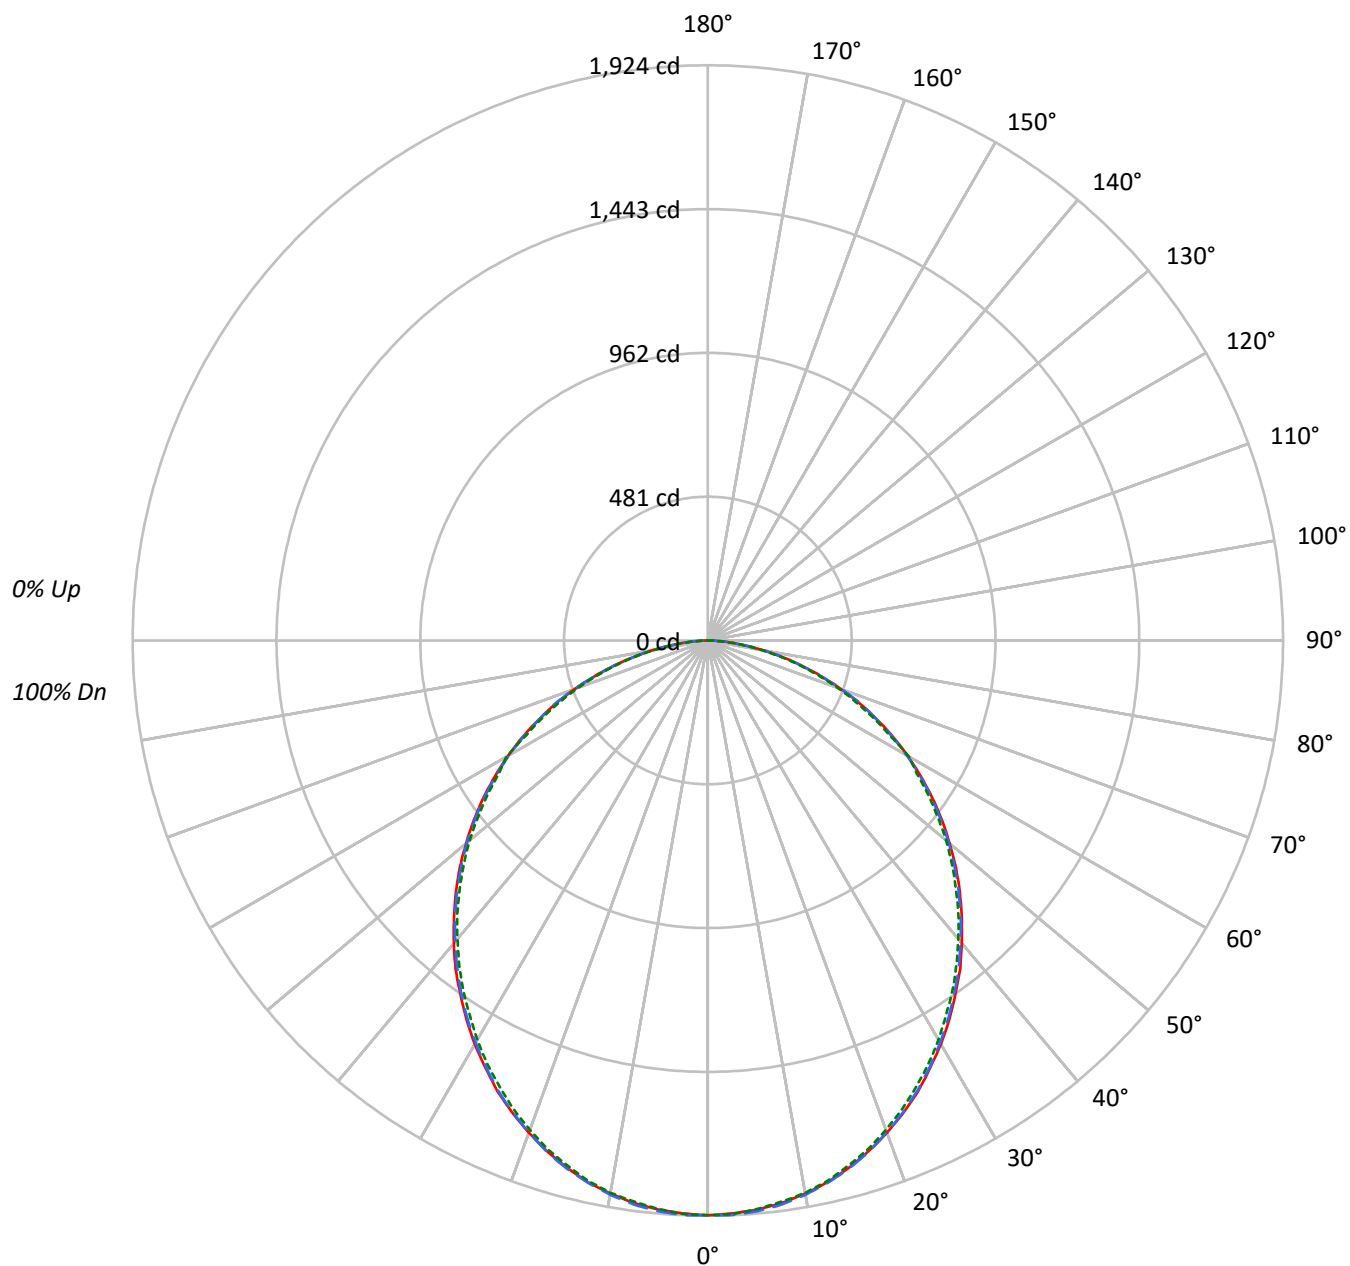



TEST NUMBER: P735722

CATALOG NUMBER: 24APR-58-B2750-W2D-5000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 109 | 104 | 100 | 96  | 106 | 102 | 98  | 95  | 98  | 95  | 92  | 94  | 91  | 89  | 90  | 88  | 86  | 84  |    |    |
| 2   | 99  | 91  | 84  | 79  | 97  | 89  | 83  | 78  | 86  | 80  | 76  | 82  | 78  | 74  | 79  | 76  | 72  | 70  |    |    |
| 3   | 90  | 80  | 72  | 65  | 88  | 78  | 71  | 65  | 75  | 69  | 64  | 73  | 67  | 63  | 70  | 65  | 61  | 59  |    |    |
| 4   | 83  | 71  | 62  | 56  | 81  | 70  | 61  | 55  | 67  | 60  | 54  | 65  | 59  | 54  | 63  | 57  | 53  | 51  |    |    |
| 5   | 76  | 63  | 55  | 48  | 74  | 62  | 54  | 48  | 60  | 53  | 47  | 58  | 52  | 47  | 56  | 51  | 46  | 44  |    |    |
| 6   | 70  | 57  | 48  | 42  | 69  | 56  | 48  | 42  | 54  | 47  | 41  | 53  | 46  | 41  | 51  | 45  | 41  | 39  |    |    |
| 7   | 65  | 52  | 43  | 37  | 64  | 51  | 43  | 37  | 50  | 42  | 37  | 48  | 41  | 36  | 47  | 41  | 36  | 34  |    |    |
| 8   | 61  | 47  | 39  | 33  | 59  | 47  | 39  | 33  | 45  | 38  | 33  | 44  | 37  | 33  | 43  | 37  | 32  | 30  |    |    |
| 9   | 57  | 44  | 35  | 30  | 55  | 43  | 35  | 30  | 42  | 35  | 30  | 41  | 34  | 29  | 40  | 34  | 29  | 27  |    |    |
| 10  | 53  | 40  | 32  | 27  | 52  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 27  | 37  | 31  | 27  | 25  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 2587 | 2587 | 2587 |
| 5°  | 2581 | 2588 | 2578 |
| 10° | 2566 | 2572 | 2563 |
| 15° | 2542 | 2546 | 2533 |
| 20° | 2509 | 2508 | 2494 |
| 25° | 2470 | 2465 | 2446 |
| 30° | 2422 | 2414 | 2396 |
| 35° | 2371 | 2363 | 2344 |
| 40° | 2321 | 2309 | 2289 |
| 45° | 2268 | 2256 | 2233 |
| 50° | 2209 | 2201 | 2179 |
| 55° | 2149 | 2138 | 2110 |
| 60° | 2077 | 2064 | 2092 |
| 65° | 1982 | 1977 | 1939 |
| 70° | 1860 | 1863 | 1812 |
| 75° | 1688 | 1676 | 1638 |
| 80° | 1451 | 1432 | 1394 |
| 85° | 1108 | 1099 | 1014 |



TEST NUMBER: P735722

CATALOG NUMBER: 24APR-58-B2750-W2D-5000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 181.6  | 3.5       |
| 10°-20°   | 514.4  | 10.0      |
| 20°-30°   | 763.6  | 14.9      |
| 30°-40°   | 898.8  | 17.6      |
| 40°-50°   | 913.4  | 17.8      |
| 50°-60°   | 812.0  | 15.9      |
| 60°-70°   | 612.5  | 12.0      |
| 70°-80°   | 340.2  | 6.6       |
| 80°-90°   | 84.6   | 1.7       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1459.6 | 28.5      |
| 0°-40°    | 2358.4 | 46.1      |
| 0°-60°    | 4083.7 | 79.7      |
| 0°-90°    | 5121.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 5121.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1923 | 1923  | 1923 | 1923  | 1923 |      |
| 5°  | 1911 | 1914  | 1916 | 1914  | 1909 | 181  |
| 15° | 1825 | 1827  | 1828 | 1824  | 1818 | 514  |
| 25° | 1664 | 1663  | 1660 | 1653  | 1648 | 766  |
| 35° | 1444 | 1444  | 1439 | 1430  | 1427 | 904  |
| 45° | 1192 | 1192  | 1186 | 1176  | 1173 | 919  |
| 55° | 916  | 909   | 911  | 901   | 900  | 819  |
| 65° | 623  | 619   | 621  | 613   | 609  | 616  |
| 75° | 325  | 320   | 322  | 320   | 315  | 344  |
| 85° | 72   | 70    | 71   | 68    | 66   | 86   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |



TEST NUMBER: P735722

CATALOG NUMBER: 24APR-58-B2750-W2D-5000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1922.7 | 1922.7 | 1922.7 | 1922.7 | 1922.7 |
| 2.5°  | 1917.8 | 1921.4 | 1923.8 | 1920.9 | 1920.2 |
| 5°    | 1911.0 | 1914.0 | 1916.5 | 1913.5 | 1908.6 |
| 7.5°  | 1897.4 | 1901.2 | 1903.0 | 1899.9 | 1893.2 |
| 10°   | 1878.4 | 1882.2 | 1882.7 | 1879.7 | 1876.0 |
| 12.5° | 1855.1 | 1857.6 | 1857.6 | 1855.1 | 1850.8 |
| 15°   | 1825.0 | 1826.9 | 1828.1 | 1823.8 | 1818.2 |
| 17.5° | 1790.7 | 1793.7 | 1792.5 | 1785.8 | 1783.3 |
| 20°   | 1752.0 | 1754.4 | 1751.3 | 1747.1 | 1741.5 |
| 22.5° | 1709.5 | 1710.2 | 1707.7 | 1702.8 | 1697.3 |
| 25°   | 1664.1 | 1662.9 | 1660.5 | 1653.1 | 1647.6 |
| 27.5° | 1611.3 | 1613.8 | 1607.6 | 1600.9 | 1597.2 |
| 30°   | 1559.2 | 1559.7 | 1553.6 | 1545.0 | 1542.0 |
| 32.5° | 1503.3 | 1502.0 | 1497.7 | 1488.5 | 1483.6 |
| 35°   | 1443.6 | 1444.3 | 1438.7 | 1430.2 | 1427.1 |
| 37.5° | 1385.9 | 1382.3 | 1378.0 | 1368.2 | 1366.2 |
| 40°   | 1321.5 | 1320.8 | 1314.7 | 1306.1 | 1303.1 |
| 42.5° | 1257.0 | 1256.4 | 1251.5 | 1242.9 | 1240.5 |
| 45°   | 1191.9 | 1191.9 | 1185.7 | 1175.9 | 1173.4 |
| 47.5° | 1125.6 | 1123.1 | 1118.8 | 1110.3 | 1107.2 |
| 50°   | 1055.5 | 1053.7 | 1051.3 | 1041.4 | 1040.8 |
| 52.5° | 986.8  | 985.5  | 981.3  | 972.7  | 967.8  |
| 55°   | 916.2  | 909.4  | 911.3  | 901.4  | 899.6  |
| 57.5° | 843.7  | 837.0  | 840.6  | 832.1  | 828.4  |
| 60°   | 771.9  | 765.2  | 767.0  | 761.4  | 777.4  |
| 62.5° | 698.2  | 693.9  | 693.9  | 706.8  | 683.5  |
| 65°   | 622.7  | 618.9  | 620.9  | 612.9  | 609.1  |
| 67.5° | 548.4  | 542.8  | 554.5  | 539.7  | 533.7  |
| 70°   | 472.8  | 469.1  | 473.5  | 464.8  | 460.5  |
| 72.5° | 397.9  | 394.8  | 393.6  | 390.5  | 386.9  |
| 75°   | 324.8  | 320.5  | 322.4  | 319.9  | 315.0  |
| 77.5° | 253.6  | 252.3  | 251.8  | 248.7  | 245.0  |
| 80°   | 187.3  | 186.1  | 184.8  | 182.3  | 179.9  |
| 82.5° | 125.3  | 124.1  | 123.4  | 122.2  | 121.6  |
| 85°   | 71.8   | 70.0   | 71.2   | 68.2   | 65.7   |
| 87.5° | 27.0   | 26.4   | 27.7   | 25.2   | 23.3   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-5

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-5000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-5000K.


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-5  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-5000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 5000K-315MA, PROGRAMMED @ 6.5Vdc.

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 5031    | CRI (Ra): | 84.5 |      |      |
| CIE u':                   | 0.2182  | R1:       | 91.8 | R9:  | 77.5 |
| CIE v':                   | 0.4734  | R2:       | 85.4 | R10: | 70.0 |
| Duv:                      | -0.0101 | R3:       | 79.8 | R11: | 87.5 |
| CIE x:                    | 0.3424  | R4:       | 86.6 | R12: | 69.3 |
| CIE y:                    | 0.3302  | R5:       | 89.4 | R13: | 89.5 |
| CIE z:                    | 0.3273  | R6:       | 79.4 | R14: | 89.8 |
| Peak Wavelength (nm):     | 476     | R7:       | 81.5 |      |      |
| Dominant Wavelength (nm): | 495     | R8:       | 82.5 |      |      |
| Purity:                   | 3.1     |           |      |      |      |
| Rf:                       | 85.9    |           |      |      |      |
| Rg:                       | 94.8    |           |      |      |      |

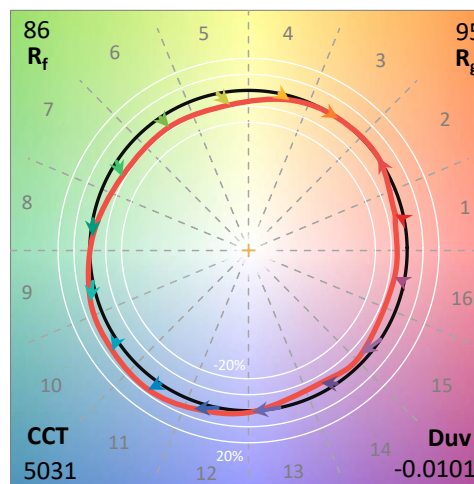

### Test Conditions


Stabilization Time: 58M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-5


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-5

**CIE 1931 Chromaticity Diagram**

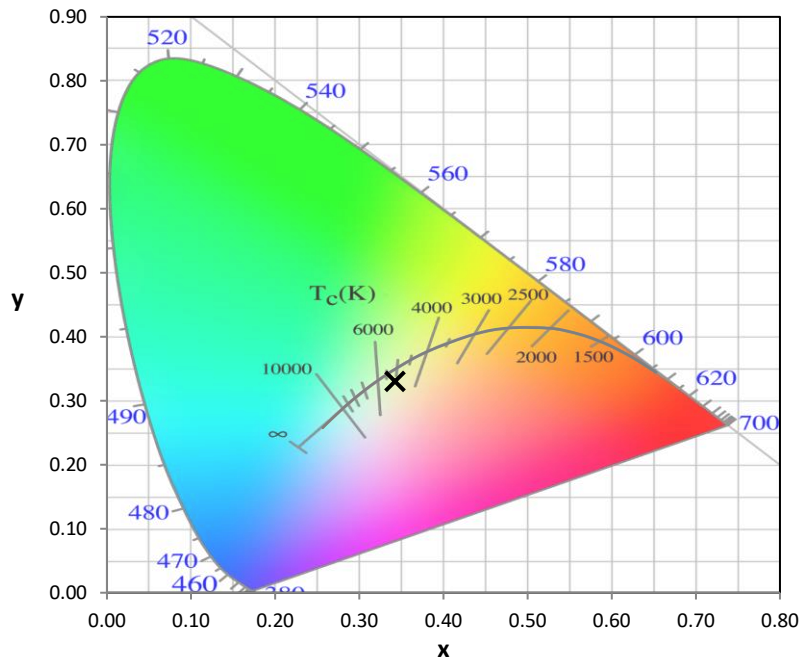


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

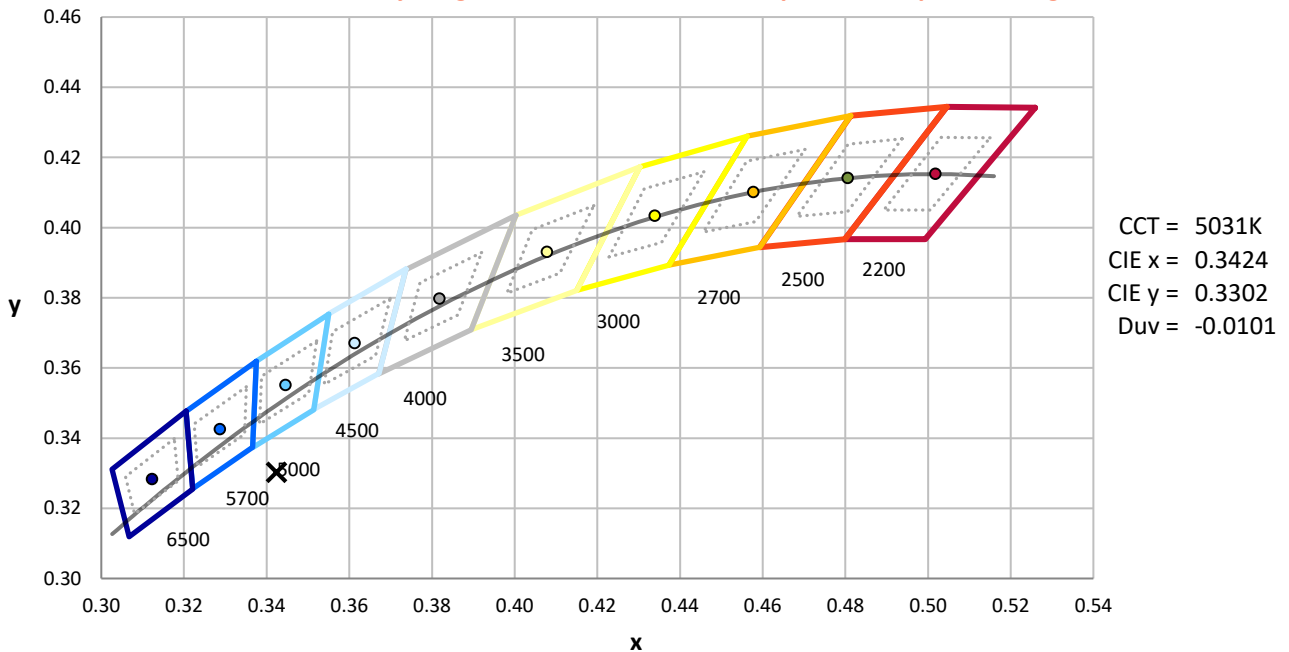

Point lies outside the range

REPORT NUMBER: SP1-2210-795-5

**Photopic Flux vs. Wavelength**

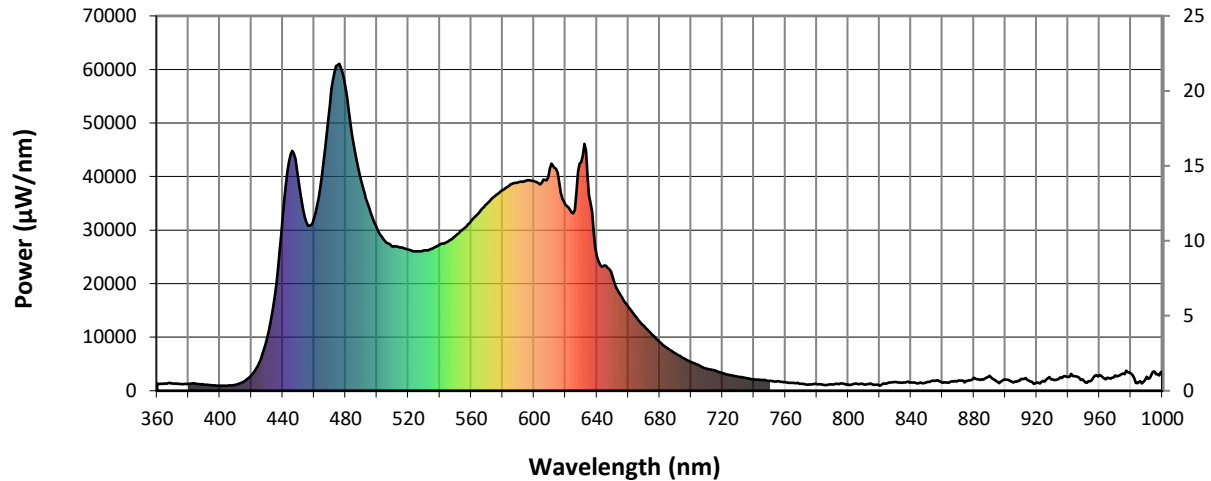


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5

**Scotopic Flux vs. Wavelength**

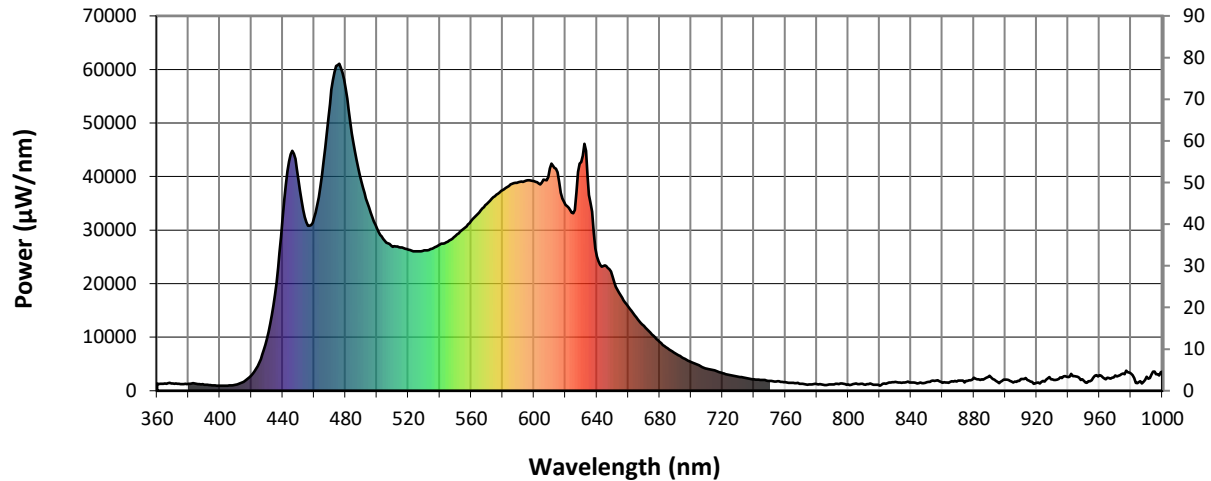


**Scotopic Lumens: 5560**

**S/P: 2.33**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5

**Melanopic Flux vs. Wavelength**

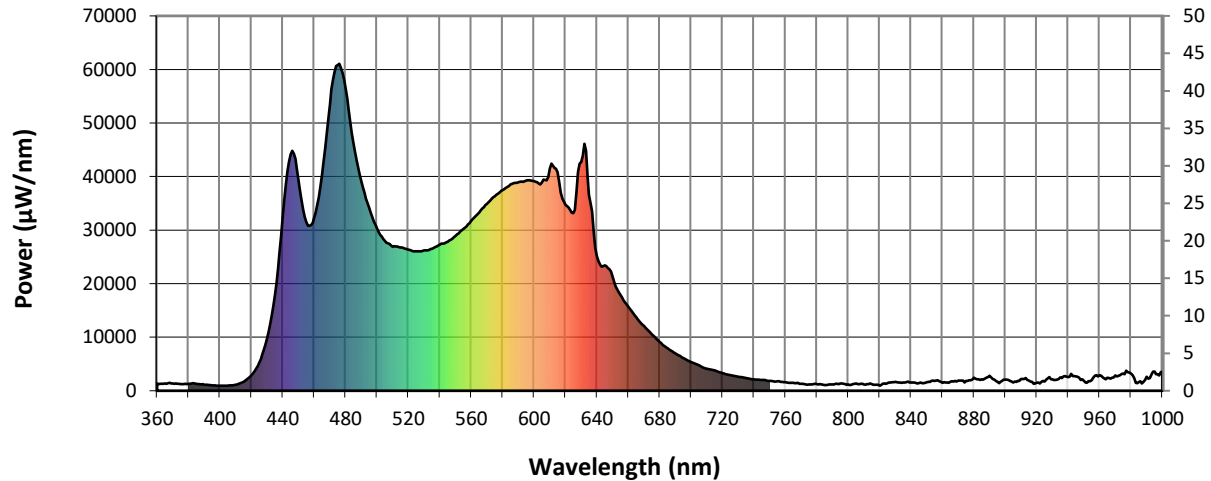

**Melanopic Lumens: 2561.9 S/P: 1.07**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5





**TM-30-18**

**Summary**

$R_f = 85.9$   
 $R_g = 94.8$   
 $CIE R_a = 84.5$   
 $R_g = 77.5$

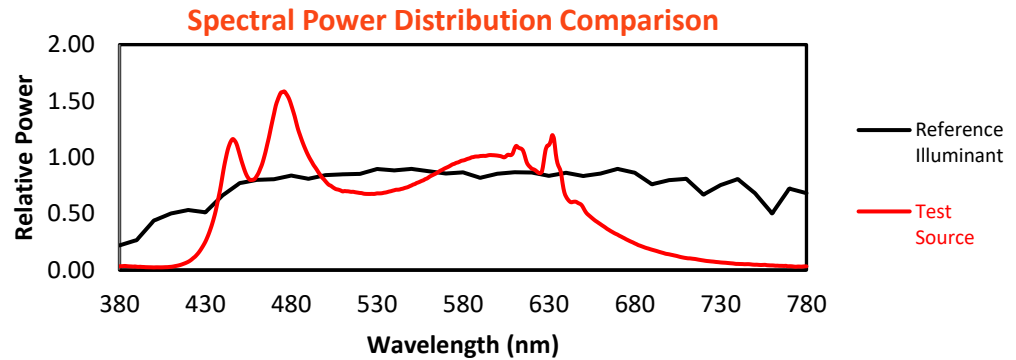

**Color Vector Graphics**

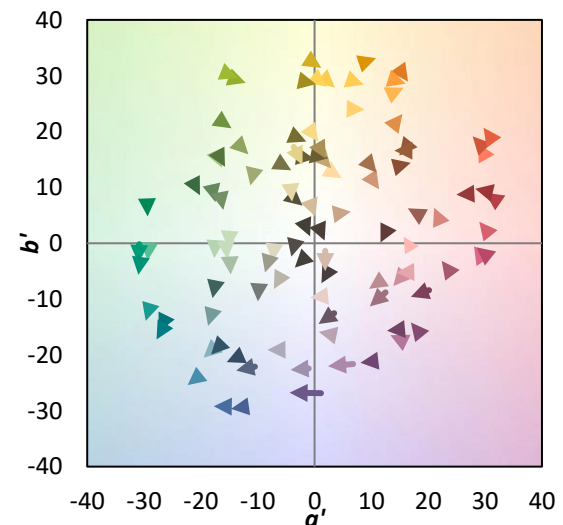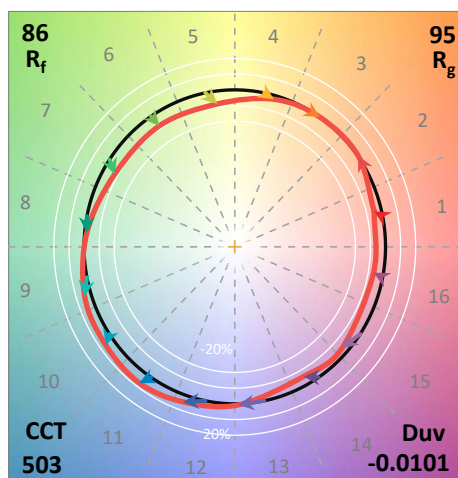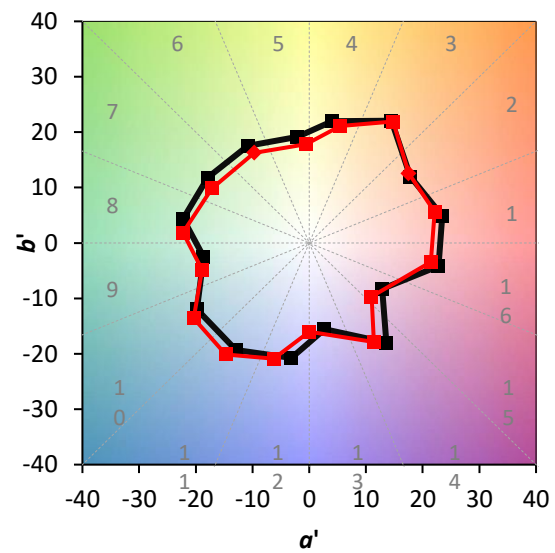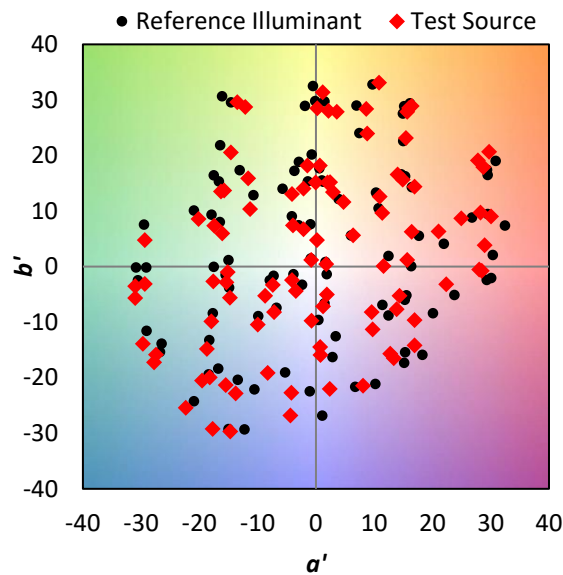


REPORT NUMBER: SP1-2210-795-5

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 88 | CES51 = 85 | CES76 = 81 |
| CES02 = 61 | CES27 = 83 | CES52 = 87 | CES77 = 77 |
| CES03 = 31 | CES28 = 90 | CES53 = 79 | CES78 = 83 |
| CES04 = 69 | CES29 = 81 | CES54 = 85 | CES79 = 80 |
| CES05 = 48 | CES30 = 81 | CES55 = 82 | CES80 = 78 |
| CES06 = 50 | CES31 = 81 | CES56 = 79 | CES81 = 63 |
| CES07 = 41 | CES32 = 87 | CES57 = 77 | CES82 = 92 |
| CES08 = 40 | CES33 = 84 | CES58 = 77 | CES83 = 86 |
| CES09 = 29 | CES34 = 85 | CES59 = 91 | CES84 = 96 |
| CES10 = 74 | CES35 = 91 | CES60 = 89 | CES85 = 77 |
| CES11 = 57 | CES36 = 80 | CES61 = 87 | CES86 = 70 |
| CES12 = 63 | CES37 = 89 | CES62 = 81 | CES87 = 85 |
| CES13 = 43 | CES38 = 76 | CES63 = 92 | CES88 = 86 |
| CES14 = 74 | CES39 = 93 | CES64 = 83 | CES89 = 82 |
| CES15 = 71 | CES40 = 87 | CES65 = 90 | CES90 = 85 |
| CES16 = 47 | CES41 = 89 | CES66 = 85 | CES91 = 76 |
| CES17 = 49 | CES42 = 81 | CES67 = 86 | CES92 = 75 |
| CES18 = 56 | CES43 = 80 | CES68 = 89 | CES93 = 85 |
| CES19 = 71 | CES44 = 99 | CES69 = 90 | CES94 = 77 |
| CES20 = 66 | CES45 = 84 | CES70 = 89 | CES95 = 85 |
| CES21 = 85 | CES46 = 86 | CES71 = 86 | CES96 = 92 |
| CES22 = 77 | CES47 = 83 | CES72 = 94 | CES97 = 82 |
| CES23 = 91 | CES48 = 79 | CES73 = 87 | CES98 = 83 |
| CES24 = 89 | CES49 = 87 | CES74 = 89 | CES99 = 86 |
| CES25 = 70 | CES50 = 85 | CES75 = 84 |            |

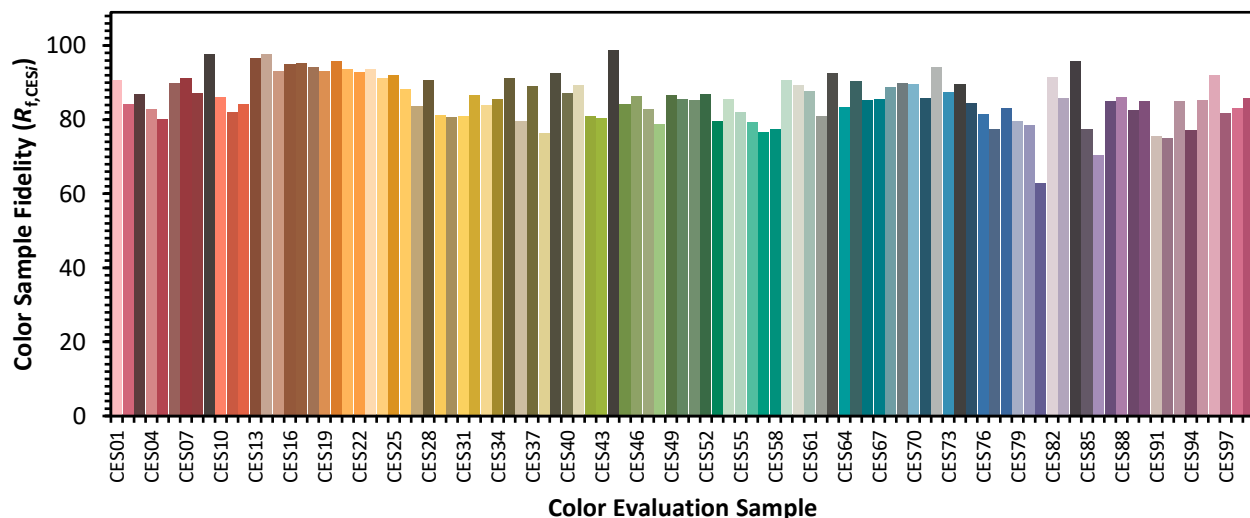

REPORT NUMBER: SP1-2210-795-5

**TM-30-18**



**Color Rendition by Hue-Angle Bin**

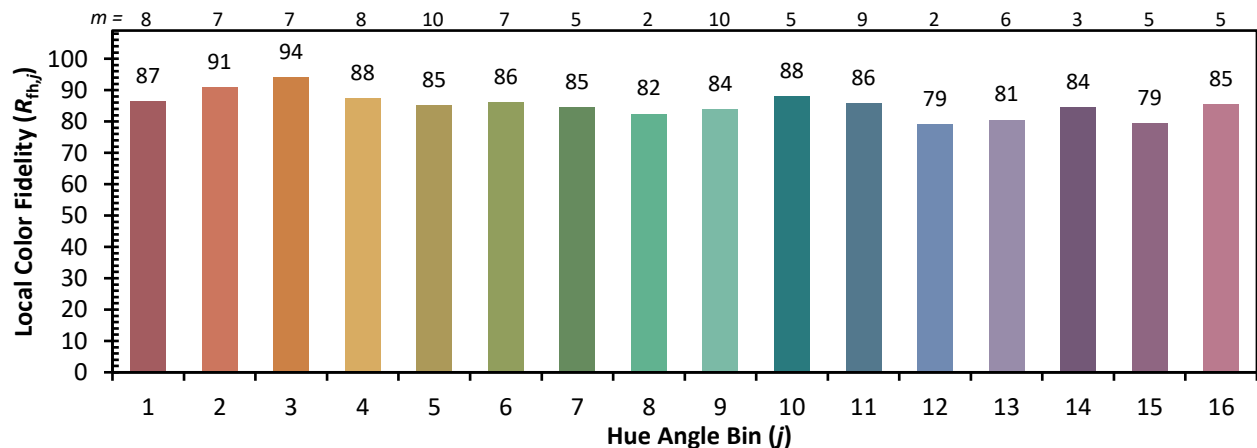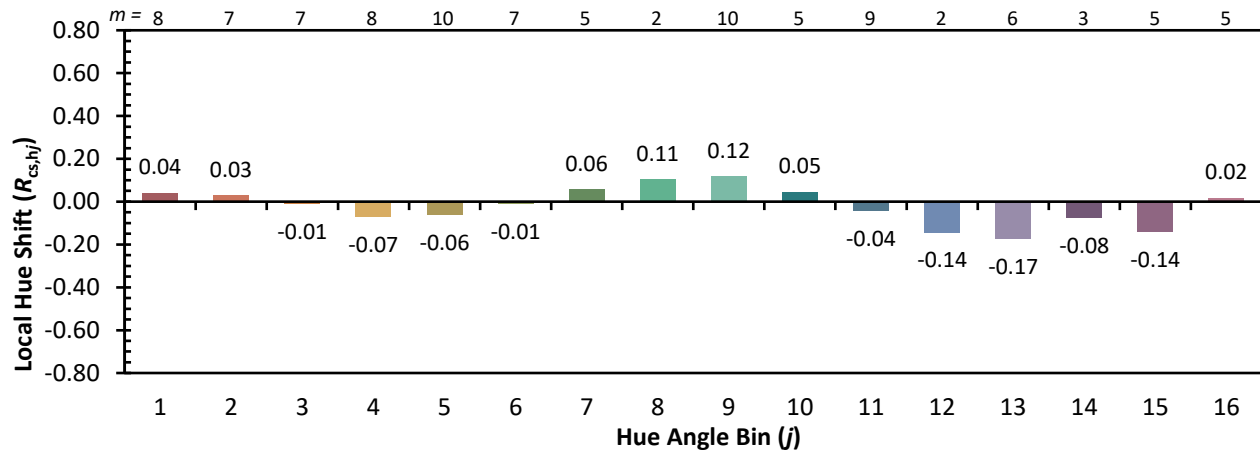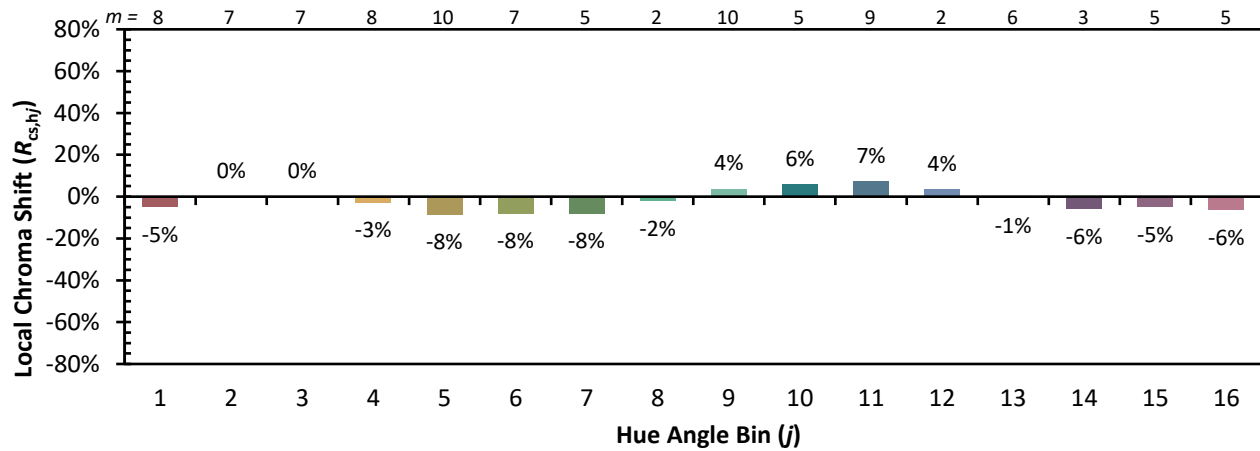

REPORT NUMBER: SP1-2210-795-5

**TM-30-18**

**Measure Comparisons**

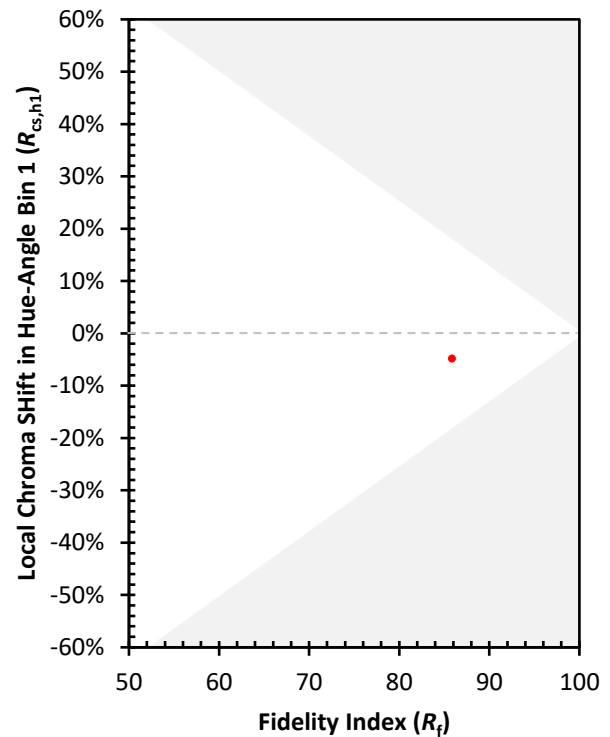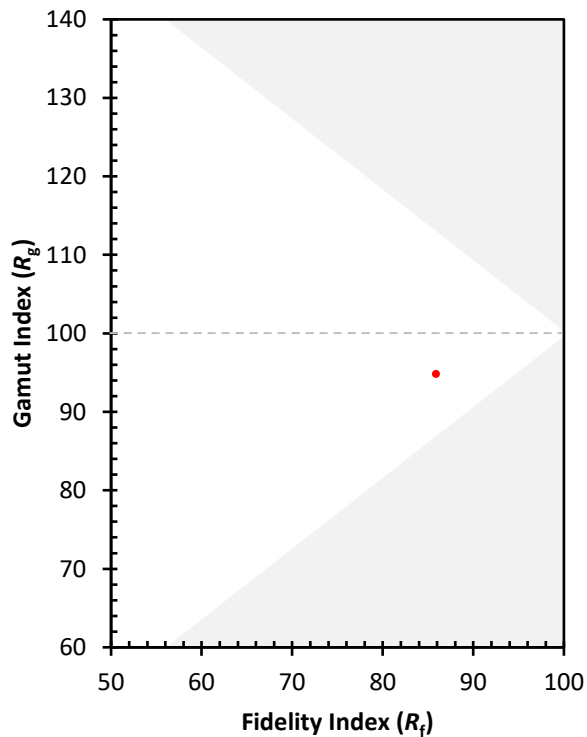

(END OF REPORT)