

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P735594

Luminaire Tested: **4APN6-24-B2750-W2D-CP250-3000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P735594
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P709119)
Test Lab: INNOVATION CENTER(G2)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: 4APN6-24-B2750-W2D-CP250-3000K
Description: 4FT 2400 AMBIENT LUMEN OUTPUT APN WITH BIO UP LEDS AT 3000K CCT, AND CP250 LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1995.0 lumens
Efficiency: N/A
Efficacy: 83.8 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.21 / 1.33
Luminous Opening: Rectangular (W 0.29' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 23.8
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

Luminous Intensity Polar Plot

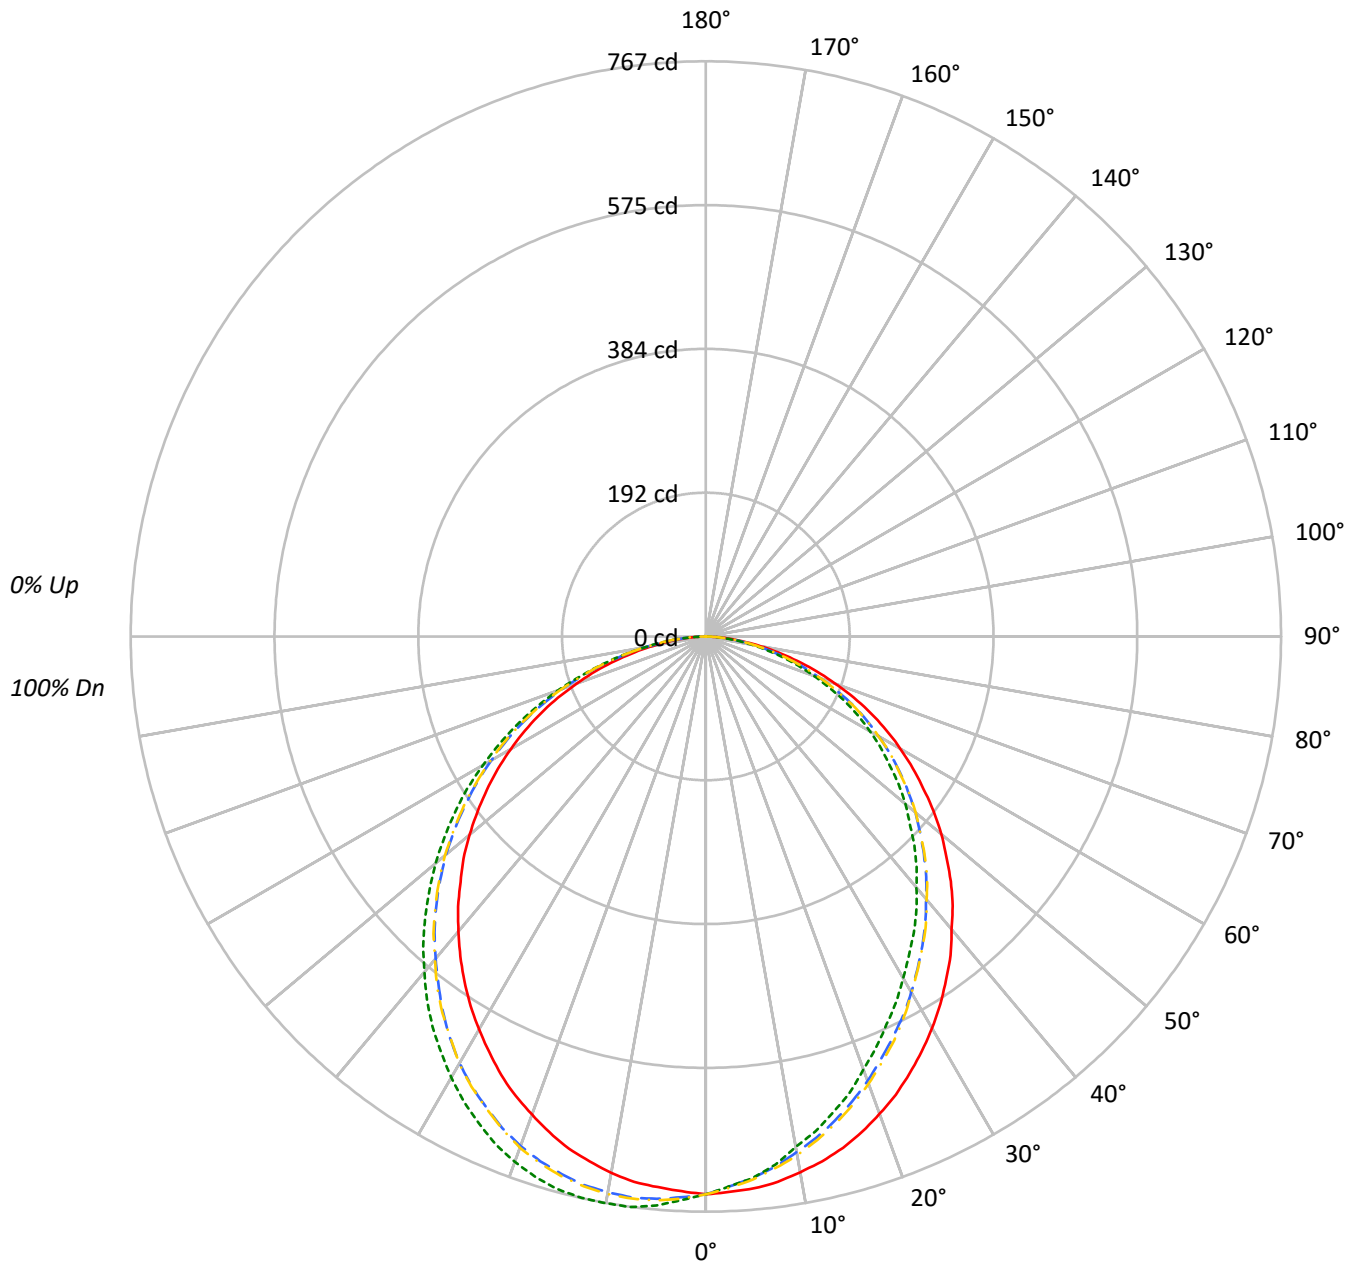



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	109	104	100	96	106	102	98	95	98	94	92	94	91	89	90	88	86	84		
2	99	91	84	78	96	89	83	77	85	80	76	82	78	74	79	76	72	70		
3	90	80	72	65	88	78	71	65	75	69	64	73	67	62	70	65	61	59		
4	83	71	62	55	81	70	61	55	67	60	54	65	59	54	63	57	53	51		
5	76	63	54	48	74	62	54	48	60	53	47	58	52	47	56	51	46	44		
6	70	57	48	42	68	56	48	42	54	47	41	53	46	41	51	45	41	38		
7	65	52	43	37	64	51	43	37	49	42	37	48	41	36	47	41	36	34		
8	61	47	39	33	59	47	39	33	45	38	33	44	37	33	43	37	32	30		
9	57	43	35	30	55	43	35	30	42	35	30	41	34	29	40	34	29	27		
10	53	40	32	27	52	40	32	27	39	32	27	38	31	27	37	31	27	25		

AVERAGE LUMINANCE (cd/sqm):

	0°	90°	180°	270°
0°	6862	6862	6862	6862
5°	6842	6710	6827	7054
10°	6795	6473	6803	7189
15°	6743	6270	6752	7290
20°	6651	6031	6659	7320
25°	6545	5808	6570	7290
30°	6427	5604	6445	7234
35°	6293	5440	6321	7155
40°	6141	5260	6182	7034
45°	6027	5128	6039	6906
50°	5882	4988	5905	6752
55°	5697	4805	5738	6564
60°	5526	4659	5543	6335
65°	5307	4464	5307	6062
70°	4947	4133	4926	5651
75°	4499	3750	4438	5073
80°	3889	3220	3756	4336
85°	3038	2403	2848	3567



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	70.3	3.5
10°-20°	199.5	10.0
20°-30°	296.6	14.9
30°-40°	349.5	17.5
40°-50°	355.9	17.8
50°-60°	317.0	15.9
60°-70°	238.9	12.0
70°-80°	132.8	6.7
80°-90°	34.5	1.7
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	566.3	28.4
0°-40°	915.8	45.9
0°-60°	1588.8	79.6
0°-90°	1995.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1995.0	100.0

CANDELA DISTRIBUTION:

	0°	90°	180°	270°	360°	Flux
0°	744	744	744	744	744	
5°	739	724	737	762	739	70
15°	706	656	707	763	706	199
25°	643	570	645	716	643	296
35°	559	483	561	635	559	350
45°	462	393	463	529	462	356
55°	354	299	357	408	354	317
65°	243	204	243	278	243	240
75°	126	105	124	142	126	134
85°	29	23	27	34	29	34
90°	0	0	0	0	0	



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

CANDELA DISTRIBUTION (FULL):

	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°	100°
0°	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8
2.5°	741.3	741.3	742.1	738.8	734.6	732.9	732.1	731.2	732.9	733.7	732.9
5°	738.8	737.1	735.4	731.2	726.2	722.8	721.1	720.3	722.0	724.5	722.0
7.5°	733.7	730.4	727.0	721.1	715.3	710.2	707.7	706.0	707.7	710.2	708.5
10°	725.3	721.1	716.1	709.4	701.0	695.1	692.6	690.0	690.9	690.9	690.9
12.5°	716.9	711.1	705.2	696.8	687.4	680.7	676.5	673.2	674.8	675.7	675.7
15°	706.0	698.5	690.0	680.7	671.5	663.9	658.9	655.5	656.4	656.4	657.2
17.5°	692.6	684.1	675.7	664.8	653.8	645.4	639.6	635.3	637.0	637.9	638.7
20°	677.4	668.1	658.9	647.1	635.3	626.0	620.1	615.1	614.3	614.3	615.1
22.5°	661.4	651.3	640.4	627.7	615.1	605.0	599.1	594.1	593.3	593.3	594.1
25°	642.9	631.9	621.0	608.4	594.9	584.9	577.2	572.2	571.3	570.5	572.2
27.5°	623.5	612.6	601.7	589.1	574.7	564.6	557.0	552.0	550.3	549.5	551.2
30°	603.3	590.7	578.9	565.4	552.8	542.8	535.2	529.3	527.7	526.0	527.7
32.5°	581.5	568.8	556.2	542.8	530.2	520.0	512.4	506.6	504.9	504.0	505.7
35°	558.7	546.1	534.4	520.8	508.2	498.2	490.6	485.6	483.9	483.0	483.9
37.5°	536.0	523.4	511.6	498.2	485.6	475.5	467.8	462.8	461.9	461.1	461.9
40°	509.9	499.0	487.2	474.6	461.9	451.9	446.0	440.1	438.4	436.7	439.3
42.5°	487.2	476.3	464.5	452.7	440.1	430.0	423.3	418.3	416.6	415.7	416.6
45°	461.9	450.2	438.4	427.5	415.7	406.4	399.7	394.6	393.8	393.0	393.8
47.5°	435.1	425.0	414.9	403.9	392.1	382.9	377.0	372.0	370.3	368.6	370.3
50°	409.8	399.7	389.6	379.5	368.6	360.2	354.2	349.2	348.3	347.5	348.3
52.5°	382.9	372.8	363.6	353.4	344.1	335.7	329.9	325.7	324.8	324.0	324.8
55°	354.2	345.8	337.4	329.0	319.8	312.2	307.2	302.0	300.4	298.7	300.4
57.5°	327.3	319.8	311.4	302.9	294.5	287.8	282.7	278.5	277.7	276.8	277.7
60°	299.5	292.8	285.2	277.7	269.3	262.6	258.4	255.0	253.3	252.5	253.3
62.5°	271.8	265.1	259.2	251.6	244.0	238.9	234.7	231.4	229.7	228.9	229.7
65°	243.1	237.3	231.4	224.7	218.8	213.7	209.5	206.2	205.3	204.5	204.5
67.5°	213.7	208.7	203.7	197.8	191.0	185.9	181.7	179.2	178.4	177.5	178.4
70°	183.4	179.2	174.2	169.1	164.1	159.9	157.4	154.9	154.0	153.2	153.2
72.5°	154.9	151.5	147.3	143.1	138.9	134.6	132.1	130.4	129.6	128.7	128.7
75°	126.2	122.8	120.3	117.0	112.8	110.2	107.7	106.0	105.2	105.2	105.2
77.5°	99.3	96.8	94.3	90.9	88.4	85.9	84.2	83.4	82.4	82.4	82.4
80°	73.2	71.5	69.8	68.1	65.6	63.1	62.3	61.4	60.6	60.6	60.6
82.5°	49.7	48.8	47.1	45.5	43.8	42.9	42.1	41.3	41.3	41.3	41.3
85°	28.7	27.8	26.9	26.0	25.2	25.2	24.4	23.5	22.7	22.7	22.7
87.5°	11.8	11.8	11.8	10.9	10.1	10.1	10.1	10.1	10.1	10.1	10.1
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

CANDELA DISTRIBUTION (continued):

	110°	120°	130°	140°	150°	160°	170°	180°	190°	200°	210°
0°	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8
2.5°	731.2	732.9	734.6	737.1	739.6	742.1	741.3	740.5	743.8	748.1	749.0
5°	720.3	722.0	724.5	728.7	732.9	736.3	737.1	737.1	743.8	749.8	751.5
7.5°	706.9	709.4	712.7	716.9	722.8	727.9	730.4	733.7	740.5	748.1	751.5
10°	690.0	694.3	699.3	705.2	711.1	716.9	722.0	726.2	734.6	743.0	748.1
12.5°	674.8	679.0	684.1	690.9	698.5	706.0	711.1	716.9	727.0	737.1	743.0
15°	658.0	662.2	668.1	674.8	683.2	691.7	699.3	706.9	716.9	727.9	734.6
17.5°	639.6	643.8	649.6	658.0	667.3	676.5	684.9	693.4	705.2	716.9	724.5
20°	616.8	622.7	630.2	638.7	649.6	660.6	669.0	678.2	690.9	703.5	711.9
22.5°	594.9	600.8	609.2	619.3	631.1	642.9	653.0	663.1	676.5	689.1	698.5
25°	573.8	580.7	589.1	599.1	610.1	621.8	633.6	645.4	658.9	672.3	681.6
27.5°	552.8	558.7	567.1	577.2	589.9	601.7	613.4	625.2	639.6	653.8	663.9
30°	529.3	536.0	543.6	553.7	567.1	580.7	592.4	605.0	619.3	633.6	643.8
32.5°	507.4	513.3	520.8	531.0	544.4	557.9	570.5	584.0	597.5	611.7	621.8
35°	485.6	491.4	499.0	509.1	522.5	536.0	548.6	561.2	574.7	588.2	598.3
37.5°	463.6	469.5	477.2	487.2	499.8	513.3	525.1	537.7	551.2	564.6	573.8
40°	440.9	446.8	452.7	462.8	475.5	488.9	500.7	513.3	526.8	540.2	549.5
42.5°	418.3	424.1	431.7	441.8	453.5	465.3	477.2	488.9	501.5	514.1	523.4
45°	395.5	400.5	408.1	417.4	429.2	440.1	451.9	462.8	475.5	487.2	496.5
47.5°	372.0	377.0	382.9	392.1	403.9	415.7	427.5	438.4	449.3	461.1	469.5
50°	349.2	354.2	361.0	369.4	380.4	391.3	401.4	411.4	422.5	433.4	440.9
52.5°	325.7	330.7	336.6	345.0	354.2	364.4	373.6	383.7	393.8	403.9	411.4
55°	302.0	305.5	310.5	318.1	328.2	338.3	347.5	356.7	366.1	374.5	382.0
57.5°	278.5	282.7	288.6	295.3	303.7	312.2	320.6	329.0	337.4	345.8	352.5
60°	255.0	258.4	262.6	268.4	276.8	284.4	292.8	300.4	308.0	315.6	321.5
62.5°	230.5	233.9	238.1	244.0	250.8	257.5	265.1	271.8	278.5	285.2	291.1
65°	205.3	208.7	212.9	217.9	223.8	229.7	236.4	243.1	248.2	253.3	259.2
67.5°	179.2	182.6	186.8	191.0	196.1	202.0	207.9	213.7	218.8	223.8	228.0
70°	154.0	156.5	160.7	164.1	168.3	172.5	177.5	182.6	185.9	190.1	195.3
72.5°	129.6	132.1	135.4	138.9	141.4	144.8	149.8	154.0	158.2	163.3	165.8
75°	106.0	107.7	110.2	112.8	115.3	117.8	121.2	124.5	127.9	130.4	133.8
77.5°	82.4	84.2	86.7	88.4	90.1	91.8	94.3	96.8	99.3	101.0	104.4
80°	60.6	62.3	63.9	65.6	67.3	69.0	69.8	70.7	74.0	76.5	78.2
82.5°	41.3	42.1	42.9	44.6	45.5	46.3	47.1	47.1	48.8	50.5	53.0
85°	23.5	24.4	25.2	25.2	25.2	25.2	26.0	26.9	27.8	29.5	31.2
87.5°	9.2	9.2	10.1	10.1	10.1	10.1	10.1	10.1	10.9	12.6	13.4
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

CANDELA DISTRIBUTION (continued):

	220°	230°	240°	250°	260°	270°	280°	290°	300°	310°	320°
0°	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8	743.8
2.5°	748.1	749.0	750.6	751.5	752.3	752.3	753.2	754.0	752.3	750.6	749.8
5°	752.3	753.2	755.7	758.2	759.9	761.6	760.7	759.9	758.2	755.7	754.0
7.5°	753.2	755.7	758.2	761.6	764.1	767.4	765.8	764.1	760.7	757.4	754.8
10°	750.6	754.0	758.2	762.4	764.9	767.4	765.8	764.1	760.7	756.5	753.2
12.5°	747.3	751.5	756.5	760.7	763.2	766.6	764.1	761.6	757.4	753.2	749.0
15°	739.6	744.7	750.6	755.7	759.9	763.2	760.7	759.0	754.0	748.1	742.1
17.5°	730.4	737.1	743.0	749.0	752.3	755.7	754.0	752.3	746.4	739.6	732.9
20°	719.5	726.2	732.1	737.9	742.1	745.5	743.0	740.5	734.6	728.7	722.0
22.5°	706.0	712.7	719.5	725.3	729.5	732.9	729.5	725.3	719.5	713.6	706.9
25°	689.1	696.8	704.3	710.2	712.7	716.1	712.7	709.4	703.5	697.6	690.0
27.5°	672.3	679.9	687.4	693.4	695.9	699.3	695.9	692.6	686.6	680.7	673.2
30°	653.0	660.6	668.1	674.0	676.5	679.0	675.7	672.3	667.3	661.4	653.8
32.5°	631.1	638.7	644.6	650.5	653.8	657.2	653.8	651.3	645.4	637.9	630.2
35°	607.5	615.1	622.7	628.5	631.9	635.3	631.1	626.9	621.8	615.9	609.2
37.5°	581.5	589.9	598.3	605.0	607.5	610.9	607.5	603.3	598.3	592.4	584.9
40°	557.0	564.6	572.2	578.9	581.5	584.0	580.7	577.2	571.3	565.4	557.9
42.5°	531.9	539.4	546.1	552.0	554.5	557.9	554.5	550.3	546.1	541.1	534.4
45°	504.9	512.4	518.3	524.2	526.8	529.3	526.0	521.7	517.5	513.3	506.6
47.5°	477.2	483.9	489.8	495.6	497.3	499.8	496.5	494.0	489.8	485.6	479.7
50°	448.5	455.2	461.1	466.1	467.8	470.4	467.0	463.6	460.3	456.9	451.9
52.5°	419.1	425.0	430.9	435.9	437.6	439.3	435.9	432.5	429.2	425.8	420.8
55°	388.8	394.6	400.5	404.7	406.4	408.1	404.7	402.2	398.8	396.3	391.3
57.5°	358.4	364.4	369.4	373.6	375.3	377.0	373.6	370.3	367.8	365.2	361.0
60°	327.3	333.2	337.4	340.8	342.5	343.3	339.9	337.4	335.7	334.1	329.9
62.5°	297.0	301.2	305.5	308.0	309.7	310.5	308.0	306.3	304.7	302.9	299.5
65°	265.1	270.1	273.5	276.0	276.8	277.7	275.2	273.5	271.8	270.1	267.6
67.5°	233.1	237.3	239.8	242.3	243.1	243.1	243.1	242.3	240.6	238.1	235.6
70°	201.1	204.5	207.0	208.7	209.5	209.5	207.9	206.2	206.2	205.3	203.7
72.5°	168.3	170.8	172.5	174.2	174.2	174.2	174.2	175.0	174.2	172.5	170.0
75°	137.1	139.7	141.4	142.3	142.3	142.3	142.3	143.1	142.3	141.4	139.7
77.5°	107.7	109.4	110.2	111.1	111.1	111.1	111.9	112.8	111.9	111.1	110.2
80°	79.9	80.7	81.6	82.4	81.6	81.6	82.4	84.2	83.4	82.4	81.6
82.5°	54.7	55.5	56.4	56.4	57.2	58.1	58.1	58.1	58.1	57.2	56.4
85°	32.9	33.7	33.7	33.7	33.7	33.7	34.5	35.4	35.4	34.5	34.5
87.5°	15.1	16.0	15.1	14.3	13.4	13.4	15.1	16.8	16.8	16.0	16.0
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735594

CATALOG NUMBER: 4APN6-24-B2750-W2D-CP250-3000K

CANDELA DISTRIBUTION (continued):

	330°	340°	350°	360°
0°	743.8	743.8	743.8	743.8
2.5°	750.6	749.8	745.5	741.3
5°	753.2	750.6	744.7	738.8
7.5°	753.2	749.8	741.3	733.7
10°	749.0	743.8	734.6	725.3
12.5°	743.8	737.9	727.0	716.9
15°	736.3	729.5	717.8	706.0
17.5°	725.3	716.9	705.2	692.6
20°	714.4	705.2	690.9	677.4
22.5°	699.3	690.9	675.7	661.4
25°	682.4	673.2	658.0	642.9
27.5°	664.8	653.8	638.7	623.5
30°	644.6	633.6	618.5	603.3
32.5°	622.7	612.6	597.5	581.5
35°	600.8	589.9	574.7	558.7
37.5°	576.4	566.3	551.2	536.0
40°	550.3	540.2	525.1	509.9
42.5°	526.0	516.6	501.5	487.2
45°	499.0	489.8	475.5	461.9
47.5°	471.3	461.9	448.5	435.1
50°	444.3	435.1	422.5	409.8
52.5°	414.0	406.4	394.6	382.9
55°	384.6	377.0	365.2	354.2
57.5°	355.1	348.3	337.4	327.3
60°	324.0	317.3	308.9	299.5
62.5°	294.5	288.6	280.2	271.8
65°	263.4	258.4	250.8	243.1
67.5°	231.4	227.2	220.5	213.7
70°	199.5	194.4	189.3	183.4
72.5°	167.5	164.9	159.9	154.9
75°	137.1	134.6	130.4	126.2
77.5°	108.6	106.0	102.7	99.3
80°	79.9	78.2	75.7	73.2
82.5°	55.5	53.9	52.2	49.7
85°	33.7	32.0	30.3	28.7
87.5°	15.1	14.3	12.6	11.8
90°	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - - 90°-270° - · - 135°-315°













LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-2

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3000K.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-3000K-315MA**
 Description: METALUX

TUNABLE BOARD, 3000K-315MA, PROGRAMMED @ 2.6Vdc.

Spectral Parameters

CCT (K):	3004	CRI (Ra):	93.2		
CIE u':	0.2526	R1:	98.5	R9:	67.1
CIE v':	0.5127	R2:	96.3	R10:	94.0
Duv:	-0.0061	R3:	94.1	R11:	97.7
CIE x:	0.4279	R4:	96.5	R12:	86.0
CIE y:	0.3860	R5:	98.5	R13:	98.4
CIE z:	0.1861	R6:	90.3	R14:	98.1
Peak Wavelength (nm):	632	R7:	88.3		
Dominant Wavelength (nm):	585	R8:	83.1		
Purity:	44.5				
Rf:	92.5				
Rg:	99.9				

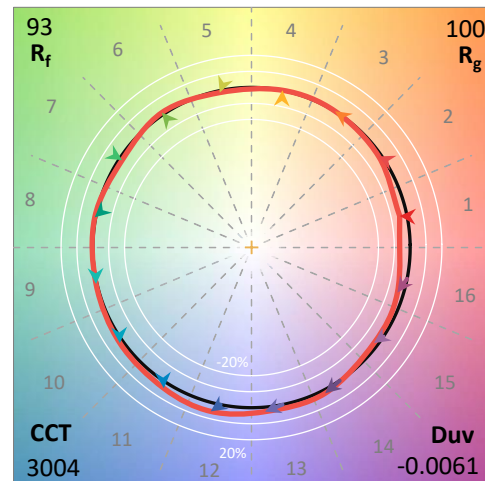

Test Conditions


Stabilization Time: 53M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-2


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-2

CIE 1931 Chromaticity Diagram

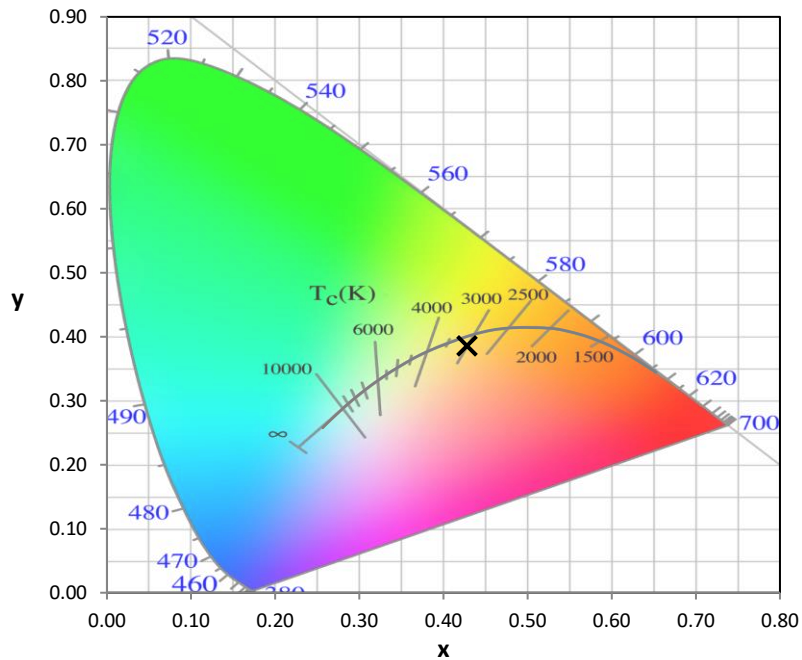


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

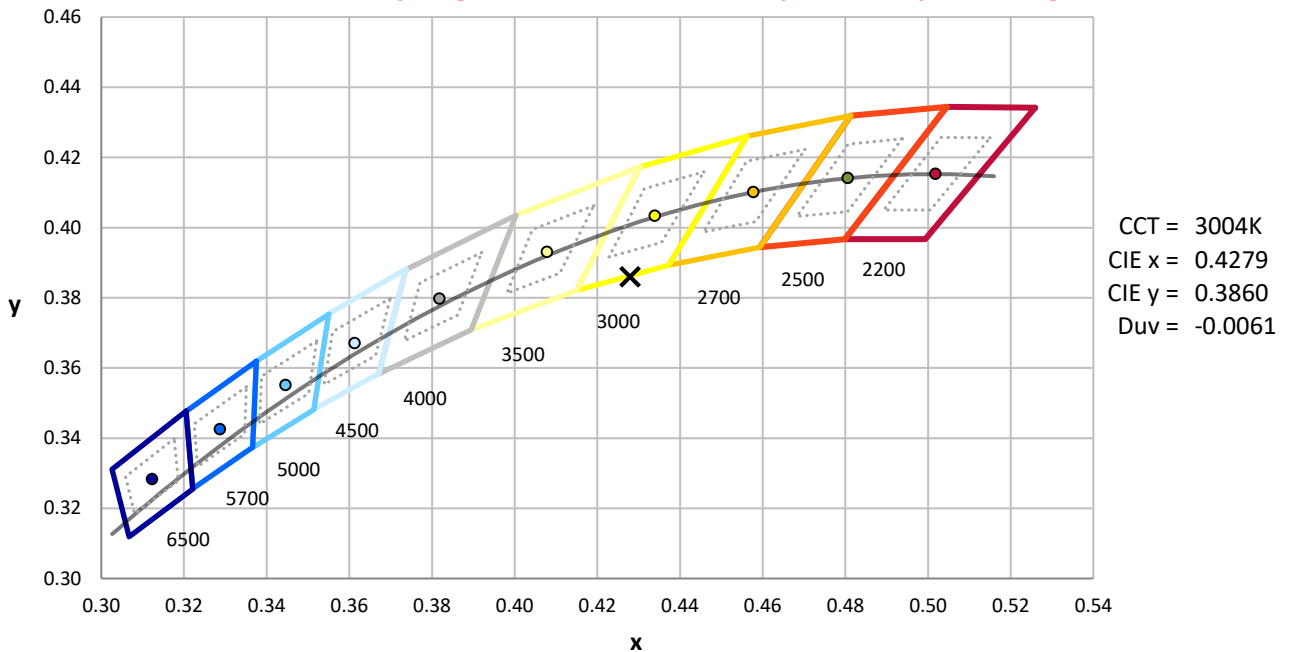

Point lies outside the range

REPORT NUMBER: SP1-2210-795-2

Photopic Flux vs. Wavelength

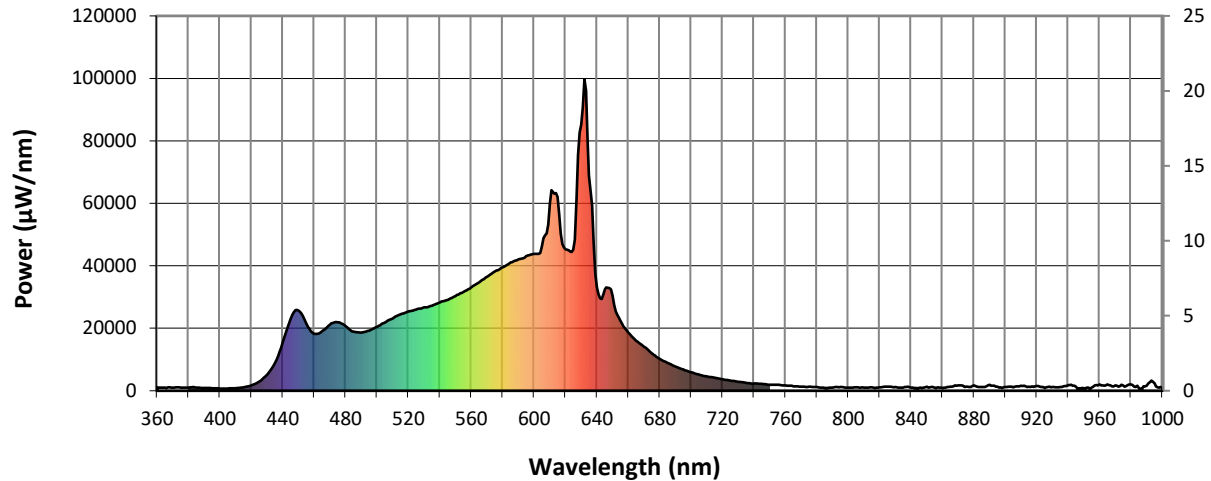


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Scotopic Flux vs. Wavelength

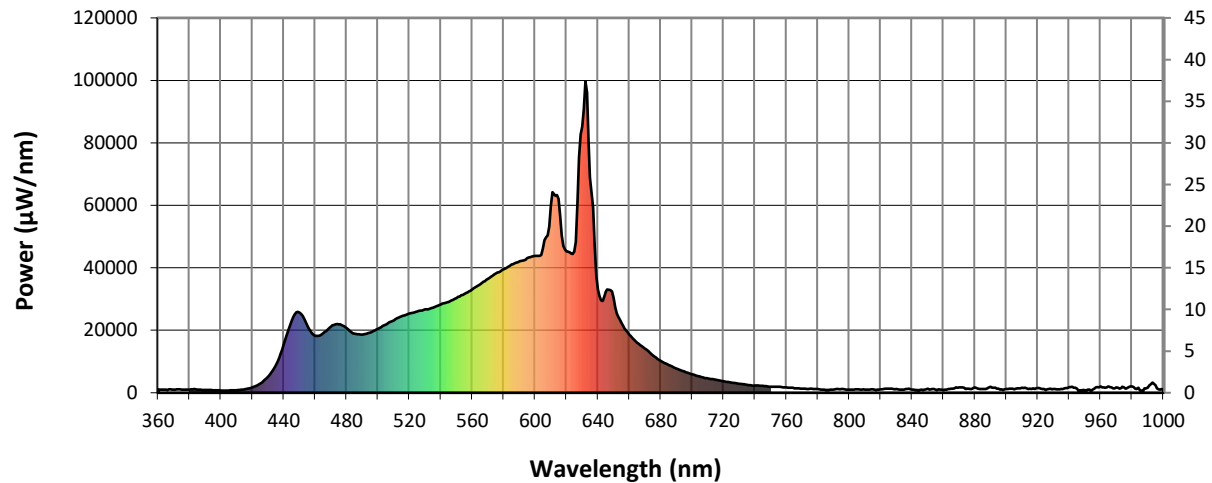


Scotopic Lumens: 3849.1

S/P: 1.53

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Melanopic Flux vs. Wavelength

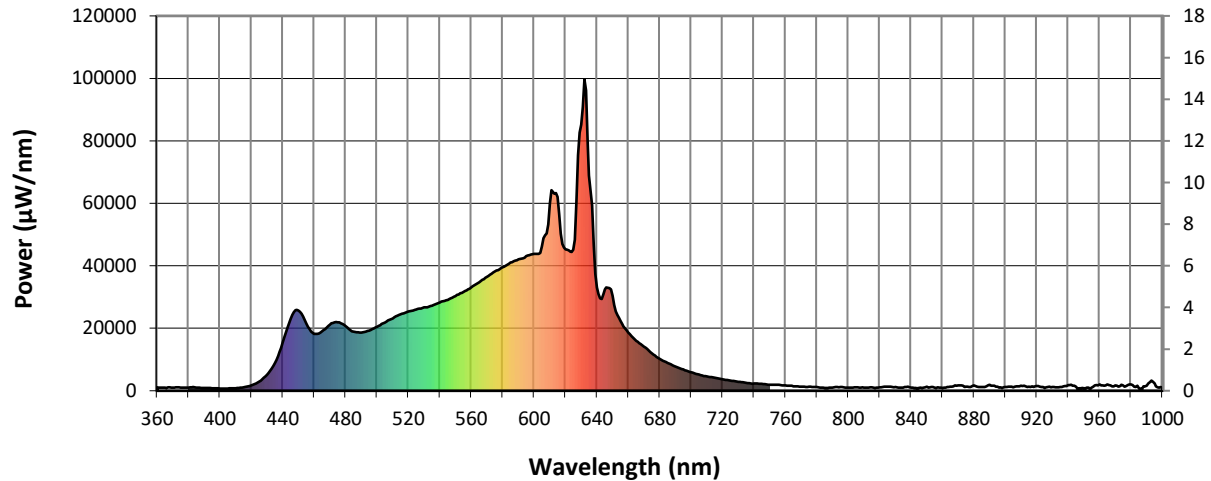

Melanopic Lumens: 1558.5

S/P: 0.62


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2





TM-30-18

Summary

$R_f = 92.5$
 $R_g = 99.9$
 CIE $R_a = 93.2$
 $R_g = 67.1$

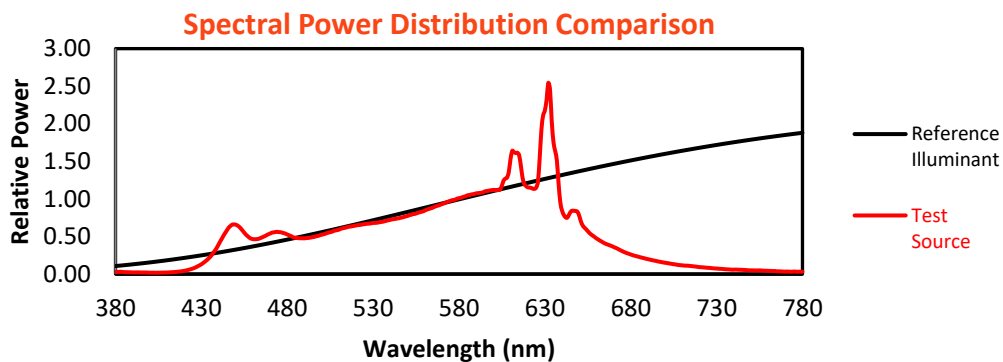

Color Vector Graphics

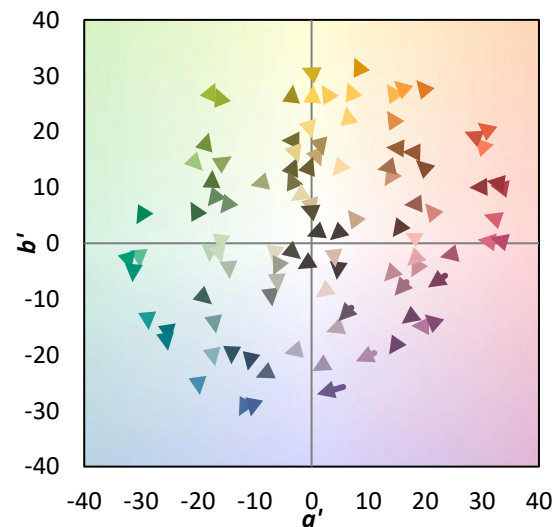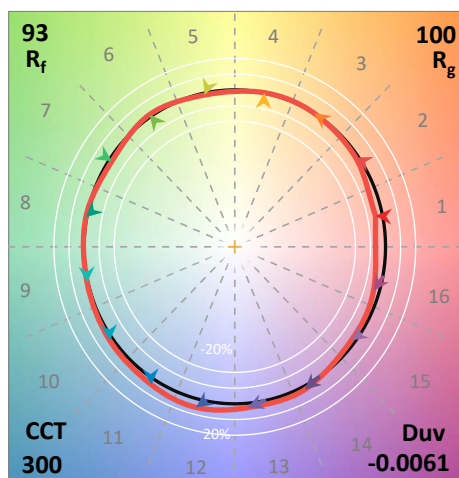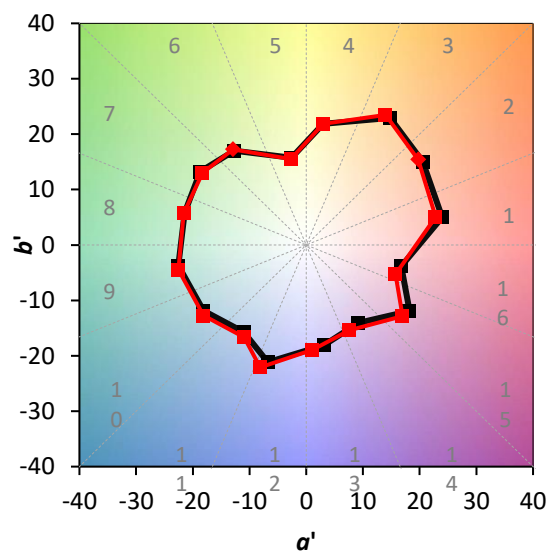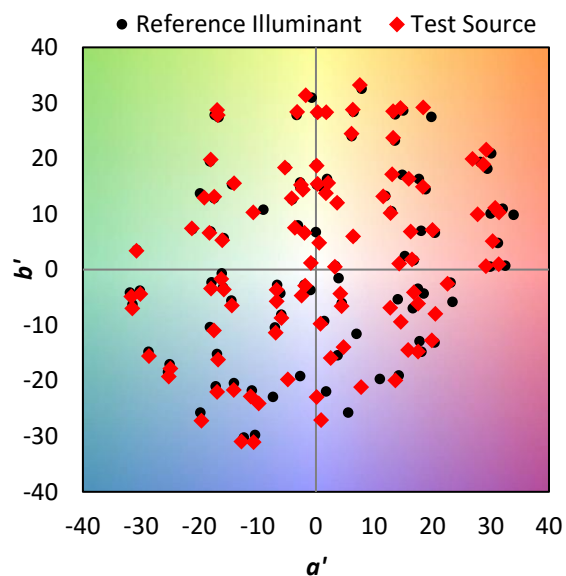


REPORT NUMBER: SP1-2210-795-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 97	CES51 = 97	CES76 = 94
CES02 = 63	CES27 = 93	CES52 = 98	CES77 = 81
CES03 = 32	CES28 = 99	CES53 = 97	CES78 = 91
CES04 = 70	CES29 = 99	CES54 = 93	CES79 = 85
CES05 = 51	CES30 = 95	CES55 = 93	CES80 = 87
CES06 = 51	CES31 = 99	CES56 = 96	CES81 = 67
CES07 = 44	CES32 = 92	CES57 = 95	CES82 = 94
CES08 = 42	CES33 = 99	CES58 = 95	CES83 = 91
CES09 = 29	CES34 = 96	CES59 = 97	CES84 = 97
CES10 = 76	CES35 = 98	CES60 = 94	CES85 = 78
CES11 = 59	CES36 = 87	CES61 = 94	CES86 = 76
CES12 = 65	CES37 = 98	CES62 = 89	CES87 = 93
CES13 = 44	CES38 = 91	CES63 = 99	CES88 = 96
CES14 = 74	CES39 = 100	CES64 = 94	CES89 = 83
CES15 = 72	CES40 = 98	CES65 = 94	CES90 = 96
CES16 = 48	CES41 = 95	CES66 = 95	CES91 = 81
CES17 = 50	CES42 = 96	CES67 = 94	CES92 = 78
CES18 = 57	CES43 = 93	CES68 = 93	CES93 = 86
CES19 = 72	CES44 = 99	CES69 = 94	CES94 = 75
CES20 = 67	CES45 = 97	CES70 = 93	CES95 = 86
CES21 = 86	CES46 = 97	CES71 = 92	CES96 = 93
CES22 = 79	CES47 = 87	CES72 = 96	CES97 = 96
CES23 = 92	CES48 = 93	CES73 = 90	CES98 = 95
CES24 = 90	CES49 = 97	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 97	CES75 = 93	

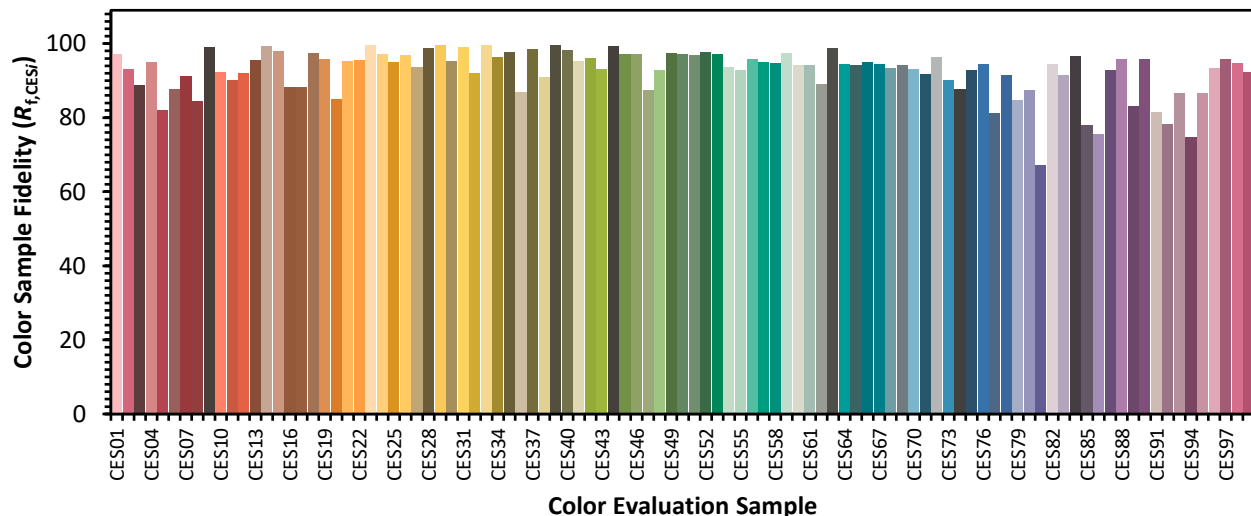

REPORT NUMBER: SP1-2210-795-2

TM-30-18



Color Rendition by Hue-Angle Bin

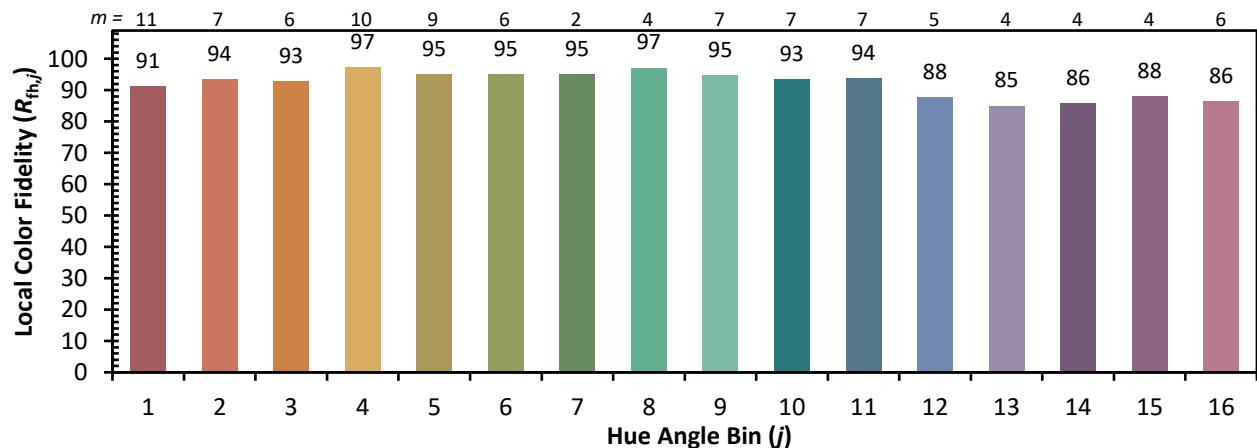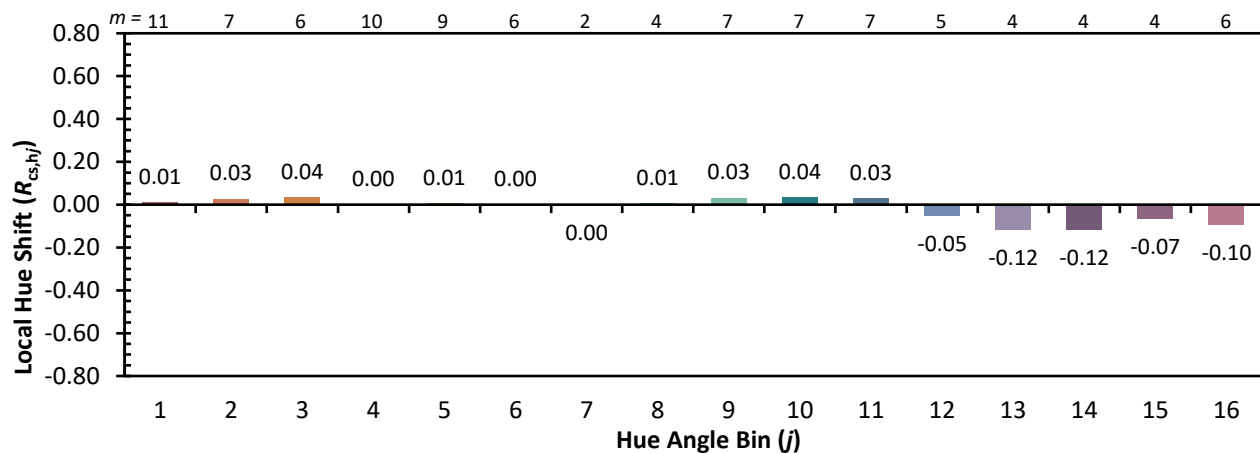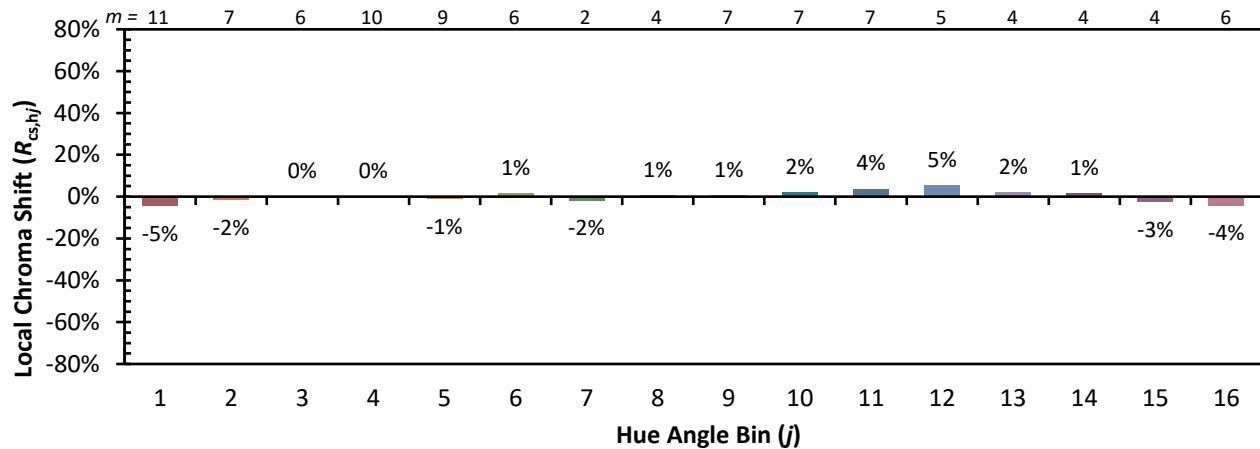

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Measure Comparisons

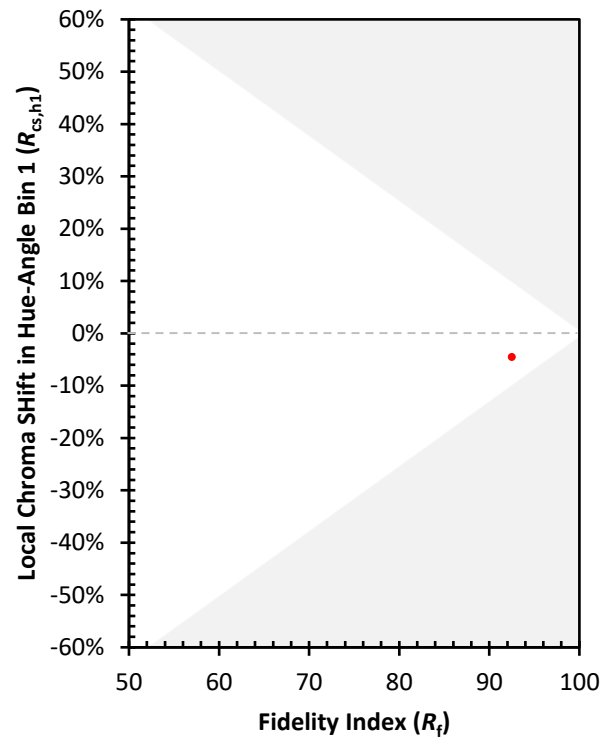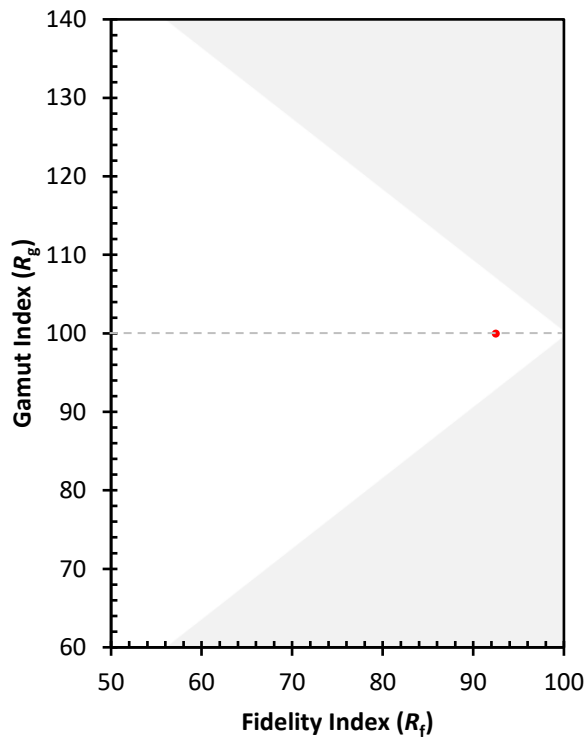

(END OF REPORT)