

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P735616

Luminaire Tested: **4APN6-34-B2750-W2D-4000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P735616
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P709119)
Test Lab: INNOVATION CENTER(G2)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: 4APN6-34-B2750-W2D-4000K
Description: 4FT 3400 AMBIENT LUMEN OUTPUT APN WITH BIO UP LEDS AT 4000K CCT

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 3070.0 lumens
Efficiency: N/A
Efficacy: 71.9 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.21 / 1.33
Luminous Opening: Rectangular (W 0.29' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 42.7
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

Luminous Intensity Polar Plot

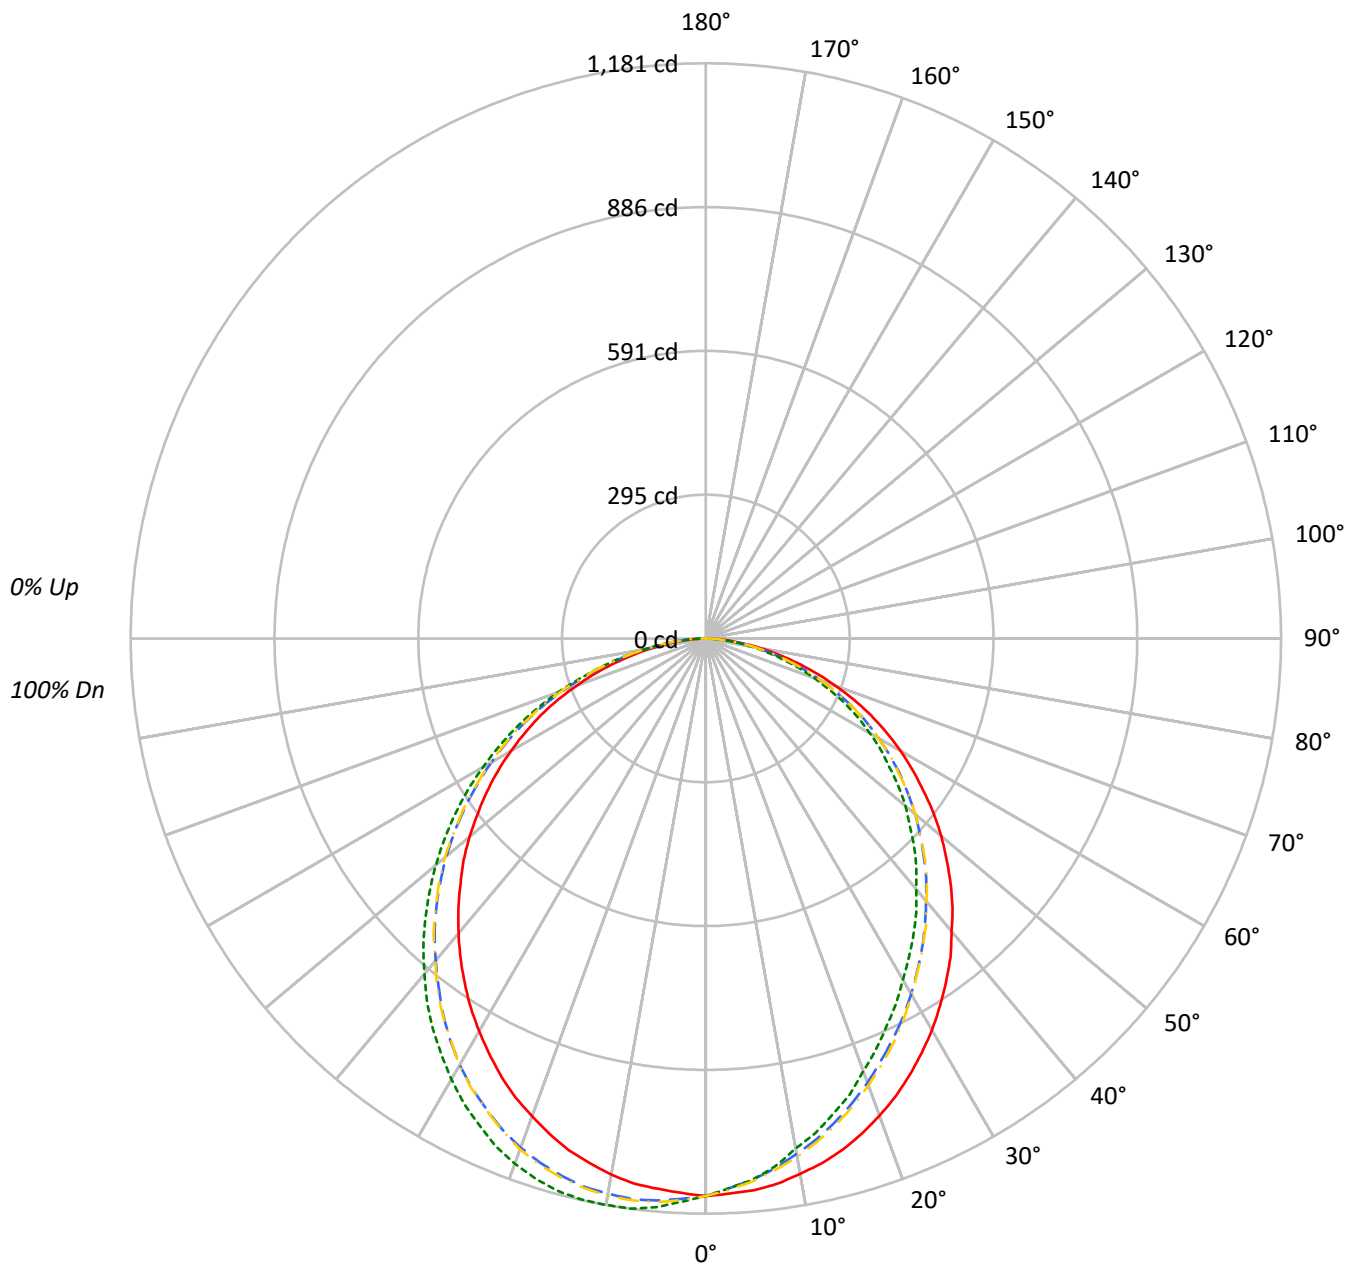



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	109	104	100	96	106	102	98	95	98	94	92		94	91	89		90
2	99	91	84	78	96	89	83	77	85	80	76		82	78	74		79
3	90	80	72	65	88	78	71	65	75	69	64		73	67	62		70
4	83	71	62	55	81	70	61	55	67	60	54		65	59	54		63
5	76	63	54	48	74	62	54	48	60	53	47		58	52	47		56
6	70	57	48	42	68	56	48	42	54	47	41		53	46	41		51
7	65	52	43	37	64	51	43	37	49	42	37		48	41	36		47
8	61	47	39	33	59	47	39	33	45	38	33		44	37	33		43
9	57	43	35	30	55	43	35	30	42	35	30		41	34	29		40
10	53	40	32	27	52	40	32	27	39	32	27		38	31	27		37

AVERAGE LUMINANCE (cd/sqm):

	0°	90°	180°	270°
0°	10561	10561	10561	10561
5°	10530	10326	10505	10854
10°	10456	9960	10469	11063
15°	10377	9648	10390	11217
20°	10236	9281	10247	11265
25°	10071	8938	10110	11218
30°	9891	8623	9918	11132
35°	9684	8371	9727	11012
40°	9451	8094	9514	10823
45°	9274	7891	9293	10626
50°	9053	7676	9089	10389
55°	8768	7394	8831	10103
60°	8505	7169	8531	9748
65°	8169	6868	8169	9328
70°	7615	6358	7580	8697
75°	6923	5771	6830	7803
80°	5988	4957	5781	6673
85°	4668	3705	4393	5483



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	108.2	3.5
10°-20°	307.0	10.0
20°-30°	456.4	14.9
30°-40°	537.9	17.5
40°-50°	547.7	17.8
50°-60°	487.9	15.9
60°-70°	367.6	12.0
70°-80°	204.4	6.7
80°-90°	53.1	1.7
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	871.5	28.4
0°-40°	1409.3	45.9
0°-60°	2444.9	79.6
0°-90°	3070.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	3070.0	100.0

CANDELA DISTRIBUTION:

	0°	90°	180°	270°	360°	Flux
0°	1145	1145	1145	1145	1145	
5°	1137	1115	1134	1172	1137	108
15°	1086	1010	1088	1174	1086	306
25°	989	878	993	1102	989	456
35°	860	743	864	978	860	538
45°	711	605	712	814	711	548
55°	545	460	549	628	545	488
65°	374	315	374	427	374	369
75°	194	162	192	219	194	206
85°	44	35	42	52	44	53
90°	0	0	0	0	0	



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

CANDELA DISTRIBUTION (FULL):

	0°	10°	20°	30°	40°	50°	60°	70°	80°	90°	100°
0°	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7
2.5°	1140.8	1140.8	1142.0	1137.0	1130.5	1127.9	1126.6	1125.2	1127.9	1129.1	1127.9
5°	1137.0	1134.3	1131.7	1125.2	1117.5	1112.3	1109.7	1108.4	1111.1	1114.9	1111.1
7.5°	1129.1	1124.0	1118.8	1109.7	1100.7	1092.9	1089.0	1086.4	1089.0	1092.9	1090.2
10°	1116.1	1109.7	1102.0	1091.6	1078.7	1069.6	1065.7	1061.9	1063.1	1063.1	1063.1
12.5°	1103.2	1094.3	1085.2	1072.2	1057.9	1047.5	1041.1	1036.0	1038.4	1039.8	1039.8
15°	1086.4	1074.8	1061.9	1047.5	1033.4	1021.6	1013.9	1008.7	1010.1	1010.1	1011.3
17.5°	1065.7	1052.8	1039.8	1023.0	1006.1	993.1	984.2	977.7	980.2	981.6	982.8
20°	1042.5	1028.1	1013.9	995.7	977.7	963.4	954.3	946.6	945.3	945.3	946.6
22.5°	1017.8	1002.2	985.4	966.0	946.6	931.0	921.9	914.2	913.0	913.0	914.2
25°	989.3	972.5	955.7	936.2	915.4	900.0	888.3	880.6	879.2	878.0	880.6
27.5°	959.5	942.7	925.9	906.5	884.4	868.9	857.2	849.4	846.8	845.6	848.2
30°	928.4	908.9	890.9	870.1	850.7	835.3	823.5	814.4	812.0	809.4	812.0
32.5°	894.8	875.3	855.9	835.3	815.8	800.3	788.5	779.6	777.0	775.6	778.2
35°	859.8	840.3	822.3	801.5	782.1	766.7	754.9	747.2	744.6	743.2	744.6
37.5°	824.8	805.5	787.3	766.7	747.2	731.7	719.9	712.2	710.8	709.6	710.8
40°	784.7	767.9	749.7	730.3	710.8	695.4	686.3	677.2	674.6	672.0	676.0
42.5°	749.7	732.9	714.9	696.7	677.2	661.7	651.3	643.6	641.0	639.6	641.0
45°	710.8	692.8	674.6	657.8	639.6	625.4	615.1	607.3	606.0	604.8	606.0
47.5°	669.5	654.0	638.4	621.6	603.4	589.2	580.1	572.4	569.8	567.2	569.8
50°	630.7	615.1	599.5	584.0	567.2	554.2	545.1	537.4	536.0	534.8	536.0
52.5°	589.2	573.6	559.5	543.9	529.6	516.6	507.7	501.2	499.8	498.6	499.8
55°	545.1	532.2	519.2	506.3	492.1	480.4	472.7	464.8	462.3	459.7	462.3
57.5°	503.7	492.1	479.1	466.2	453.2	442.9	435.0	428.6	427.3	426.0	427.3
60°	460.9	450.6	438.9	427.3	414.4	404.1	397.6	392.3	389.7	388.5	389.7
62.5°	418.2	407.9	398.8	387.1	375.5	367.7	361.2	356.1	353.5	352.3	353.5
65°	374.2	365.2	356.1	345.8	336.7	328.8	322.4	317.3	315.9	314.6	314.6
67.5°	328.8	321.1	313.4	304.3	294.0	286.1	279.7	275.8	274.6	273.2	274.6
70°	282.3	275.8	268.1	260.2	252.5	246.0	242.2	238.3	236.9	235.7	235.7
72.5°	238.3	233.1	226.6	220.1	213.7	207.2	203.3	200.7	199.5	198.1	198.1
75°	194.2	189.0	185.2	180.1	173.6	169.6	165.7	163.1	161.9	161.9	161.9
77.5°	152.8	148.9	145.1	139.8	136.0	132.1	129.5	128.3	126.9	126.9	126.9
80°	112.7	110.1	107.5	104.8	101.0	97.1	95.9	94.5	93.3	93.3	93.3
82.5°	76.5	75.1	72.5	70.0	67.4	66.0	64.7	63.5	63.5	63.5	63.5
85°	44.1	42.7	41.5	40.1	38.8	38.8	37.6	36.2	35.0	35.0	35.0
87.5°	18.2	18.2	18.2	16.8	15.6	15.6	15.6	15.6	15.6	15.6	15.6
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

CANDELA DISTRIBUTION (continued):

	110°	120°	130°	140°	150°	160°	170°	180°	190°	200°	210°
0°	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7
2.5°	1125.2	1127.9	1130.5	1134.3	1138.2	1142.0	1140.8	1139.6	1144.7	1151.1	1152.5
5°	1108.4	1111.1	1114.9	1121.4	1127.9	1133.1	1134.3	1134.3	1144.7	1153.8	1156.4
7.5°	1087.8	1091.6	1096.7	1103.2	1112.3	1120.2	1124.0	1129.1	1139.6	1151.1	1156.4
10°	1061.9	1068.4	1076.1	1085.2	1094.3	1103.2	1111.1	1117.5	1130.5	1143.4	1151.1
12.5°	1038.4	1044.9	1052.8	1063.1	1074.8	1086.4	1094.3	1103.2	1118.8	1134.3	1143.4
15°	1012.5	1019.0	1028.1	1038.4	1051.4	1064.3	1076.1	1087.8	1103.2	1120.2	1130.5
17.5°	984.2	990.7	999.6	1012.5	1026.9	1041.1	1054.0	1067.0	1085.2	1103.2	1114.9
20°	949.2	958.3	969.8	982.8	999.6	1016.6	1029.5	1043.7	1063.1	1082.5	1095.5
22.5°	915.4	924.5	937.5	953.0	971.2	989.3	1004.8	1020.4	1041.1	1060.5	1074.8
25°	883.0	893.5	906.5	921.9	938.9	956.9	975.1	993.1	1013.9	1034.6	1048.9
27.5°	850.7	859.8	872.7	888.3	907.7	925.9	943.9	962.1	984.2	1006.1	1021.6
30°	814.4	824.8	836.5	852.1	872.7	893.5	911.6	931.0	953.0	975.1	990.7
32.5°	780.8	789.9	801.5	817.1	837.7	858.5	878.0	898.6	919.4	941.3	956.9
35°	747.2	756.2	767.9	783.5	804.1	824.8	844.2	863.6	884.4	905.1	920.7
37.5°	713.5	722.6	734.3	749.7	769.1	789.9	808.0	827.4	848.2	868.9	883.0
40°	678.5	687.6	696.7	712.2	731.7	752.3	770.5	789.9	810.6	831.3	845.6
42.5°	643.6	652.6	664.3	679.9	697.9	716.1	734.3	752.3	771.7	791.2	805.5
45°	608.6	616.3	628.1	642.2	660.4	677.2	695.4	712.2	731.7	749.7	764.0
47.5°	572.4	580.1	589.2	603.4	621.6	639.6	657.8	674.6	691.4	709.6	722.6
50°	537.4	545.1	555.5	568.4	585.4	602.2	617.7	633.2	650.1	666.9	678.5
52.5°	501.2	508.9	518.0	530.9	545.1	560.7	574.9	590.4	606.0	621.6	633.2
55°	464.8	470.0	477.8	489.5	505.0	520.6	534.8	549.0	563.3	576.3	587.8
57.5°	428.6	435.0	444.1	454.5	467.4	480.4	493.3	506.3	519.2	532.2	542.5
60°	392.3	397.6	404.1	413.0	426.0	437.7	450.6	462.3	473.9	485.6	494.7
62.5°	354.7	360.0	366.4	375.5	385.9	396.2	407.9	418.2	428.6	438.9	448.0
65°	315.9	321.1	327.6	335.3	344.4	353.5	363.8	374.2	382.0	389.7	398.8
67.5°	275.8	281.0	287.5	294.0	301.7	310.8	319.9	328.8	336.7	344.4	350.9
70°	236.9	240.8	247.3	252.5	259.0	265.5	273.2	281.0	286.1	292.6	300.5
72.5°	199.5	203.3	208.4	213.7	217.5	222.8	230.5	236.9	243.4	251.3	255.1
75°	163.1	165.7	169.6	173.6	177.4	181.3	186.5	191.6	196.9	200.7	206.0
77.5°	126.9	129.5	133.4	136.0	138.6	141.2	145.1	148.9	152.8	155.4	160.6
80°	93.3	95.9	98.4	101.0	103.6	106.2	107.5	108.8	113.9	117.8	120.4
82.5°	63.5	64.7	66.0	68.6	70.0	71.2	72.5	72.5	75.1	77.7	81.6
85°	36.2	37.6	38.8	38.8	38.8	38.8	40.1	41.5	42.7	45.3	47.9
87.5°	14.2	14.2	15.6	15.6	15.6	15.6	15.6	15.6	16.8	19.4	20.7
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

CANDELA DISTRIBUTION (continued):

	220°	230°	240°	250°	260°	270°	280°	290°	300°	310°	320°
0°	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7	1144.7
2.5°	1151.1	1152.5	1155.0	1156.4	1157.6	1157.6	1159.0	1160.2	1157.6	1155.0	1153.8
5°	1157.6	1159.0	1162.9	1166.7	1169.3	1172.0	1170.6	1169.3	1166.7	1162.9	1160.2
7.5°	1159.0	1162.9	1166.7	1172.0	1175.8	1180.9	1178.4	1175.8	1170.6	1165.5	1161.5
10°	1155.0	1160.2	1166.7	1173.2	1177.0	1180.9	1178.4	1175.8	1170.6	1164.1	1159.0
12.5°	1149.9	1156.4	1164.1	1170.6	1174.4	1179.7	1175.8	1172.0	1165.5	1159.0	1152.5
15°	1138.2	1146.1	1155.0	1162.9	1169.3	1174.4	1170.6	1167.9	1160.2	1151.1	1142.0
17.5°	1124.0	1134.3	1143.4	1152.5	1157.6	1162.9	1160.2	1157.6	1148.5	1138.2	1127.9
20°	1107.2	1117.5	1126.6	1135.6	1142.0	1147.3	1143.4	1139.6	1130.5	1121.4	1111.1
22.5°	1086.4	1096.7	1107.2	1116.1	1122.6	1127.9	1122.6	1116.1	1107.2	1098.1	1087.8
25°	1060.5	1072.2	1083.8	1092.9	1096.7	1102.0	1096.7	1091.6	1082.5	1073.4	1061.9
27.5°	1034.6	1046.3	1057.9	1067.0	1070.8	1076.1	1070.8	1065.7	1056.6	1047.5	1036.0
30°	1004.8	1016.6	1028.1	1037.2	1041.1	1044.9	1039.8	1034.6	1026.9	1017.8	1006.1
32.5°	971.2	982.8	991.9	1001.0	1006.1	1011.3	1006.1	1002.2	993.1	981.6	969.8
35°	934.8	946.6	958.3	967.2	972.5	977.7	971.2	964.8	956.9	947.8	937.5
37.5°	894.8	907.7	920.7	931.0	934.8	940.1	934.8	928.4	920.7	911.6	900.0
40°	857.2	868.9	880.6	890.9	894.8	898.6	893.5	888.3	879.2	870.1	858.5
42.5°	818.5	830.0	840.3	849.4	853.3	858.5	853.3	846.8	840.3	832.6	822.3
45°	777.0	788.5	797.6	806.7	810.6	814.4	809.4	802.9	796.4	789.9	779.6
47.5°	734.3	744.6	753.7	762.6	765.3	769.1	764.0	760.2	753.7	747.2	738.1
50°	690.2	700.5	709.6	717.3	719.9	723.8	718.7	713.5	708.4	703.1	695.4
52.5°	644.9	654.0	663.1	670.8	673.4	676.0	670.8	665.5	660.4	655.2	647.5
55°	598.3	607.3	616.3	622.8	625.4	628.1	622.8	619.0	613.7	609.9	602.2
57.5°	551.6	560.7	568.4	574.9	577.5	580.1	574.9	569.8	565.9	561.9	555.5
60°	503.7	512.7	519.2	524.5	527.1	528.3	523.1	519.2	516.6	514.1	507.7
62.5°	457.1	463.6	470.0	473.9	476.5	477.8	473.9	471.3	468.8	466.2	460.9
65°	407.9	415.6	420.9	424.7	426.0	427.3	423.5	420.9	418.2	415.6	411.8
67.5°	358.7	365.2	369.1	372.9	374.2	374.2	374.2	372.9	370.3	366.4	362.6
70°	309.4	314.6	318.5	321.1	322.4	322.4	319.9	317.3	317.3	315.9	313.4
72.5°	259.0	262.8	265.5	268.1	268.1	268.1	268.1	269.3	268.1	265.5	261.6
75°	211.1	214.9	217.5	218.9	218.9	218.9	218.9	220.1	218.9	217.5	214.9
77.5°	165.7	168.3	169.6	171.0	171.0	171.0	172.2	173.6	172.2	171.0	169.6
80°	123.0	124.3	125.6	126.9	125.6	125.6	126.9	129.5	128.3	126.9	125.6
82.5°	84.2	85.4	86.8	86.8	88.0	89.4	89.4	89.4	89.4	88.0	86.8
85°	50.6	51.8	51.8	51.8	51.8	51.8	53.0	54.4	54.4	53.0	53.0
87.5°	23.3	24.7	23.3	22.0	20.7	20.7	23.3	25.9	25.9	24.7	24.7
90°	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P735616

CATALOG NUMBER: 4APN6-34-B2750-W2D-4000K

CANDELA DISTRIBUTION (continued):

	330°	340°	350°	360°
0°	1144.7	1144.7	1144.7	1144.7
2.5°	1155.0	1153.8	1147.3	1140.8
5°	1159.0	1155.0	1146.1	1137.0
7.5°	1159.0	1153.8	1140.8	1129.1
10°	1152.5	1144.7	1130.5	1116.1
12.5°	1144.7	1135.6	1118.8	1103.2
15°	1133.1	1122.6	1104.6	1086.4
17.5°	1116.1	1103.2	1085.2	1065.7
20°	1099.3	1085.2	1063.1	1042.5
22.5°	1076.1	1063.1	1039.8	1017.8
25°	1050.2	1036.0	1012.5	989.3
27.5°	1023.0	1006.1	982.8	959.5
30°	991.9	975.1	951.8	928.4
32.5°	958.3	942.7	919.4	894.8
35°	924.5	907.7	884.4	859.8
37.5°	887.1	871.5	848.2	824.8
40°	846.8	831.3	808.0	784.7
42.5°	809.4	795.0	771.7	749.7
45°	767.9	753.7	731.7	710.8
47.5°	725.2	710.8	690.2	669.5
50°	683.7	669.5	650.1	630.7
52.5°	637.2	625.4	607.3	589.2
55°	591.8	580.1	561.9	545.1
57.5°	546.5	536.0	519.2	503.7
60°	498.6	488.2	475.3	460.9
62.5°	453.2	444.1	431.2	418.2
65°	405.3	397.6	385.9	374.2
67.5°	356.1	349.6	339.3	328.8
70°	306.9	299.1	291.4	282.3
72.5°	257.8	253.8	246.0	238.3
75°	211.1	207.2	200.7	194.2
77.5°	167.1	163.1	158.0	152.8
80°	123.0	120.4	116.5	112.7
82.5°	85.4	82.9	80.3	76.5
85°	51.8	49.2	46.6	44.1
87.5°	23.3	22.0	19.4	18.2
90°	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - - 90°-270° - · - 135°-315°













LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-4
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-4000K-315MA**
 Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.


Spectral Parameters

CCT (K): 4009
 CIE u' : 0.2311
 CIE v' : 0.4879
 Duv: -0.0109
 CIE x: 0.3728
 CIE y: 0.3498
 CIE z: 0.2775
 Peak Wavelength (nm): 632
 Dominant Wavelength (nm): 588
 Purity: 17.1

CRI (Ra): 87.8

R1: 94.2	R9: 79.5
R2: 88.6	R10: 77.2
R3: 84.5	R11: 92.9
R4: 91.1	R12: 72.5
R5: 92.1	R13: 92.1
R6: 82.3	R14: 92.6
R7: 84.3	
R8: 84.9	

Rf: 88
 Rg: 96.2

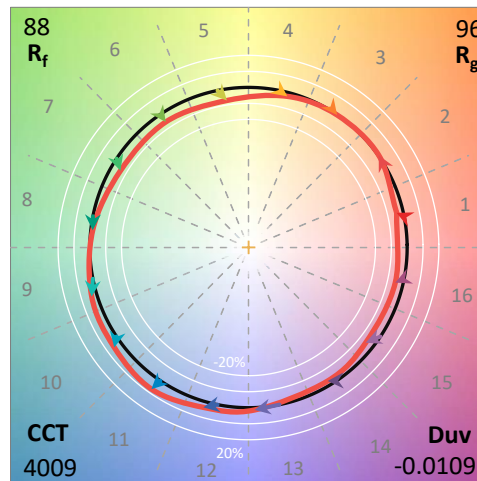

Test Conditions


Stabilization Time: 44M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-4


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-4

CIE 1931 Chromaticity Diagram

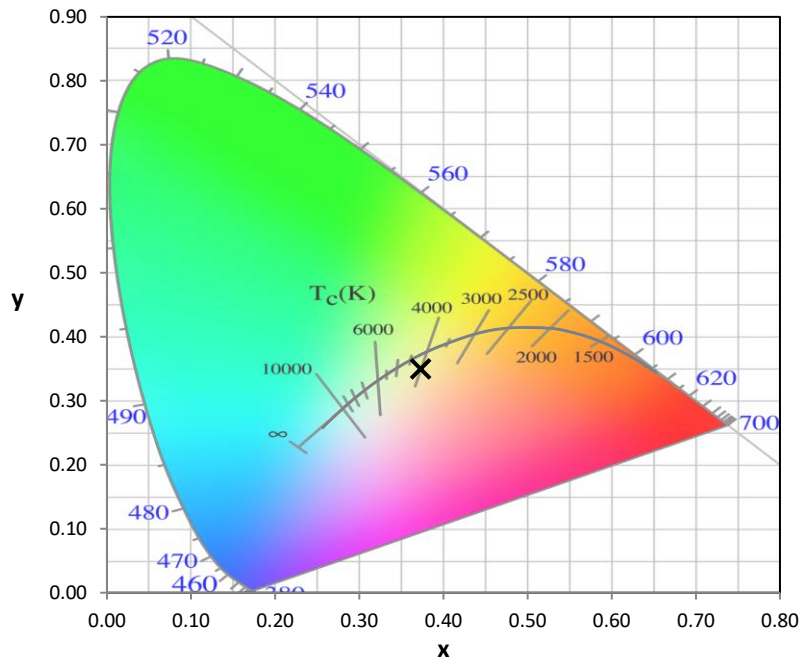


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

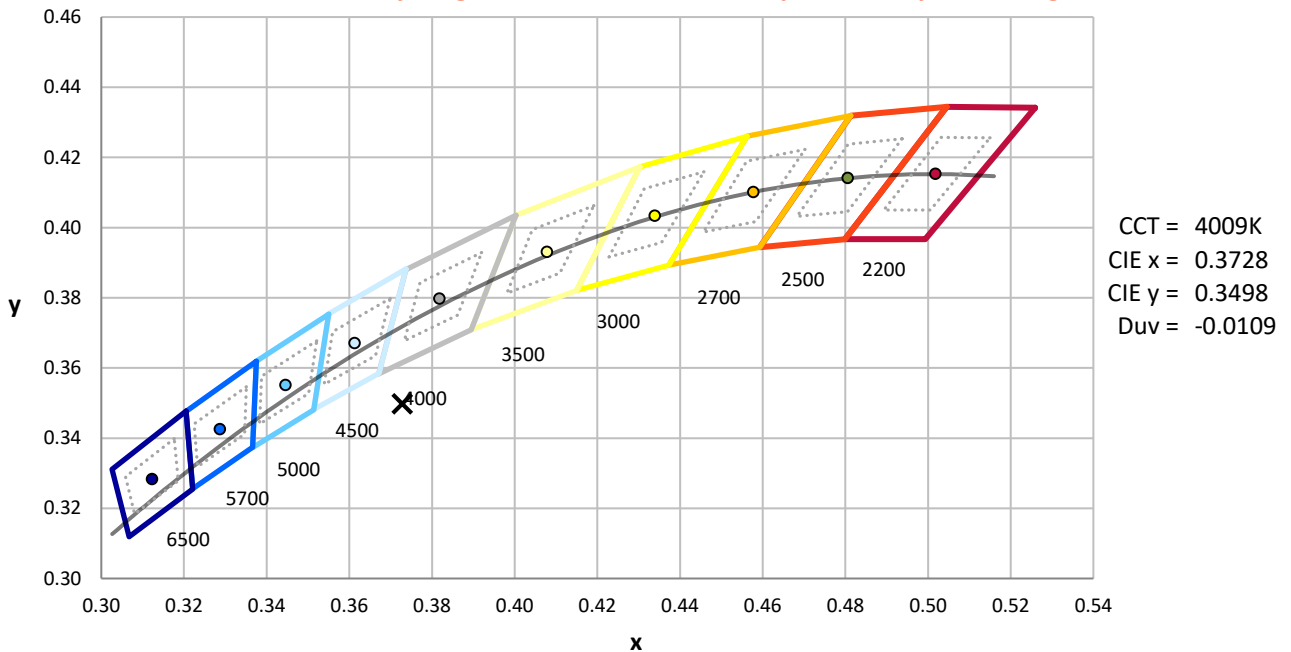

Point lies outside the range

REPORT NUMBER: SP1-2210-795-4

Photopic Flux vs. Wavelength

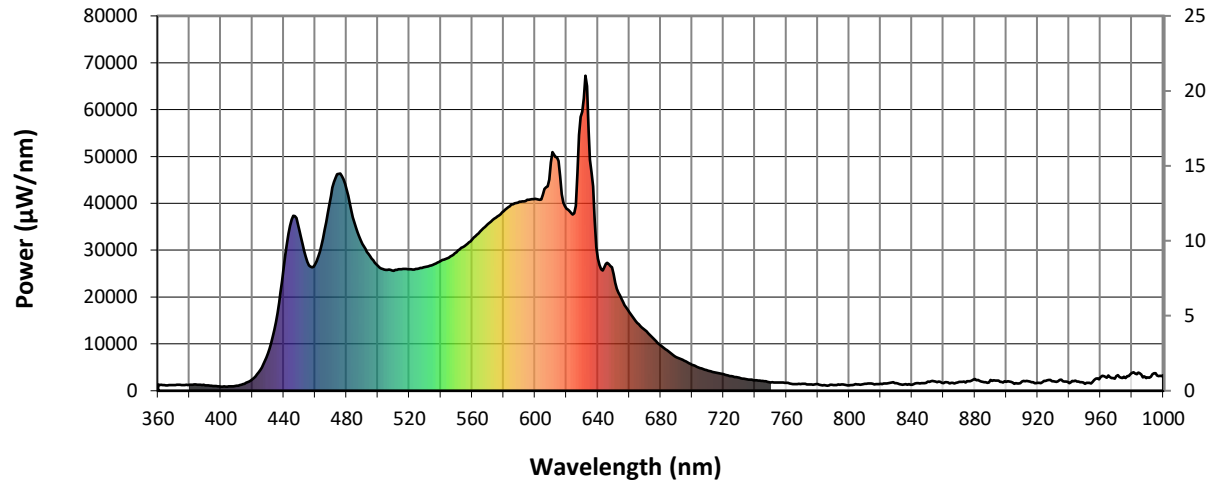


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1347	NR	490	31353	NR	620	38840	NR	750	1762	NR	880	2493	NR
365	1168	NR	495	28718	NR	625	37861	NR	755	1752	NR	885	1913	NR
370	1204	NR	500	26605	NR	630	59547	NR	760	1690	NR	890	2275	NR
375	1232	NR	505	25784	NR	635	49312	NR	765	1395	NR	895	2173	NR
380	1249	NR	510	25614	NR	640	28168	NR	770	1452	NR	900	1923	NR
385	1285	NR	515	25941	NR	645	27115	NR	775	1370	NR	905	1511	NR
390	1154	NR	520	25900	NR	650	24916	NR	780	1429	NR	910	1971	NR
395	1036	NR	525	26015	NR	655	19572	NR	785	1112	NR	915	1957	NR
400	873	NR	530	26424	NR	660	16766	NR	790	1222	NR	920	1699	NR
405	908	NR	535	26869	NR	665	14487	NR	795	1347	NR	925	2123	NR
410	1056	NR	540	27684	NR	670	12943	NR	800	1132	NR	930	2029	NR
415	1492	NR	545	28407	NR	675	11228	NR	805	1360	NR	935	2371	NR
420	2426	NR	550	29571	NR	680	9665	NR	810	1451	NR	940	1649	NR
425	4409	NR	555	30862	NR	685	8389	NR	815	1507	NR	945	1984	NR
430	7984	NR	560	32297	NR	690	7170	NR	820	1466	NR	950	1495	NR
435	14687	NR	565	33979	NR	695	6398	NR	825	1609	NR	955	1862	NR
440	26286	NR	570	35579	NR	700	5544	NR	830	1642	NR	960	2951	NR
445	36513	NR	575	36922	NR	705	4845	NR	835	1363	NR	965	3240	NR
450	34274	NR	580	38319	NR	710	4309	NR	840	1294	NR	970	3119	NR
455	27519	NR	585	39771	NR	715	3879	NR	845	1584	NR	975	3020	NR
460	26986	NR	590	40329	NR	720	3504	NR	850	1930	NR	980	3800	NR
465	32511	NR	595	40738	NR	725	3094	NR	855	1952	NR	985	3748	NR
470	41588	NR	600	40944	NR	730	2758	NR	860	1631	NR	990	2878	NR
475	46297	NR	605	41826	NR	735	2441	NR	865	1714	NR	995	3708	NR
480	42885	NR	610	48714	NR	740	2221	NR	870	1878	NR	1000	3359	NR
485	35895	NR	615	48984	NR	745	2091	NR	875	2024	NR			

REPORT NUMBER: SP1-2210-795-4

Scotopic Flux vs. Wavelength

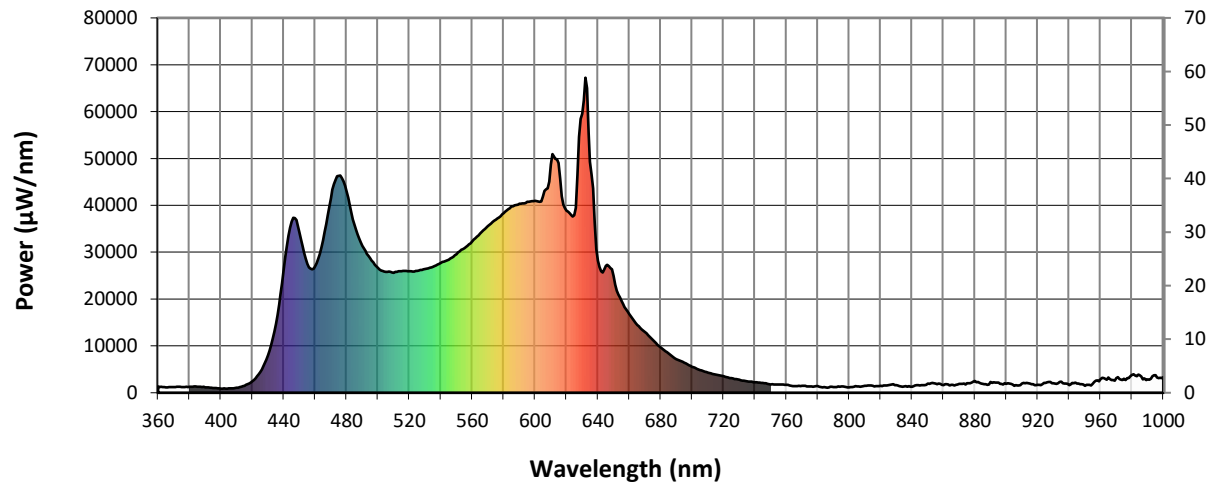


Scotopic Lumens: 4927.4

S/P: 2.02

λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)
360	1347	NR	490	31353	NR	620	38840	NR	750	1762	NR	880	2493	NR
365	1168	NR	495	28718	NR	625	37861	NR	755	1752	NR	885	1913	NR
370	1204	NR	500	26605	NR	630	59547	NR	760	1690	NR	890	2275	NR
375	1232	NR	505	25784	NR	635	49312	NR	765	1395	NR	895	2173	NR
380	1249	NR	510	25614	NR	640	28168	NR	770	1452	NR	900	1923	NR
385	1285	NR	515	25941	NR	645	27115	NR	775	1370	NR	905	1511	NR
390	1154	NR	520	25900	NR	650	24916	NR	780	1429	NR	910	1971	NR
395	1036	NR	525	26015	NR	655	19572	NR	785	1112	NR	915	1957	NR
400	873	NR	530	26424	NR	660	16766	NR	790	1222	NR	920	1699	NR
405	908	NR	535	26869	NR	665	14487	NR	795	1347	NR	925	2123	NR
410	1056	NR	540	27684	NR	670	12943	NR	800	1132	NR	930	2029	NR
415	1492	NR	545	28407	NR	675	11228	NR	805	1360	NR	935	2371	NR
420	2426	NR	550	29571	NR	680	9665	NR	810	1451	NR	940	1649	NR
425	4409	NR	555	30862	NR	685	8389	NR	815	1507	NR	945	1984	NR
430	7984	NR	560	32297	NR	690	7170	NR	820	1466	NR	950	1495	NR
435	14687	NR	565	33979	NR	695	6398	NR	825	1609	NR	955	1862	NR
440	26286	NR	570	35579	NR	700	5544	NR	830	1642	NR	960	2951	NR
445	36513	NR	575	36922	NR	705	4845	NR	835	1363	NR	965	3240	NR
450	34274	NR	580	38319	NR	710	4309	NR	840	1294	NR	970	3119	NR
455	27519	NR	585	39771	NR	715	3879	NR	845	1584	NR	975	3020	NR
460	26986	NR	590	40329	NR	720	3504	NR	850	1930	NR	980	3800	NR
465	32511	NR	595	40738	NR	725	3094	NR	855	1952	NR	985	3748	NR
470	41588	NR	600	40944	NR	730	2758	NR	860	1631	NR	990	2878	NR
475	46297	NR	605	41826	NR	735	2441	NR	865	1714	NR	995	3708	NR
480	42885	NR	610	48714	NR	740	2221	NR	870	1878	NR	1000	3359	NR
485	35895	NR	615	48984	NR	745	2091	NR	875	2024	NR			

REPORT NUMBER: SP1-2210-795-4

Melanopic Flux vs. Wavelength

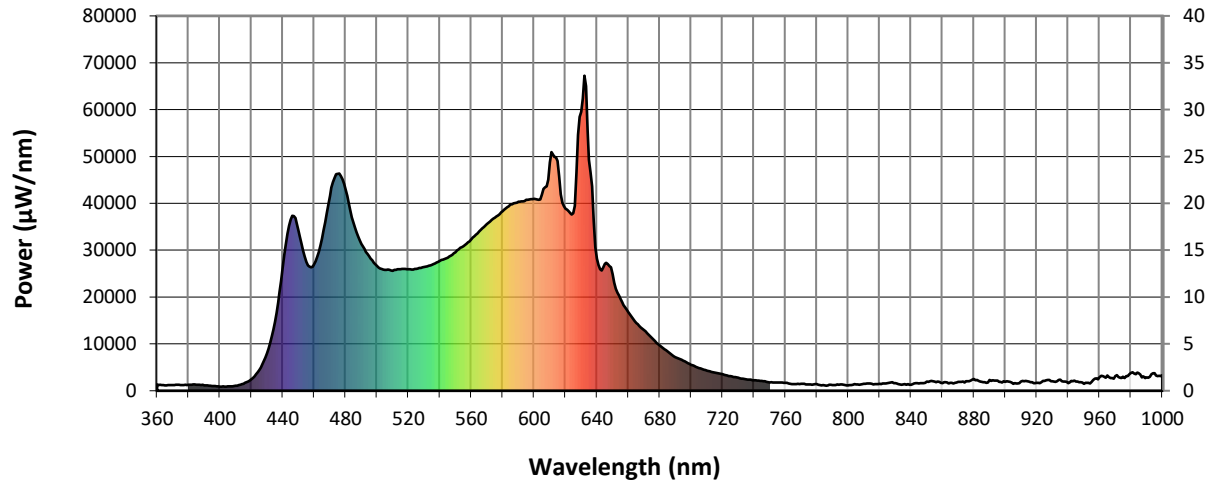

Melanopic Lumens: 2189.1

S/P: 0.9


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1347	NR	490	31353	NR	620	38840	NR	750	1762	NR	880	2493	NR
365	1168	NR	495	28718	NR	625	37861	NR	755	1752	NR	885	1913	NR
370	1204	NR	500	26605	NR	630	59547	NR	760	1690	NR	890	2275	NR
375	1232	NR	505	25784	NR	635	49312	NR	765	1395	NR	895	2173	NR
380	1249	NR	510	25614	NR	640	28168	NR	770	1452	NR	900	1923	NR
385	1285	NR	515	25941	NR	645	27115	NR	775	1370	NR	905	1511	NR
390	1154	NR	520	25900	NR	650	24916	NR	780	1429	NR	910	1971	NR
395	1036	NR	525	26015	NR	655	19572	NR	785	1112	NR	915	1957	NR
400	873	NR	530	26424	NR	660	16766	NR	790	1222	NR	920	1699	NR
405	908	NR	535	26869	NR	665	14487	NR	795	1347	NR	925	2123	NR
410	1056	NR	540	27684	NR	670	12943	NR	800	1132	NR	930	2029	NR
415	1492	NR	545	28407	NR	675	11228	NR	805	1360	NR	935	2371	NR
420	2426	NR	550	29571	NR	680	9665	NR	810	1451	NR	940	1649	NR
425	4409	NR	555	30862	NR	685	8389	NR	815	1507	NR	945	1984	NR
430	7984	NR	560	32297	NR	690	7170	NR	820	1466	NR	950	1495	NR
435	14687	NR	565	33979	NR	695	6398	NR	825	1609	NR	955	1862	NR
440	26286	NR	570	35579	NR	700	5544	NR	830	1642	NR	960	2951	NR
445	36513	NR	575	36922	NR	705	4845	NR	835	1363	NR	965	3240	NR
450	34274	NR	580	38319	NR	710	4309	NR	840	1294	NR	970	3119	NR
455	27519	NR	585	39771	NR	715	3879	NR	845	1584	NR	975	3020	NR
460	26986	NR	590	40329	NR	720	3504	NR	850	1930	NR	980	3800	NR
465	32511	NR	595	40738	NR	725	3094	NR	855	1952	NR	985	3748	NR
470	41588	NR	600	40944	NR	730	2758	NR	860	1631	NR	990	2878	NR
475	46297	NR	605	41826	NR	735	2441	NR	865	1714	NR	995	3708	NR
480	42885	NR	610	48714	NR	740	2221	NR	870	1878	NR	1000	3359	NR
485	35895	NR	615	48984	NR	745	2091	NR	875	2024	NR			

REPORT NUMBER: SP1-2210-795-4





TM-30-18

Summary

$R_f = 88$
 $R_g = 96.2$
 CIE $R_a = 87.8$
 $R_g = 79.5$

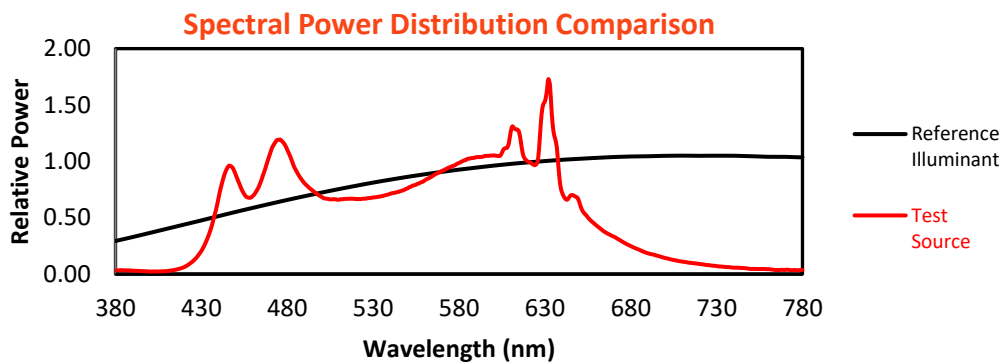

Color Vector Graphics

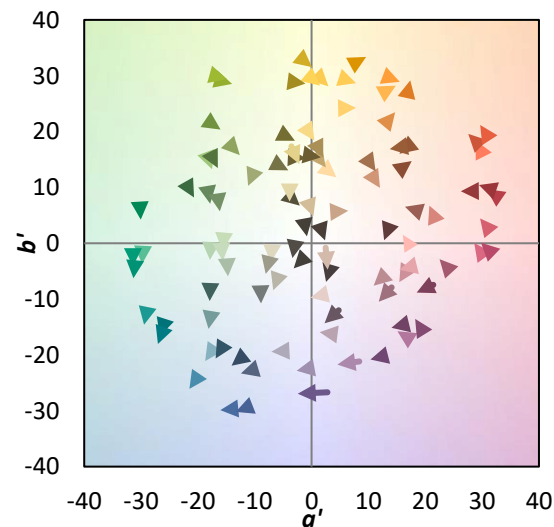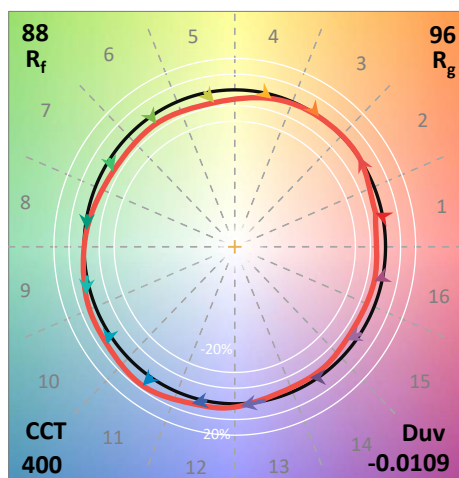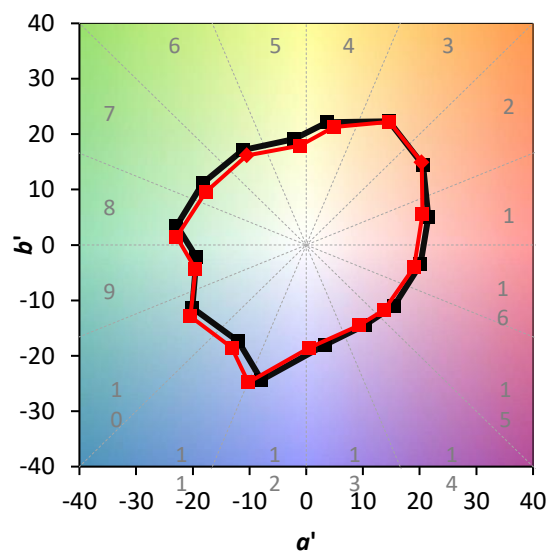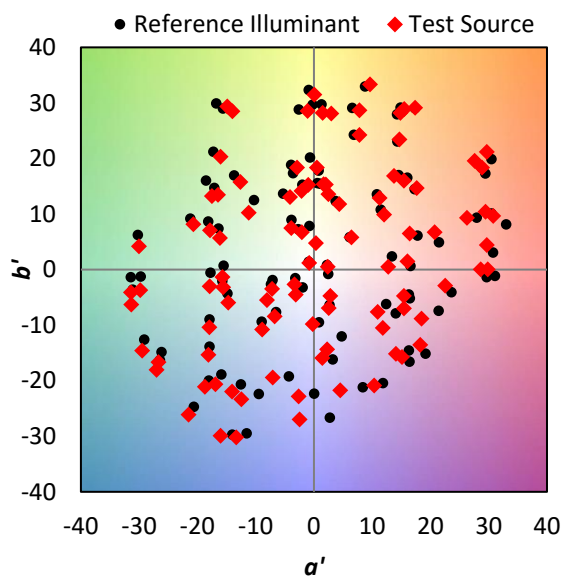


REPORT NUMBER: SP1-2210-795-4

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 91	CES51 = 88	CES76 = 86
CES02 = 62	CES27 = 85	CES52 = 91	CES77 = 79
CES03 = 31	CES28 = 93	CES53 = 85	CES78 = 87
CES04 = 70	CES29 = 84	CES54 = 86	CES79 = 81
CES05 = 49	CES30 = 81	CES55 = 84	CES80 = 82
CES06 = 51	CES31 = 85	CES56 = 83	CES81 = 65
CES07 = 42	CES32 = 92	CES57 = 81	CES82 = 93
CES08 = 41	CES33 = 86	CES58 = 82	CES83 = 87
CES09 = 29	CES34 = 90	CES59 = 93	CES84 = 96
CES10 = 75	CES35 = 94	CES60 = 90	CES85 = 77
CES11 = 58	CES36 = 78	CES61 = 89	CES86 = 74
CES12 = 64	CES37 = 92	CES62 = 80	CES87 = 89
CES13 = 43	CES38 = 77	CES63 = 92	CES88 = 89
CES14 = 74	CES39 = 95	CES64 = 86	CES89 = 84
CES15 = 71	CES40 = 91	CES65 = 91	CES90 = 87
CES16 = 47	CES41 = 90	CES66 = 87	CES91 = 74
CES17 = 49	CES42 = 87	CES67 = 88	CES92 = 77
CES18 = 56	CES43 = 86	CES68 = 90	CES93 = 86
CES19 = 71	CES44 = 99	CES69 = 91	CES94 = 78
CES20 = 66	CES45 = 89	CES70 = 91	CES95 = 86
CES21 = 85	CES46 = 90	CES71 = 86	CES96 = 94
CES22 = 78	CES47 = 84	CES72 = 95	CES97 = 88
CES23 = 91	CES48 = 80	CES73 = 89	CES98 = 87
CES24 = 90	CES49 = 90	CES74 = 88	CES99 = 88
CES25 = 71	CES50 = 89	CES75 = 86	

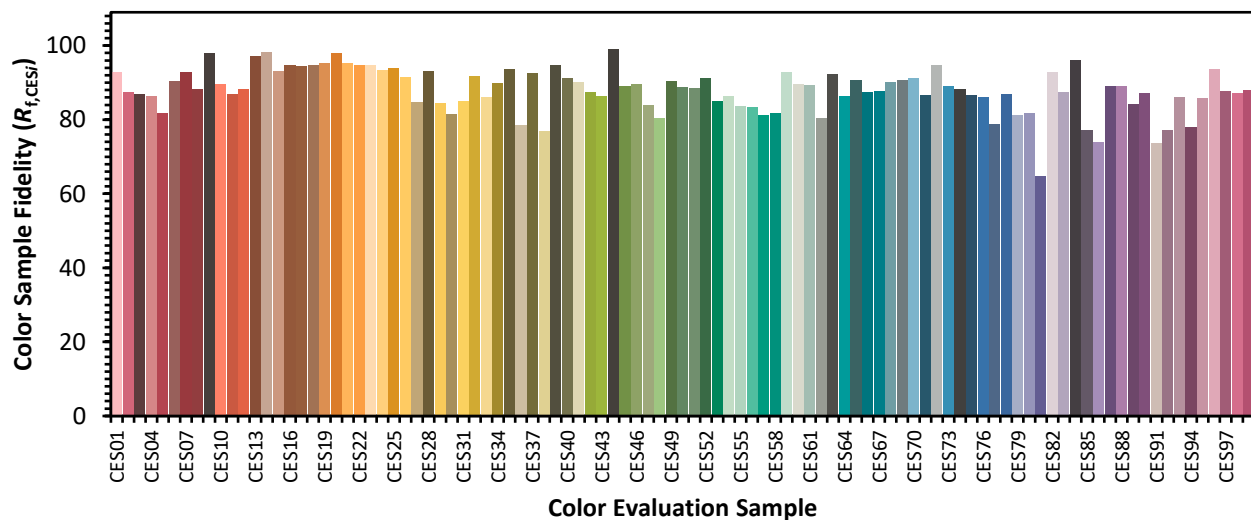

REPORT NUMBER: SP1-2210-795-4

TM-30-18



Color Rendition by Hue-Angle Bin

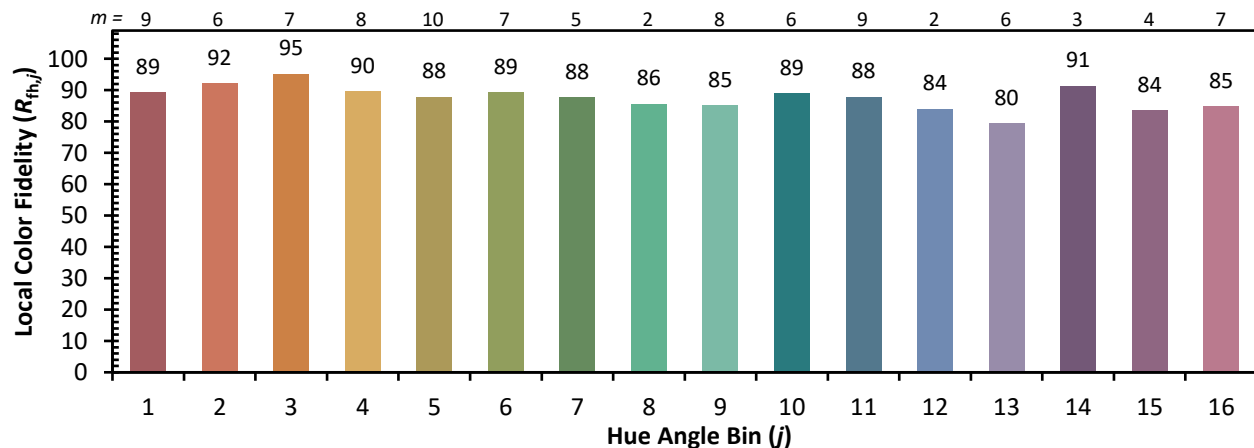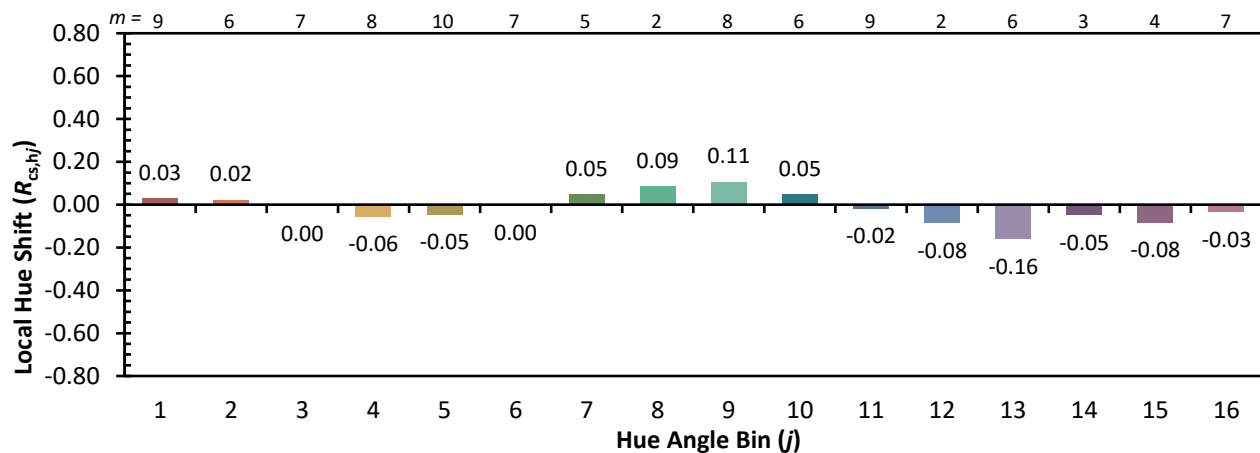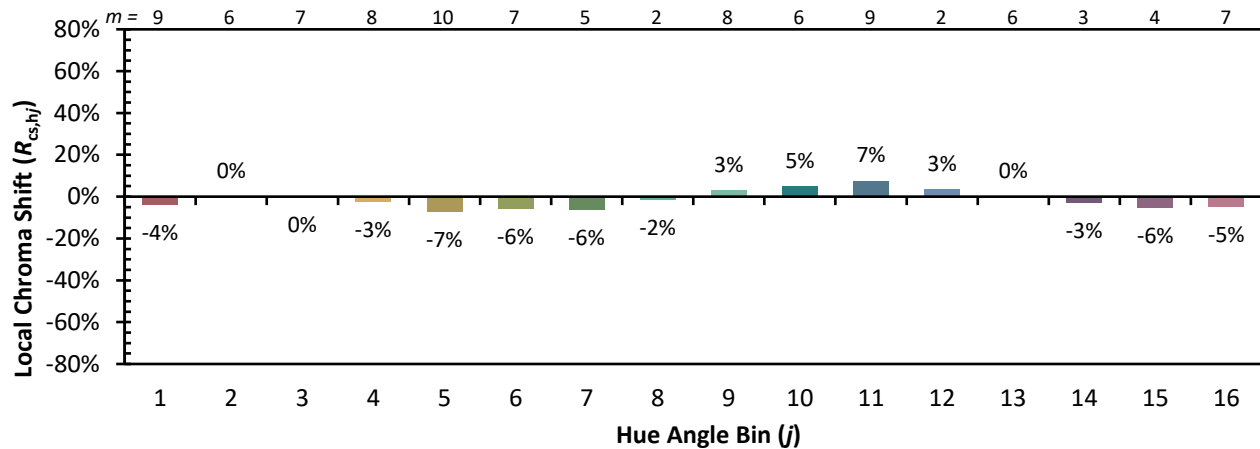

REPORT NUMBER: SP1-2210-795-4

TM-30-18

Measure Comparisons

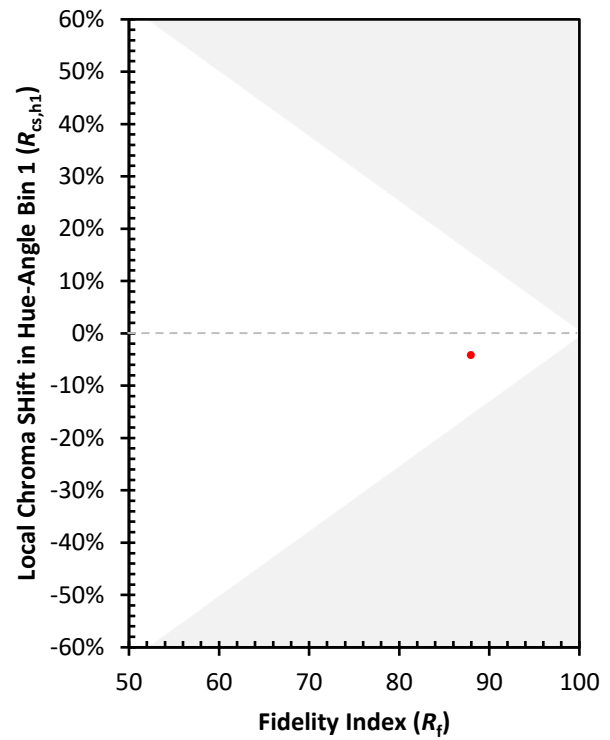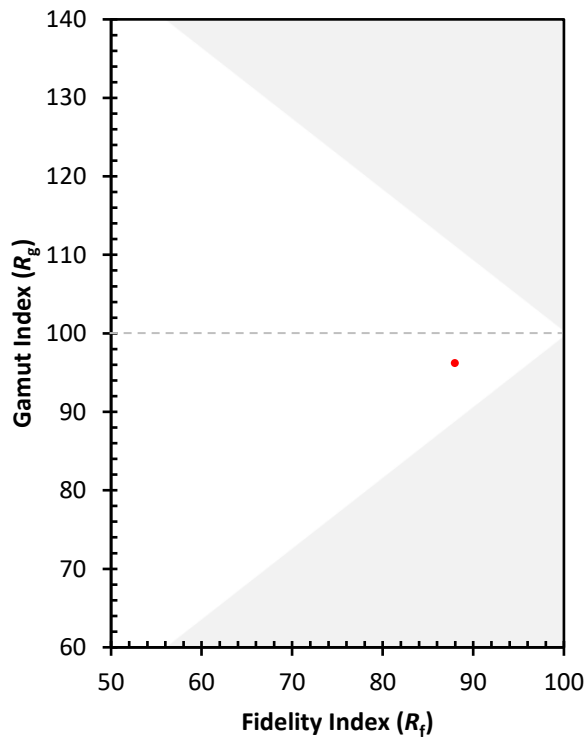

(END OF REPORT)