

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P732417

Luminaire Tested: **14FCZ2-20-B2750-W2D-CA125-3000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732417
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P275502)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: 14FCZ2-20-B2750-W2D-CA125-3000K
Description: 1X4 2000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 3000K CCT
AND RIBBED LENS, WITH, CA125 BOTTOM LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1880.0 lumens
Efficiency: N/A
Efficacy: 117.5 lumens/watt
Spacing Criteria (0/90/45): 1.2 / 1.28 / 1.37
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 16
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732417

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-3000K

Luminous Intensity Polar Plot

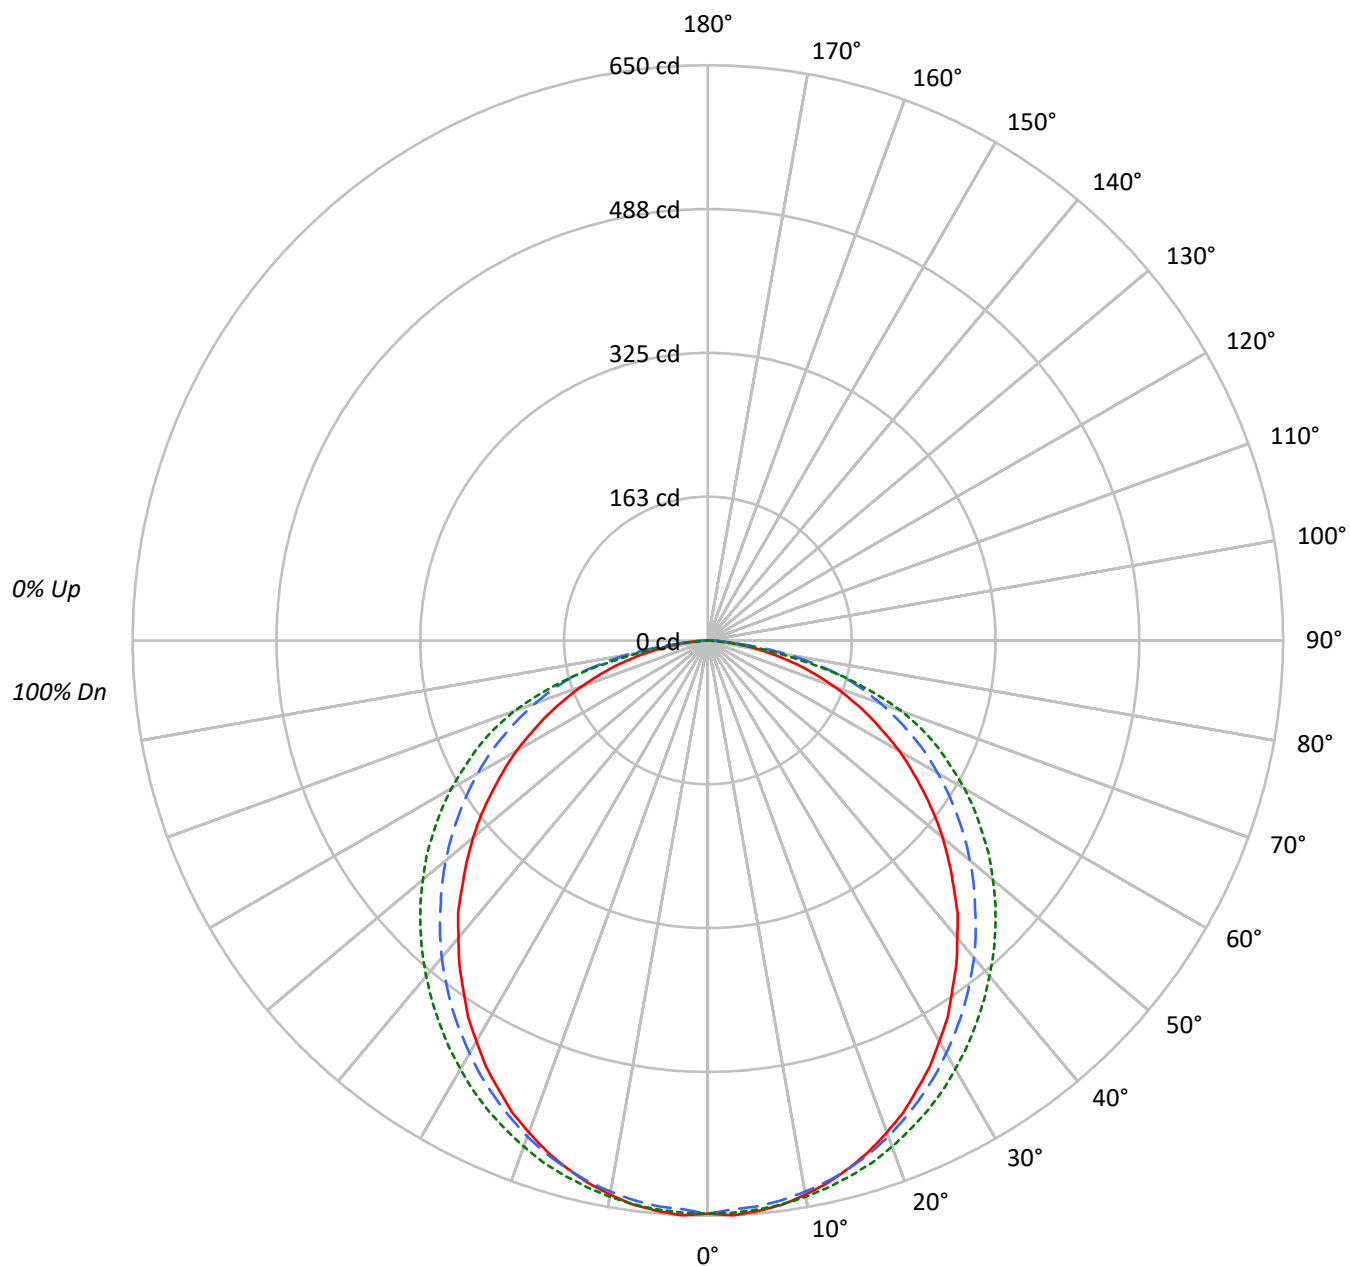



TEST NUMBER: P732417

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-3000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	109	104	99	95	106	101	97	94	97	94	91	93	90	88	90	87	85	83		
2	98	90	83	77	96	88	82	76	84	79	74	81	77	73	78	74	71	69		
3	89	79	70	64	87	77	69	63	74	67	62	71	66	61	69	64	60	58		
4	82	70	61	54	79	68	60	53	66	58	53	63	57	52	61	56	51	49		
5	75	62	53	46	73	61	52	46	59	51	45	57	50	45	55	49	44	42		
6	69	56	47	40	67	55	46	40	53	45	40	51	44	39	50	44	39	37		
7	64	51	42	35	63	50	41	35	48	41	35	47	40	35	45	39	34	32		
8	60	46	37	32	58	45	37	31	44	37	31	43	36	31	42	35	31	29		
9	56	42	34	28	54	42	34	28	41	33	28	39	33	28	38	32	28	26		
10	52	39	31	26	51	39	31	26	37	30	26	37	30	25	36	30	25	24		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1828	1828	1828
5°	1834	1819	1829
10°	1823	1813	1830
15°	1803	1804	1829
20°	1777	1792	1828
25°	1743	1774	1827
30°	1705	1756	1823
35°	1660	1741	1821
40°	1615	1724	1824
45°	1566	1705	1834
50°	1520	1697	1846
55°	1463	1692	1863
60°	1411	1695	1889
65°	1338	1700	1918
70°	1256	1712	1916
75°	1137	1729	1733
80°	935	1492	1232
85°	693	706	285



TEST NUMBER: P732417

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-3000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	61.3	3.3
10°-20°	175.1	9.3
20°-30°	263.7	14.0
30°-40°	316.5	16.8
40°-50°	329.9	17.5
50°-60°	305.4	16.2
60°-70°	246.7	13.1
70°-80°	150.4	8.0
80°-90°	31.1	1.7
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	500.1	26.6
0°-40°	816.6	43.4
0°-60°	1451.8	77.2
0°-90°	1880.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1880.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	648	648	648	648	648	
5°	647	646	642	646	646	61
15°	617	617	617	626	626	174
25°	560	563	570	584	586	258
35°	482	489	505	524	529	302
45°	392	404	427	451	459	303
55°	297	313	344	371	378	266
65°	200	220	254	280	287	198
75°	104	127	158	161	159	110
85°	21	32	22	12	9	26
90°	0	0	0	0	0	



TEST NUMBER: P732417

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-3000K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	647.7	647.7	647.7	647.7	647.7
2.5°	650.2	648.1	643.5	648.1	647.2
5°	647.2	645.6	641.8	646.4	645.6
7.5°	643.1	641.3	638.0	643.5	642.6
10°	635.9	635.1	632.6	638.9	638.4
12.5°	627.6	627.1	625.9	633.0	632.6
15°	617.1	617.4	617.4	625.9	625.9
17.5°	605.3	606.1	607.9	617.1	618.4
20°	591.5	593.2	596.5	607.1	608.7
22.5°	577.3	578.5	583.5	596.1	597.8
25°	559.6	563.0	569.7	584.0	586.5
27.5°	542.9	545.8	555.0	569.7	573.9
30°	523.1	527.8	538.7	554.7	559.3
32.5°	504.3	509.3	521.9	540.3	544.5
35°	481.7	489.2	505.1	523.6	528.6
37.5°	461.2	468.2	486.3	506.4	512.3
40°	438.4	447.3	467.9	489.2	495.1
42.5°	417.6	425.9	448.1	469.9	477.9
45°	392.4	404.2	427.1	451.0	459.4
47.5°	369.3	381.1	407.5	433.0	440.6
50°	346.2	358.8	386.5	412.9	420.4
52.5°	322.3	335.8	365.5	391.9	400.8
55°	297.2	312.8	343.8	370.6	378.5
57.5°	273.3	289.2	322.3	349.6	357.5
60°	249.9	266.2	300.2	326.1	334.6
62.5°	223.9	243.2	278.4	303.9	310.2
65°	200.4	220.1	254.5	280.0	287.1
67.5°	175.7	197.0	231.4	254.8	261.6
70°	152.2	174.4	207.5	229.3	232.2
72.5°	127.1	149.7	183.2	197.0	197.0
75°	104.3	127.4	158.5	161.0	158.9
77.5°	79.6	105.3	125.3	120.3	115.3
80°	57.5	82.6	91.8	82.6	75.8
82.5°	38.5	59.9	55.3	44.0	39.0
85°	21.4	31.9	21.8	12.1	8.8
87.5°	8.0	7.2	2.1	2.1	2.1
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-2

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3000K.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-3000K-315MA**
 Description: METALUX

TUNABLE BOARD, 3000K-315MA, PROGRAMMED @ 2.6Vdc.

Spectral Parameters

CCT (K):	3004	CRI (Ra):	93.2		
CIE u':	0.2526	R1:	98.5	R9:	67.1
CIE v':	0.5127	R2:	96.3	R10:	94.0
Duv:	-0.0061	R3:	94.1	R11:	97.7
CIE x:	0.4279	R4:	96.5	R12:	86.0
CIE y:	0.3860	R5:	98.5	R13:	98.4
CIE z:	0.1861	R6:	90.3	R14:	98.1
Peak Wavelength (nm):	632	R7:	88.3		
Dominant Wavelength (nm):	585	R8:	83.1		
Purity:	44.5				
Rf:	92.5				
Rg:	99.9				

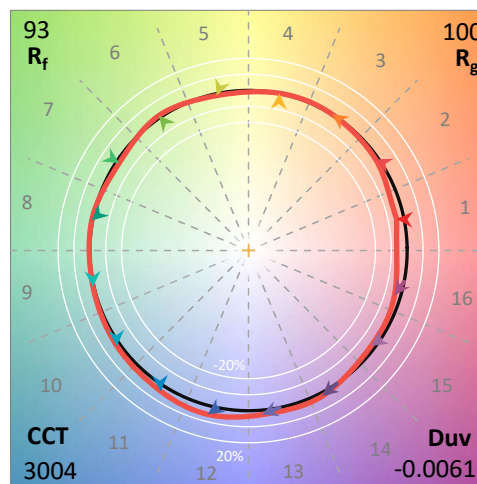

Test Conditions

Stabilization Time: 53M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies outside the range

REPORT NUMBER: SP1-2210-795-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 3849.1

S/P: 1.53

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 1558.5 S/P: 0.62

λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)	λ (nm)	Power ($\mu\text{W/nm}$)	Lumens (ϕ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Summary

$R_f = 92.5$
 $R_g = 99.9$
 CIE $R_a = 93.2$
 $R_g = 67.1$



Color Vector Graphics



REPORT NUMBER: SP1-2210-795-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 97	CES51 = 97	CES76 = 94
CES02 = 63	CES27 = 93	CES52 = 98	CES77 = 81
CES03 = 32	CES28 = 99	CES53 = 97	CES78 = 91
CES04 = 70	CES29 = 99	CES54 = 93	CES79 = 85
CES05 = 51	CES30 = 95	CES55 = 93	CES80 = 87
CES06 = 51	CES31 = 99	CES56 = 96	CES81 = 67
CES07 = 44	CES32 = 92	CES57 = 95	CES82 = 94
CES08 = 42	CES33 = 99	CES58 = 95	CES83 = 91
CES09 = 29	CES34 = 96	CES59 = 97	CES84 = 97
CES10 = 76	CES35 = 98	CES60 = 94	CES85 = 78
CES11 = 59	CES36 = 87	CES61 = 94	CES86 = 76
CES12 = 65	CES37 = 98	CES62 = 89	CES87 = 93
CES13 = 44	CES38 = 91	CES63 = 99	CES88 = 96
CES14 = 74	CES39 = 100	CES64 = 94	CES89 = 83
CES15 = 72	CES40 = 98	CES65 = 94	CES90 = 96
CES16 = 48	CES41 = 95	CES66 = 95	CES91 = 81
CES17 = 50	CES42 = 96	CES67 = 94	CES92 = 78
CES18 = 57	CES43 = 93	CES68 = 93	CES93 = 86
CES19 = 72	CES44 = 99	CES69 = 94	CES94 = 75
CES20 = 67	CES45 = 97	CES70 = 93	CES95 = 86
CES21 = 86	CES46 = 97	CES71 = 92	CES96 = 93
CES22 = 79	CES47 = 87	CES72 = 96	CES97 = 96
CES23 = 92	CES48 = 93	CES73 = 90	CES98 = 95
CES24 = 90	CES49 = 97	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 97	CES75 = 93	



REPORT NUMBER: SP1-2210-795-2

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-2

TM-30-18

Measure Comparisons



(END OF REPORT)