

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P732419

Luminaire Tested: **14FCZ2-20-B2750-W2D-CA125-4000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732419  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P275502)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 14FCZ2-20-B2750-W2D-CA125-4000K  
Description: 1X4 2000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 4000K CCT  
AND RIBBED LENS, WITH, CA125 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1820.0 lumens  
Efficiency: N/A  
Efficacy: 113.7 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.28 / 1.37  
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 16  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732419

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-4000K

### Luminous Intensity Polar Plot

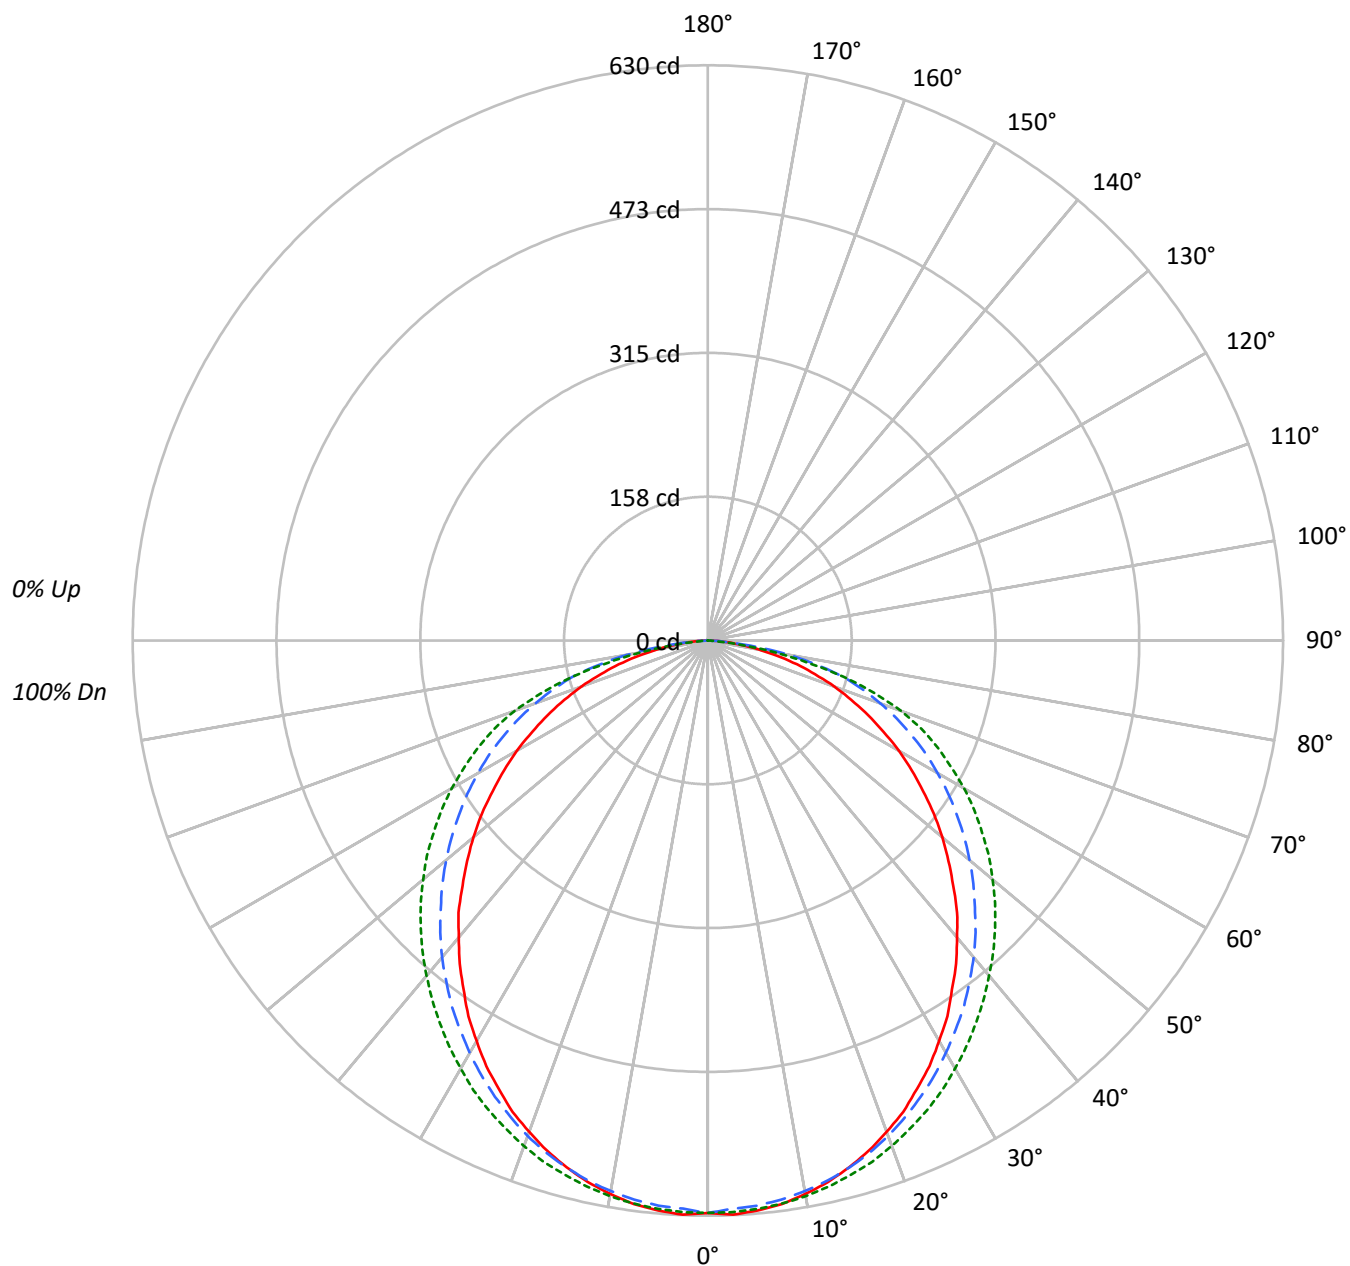



TEST NUMBER: P732419

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-4000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 109 | 104 | 99  | 95  | 106 | 101 | 97  | 94  | 97  | 94  | 91  | 93  | 90  | 88  | 90  | 87  | 85  | 83  |    |    |
| 2   | 98  | 90  | 83  | 77  | 96  | 88  | 82  | 76  | 84  | 79  | 74  | 81  | 77  | 73  | 78  | 74  | 71  | 69  |    |    |
| 3   | 90  | 79  | 70  | 64  | 87  | 77  | 69  | 63  | 74  | 67  | 62  | 71  | 66  | 61  | 69  | 64  | 60  | 58  |    |    |
| 4   | 82  | 70  | 61  | 54  | 79  | 68  | 60  | 53  | 66  | 58  | 53  | 63  | 57  | 52  | 61  | 56  | 51  | 49  |    |    |
| 5   | 75  | 62  | 53  | 46  | 73  | 61  | 52  | 46  | 59  | 51  | 45  | 57  | 50  | 45  | 55  | 49  | 44  | 42  |    |    |
| 6   | 69  | 56  | 47  | 40  | 67  | 55  | 46  | 40  | 53  | 45  | 40  | 51  | 44  | 39  | 50  | 44  | 39  | 37  |    |    |
| 7   | 64  | 51  | 42  | 35  | 63  | 50  | 41  | 35  | 48  | 41  | 35  | 47  | 40  | 35  | 45  | 39  | 34  | 32  |    |    |
| 8   | 60  | 46  | 37  | 32  | 58  | 45  | 37  | 31  | 44  | 37  | 31  | 43  | 36  | 31  | 42  | 35  | 31  | 29  |    |    |
| 9   | 56  | 42  | 34  | 28  | 54  | 42  | 34  | 28  | 41  | 33  | 28  | 39  | 33  | 28  | 38  | 32  | 28  | 26  |    |    |
| 10  | 52  | 39  | 31  | 26  | 51  | 39  | 31  | 26  | 37  | 30  | 26  | 37  | 30  | 25  | 36  | 30  | 25  | 24  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1770 | 1770 | 1770 |
| 5°  | 1775 | 1760 | 1771 |
| 10° | 1764 | 1755 | 1772 |
| 15° | 1746 | 1747 | 1771 |
| 20° | 1720 | 1735 | 1770 |
| 25° | 1687 | 1718 | 1768 |
| 30° | 1651 | 1700 | 1765 |
| 35° | 1607 | 1685 | 1763 |
| 40° | 1564 | 1669 | 1766 |
| 45° | 1517 | 1651 | 1776 |
| 50° | 1472 | 1643 | 1787 |
| 55° | 1416 | 1638 | 1804 |
| 60° | 1366 | 1641 | 1829 |
| 65° | 1296 | 1646 | 1857 |
| 70° | 1216 | 1658 | 1855 |
| 75° | 1102 | 1673 | 1677 |
| 80° | 904  | 1443 | 1193 |
| 85° | 670  | 683  | 275  |



TEST NUMBER: P732419

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-4000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 59.3   | 3.3       |
| 10°-20°   | 169.5  | 9.3       |
| 20°-30°   | 255.3  | 14.0      |
| 30°-40°   | 306.4  | 16.8      |
| 40°-50°   | 319.3  | 17.5      |
| 50°-60°   | 295.6  | 16.2      |
| 60°-70°   | 238.9  | 13.1      |
| 70°-80°   | 145.6  | 8.0       |
| 80°-90°   | 30.0   | 1.7       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 484.1  | 26.6      |
| 0°-40°    | 790.5  | 43.4      |
| 0°-60°    | 1405.5 | 77.2      |
| 0°-90°    | 1820.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1820.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 627 | 627   | 627 | 627   | 627 |      |
| 5°  | 627 | 625   | 621 | 626   | 625 | 59   |
| 15° | 597 | 598   | 598 | 606   | 606 | 168  |
| 25° | 542 | 545   | 552 | 565   | 568 | 250  |
| 35° | 466 | 474   | 489 | 507   | 512 | 292  |
| 45° | 380 | 391   | 414 | 437   | 445 | 294  |
| 55° | 288 | 303   | 333 | 359   | 366 | 258  |
| 65° | 194 | 213   | 246 | 271   | 278 | 192  |
| 75° | 101 | 123   | 153 | 156   | 154 | 106  |
| 85° | 21  | 31    | 21  | 12    | 8   | 25   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P732419

CATALOG NUMBER: 14FCZ2-20-B2750-W2D-CA125-4000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 627.0 | 627.0 | 627.0 | 627.0 | 627.0 |
| 2.5°  | 629.5 | 627.5 | 623.0 | 627.5 | 626.6 |
| 5°    | 626.6 | 625.0 | 621.3 | 625.8 | 625.0 |
| 7.5°  | 622.5 | 620.9 | 617.6 | 623.0 | 622.1 |
| 10°   | 615.6 | 614.8 | 612.4 | 618.5 | 618.1 |
| 12.5° | 607.6 | 607.1 | 605.9 | 612.8 | 612.4 |
| 15°   | 597.4 | 597.7 | 597.7 | 605.9 | 605.9 |
| 17.5° | 586.0 | 586.8 | 588.5 | 597.4 | 598.6 |
| 20°   | 572.6 | 574.3 | 577.5 | 587.7 | 589.2 |
| 22.5° | 558.9 | 560.1 | 564.9 | 577.1 | 578.7 |
| 25°   | 541.8 | 545.0 | 551.5 | 565.3 | 567.8 |
| 27.5° | 525.6 | 528.4 | 537.3 | 551.5 | 555.6 |
| 30°   | 506.5 | 510.9 | 521.5 | 537.0 | 541.4 |
| 32.5° | 488.2 | 493.0 | 505.2 | 523.1 | 527.1 |
| 35°   | 466.3 | 473.6 | 489.0 | 506.9 | 511.7 |
| 37.5° | 446.5 | 453.3 | 470.8 | 490.3 | 496.0 |
| 40°   | 424.4 | 433.0 | 452.9 | 473.6 | 479.3 |
| 42.5° | 404.2 | 412.3 | 433.8 | 454.9 | 462.7 |
| 45°   | 379.9 | 391.3 | 413.5 | 436.6 | 444.8 |
| 47.5° | 357.5 | 368.9 | 394.5 | 419.2 | 426.6 |
| 50°   | 335.2 | 347.4 | 374.2 | 399.8 | 407.0 |
| 52.5° | 312.1 | 325.1 | 353.8 | 379.4 | 388.0 |
| 55°   | 287.7 | 302.8 | 332.8 | 358.8 | 366.5 |
| 57.5° | 264.6 | 280.0 | 312.1 | 338.4 | 346.1 |
| 60°   | 241.9 | 257.8 | 290.6 | 315.7 | 323.9 |
| 62.5° | 216.7 | 235.4 | 269.5 | 294.2 | 300.3 |
| 65°   | 194.0 | 213.1 | 246.4 | 271.0 | 278.0 |
| 67.5° | 170.0 | 190.7 | 224.0 | 246.7 | 253.3 |
| 70°   | 147.4 | 168.8 | 200.9 | 222.0 | 224.8 |
| 72.5° | 123.0 | 144.9 | 177.3 | 190.7 | 190.7 |
| 75°   | 101.0 | 123.3 | 153.4 | 155.9 | 153.8 |
| 77.5° | 77.1  | 101.9 | 121.3 | 116.4 | 111.6 |
| 80°   | 55.6  | 80.0  | 88.8  | 80.0  | 73.4  |
| 82.5° | 37.3  | 58.0  | 53.5  | 42.6  | 37.8  |
| 85°   | 20.7  | 30.8  | 21.1  | 11.7  | 8.5   |
| 87.5° | 7.7   | 6.9   | 2.0   | 2.0   | 2.0   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG







— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-4000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.

### Spectral Parameters

CCT (K): 4009  
 CIE  $u'$ : 0.2311  
 CIE  $v'$ : 0.4879  
 Duv: -0.0109  
 CIE x: 0.3728  
 CIE y: 0.3498  
 CIE z: 0.2775  
 Peak Wavelength (nm): 632  
 Dominant Wavelength (nm): 588  
 Purity: 17.1


CRI (Ra): 87.8

|     |      |      |      |
|-----|------|------|------|
| R1: | 94.2 | R9:  | 79.5 |
| R2: | 88.6 | R10: | 77.2 |
| R3: | 84.5 | R11: | 92.9 |
| R4: | 91.1 | R12: | 72.5 |
| R5: | 92.1 | R13: | 92.1 |
| R6: | 82.3 | R14: | 92.6 |
| R7: | 84.3 |      |      |
| R8: | 84.9 |      |      |

Rf: 88  
 Rg: 96.2

### Test Conditions

Stabilization Time: 44M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

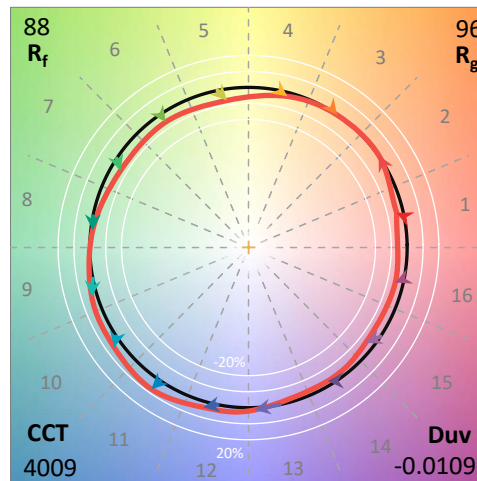


REPORT NUMBER: SP1-2210-795-4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-4

**CIE 1931 Chromaticity Diagram**

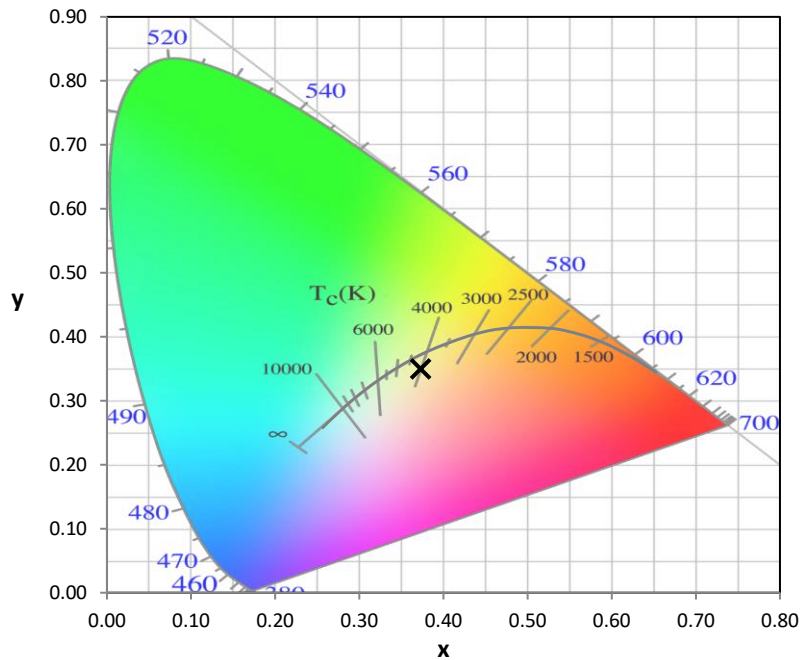

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

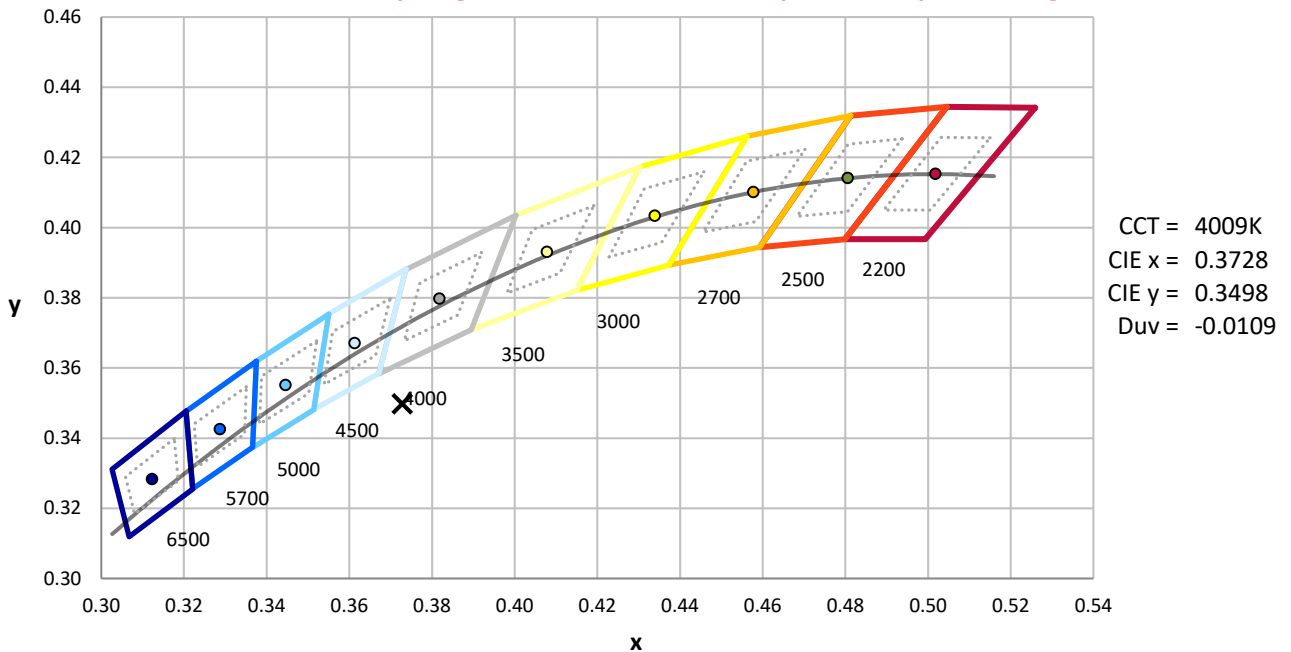


Point lies outside the range



REPORT NUMBER: SP1-2210-795-4

**Photopic Flux vs. Wavelength**

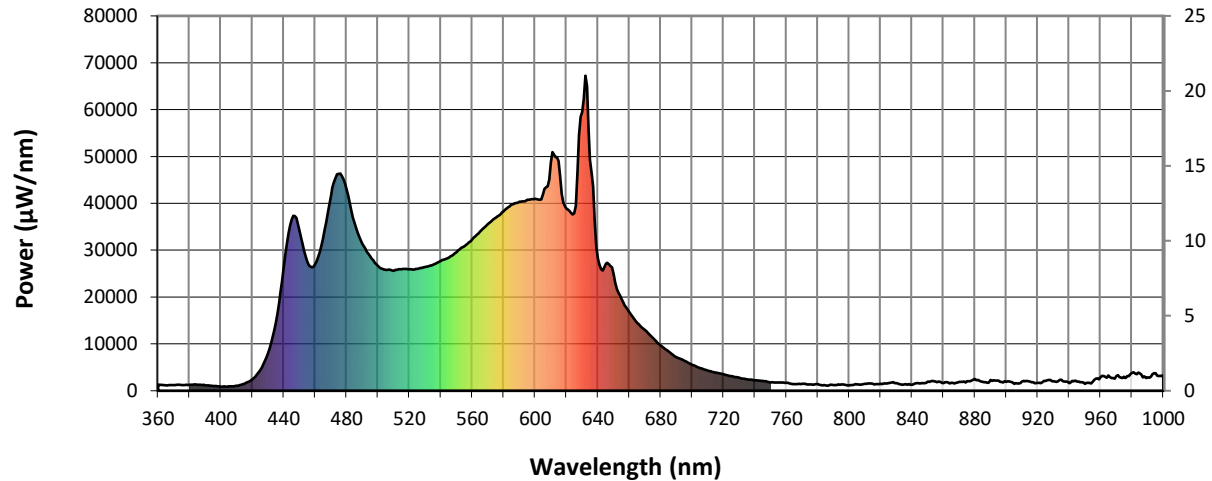


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Scotopic Flux vs. Wavelength**

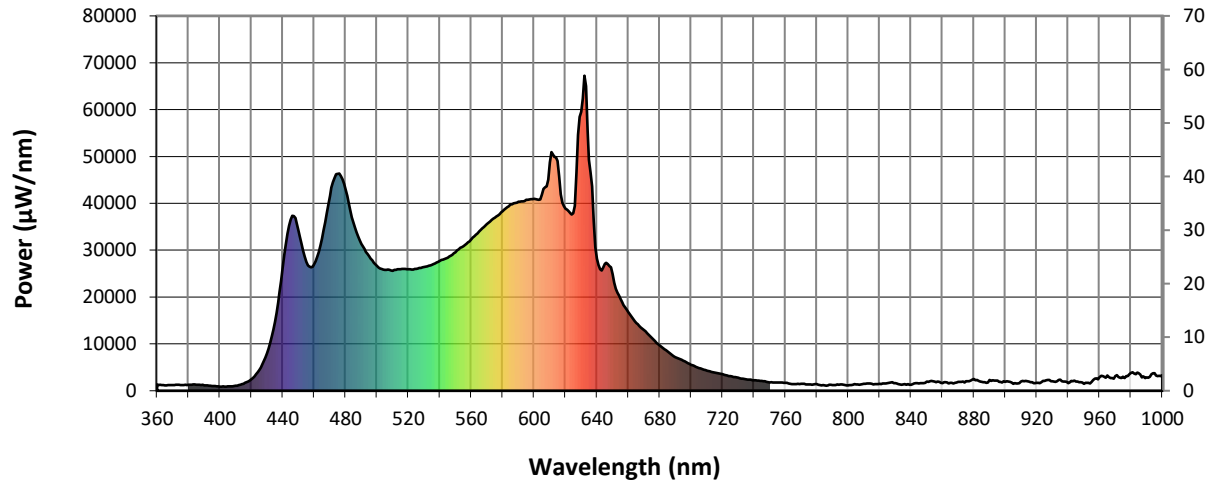


**Scotopic Lumens: 4927.4**

**S/P: 2.02**

| $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|
| 360               | 1347                          | NR                             | 490               | 31353                         | NR                             | 620               | 38840                         | NR                             | 750               | 1762                          | NR                             | 880               | 2493                          | NR                             |
| 365               | 1168                          | NR                             | 495               | 28718                         | NR                             | 625               | 37861                         | NR                             | 755               | 1752                          | NR                             | 885               | 1913                          | NR                             |
| 370               | 1204                          | NR                             | 500               | 26605                         | NR                             | 630               | 59547                         | NR                             | 760               | 1690                          | NR                             | 890               | 2275                          | NR                             |
| 375               | 1232                          | NR                             | 505               | 25784                         | NR                             | 635               | 49312                         | NR                             | 765               | 1395                          | NR                             | 895               | 2173                          | NR                             |
| 380               | 1249                          | NR                             | 510               | 25614                         | NR                             | 640               | 28168                         | NR                             | 770               | 1452                          | NR                             | 900               | 1923                          | NR                             |
| 385               | 1285                          | NR                             | 515               | 25941                         | NR                             | 645               | 27115                         | NR                             | 775               | 1370                          | NR                             | 905               | 1511                          | NR                             |
| 390               | 1154                          | NR                             | 520               | 25900                         | NR                             | 650               | 24916                         | NR                             | 780               | 1429                          | NR                             | 910               | 1971                          | NR                             |
| 395               | 1036                          | NR                             | 525               | 26015                         | NR                             | 655               | 19572                         | NR                             | 785               | 1112                          | NR                             | 915               | 1957                          | NR                             |
| 400               | 873                           | NR                             | 530               | 26424                         | NR                             | 660               | 16766                         | NR                             | 790               | 1222                          | NR                             | 920               | 1699                          | NR                             |
| 405               | 908                           | NR                             | 535               | 26869                         | NR                             | 665               | 14487                         | NR                             | 795               | 1347                          | NR                             | 925               | 2123                          | NR                             |
| 410               | 1056                          | NR                             | 540               | 27684                         | NR                             | 670               | 12943                         | NR                             | 800               | 1132                          | NR                             | 930               | 2029                          | NR                             |
| 415               | 1492                          | NR                             | 545               | 28407                         | NR                             | 675               | 11228                         | NR                             | 805               | 1360                          | NR                             | 935               | 2371                          | NR                             |
| 420               | 2426                          | NR                             | 550               | 29571                         | NR                             | 680               | 9665                          | NR                             | 810               | 1451                          | NR                             | 940               | 1649                          | NR                             |
| 425               | 4409                          | NR                             | 555               | 30862                         | NR                             | 685               | 8389                          | NR                             | 815               | 1507                          | NR                             | 945               | 1984                          | NR                             |
| 430               | 7984                          | NR                             | 560               | 32297                         | NR                             | 690               | 7170                          | NR                             | 820               | 1466                          | NR                             | 950               | 1495                          | NR                             |
| 435               | 14687                         | NR                             | 565               | 33979                         | NR                             | 695               | 6398                          | NR                             | 825               | 1609                          | NR                             | 955               | 1862                          | NR                             |
| 440               | 26286                         | NR                             | 570               | 35579                         | NR                             | 700               | 5544                          | NR                             | 830               | 1642                          | NR                             | 960               | 2951                          | NR                             |
| 445               | 36513                         | NR                             | 575               | 36922                         | NR                             | 705               | 4845                          | NR                             | 835               | 1363                          | NR                             | 965               | 3240                          | NR                             |
| 450               | 34274                         | NR                             | 580               | 38319                         | NR                             | 710               | 4309                          | NR                             | 840               | 1294                          | NR                             | 970               | 3119                          | NR                             |
| 455               | 27519                         | NR                             | 585               | 39771                         | NR                             | 715               | 3879                          | NR                             | 845               | 1584                          | NR                             | 975               | 3020                          | NR                             |
| 460               | 26986                         | NR                             | 590               | 40329                         | NR                             | 720               | 3504                          | NR                             | 850               | 1930                          | NR                             | 980               | 3800                          | NR                             |
| 465               | 32511                         | NR                             | 595               | 40738                         | NR                             | 725               | 3094                          | NR                             | 855               | 1952                          | NR                             | 985               | 3748                          | NR                             |
| 470               | 41588                         | NR                             | 600               | 40944                         | NR                             | 730               | 2758                          | NR                             | 860               | 1631                          | NR                             | 990               | 2878                          | NR                             |
| 475               | 46297                         | NR                             | 605               | 41826                         | NR                             | 735               | 2441                          | NR                             | 865               | 1714                          | NR                             | 995               | 3708                          | NR                             |
| 480               | 42885                         | NR                             | 610               | 48714                         | NR                             | 740               | 2221                          | NR                             | 870               | 1878                          | NR                             | 1000              | 3359                          | NR                             |
| 485               | 35895                         | NR                             | 615               | 48984                         | NR                             | 745               | 2091                          | NR                             | 875               | 2024                          | NR                             |                   |                               |                                |

REPORT NUMBER: SP1-2210-795-4

**Melanopic Flux vs. Wavelength**

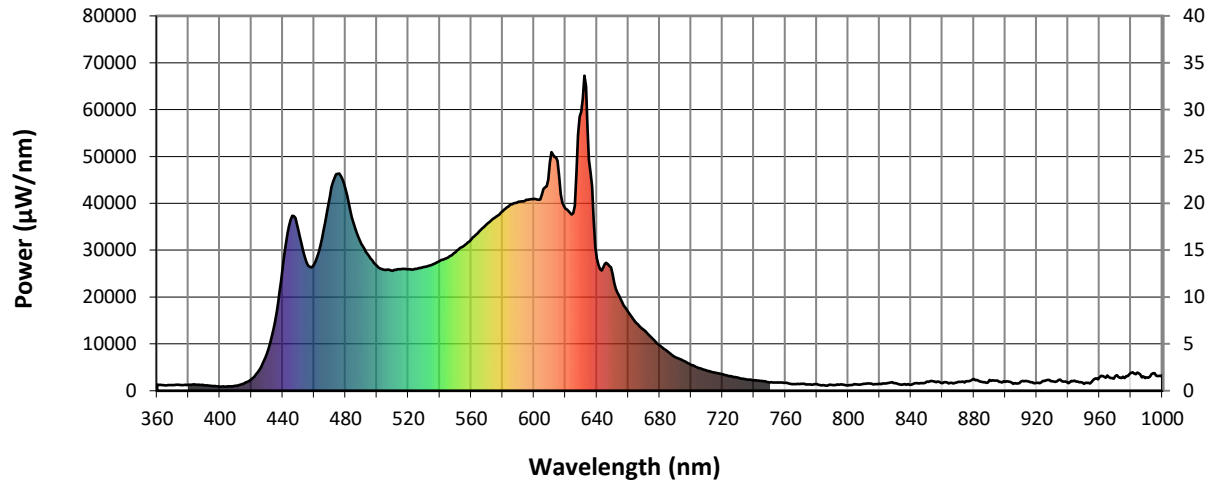

**Melanopic Lumens: 2189.1**

**S/P: 0.9**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4





TM-30-18

### Summary

$R_f = 88$   
 $R_g = 96.2$   
 CIE  $R_a = 87.8$   
 $R_g = 79.5$

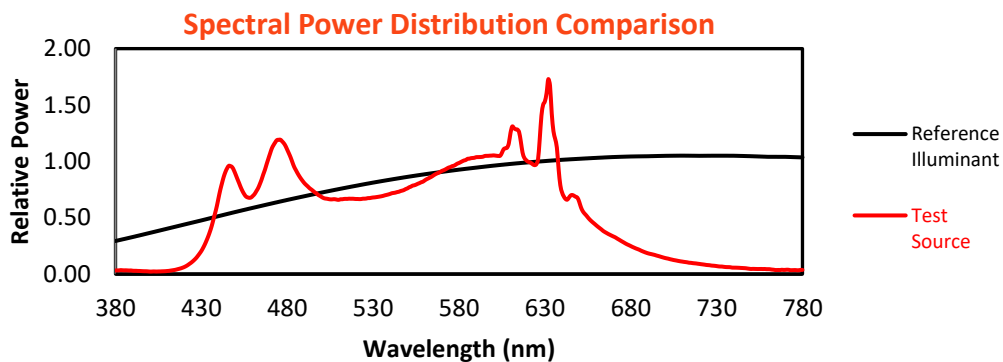

### Color Vector Graphics

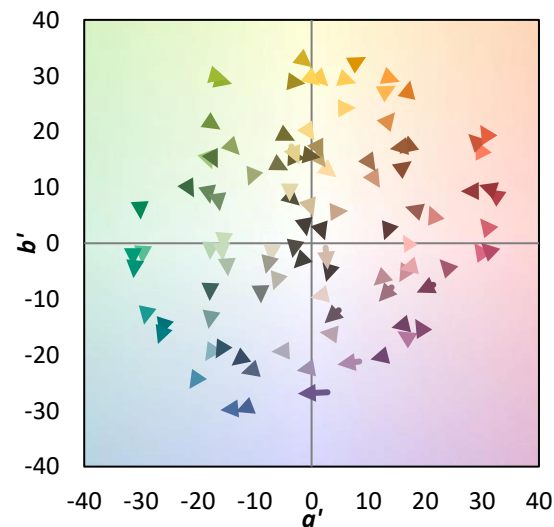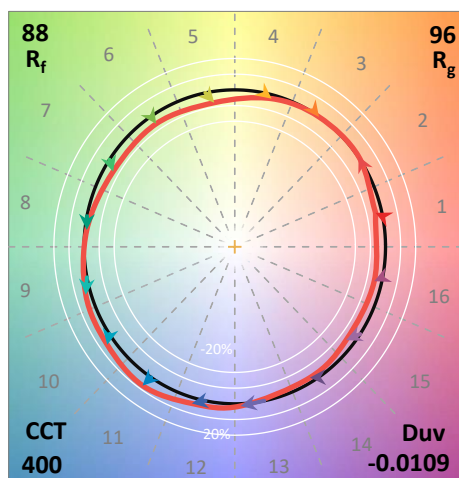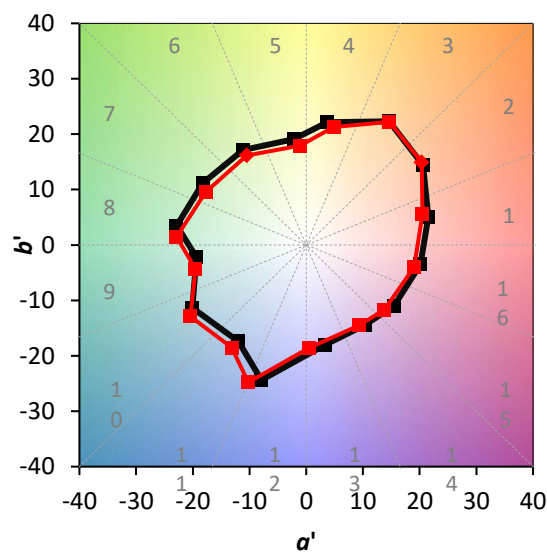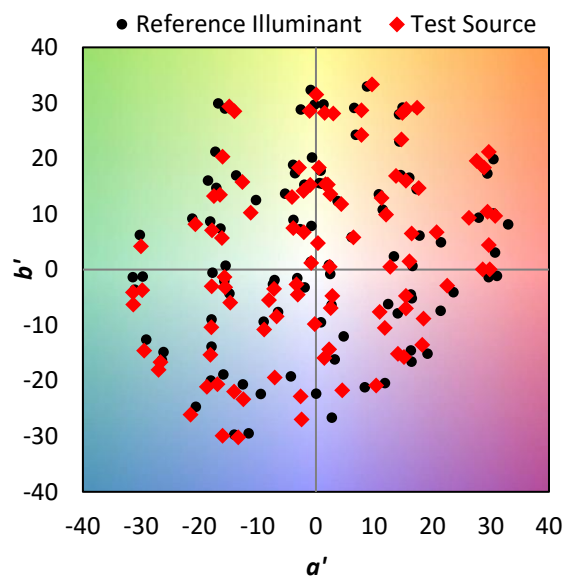


REPORT NUMBER: SP1-2210-795-4

TM-30-18

Individual Sample Fidelity Index ( $R_{f,i}$ )




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 91 | CES51 = 88 | CES76 = 86 |
| CES02 = 62 | CES27 = 85 | CES52 = 91 | CES77 = 79 |
| CES03 = 31 | CES28 = 93 | CES53 = 85 | CES78 = 87 |
| CES04 = 70 | CES29 = 84 | CES54 = 86 | CES79 = 81 |
| CES05 = 49 | CES30 = 81 | CES55 = 84 | CES80 = 82 |
| CES06 = 51 | CES31 = 85 | CES56 = 83 | CES81 = 65 |
| CES07 = 42 | CES32 = 92 | CES57 = 81 | CES82 = 93 |
| CES08 = 41 | CES33 = 86 | CES58 = 82 | CES83 = 87 |
| CES09 = 29 | CES34 = 90 | CES59 = 93 | CES84 = 96 |
| CES10 = 75 | CES35 = 94 | CES60 = 90 | CES85 = 77 |
| CES11 = 58 | CES36 = 78 | CES61 = 89 | CES86 = 74 |
| CES12 = 64 | CES37 = 92 | CES62 = 80 | CES87 = 89 |
| CES13 = 43 | CES38 = 77 | CES63 = 92 | CES88 = 89 |
| CES14 = 74 | CES39 = 95 | CES64 = 86 | CES89 = 84 |
| CES15 = 71 | CES40 = 91 | CES65 = 91 | CES90 = 87 |
| CES16 = 47 | CES41 = 90 | CES66 = 87 | CES91 = 74 |
| CES17 = 49 | CES42 = 87 | CES67 = 88 | CES92 = 77 |
| CES18 = 56 | CES43 = 86 | CES68 = 90 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 89 | CES70 = 91 | CES95 = 86 |
| CES21 = 85 | CES46 = 90 | CES71 = 86 | CES96 = 94 |
| CES22 = 78 | CES47 = 84 | CES72 = 95 | CES97 = 88 |
| CES23 = 91 | CES48 = 80 | CES73 = 89 | CES98 = 87 |
| CES24 = 90 | CES49 = 90 | CES74 = 88 | CES99 = 88 |
| CES25 = 71 | CES50 = 89 | CES75 = 86 |            |

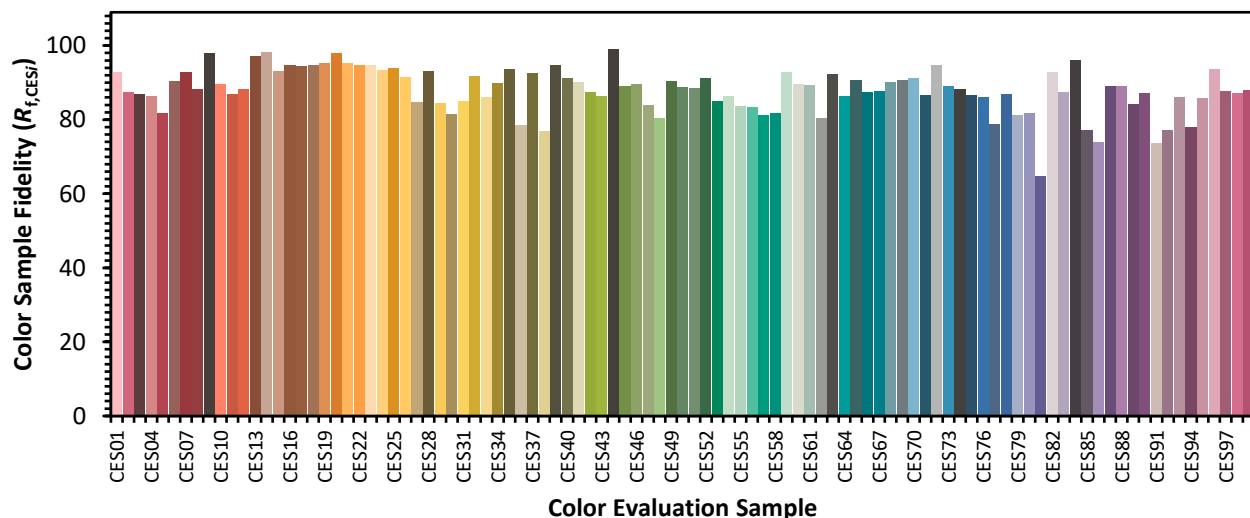

REPORT NUMBER: SP1-2210-795-4

**TM-30-18**



Color Rendition by Hue-Angle Bin

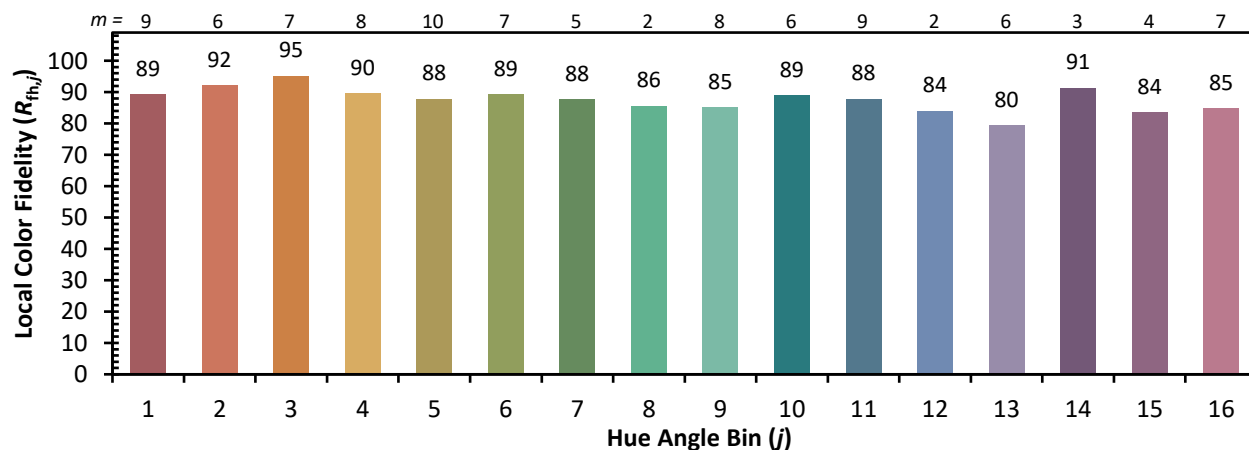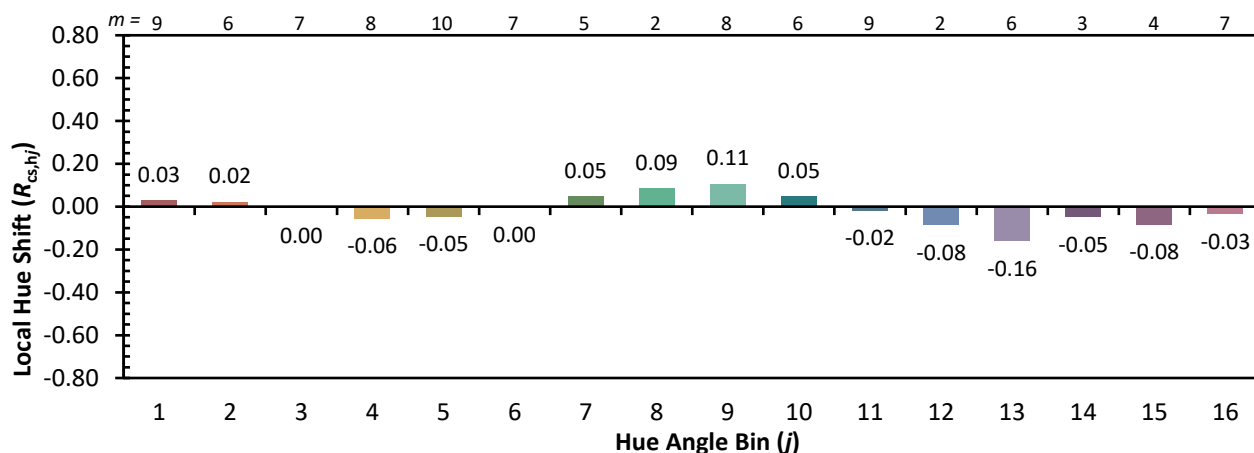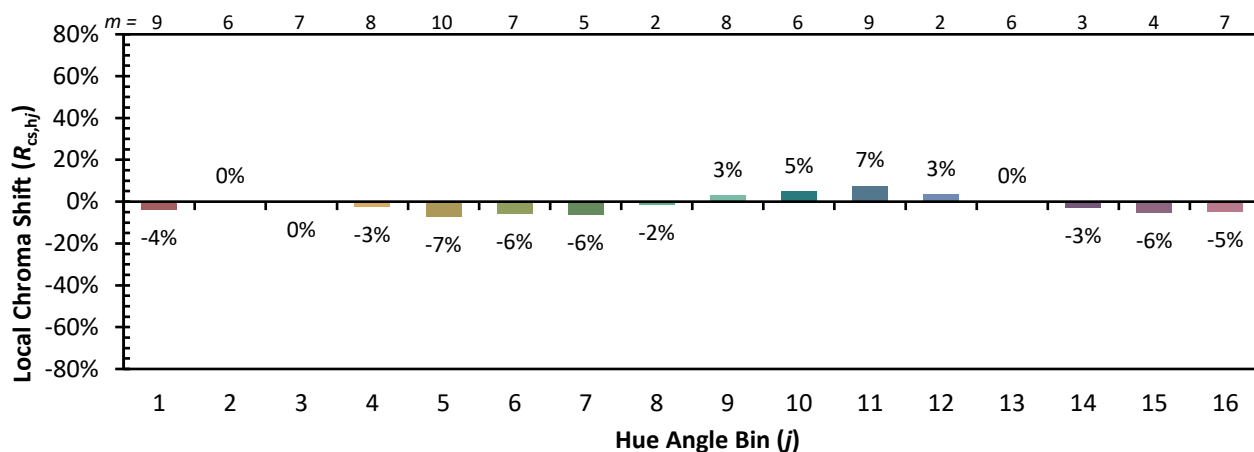

REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Measure Comparisons**

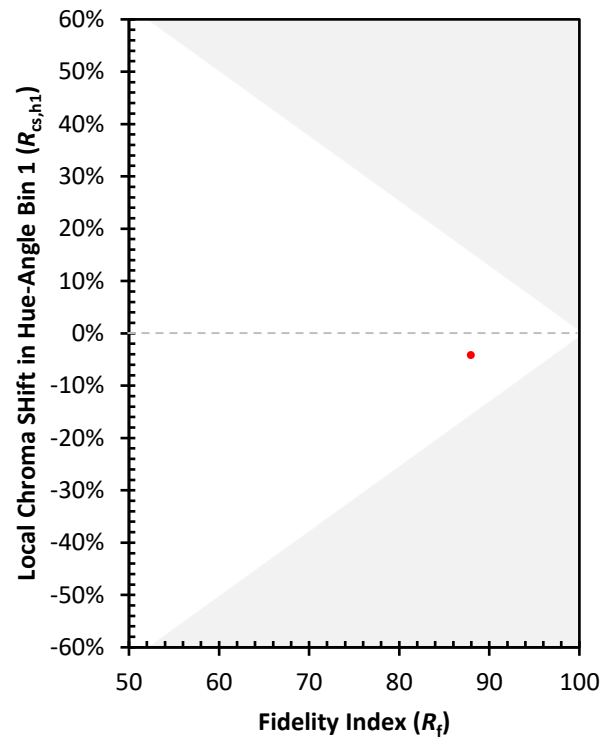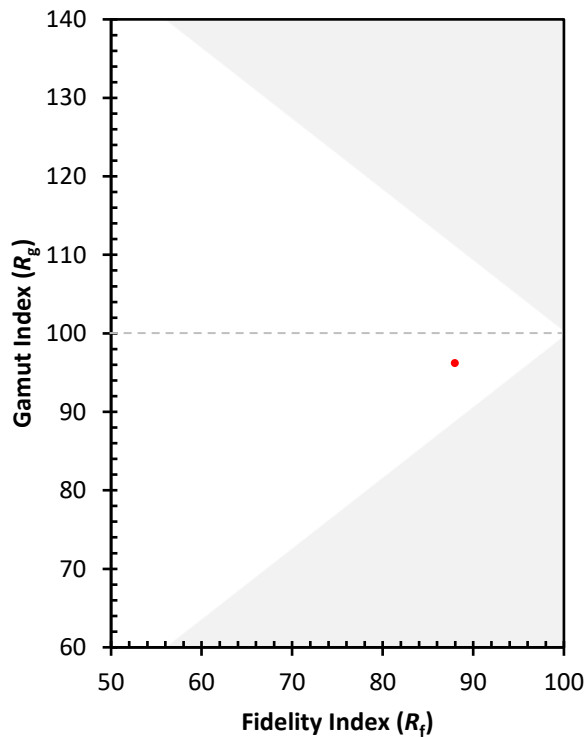

(END OF REPORT)