

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P732492

Luminaire Tested: **14FCZ2-20-S-B2750-W2D-CA125-3000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732492
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P275670)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: 14FCZ2-20-S-B2750-W2D-CA125-3000K
Description: 1X4 2000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 3000K CCT
AND SMOOTH LENS, WITH, CA125 BOTTOM LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1918.0 lumens
Efficiency: N/A
Efficacy: 119.9 lumens/watt
Spacing Criteria (0/90/45): 1.19 / 1.26 / 1.36
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 16
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732492

CATALOG NUMBER: 14FCZ2-20-S-B2750-W2D-CA125-3000K

Luminous Intensity Polar Plot

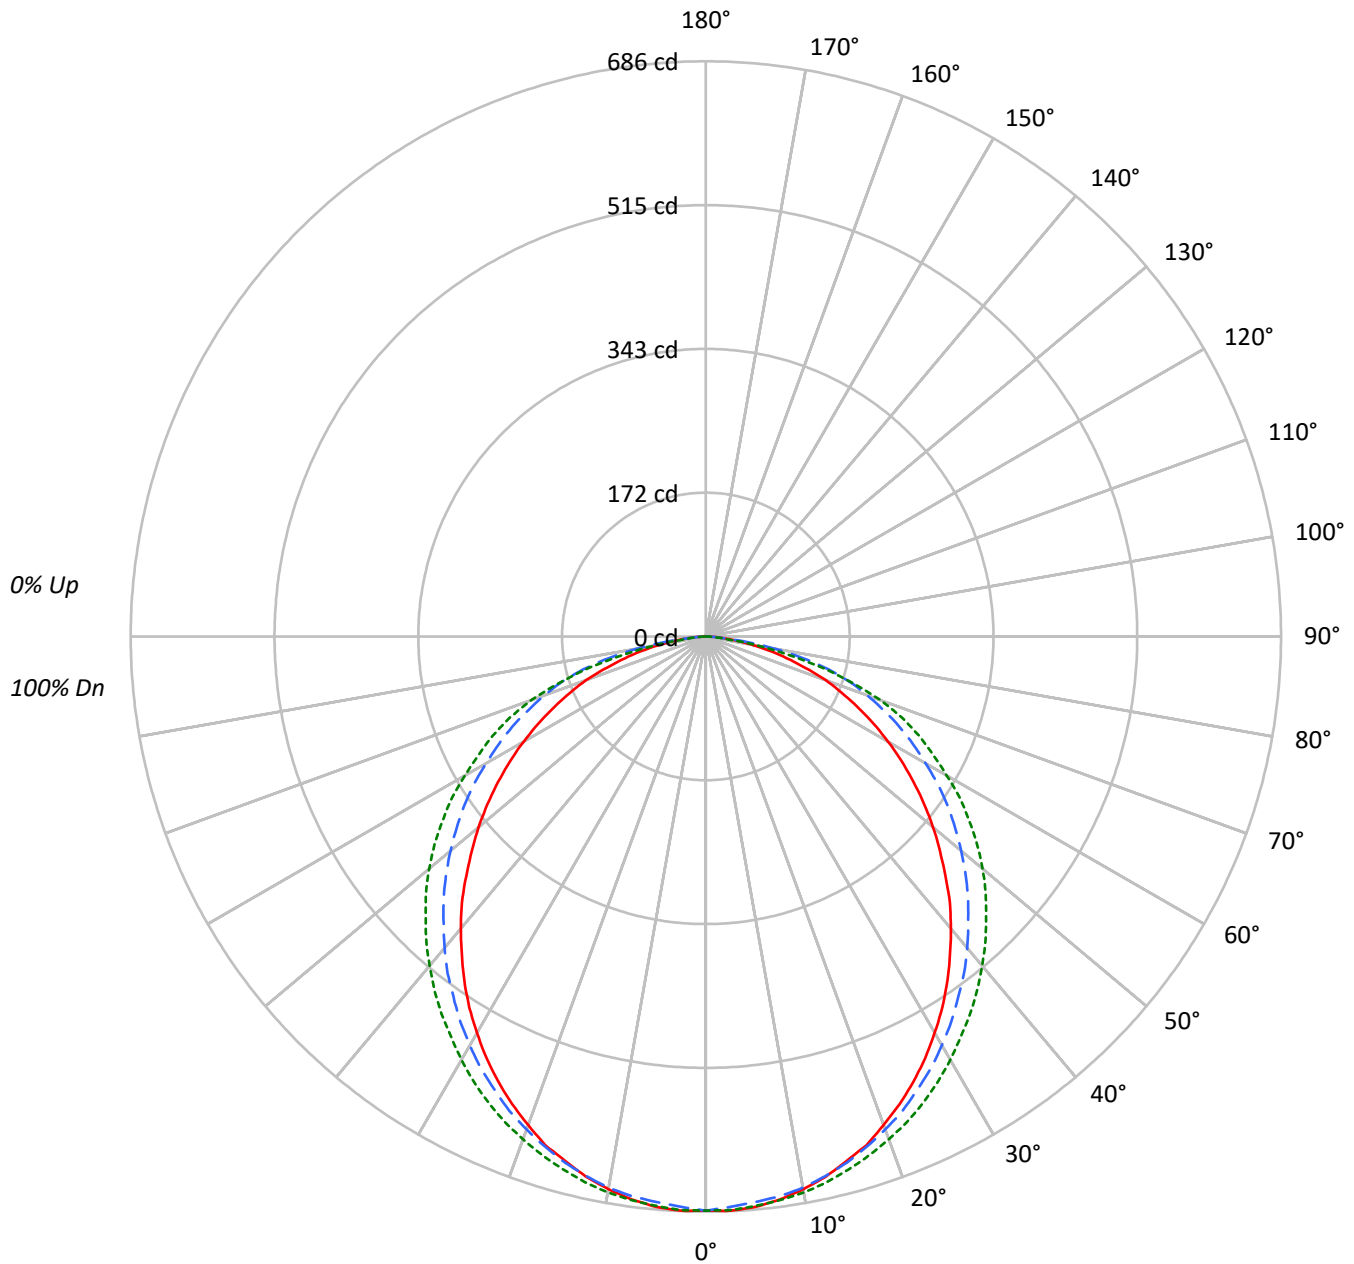



TEST NUMBER: P732492

CATALOG NUMBER: 14FCZ2-20-S-B2750-W2D-CA125-3000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20					20					20					20					20
RC	80					70					50					30					10
RW	70	50	30	10		70	50	30	10		50	30	10		50	30	10		50	30	10
RCR																					
0	119	119	119	119		116	116	116	116		111	111	111		106	106	106		102	102	102
1	109	104	100	96		106	102	98	94		97	94	91		94	91	89		90	88	86
2	99	90	84	78		96	89	82	77		85	80	75		82	77	73		79	75	72
3	90	79	71	65		87	78	70	64		75	68	63		72	66	62		69	65	61
4	82	70	61	55		80	69	61	54		66	59	53		64	58	53		62	56	52
5	76	63	54	47		74	62	53	47		59	52	46		57	51	46		56	50	45
6	70	56	47	41		68	55	47	41		54	46	40		52	45	40		50	44	40
7	65	51	42	36		63	50	42	36		49	41	36		47	41	35		46	40	35
8	60	47	38	32		59	46	38	32		45	37	32		43	37	32		42	36	32
9	56	43	35	29		55	42	34	29		41	34	29		40	33	29		39	33	28
10	53	40	32	26		52	39	31	26		38	31	26		37	31	26		36	30	26

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1933	1933	1933
5°	1935	1919	1932
10°	1919	1913	1930
15°	1892	1898	1923
20°	1862	1879	1917
25°	1824	1857	1910
30°	1779	1835	1900
35°	1730	1809	1894
40°	1675	1787	1889
45°	1613	1765	1887
50°	1554	1746	1892
55°	1488	1732	1886
60°	1418	1707	1874
65°	1334	1702	1874
70°	1256	1688	1821
75°	1090	1649	1555
80°	881	1330	1035
85°	586	460	311



TEST NUMBER: P732492

CATALOG NUMBER: 14FCZ2-20-S-B2750-W2D-CA125-3000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	64.7	3.4
10°-20°	184.0	9.6
20°-30°	276.0	14.4
30°-40°	329.2	17.2
40°-50°	340.3	17.7
50°-60°	310.7	16.2
60°-70°	244.5	12.7
70°-80°	142.3	7.4
80°-90°	26.2	1.4
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	524.6	27.4
0°-40°	853.8	44.5
0°-60°	1504.9	78.5
0°-90°	1918.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1918.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	685	685	685	685	685	
5°	683	681	677	683	682	65
15°	648	649	650	658	658	183
25°	586	589	596	610	613	270
35°	502	509	525	545	550	314
45°	404	418	442	467	473	312
55°	302	319	352	378	383	270
65°	200	221	255	275	281	198
75°	100	124	151	148	143	106
85°	18	26	14	11	10	23
90°	0	0	0	0	0	



TEST NUMBER: P732492

CATALOG NUMBER: 14FCZ2-20-S-B2750-W2D-CA125-3000K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	684.7	684.7	684.7	684.7	684.7
2.5°	685.6	683.8	680.9	685.6	684.7
5°	682.8	680.9	677.1	682.8	681.8
7.5°	677.1	675.1	673.3	679.0	678.1
10°	669.4	668.5	667.6	674.2	673.3
12.5°	660.0	660.0	659.1	666.6	666.6
15°	647.6	648.6	649.5	658.0	658.0
17.5°	636.2	635.3	638.1	647.6	648.6
20°	620.0	621.9	625.7	637.2	638.1
22.5°	603.8	605.8	612.5	623.9	626.7
25°	585.8	588.7	596.3	610.5	613.4
27.5°	566.8	570.6	581.0	596.3	599.1
30°	545.8	551.5	562.9	580.1	583.0
32.5°	524.9	530.7	544.9	562.0	565.8
35°	502.1	508.7	524.9	544.9	549.6
37.5°	478.3	486.8	506.0	525.9	531.6
40°	454.6	464.1	485.0	506.0	512.6
42.5°	430.8	440.3	463.1	486.8	493.6
45°	404.1	417.5	442.2	466.9	472.6
47.5°	378.5	392.8	420.3	445.0	452.7
50°	353.8	368.0	397.5	423.2	430.8
52.5°	328.1	343.3	374.6	401.3	408.0
55°	302.4	318.6	351.9	377.5	383.3
57.5°	276.7	293.9	328.1	352.8	359.5
60°	251.1	269.2	302.4	327.1	331.9
62.5°	225.4	244.4	278.6	300.5	305.3
65°	199.7	220.6	254.8	274.9	280.6
67.5°	175.0	195.9	229.2	248.2	253.0
70°	152.2	171.2	204.5	218.7	220.6
72.5°	123.6	147.4	179.7	187.4	182.6
75°	99.9	123.6	151.2	148.3	142.6
77.5°	76.1	99.9	117.9	108.4	100.8
80°	54.2	78.0	81.8	67.5	63.7
82.5°	35.2	54.2	45.7	35.2	28.5
85°	18.1	25.6	14.2	11.4	9.6
87.5°	5.7	3.8	1.9	1.9	0.9
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-2

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3000K.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-3000K-315MA**
 Description: METALUX

TUNABLE BOARD, 3000K-315MA, PROGRAMMED @ 2.6Vdc.

Spectral Parameters

CCT (K):	3004	CRI (Ra):	93.2		
CIE u':	0.2526	R1:	98.5	R9:	67.1
CIE v':	0.5127	R2:	96.3	R10:	94.0
Duv:	-0.0061	R3:	94.1	R11:	97.7
CIE x:	0.4279	R4:	96.5	R12:	86.0
CIE y:	0.3860	R5:	98.5	R13:	98.4
CIE z:	0.1861	R6:	90.3	R14:	98.1
Peak Wavelength (nm):	632	R7:	88.3		
Dominant Wavelength (nm):	585	R8:	83.1		
Purity:	44.5				
Rf:	92.5				
Rg:	99.9				



REPORT NUMBER: SP1-2210-795-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies outside the range

REPORT NUMBER: SP1-2210-795-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 3849.1

S/P: 1.53

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 1558.5

S/P: 0.62

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Summary

$R_f = 92.5$
 $R_g = 99.9$
 CIE $R_a = 93.2$
 $R_g = 67.1$



Color Vector Graphics




REPORT NUMBER: SP1-2210-795-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)


CES01 = 86	CES26 = 97	CES51 = 97	CES76 = 94
CES02 = 63	CES27 = 93	CES52 = 98	CES77 = 81
CES03 = 32	CES28 = 99	CES53 = 97	CES78 = 91
CES04 = 70	CES29 = 99	CES54 = 93	CES79 = 85
CES05 = 51	CES30 = 95	CES55 = 93	CES80 = 87
CES06 = 51	CES31 = 99	CES56 = 96	CES81 = 67
CES07 = 44	CES32 = 92	CES57 = 95	CES82 = 94
CES08 = 42	CES33 = 99	CES58 = 95	CES83 = 91
CES09 = 29	CES34 = 96	CES59 = 97	CES84 = 97
CES10 = 76	CES35 = 98	CES60 = 94	CES85 = 78
CES11 = 59	CES36 = 87	CES61 = 94	CES86 = 76
CES12 = 65	CES37 = 98	CES62 = 89	CES87 = 93
CES13 = 44	CES38 = 91	CES63 = 99	CES88 = 96
CES14 = 74	CES39 = 100	CES64 = 94	CES89 = 83
CES15 = 72	CES40 = 98	CES65 = 94	CES90 = 96
CES16 = 48	CES41 = 95	CES66 = 95	CES91 = 81
CES17 = 50	CES42 = 96	CES67 = 94	CES92 = 78
CES18 = 57	CES43 = 93	CES68 = 93	CES93 = 86
CES19 = 72	CES44 = 99	CES69 = 94	CES94 = 75
CES20 = 67	CES45 = 97	CES70 = 93	CES95 = 86
CES21 = 86	CES46 = 97	CES71 = 92	CES96 = 93
CES22 = 79	CES47 = 87	CES72 = 96	CES97 = 96
CES23 = 92	CES48 = 93	CES73 = 90	CES98 = 95
CES24 = 90	CES49 = 97	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 97	CES75 = 93	

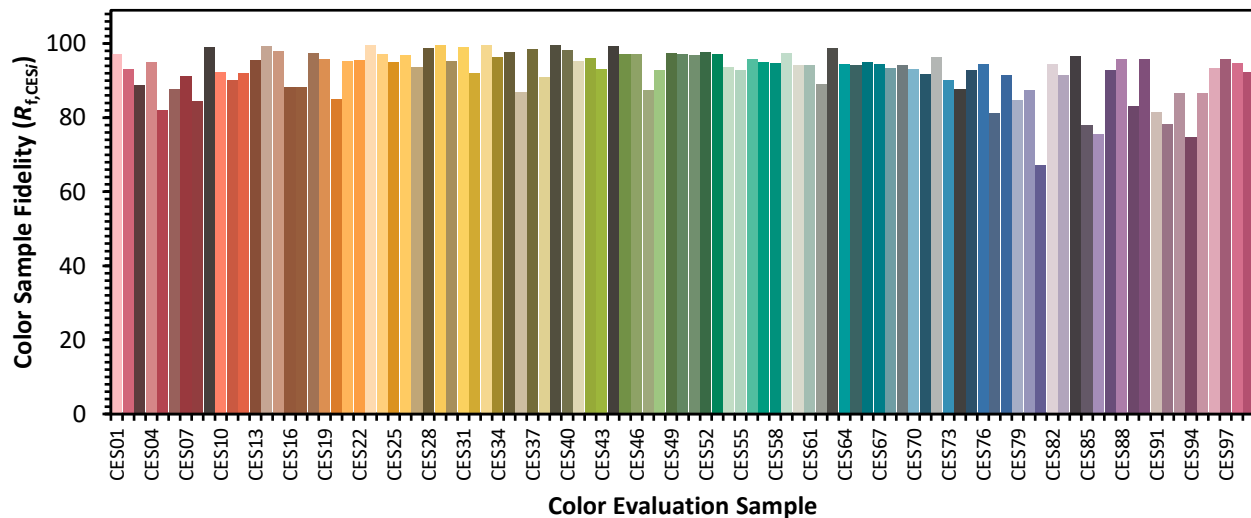

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Color Rendition by Hue-Angle Bin

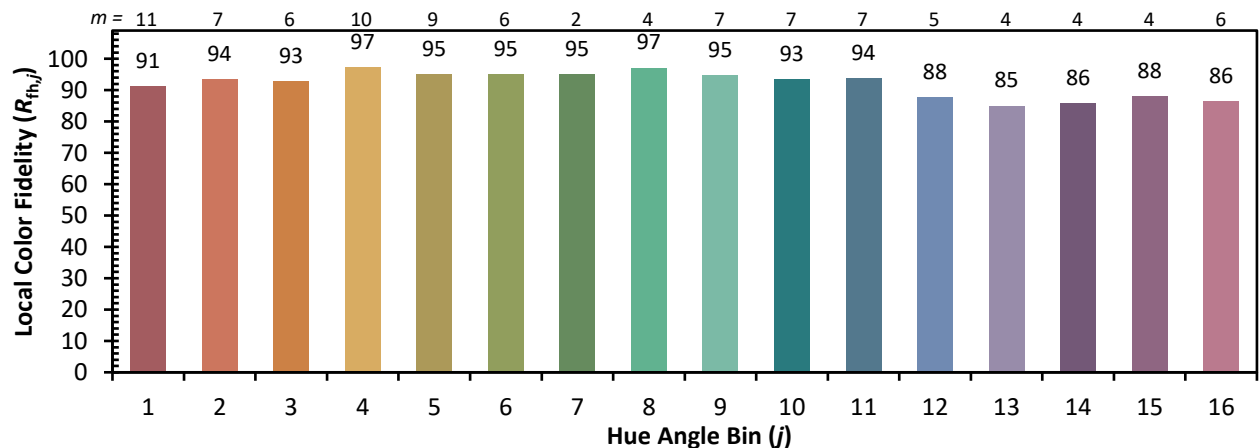

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Measure Comparisons



(END OF REPORT)