

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P732524

Luminaire Tested: **14FCZ2-20-SQR-B2750-W2D-CP187-4000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732524  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P387389)  
Test Lab: INNOVATIONS CENTER(G2)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 14FCZ2-20-SQR-B2750-W2D-CP187-4000K  
Description: 1X4 2000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 4000K CCT  
AND SQR LENS, WITH, CP187 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1624.0 lumens  
Efficiency: N/A  
Efficacy: 101.5 lumens/watt  
Spacing Criteria (0/90/45): 1.23 / 1.34 / 1.44  
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 16  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732524

CATALOG NUMBER: 14FCZ2-20-SQR-B2750-W2D-CP187-4000K

### Luminous Intensity Polar Plot

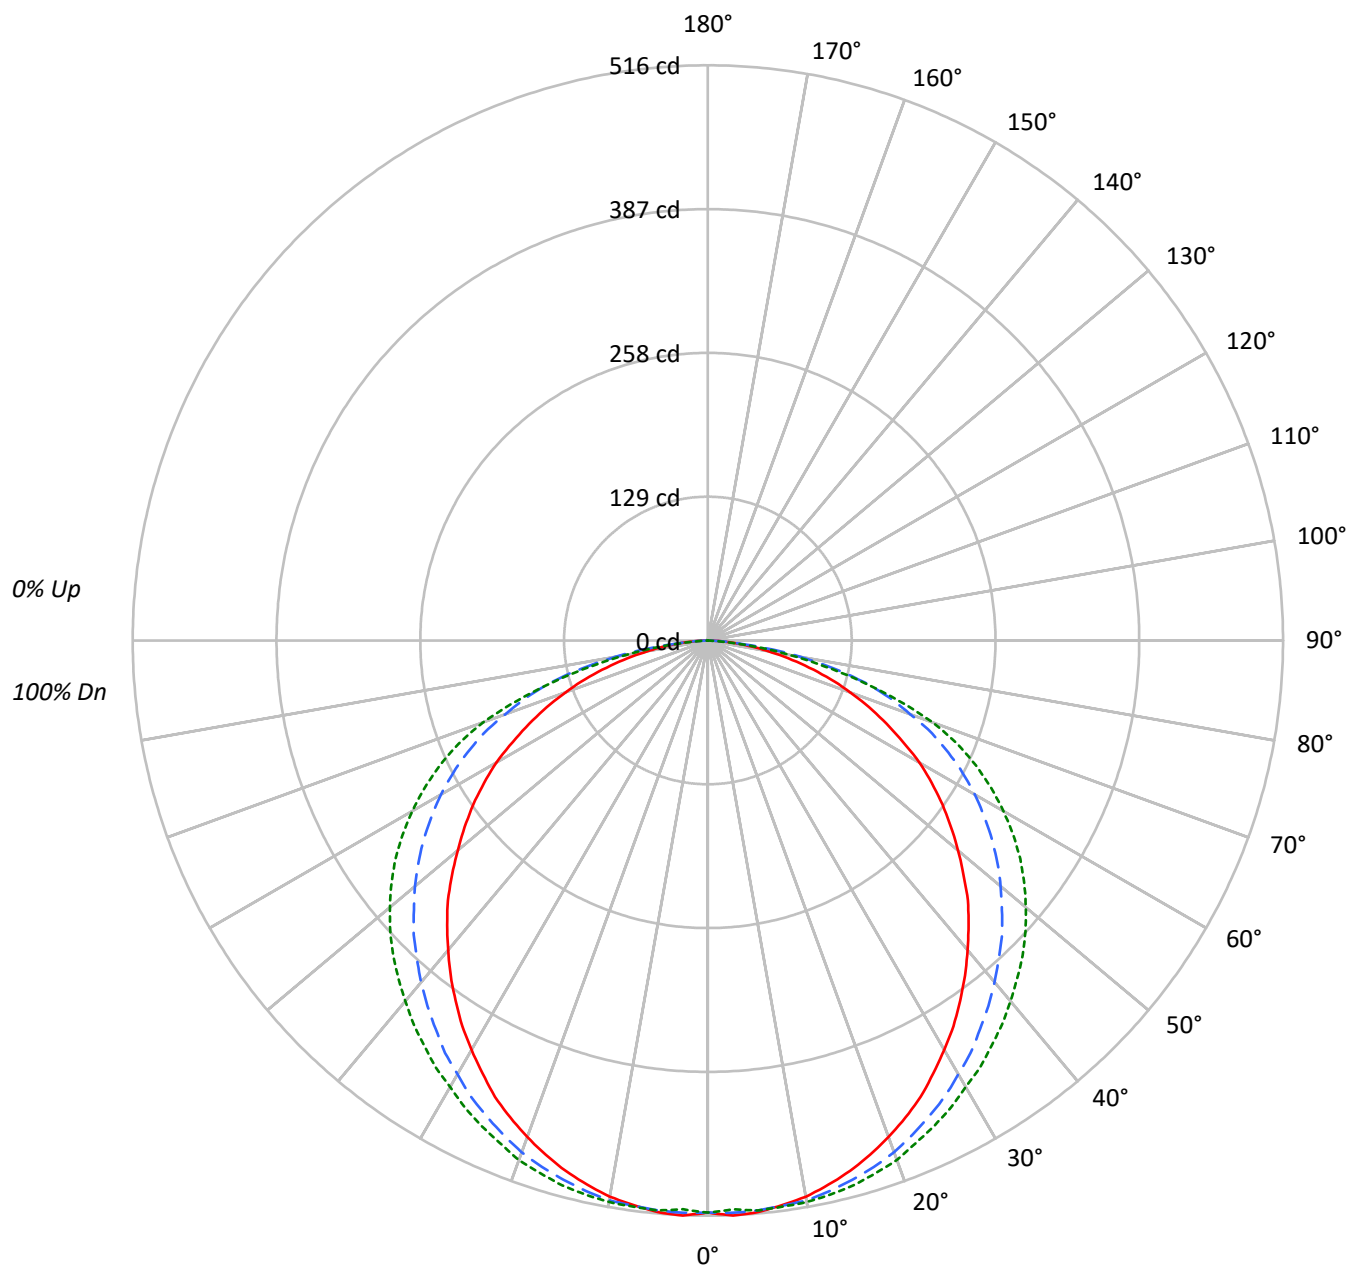



TEST NUMBER: P732524

CATALOG NUMBER: 14FCZ2-20-SQR-B2750-W2D-CP187-4000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 0  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 99  | 95  | 105 | 101 | 97  | 93  | 97  | 93  | 90  | 93  | 90  | 87  | 89  | 87  | 85  | 83  |    |    |
| 2   | 98  | 89  | 82  | 76  | 95  | 87  | 81  | 75  | 84  | 78  | 73  | 80  | 76  | 72  | 77  | 73  | 70  | 68  |    |    |
| 3   | 89  | 78  | 69  | 62  | 86  | 76  | 68  | 62  | 73  | 66  | 61  | 70  | 64  | 60  | 68  | 63  | 59  | 56  |    |    |
| 4   | 81  | 68  | 59  | 52  | 79  | 67  | 59  | 52  | 65  | 57  | 51  | 62  | 56  | 51  | 60  | 54  | 50  | 48  |    |    |
| 5   | 74  | 61  | 52  | 45  | 72  | 60  | 51  | 44  | 58  | 50  | 44  | 56  | 49  | 43  | 54  | 48  | 43  | 41  |    |    |
| 6   | 68  | 55  | 45  | 39  | 67  | 54  | 45  | 39  | 52  | 44  | 38  | 50  | 43  | 38  | 49  | 42  | 38  | 35  |    |    |
| 7   | 63  | 49  | 40  | 34  | 62  | 49  | 40  | 34  | 47  | 39  | 34  | 46  | 39  | 33  | 44  | 38  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 36  | 30  | 43  | 35  | 30  | 42  | 35  | 30  | 41  | 34  | 30  | 28  |    |    |
| 9   | 55  | 41  | 33  | 27  | 54  | 41  | 33  | 27  | 39  | 32  | 27  | 38  | 32  | 27  | 37  | 31  | 27  | 25  |    |    |
| 10  | 52  | 38  | 30  | 25  | 50  | 37  | 30  | 24  | 36  | 29  | 24  | 36  | 29  | 24  | 35  | 29  | 24  | 22  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1449 | 1449 | 1449 |
| 5°  | 1459 | 1454 | 1454 |
| 10° | 1452 | 1462 | 1466 |
| 15° | 1440 | 1464 | 1478 |
| 20° | 1424 | 1468 | 1490 |
| 25° | 1407 | 1466 | 1497 |
| 30° | 1382 | 1465 | 1507 |
| 35° | 1359 | 1467 | 1529 |
| 40° | 1336 | 1475 | 1556 |
| 45° | 1317 | 1490 | 1594 |
| 50° | 1287 | 1506 | 1635 |
| 55° | 1265 | 1531 | 1684 |
| 60° | 1238 | 1562 | 1728 |
| 65° | 1181 | 1590 | 1771 |
| 70° | 1122 | 1594 | 1769 |
| 75° | 1026 | 1589 | 1562 |
| 80° | 878  | 1357 | 1211 |
| 85° | 690  | 768  | 450  |



TEST NUMBER: P732524

CATALOG NUMBER: 14FCZ2-20-SQR-B2750-W2D-CP187-4000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 48.8   | 3.0       |
| 10°-20°   | 140.9  | 8.7       |
| 20°-30°   | 215.5  | 13.3      |
| 30°-40°   | 264.1  | 16.3      |
| 40°-50°   | 284.0  | 17.5      |
| 50°-60°   | 272.9  | 16.8      |
| 60°-70°   | 227.3  | 14.0      |
| 70°-80°   | 139.5  | 8.6       |
| 80°-90°   | 31.1   | 1.9       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 405.1  | 24.9      |
| 0°-40°    | 669.2  | 41.2      |
| 0°-60°    | 1226.2 | 75.5      |
| 0°-90°    | 1624.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1624.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 513 | 513   | 513 | 513   | 513 |      |
| 5°  | 515 | 510   | 513 | 513   | 513 | 49   |
| 15° | 493 | 491   | 501 | 504   | 506 | 139  |
| 25° | 452 | 456   | 471 | 476   | 480 | 208  |
| 35° | 394 | 404   | 426 | 437   | 444 | 247  |
| 45° | 330 | 345   | 373 | 390   | 399 | 254  |
| 55° | 257 | 279   | 311 | 332   | 342 | 230  |
| 65° | 177 | 204   | 238 | 258   | 265 | 175  |
| 75° | 94  | 123   | 146 | 145   | 143 | 100  |
| 85° | 21  | 32    | 24  | 16    | 14  | 26   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P732524

CATALOG NUMBER: 14FCZ2-20-SQR-B2750-W2D-CP187-4000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 513.2 | 513.2 | 513.2 | 513.2 | 513.2 |
| 2.5°  | 516.4 | 511.5 | 514.0 | 513.2 | 510.8 |
| 5°    | 514.8 | 510.0 | 513.2 | 513.2 | 513.2 |
| 7.5°  | 510.8 | 506.7 | 511.5 | 512.3 | 512.3 |
| 10°   | 506.7 | 503.4 | 510.0 | 510.8 | 511.5 |
| 12.5° | 500.1 | 497.6 | 505.9 | 507.5 | 509.1 |
| 15°   | 492.7 | 491.1 | 500.9 | 504.2 | 505.9 |
| 17.5° | 483.8 | 484.6 | 495.2 | 499.3 | 500.9 |
| 20°   | 473.9 | 476.4 | 488.6 | 492.7 | 496.0 |
| 22.5° | 463.2 | 466.5 | 479.7 | 484.6 | 487.8 |
| 25°   | 451.8 | 455.9 | 470.6 | 476.4 | 480.5 |
| 27.5° | 437.8 | 444.4 | 460.9 | 468.2 | 472.3 |
| 30°   | 424.0 | 431.4 | 449.4 | 458.4 | 462.4 |
| 32.5° | 410.1 | 418.2 | 438.7 | 447.7 | 454.3 |
| 35°   | 394.5 | 404.4 | 425.6 | 437.0 | 443.6 |
| 37.5° | 379.0 | 390.4 | 413.3 | 426.4 | 433.8 |
| 40°   | 362.5 | 374.9 | 400.2 | 414.9 | 422.3 |
| 42.5° | 346.2 | 360.2 | 386.4 | 402.7 | 410.9 |
| 45°   | 329.9 | 344.6 | 373.2 | 390.4 | 399.4 |
| 47.5° | 311.1 | 329.1 | 357.7 | 377.3 | 386.4 |
| 50°   | 293.0 | 312.6 | 342.9 | 363.4 | 372.4 |
| 52.5° | 275.0 | 295.5 | 327.4 | 348.7 | 357.7 |
| 55°   | 257.0 | 279.1 | 311.1 | 332.3 | 342.1 |
| 57.5° | 238.1 | 261.1 | 293.8 | 315.9 | 324.9 |
| 60°   | 219.3 | 243.1 | 276.7 | 297.1 | 306.1 |
| 62.5° | 197.2 | 225.1 | 257.9 | 278.3 | 286.5 |
| 65°   | 176.8 | 203.8 | 238.1 | 257.9 | 265.2 |
| 67.5° | 156.4 | 184.2 | 217.7 | 235.8 | 242.2 |
| 70°   | 135.9 | 163.7 | 193.1 | 210.4 | 214.4 |
| 72.5° | 115.4 | 143.2 | 171.1 | 180.9 | 179.3 |
| 75°   | 94.1  | 122.8 | 145.7 | 144.9 | 143.2 |
| 77.5° | 73.7  | 101.5 | 115.4 | 109.7 | 107.3 |
| 80°   | 54.0  | 81.1  | 83.5  | 77.8  | 74.5  |
| 82.5° | 36.9  | 58.1  | 52.4  | 45.8  | 42.5  |
| 85°   | 21.3  | 31.9  | 23.7  | 16.3  | 13.9  |
| 87.5° | 9.0   | 8.2   | 2.5   | 2.5   | 1.6   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-4000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 4009    | CRI (Ra): | 87.8 |      |      |
| CIE u':                   | 0.2311  | R1:       | 94.2 | R9:  | 79.5 |
| CIE v':                   | 0.4879  | R2:       | 88.6 | R10: | 77.2 |
| Duv:                      | -0.0109 | R3:       | 84.5 | R11: | 92.9 |
| CIE x:                    | 0.3728  | R4:       | 91.1 | R12: | 72.5 |
| CIE y:                    | 0.3498  | R5:       | 92.1 | R13: | 92.1 |
| CIE z:                    | 0.2775  | R6:       | 82.3 | R14: | 92.6 |
| Peak Wavelength (nm):     | 632     | R7:       | 84.3 |      |      |
| Dominant Wavelength (nm): | 588     | R8:       | 84.9 |      |      |
| Purity:                   | 17.1    |           |      |      |      |
| Rf:                       | 88      |           |      |      |      |
| Rg:                       | 96.2    |           |      |      |      |



### Test Conditions

Stabilization Time: 44M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-4

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies outside the range

REPORT NUMBER: SP1-2210-795-4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 4927.4**

**S/P: 2.02**

| $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>( $\mu\text{W/nm}$ ) | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|
| 360               | 1347                          | NR                             | 490               | 31353                         | NR                             | 620               | 38840                         | NR                             | 750               | 1762                          | NR                             | 880               | 2493                          | NR                             |
| 365               | 1168                          | NR                             | 495               | 28718                         | NR                             | 625               | 37861                         | NR                             | 755               | 1752                          | NR                             | 885               | 1913                          | NR                             |
| 370               | 1204                          | NR                             | 500               | 26605                         | NR                             | 630               | 59547                         | NR                             | 760               | 1690                          | NR                             | 890               | 2275                          | NR                             |
| 375               | 1232                          | NR                             | 505               | 25784                         | NR                             | 635               | 49312                         | NR                             | 765               | 1395                          | NR                             | 895               | 2173                          | NR                             |
| 380               | 1249                          | NR                             | 510               | 25614                         | NR                             | 640               | 28168                         | NR                             | 770               | 1452                          | NR                             | 900               | 1923                          | NR                             |
| 385               | 1285                          | NR                             | 515               | 25941                         | NR                             | 645               | 27115                         | NR                             | 775               | 1370                          | NR                             | 905               | 1511                          | NR                             |
| 390               | 1154                          | NR                             | 520               | 25900                         | NR                             | 650               | 24916                         | NR                             | 780               | 1429                          | NR                             | 910               | 1971                          | NR                             |
| 395               | 1036                          | NR                             | 525               | 26015                         | NR                             | 655               | 19572                         | NR                             | 785               | 1112                          | NR                             | 915               | 1957                          | NR                             |
| 400               | 873                           | NR                             | 530               | 26424                         | NR                             | 660               | 16766                         | NR                             | 790               | 1222                          | NR                             | 920               | 1699                          | NR                             |
| 405               | 908                           | NR                             | 535               | 26869                         | NR                             | 665               | 14487                         | NR                             | 795               | 1347                          | NR                             | 925               | 2123                          | NR                             |
| 410               | 1056                          | NR                             | 540               | 27684                         | NR                             | 670               | 12943                         | NR                             | 800               | 1132                          | NR                             | 930               | 2029                          | NR                             |
| 415               | 1492                          | NR                             | 545               | 28407                         | NR                             | 675               | 11228                         | NR                             | 805               | 1360                          | NR                             | 935               | 2371                          | NR                             |
| 420               | 2426                          | NR                             | 550               | 29571                         | NR                             | 680               | 9665                          | NR                             | 810               | 1451                          | NR                             | 940               | 1649                          | NR                             |
| 425               | 4409                          | NR                             | 555               | 30862                         | NR                             | 685               | 8389                          | NR                             | 815               | 1507                          | NR                             | 945               | 1984                          | NR                             |
| 430               | 7984                          | NR                             | 560               | 32297                         | NR                             | 690               | 7170                          | NR                             | 820               | 1466                          | NR                             | 950               | 1495                          | NR                             |
| 435               | 14687                         | NR                             | 565               | 33979                         | NR                             | 695               | 6398                          | NR                             | 825               | 1609                          | NR                             | 955               | 1862                          | NR                             |
| 440               | 26286                         | NR                             | 570               | 35579                         | NR                             | 700               | 5544                          | NR                             | 830               | 1642                          | NR                             | 960               | 2951                          | NR                             |
| 445               | 36513                         | NR                             | 575               | 36922                         | NR                             | 705               | 4845                          | NR                             | 835               | 1363                          | NR                             | 965               | 3240                          | NR                             |
| 450               | 34274                         | NR                             | 580               | 38319                         | NR                             | 710               | 4309                          | NR                             | 840               | 1294                          | NR                             | 970               | 3119                          | NR                             |
| 455               | 27519                         | NR                             | 585               | 39771                         | NR                             | 715               | 3879                          | NR                             | 845               | 1584                          | NR                             | 975               | 3020                          | NR                             |
| 460               | 26986                         | NR                             | 590               | 40329                         | NR                             | 720               | 3504                          | NR                             | 850               | 1930                          | NR                             | 980               | 3800                          | NR                             |
| 465               | 32511                         | NR                             | 595               | 40738                         | NR                             | 725               | 3094                          | NR                             | 855               | 1952                          | NR                             | 985               | 3748                          | NR                             |
| 470               | 41588                         | NR                             | 600               | 40944                         | NR                             | 730               | 2758                          | NR                             | 860               | 1631                          | NR                             | 990               | 2878                          | NR                             |
| 475               | 46297                         | NR                             | 605               | 41826                         | NR                             | 735               | 2441                          | NR                             | 865               | 1714                          | NR                             | 995               | 3708                          | NR                             |
| 480               | 42885                         | NR                             | 610               | 48714                         | NR                             | 740               | 2221                          | NR                             | 870               | 1878                          | NR                             | 1000              | 3359                          | NR                             |
| 485               | 35895                         | NR                             | 615               | 48984                         | NR                             | 745               | 2091                          | NR                             | 875               | 2024                          | NR                             |                   |                               |                                |

REPORT NUMBER: SP1-2210-795-4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 2189.1**

**S/P: 0.9**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

TM-30-18

### Summary

$R_f = 88$   
 $R_g = 96.2$   
 CIE  $R_a = 87.8$   
 $R_g = 79.5$



### Color Vector Graphics



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 91 | CES51 = 88 | CES76 = 86 |
| CES02 = 62 | CES27 = 85 | CES52 = 91 | CES77 = 79 |
| CES03 = 31 | CES28 = 93 | CES53 = 85 | CES78 = 87 |
| CES04 = 70 | CES29 = 84 | CES54 = 86 | CES79 = 81 |
| CES05 = 49 | CES30 = 81 | CES55 = 84 | CES80 = 82 |
| CES06 = 51 | CES31 = 85 | CES56 = 83 | CES81 = 65 |
| CES07 = 42 | CES32 = 92 | CES57 = 81 | CES82 = 93 |
| CES08 = 41 | CES33 = 86 | CES58 = 82 | CES83 = 87 |
| CES09 = 29 | CES34 = 90 | CES59 = 93 | CES84 = 96 |
| CES10 = 75 | CES35 = 94 | CES60 = 90 | CES85 = 77 |
| CES11 = 58 | CES36 = 78 | CES61 = 89 | CES86 = 74 |
| CES12 = 64 | CES37 = 92 | CES62 = 80 | CES87 = 89 |
| CES13 = 43 | CES38 = 77 | CES63 = 92 | CES88 = 89 |
| CES14 = 74 | CES39 = 95 | CES64 = 86 | CES89 = 84 |
| CES15 = 71 | CES40 = 91 | CES65 = 91 | CES90 = 87 |
| CES16 = 47 | CES41 = 90 | CES66 = 87 | CES91 = 74 |
| CES17 = 49 | CES42 = 87 | CES67 = 88 | CES92 = 77 |
| CES18 = 56 | CES43 = 86 | CES68 = 90 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 89 | CES70 = 91 | CES95 = 86 |
| CES21 = 85 | CES46 = 90 | CES71 = 86 | CES96 = 94 |
| CES22 = 78 | CES47 = 84 | CES72 = 95 | CES97 = 88 |
| CES23 = 91 | CES48 = 80 | CES73 = 89 | CES98 = 87 |
| CES24 = 90 | CES49 = 90 | CES74 = 88 | CES99 = 88 |
| CES25 = 71 | CES50 = 89 | CES75 = 86 |            |



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Color Rendition by Hue-Angle Bin**



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)