

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P732704

Luminaire Tested: **14FCZ2-29-HRP-B2750-W2D-CP250-4000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732704  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P294787)  
Test Lab: INNOVATIONS CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 14FCZ2-29-HRP-B2750-W2D-CP250-4000K  
Description: 1X4 2900 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 4000K CCT  
AND HRP LENS, WITH, CP250 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1929.0 lumens  
Efficiency: N/A  
Efficacy: 83.9 lumens/watt  
Spacing Criteria (0/90/45): 1.24 / 1.29 / 1.39  
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 23  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732704

CATALOG NUMBER: 14FCZ2-29-HRP-B2750-W2D-CP250-4000K

### Luminous Intensity Polar Plot

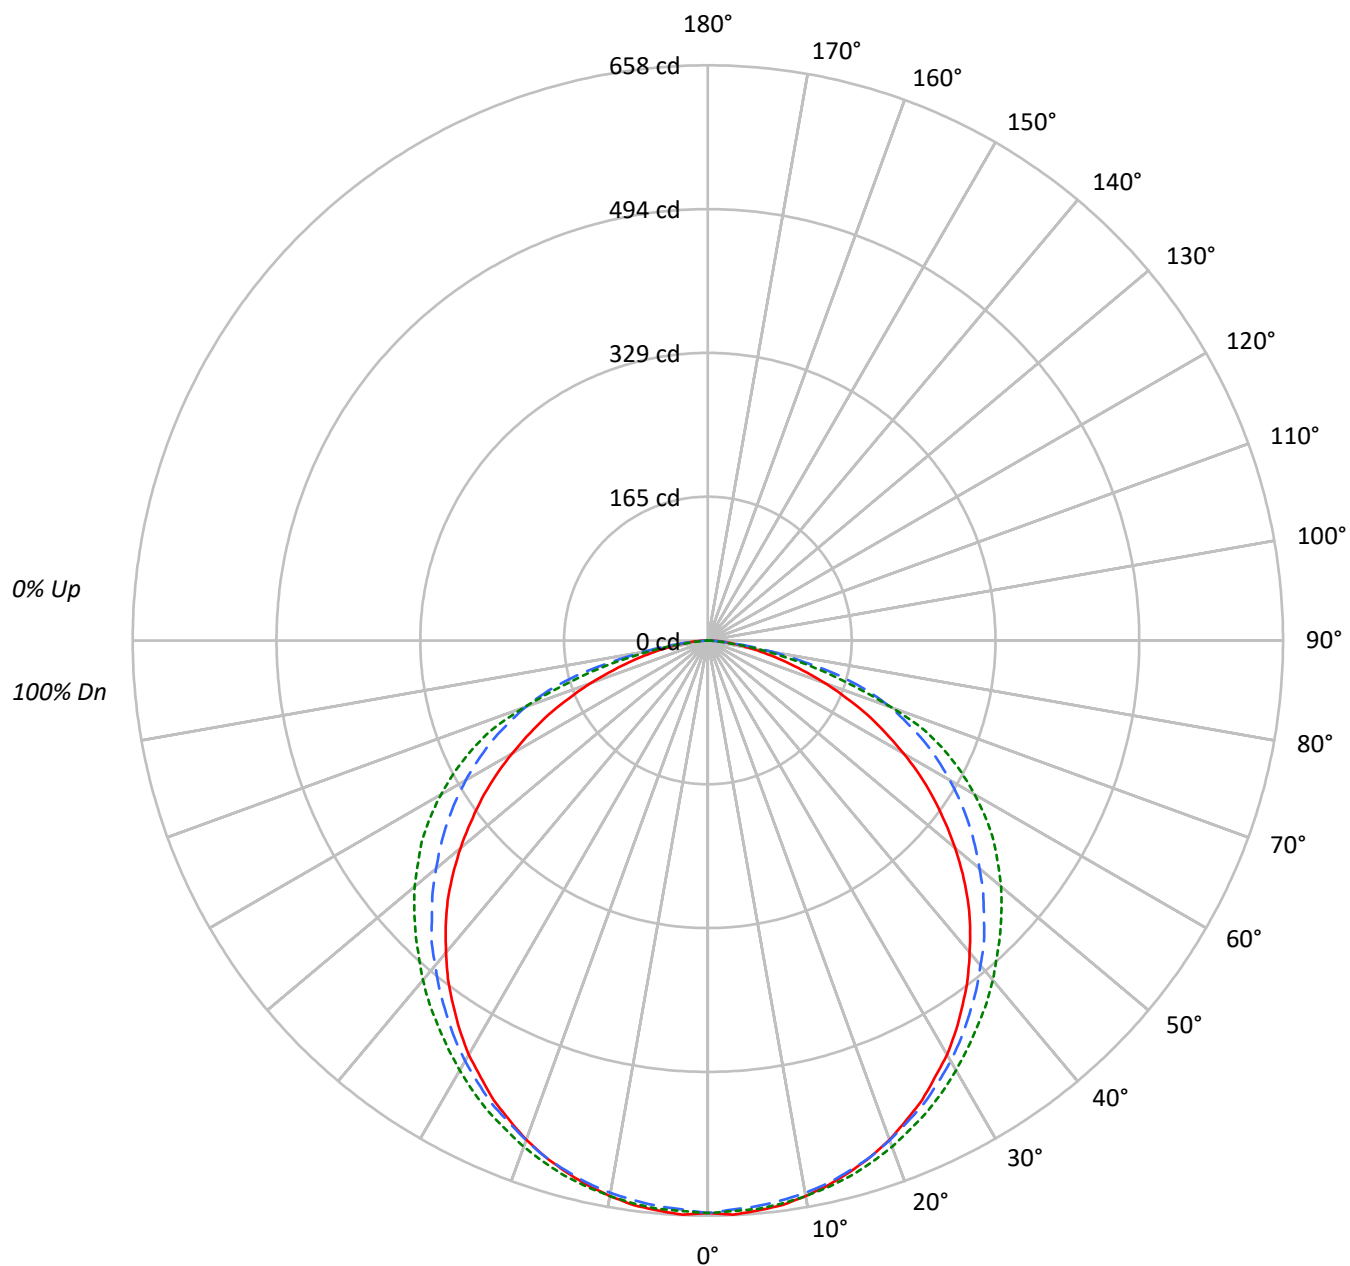



TEST NUMBER: P732704

CATALOG NUMBER: 14FCZ2-29-HRP-B2750-W2D-CP250-4000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |  |     |     |     |     |  |     |     |     |  |     |     |     |  |     |     |     |
|-----|-----|-----|-----|-----|--|-----|-----|-----|-----|--|-----|-----|-----|--|-----|-----|-----|--|-----|-----|-----|
| RF  | 20  |     |     |     |  | 20  |     |     |     |  | 20  |     |     |  |     | 20  |     |  |     |     | 20  |
| RC  | 80  |     |     |     |  | 70  |     |     |     |  | 50  |     |     |  |     | 30  |     |  |     |     | 10  |
| RW  | 70  | 50  | 30  | 10  |  | 70  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  | 30  | 10  |
| RCR |     |     |     |     |  |     |     |     |     |  |     |     |     |  |     |     |     |  |     |     |     |
| 0   | 119 | 119 | 119 | 119 |  | 116 | 116 | 116 | 116 |  | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 | 102 | 102 |
| 1   | 109 | 104 | 100 | 96  |  | 106 | 102 | 98  | 94  |  | 97  | 94  | 91  |  | 93  | 91  | 88  |  | 90  | 88  | 86  |
| 2   | 99  | 90  | 83  | 78  |  | 96  | 88  | 82  | 77  |  | 85  | 79  | 75  |  | 82  | 77  | 73  |  | 78  | 75  | 71  |
| 3   | 90  | 79  | 71  | 64  |  | 87  | 77  | 70  | 64  |  | 74  | 68  | 62  |  | 72  | 66  | 61  |  | 69  | 64  | 60  |
| 4   | 82  | 70  | 61  | 54  |  | 80  | 68  | 60  | 54  |  | 66  | 59  | 53  |  | 64  | 57  | 52  |  | 61  | 56  | 51  |
| 5   | 75  | 62  | 53  | 46  |  | 73  | 61  | 53  | 46  |  | 59  | 51  | 46  |  | 57  | 50  | 45  |  | 55  | 49  | 45  |
| 6   | 69  | 56  | 47  | 40  |  | 68  | 55  | 46  | 40  |  | 53  | 45  | 40  |  | 51  | 45  | 39  |  | 50  | 44  | 39  |
| 7   | 64  | 51  | 42  | 36  |  | 63  | 50  | 41  | 35  |  | 48  | 41  | 35  |  | 47  | 40  | 35  |  | 45  | 39  | 35  |
| 8   | 60  | 46  | 38  | 32  |  | 58  | 45  | 37  | 32  |  | 44  | 37  | 31  |  | 43  | 36  | 31  |  | 42  | 36  | 31  |
| 9   | 56  | 42  | 34  | 28  |  | 54  | 42  | 34  | 28  |  | 41  | 33  | 28  |  | 39  | 33  | 28  |  | 38  | 32  | 28  |
| 10  | 52  | 39  | 31  | 26  |  | 51  | 38  | 31  | 26  |  | 37  | 30  | 26  |  | 37  | 30  | 25  |  | 36  | 30  | 25  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1849 | 1849 | 1849 |
| 5°  | 1855 | 1841 | 1849 |
| 10° | 1850 | 1840 | 1850 |
| 15° | 1838 | 1835 | 1852 |
| 20° | 1825 | 1828 | 1851 |
| 25° | 1806 | 1821 | 1851 |
| 30° | 1783 | 1811 | 1850 |
| 35° | 1752 | 1797 | 1854 |
| 40° | 1717 | 1788 | 1868 |
| 45° | 1680 | 1782 | 1889 |
| 50° | 1622 | 1782 | 1923 |
| 55° | 1553 | 1791 | 1964 |
| 60° | 1459 | 1804 | 1990 |
| 65° | 1345 | 1823 | 2001 |
| 70° | 1172 | 1827 | 1842 |
| 75° | 966  | 1701 | 1489 |
| 80° | 759  | 1222 | 995  |
| 85° | 593  | 473  | 233  |



TEST NUMBER: P732704

CATALOG NUMBER: 14FCZ2-29-HRP-B2750-W2D-CP250-4000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 62.0   | 3.2       |
| 10°-20°   | 178.0  | 9.2       |
| 20°-30°   | 270.2  | 14.0      |
| 30°-40°   | 327.5  | 17.0      |
| 40°-50°   | 345.1  | 17.9      |
| 50°-60°   | 322.2  | 16.7      |
| 60°-70°   | 257.4  | 13.3      |
| 70°-80°   | 141.7  | 7.3       |
| 80°-90°   | 25.0   | 1.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 510.2  | 26.4      |
| 0°-40°    | 837.7  | 43.4      |
| 0°-60°    | 1504.9 | 78.0      |
| 0°-90°    | 1929.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1929.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 655 | 655   | 655 | 655   | 655 |      |
| 5°  | 655 | 653   | 650 | 654   | 653 | 62   |
| 15° | 629 | 629   | 628 | 634   | 634 | 178  |
| 25° | 580 | 581   | 585 | 593   | 594 | 267  |
| 35° | 508 | 513   | 522 | 535   | 538 | 318  |
| 45° | 421 | 429   | 446 | 466   | 473 | 324  |
| 55° | 316 | 331   | 364 | 390   | 399 | 282  |
| 65° | 201 | 227   | 273 | 295   | 300 | 198  |
| 75° | 89  | 127   | 156 | 140   | 136 | 95   |
| 85° | 18  | 23    | 15  | 9     | 7   | 22   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P732704

CATALOG NUMBER: 14FCZ2-29-HRP-B2750-W2D-CP250-4000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 655.0 | 655.0 | 655.0 | 655.0 | 655.0 |
| 2.5°  | 657.5 | 655.6 | 651.5 | 655.0 | 653.3 |
| 5°    | 654.6 | 652.7 | 649.6 | 653.9 | 652.7 |
| 7.5°  | 651.5 | 649.0 | 646.0 | 650.9 | 649.6 |
| 10°   | 645.3 | 643.5 | 641.8 | 646.0 | 645.3 |
| 12.5° | 638.1 | 637.5 | 635.7 | 640.6 | 640.0 |
| 15°   | 629.1 | 629.1 | 627.8 | 633.8 | 633.8 |
| 17.5° | 619.3 | 618.6 | 619.3 | 626.0 | 625.4 |
| 20°   | 607.7 | 607.7 | 608.4 | 616.3 | 616.3 |
| 22.5° | 593.8 | 594.4 | 596.2 | 605.9 | 605.3 |
| 25°   | 580.0 | 581.0 | 584.7 | 593.2 | 594.4 |
| 27.5° | 562.9 | 566.0 | 570.1 | 580.4 | 581.6 |
| 30°   | 547.1 | 548.9 | 555.5 | 565.4 | 567.7 |
| 32.5° | 528.4 | 531.9 | 539.3 | 550.2 | 553.2 |
| 35°   | 508.3 | 513.2 | 521.6 | 535.0 | 538.0 |
| 37.5° | 488.3 | 492.6 | 504.1 | 517.9 | 523.5 |
| 40°   | 465.9 | 473.1 | 485.2 | 501.1 | 507.0 |
| 42.5° | 443.9 | 451.3 | 467.7 | 484.0 | 489.5 |
| 45°   | 420.9 | 428.9 | 446.4 | 466.5 | 473.1 |
| 47.5° | 395.4 | 404.6 | 427.1 | 448.2 | 455.5 |
| 50°   | 369.3 | 380.9 | 405.7 | 429.5 | 438.0 |
| 52.5° | 342.2 | 356.6 | 385.2 | 410.0 | 418.0 |
| 55°   | 315.5 | 331.1 | 364.0 | 389.5 | 399.1 |
| 57.5° | 288.1 | 305.2 | 342.2 | 371.2 | 376.7 |
| 60°   | 258.4 | 279.1 | 319.6 | 345.1 | 352.5 |
| 62.5° | 229.3 | 253.0 | 296.6 | 320.8 | 327.0 |
| 65°   | 201.4 | 226.9 | 272.9 | 295.4 | 299.6 |
| 67.5° | 171.0 | 201.4 | 246.8 | 267.6 | 268.6 |
| 70°   | 142.0 | 177.1 | 221.4 | 231.0 | 223.2 |
| 72.5° | 113.4 | 151.1 | 191.7 | 183.7 | 177.1 |
| 75°   | 88.6  | 126.8 | 156.0 | 140.2 | 136.5 |
| 77.5° | 65.5  | 103.8 | 111.6 | 103.2 | 96.4  |
| 80°   | 46.7  | 81.8  | 75.2  | 64.3  | 61.2  |
| 82.5° | 32.1  | 51.6  | 41.3  | 32.1  | 27.9  |
| 85°   | 18.3  | 23.0  | 14.6  | 9.1   | 7.2   |
| 87.5° | 7.8   | 5.5   | 3.1   | 2.5   | 2.5   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-4000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 4009    | CRI (Ra): | 87.8 |      |      |
| CIE u':                   | 0.2311  | R1:       | 94.2 | R9:  | 79.5 |
| CIE v':                   | 0.4879  | R2:       | 88.6 | R10: | 77.2 |
| Duv:                      | -0.0109 | R3:       | 84.5 | R11: | 92.9 |
| CIE x:                    | 0.3728  | R4:       | 91.1 | R12: | 72.5 |
| CIE y:                    | 0.3498  | R5:       | 92.1 | R13: | 92.1 |
| CIE z:                    | 0.2775  | R6:       | 82.3 | R14: | 92.6 |
| Peak Wavelength (nm):     | 632     | R7:       | 84.3 |      |      |
| Dominant Wavelength (nm): | 588     | R8:       | 84.9 |      |      |
| Purity:                   | 17.1    |           |      |      |      |
| Rf:                       | 88      |           |      |      |      |
| Rg:                       | 96.2    |           |      |      |      |



### Test Conditions

Stabilization Time: 44M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-4

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies outside the range

REPORT NUMBER: SP1-2210-795-4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 4927.4**

**S/P: 2.02**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 2189.1**

**S/P: 0.9**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

TM-30-18

### Summary

$R_f = 88$   
 $R_g = 96.2$   
 CIE  $R_a = 87.8$   
 $R_g = 79.5$



### Color Vector Graphics



REPORT NUMBER: SP1-2210-795-4

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 91 | CES51 = 88 | CES76 = 86 |
| CES02 = 62 | CES27 = 85 | CES52 = 91 | CES77 = 79 |
| CES03 = 31 | CES28 = 93 | CES53 = 85 | CES78 = 87 |
| CES04 = 70 | CES29 = 84 | CES54 = 86 | CES79 = 81 |
| CES05 = 49 | CES30 = 81 | CES55 = 84 | CES80 = 82 |
| CES06 = 51 | CES31 = 85 | CES56 = 83 | CES81 = 65 |
| CES07 = 42 | CES32 = 92 | CES57 = 81 | CES82 = 93 |
| CES08 = 41 | CES33 = 86 | CES58 = 82 | CES83 = 87 |
| CES09 = 29 | CES34 = 90 | CES59 = 93 | CES84 = 96 |
| CES10 = 75 | CES35 = 94 | CES60 = 90 | CES85 = 77 |
| CES11 = 58 | CES36 = 78 | CES61 = 89 | CES86 = 74 |
| CES12 = 64 | CES37 = 92 | CES62 = 80 | CES87 = 89 |
| CES13 = 43 | CES38 = 77 | CES63 = 92 | CES88 = 89 |
| CES14 = 74 | CES39 = 95 | CES64 = 86 | CES89 = 84 |
| CES15 = 71 | CES40 = 91 | CES65 = 91 | CES90 = 87 |
| CES16 = 47 | CES41 = 90 | CES66 = 87 | CES91 = 74 |
| CES17 = 49 | CES42 = 87 | CES67 = 88 | CES92 = 77 |
| CES18 = 56 | CES43 = 86 | CES68 = 90 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 89 | CES70 = 91 | CES95 = 86 |
| CES21 = 85 | CES46 = 90 | CES71 = 86 | CES96 = 94 |
| CES22 = 78 | CES47 = 84 | CES72 = 95 | CES97 = 88 |
| CES23 = 91 | CES48 = 80 | CES73 = 89 | CES98 = 87 |
| CES24 = 90 | CES49 = 90 | CES74 = 88 | CES99 = 88 |
| CES25 = 71 | CES50 = 89 | CES75 = 86 |            |



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Color Rendition by Hue-Angle Bin**



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)