

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P733984

Luminaire Tested: **24FCZ2-30-RDP-B2750-W2D-CP375-4000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P733984  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P274775)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 24FCZ2-30-RDP-B2750-W2D-CP375-4000K  
Description: 2X4 3000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 4000K CCT  
AND RDP LENS, WITH, CP375 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1537.0 lumens  
Efficiency: N/A  
Efficacy: 66.8 lumens/watt  
Spacing Criteria (0/90/45): 1.26 / 1.3 / 1.41  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 23  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P733984

CATALOG NUMBER: 24FCZ2-30-RDP-B2750-W2D-CP375-4000K

### Luminous Intensity Polar Plot

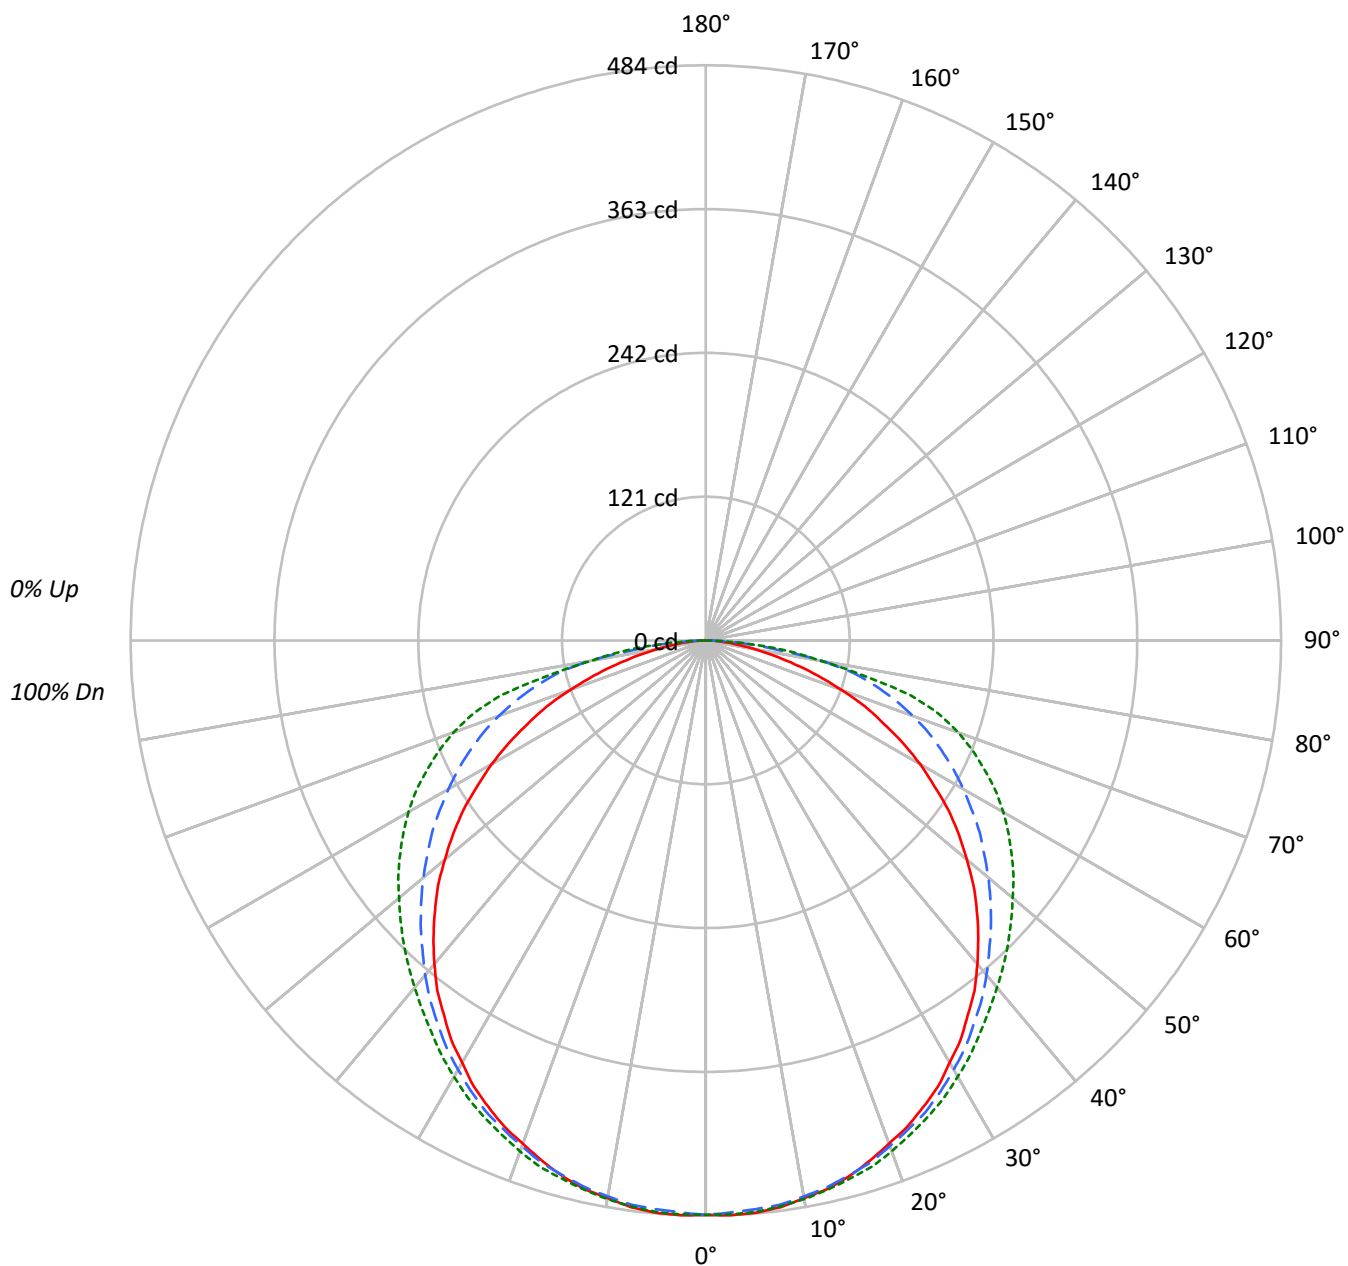



TEST NUMBER: P733984

CATALOG NUMBER: 24FCZ2-30-RDP-B2750-W2D-CP375-4000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 0  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 100 | 96  | 92  | 96  | 93  | 89  | 92  | 89  | 87  | 88  | 86  | 84  | 82  |    |    |
| 2   | 97  | 89  | 81  | 75  | 95  | 87  | 80  | 74  | 83  | 77  | 72  | 80  | 75  | 71  | 77  | 73  | 69  | 67  |    |    |
| 3   | 88  | 77  | 68  | 62  | 86  | 76  | 67  | 61  | 72  | 66  | 60  | 70  | 64  | 59  | 67  | 62  | 58  | 56  |    |    |
| 4   | 81  | 68  | 59  | 52  | 78  | 67  | 58  | 51  | 64  | 57  | 51  | 62  | 55  | 50  | 59  | 54  | 49  | 47  |    |    |
| 5   | 74  | 60  | 51  | 44  | 72  | 59  | 51  | 44  | 57  | 49  | 43  | 55  | 48  | 43  | 53  | 47  | 42  | 40  |    |    |
| 6   | 68  | 54  | 45  | 38  | 66  | 53  | 45  | 38  | 51  | 44  | 38  | 50  | 43  | 37  | 48  | 42  | 37  | 35  |    |    |
| 7   | 63  | 49  | 40  | 34  | 61  | 48  | 40  | 34  | 47  | 39  | 33  | 45  | 38  | 33  | 44  | 38  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 36  | 30  | 43  | 35  | 30  | 41  | 34  | 29  | 40  | 34  | 29  | 27  |    |    |
| 9   | 55  | 41  | 33  | 27  | 53  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 26  | 37  | 31  | 26  | 24  |    |    |
| 10  | 51  | 38  | 30  | 24  | 50  | 37  | 29  | 24  | 36  | 29  | 24  | 35  | 29  | 24  | 34  | 28  | 24  | 22  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°  | 45° | 90° |
|-----|-----|-----|-----|
| 0°  | 682 | 682 | 682 |
| 5°  | 685 | 680 | 684 |
| 10° | 683 | 681 | 684 |
| 15° | 682 | 681 | 685 |
| 20° | 677 | 680 | 687 |
| 25° | 674 | 681 | 689 |
| 30° | 668 | 680 | 691 |
| 35° | 662 | 678 | 693 |
| 40° | 655 | 677 | 702 |
| 45° | 644 | 677 | 718 |
| 50° | 629 | 681 | 740 |
| 55° | 613 | 692 | 773 |
| 60° | 587 | 706 | 815 |
| 65° | 550 | 731 | 866 |
| 70° | 501 | 764 | 931 |
| 75° | 424 | 806 | 973 |
| 80° | 335 | 811 | 787 |
| 85° | 248 | 617 | 691 |



TEST NUMBER: P733984

CATALOG NUMBER: 24FCZ2-30-RDP-B2750-W2D-CP375-4000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 45.8   | 3.0       |
| 10°-20°   | 132.0  | 8.6       |
| 20°-30°   | 201.8  | 13.1      |
| 30°-40°   | 246.7  | 16.0      |
| 40°-50°   | 262.9  | 17.1      |
| 50°-60°   | 251.4  | 16.4      |
| 60°-70°   | 212.9  | 13.9      |
| 70°-80°   | 143.1  | 9.3       |
| 80°-90°   | 40.4   | 2.6       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 379.6  | 24.7      |
| 0°-40°    | 626.3  | 40.7      |
| 0°-60°    | 1140.6 | 74.2      |
| 0°-90°    | 1537.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1537.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 483 | 483   | 483 | 483   | 483 |      |
| 5°  | 483 | 483   | 480 | 483   | 483 | 46   |
| 15° | 467 | 467   | 466 | 470   | 469 | 132  |
| 25° | 433 | 434   | 438 | 441   | 442 | 200  |
| 35° | 384 | 387   | 393 | 401   | 402 | 241  |
| 45° | 322 | 328   | 339 | 354   | 360 | 249  |
| 55° | 249 | 258   | 281 | 303   | 314 | 222  |
| 65° | 165 | 182   | 219 | 248   | 259 | 163  |
| 75° | 78  | 106   | 148 | 173   | 178 | 83   |
| 85° | 15  | 31    | 38  | 41    | 43  | 19   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P733984

CATALOG NUMBER: 24FCZ2-30-RDP-B2750-W2D-CP375-4000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 483.3 | 483.3 | 483.3 | 483.3 | 483.3 |
| 2.5°  | 484.1 | 484.1 | 481.8 | 483.3 | 483.3 |
| 5°    | 483.3 | 482.6 | 480.3 | 482.6 | 482.6 |
| 7.5°  | 481.0 | 480.3 | 478.8 | 481.0 | 480.3 |
| 10°   | 476.5 | 476.5 | 475.0 | 477.3 | 477.3 |
| 12.5° | 472.7 | 471.9 | 471.1 | 474.2 | 473.4 |
| 15°   | 466.6 | 466.6 | 465.8 | 469.7 | 468.8 |
| 17.5° | 459.0 | 459.7 | 460.5 | 463.5 | 464.3 |
| 20°   | 450.5 | 452.1 | 452.8 | 457.4 | 457.4 |
| 22.5° | 442.9 | 443.7 | 445.2 | 449.8 | 449.8 |
| 25°   | 433.1 | 434.5 | 437.6 | 441.4 | 442.2 |
| 27.5° | 423.1 | 423.9 | 427.7 | 433.1 | 433.8 |
| 30°   | 410.2 | 412.5 | 417.0 | 423.1 | 423.9 |
| 32.5° | 398.7 | 401.0 | 406.3 | 412.5 | 413.9 |
| 35°   | 384.3 | 387.3 | 393.4 | 401.0 | 402.5 |
| 37.5° | 371.3 | 373.6 | 381.2 | 389.6 | 391.9 |
| 40°   | 355.3 | 359.8 | 367.4 | 377.4 | 381.2 |
| 42.5° | 339.3 | 343.8 | 353.0 | 366.0 | 370.6 |
| 45°   | 322.5 | 327.8 | 339.3 | 353.7 | 359.8 |
| 47.5° | 305.7 | 311.8 | 324.8 | 341.5 | 348.4 |
| 50°   | 286.6 | 294.3 | 310.3 | 329.4 | 337.0 |
| 52.5° | 268.3 | 277.5 | 295.1 | 316.4 | 326.3 |
| 55°   | 249.3 | 258.4 | 281.3 | 303.4 | 314.1 |
| 57.5° | 228.0 | 240.1 | 265.3 | 290.5 | 301.9 |
| 60°   | 208.1 | 219.5 | 250.0 | 277.5 | 288.9 |
| 62.5° | 186.8 | 202.1 | 234.8 | 263.7 | 275.2 |
| 65°   | 164.6 | 181.5 | 218.8 | 247.7 | 259.2 |
| 67.5° | 144.9 | 163.2 | 202.8 | 231.7 | 243.2 |
| 70°   | 121.3 | 144.0 | 185.2 | 214.2 | 225.7 |
| 72.5° | 99.1  | 124.3 | 166.9 | 195.2 | 205.8 |
| 75°   | 77.8  | 106.0 | 147.9 | 173.1 | 178.4 |
| 77.5° | 57.9  | 87.7  | 128.1 | 138.7 | 134.9 |
| 80°   | 41.2  | 70.1  | 99.8  | 94.5  | 96.8  |
| 82.5° | 26.7  | 53.4  | 61.8  | 70.1  | 72.4  |
| 85°   | 15.3  | 31.3  | 38.1  | 41.2  | 42.7  |
| 87.5° | 6.9   | 11.4  | 15.3  | 15.3  | 14.5  |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

### Test Information

Test Method: LM-79-2019  
Report Number: SP1-2210-795-4  
Test Lab: COOPER LIGHTING SOLUTIONS  
Photometer: SP1 - 76IN SPHERE  
Measurement Geometry:  $4\pi$   
Issue Date: 10/06/2022  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: **9WP217084MDER4AM-4000K-315MA**  
Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 4009    | CRI (Ra): | 87.8 |      |      |
| CIE u':                   | 0.2311  | R1:       | 94.2 | R9:  | 79.5 |
| CIE v':                   | 0.4879  | R2:       | 88.6 | R10: | 77.2 |
| Duv:                      | -0.0109 | R3:       | 84.5 | R11: | 92.9 |
| CIE x:                    | 0.3728  | R4:       | 91.1 | R12: | 72.5 |
| CIE y:                    | 0.3498  | R5:       | 92.1 | R13: | 92.1 |
| CIE z:                    | 0.2775  | R6:       | 82.3 | R14: | 92.6 |
| Peak Wavelength (nm):     | 632     | R7:       | 84.3 |      |      |
| Dominant Wavelength (nm): | 588     | R8:       | 84.9 |      |      |
| Purity:                   | 17.1    |           |      |      |      |
| Rf:                       | 88      |           |      |      |      |
| Rg:                       | 96.2    |           |      |      |      |



### Test Conditions

Stabilization Time: 44M  
Operation Time: 12H  
Room Temperature (°C) / RH%: 24.0/38%  
Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-4

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies outside the range

REPORT NUMBER: SP1-2210-795-4

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 4927.4**

**S/P: 2.02**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 2189.1**

**S/P: 0.9**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

TM-30-18

### Summary

$R_f = 88$   
 $R_g = 96.2$   
 CIE  $R_a = 87.8$   
 $R_g = 79.5$



### Color Vector Graphics



REPORT NUMBER: SP1-2210-795-4

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 91 | CES51 = 88 | CES76 = 86 |
| CES02 = 62 | CES27 = 85 | CES52 = 91 | CES77 = 79 |
| CES03 = 31 | CES28 = 93 | CES53 = 85 | CES78 = 87 |
| CES04 = 70 | CES29 = 84 | CES54 = 86 | CES79 = 81 |
| CES05 = 49 | CES30 = 81 | CES55 = 84 | CES80 = 82 |
| CES06 = 51 | CES31 = 85 | CES56 = 83 | CES81 = 65 |
| CES07 = 42 | CES32 = 92 | CES57 = 81 | CES82 = 93 |
| CES08 = 41 | CES33 = 86 | CES58 = 82 | CES83 = 87 |
| CES09 = 29 | CES34 = 90 | CES59 = 93 | CES84 = 96 |
| CES10 = 75 | CES35 = 94 | CES60 = 90 | CES85 = 77 |
| CES11 = 58 | CES36 = 78 | CES61 = 89 | CES86 = 74 |
| CES12 = 64 | CES37 = 92 | CES62 = 80 | CES87 = 89 |
| CES13 = 43 | CES38 = 77 | CES63 = 92 | CES88 = 89 |
| CES14 = 74 | CES39 = 95 | CES64 = 86 | CES89 = 84 |
| CES15 = 71 | CES40 = 91 | CES65 = 91 | CES90 = 87 |
| CES16 = 47 | CES41 = 90 | CES66 = 87 | CES91 = 74 |
| CES17 = 49 | CES42 = 87 | CES67 = 88 | CES92 = 77 |
| CES18 = 56 | CES43 = 86 | CES68 = 90 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 89 | CES70 = 91 | CES95 = 86 |
| CES21 = 85 | CES46 = 90 | CES71 = 86 | CES96 = 94 |
| CES22 = 78 | CES47 = 84 | CES72 = 95 | CES97 = 88 |
| CES23 = 91 | CES48 = 80 | CES73 = 89 | CES98 = 87 |
| CES24 = 90 | CES49 = 90 | CES74 = 88 | CES99 = 88 |
| CES25 = 71 | CES50 = 89 | CES75 = 86 |            |



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**



**Color Rendition by Hue-Angle Bin**



REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Measure Comparisons**

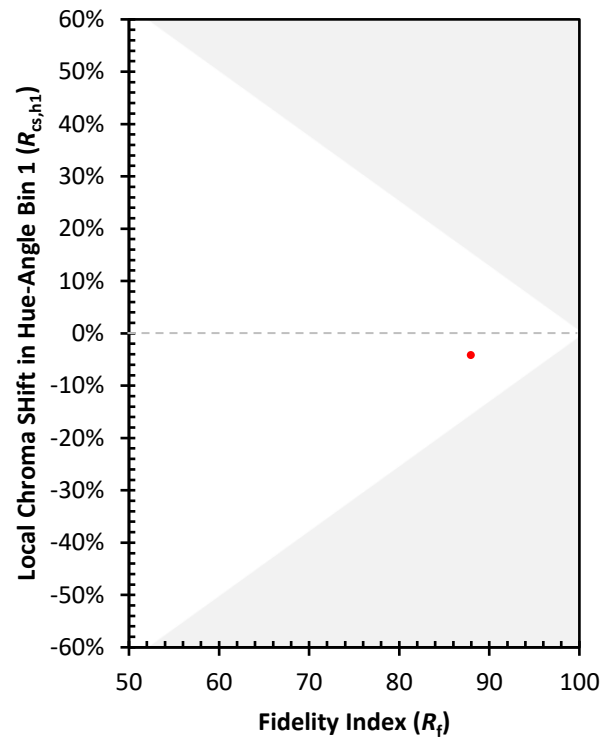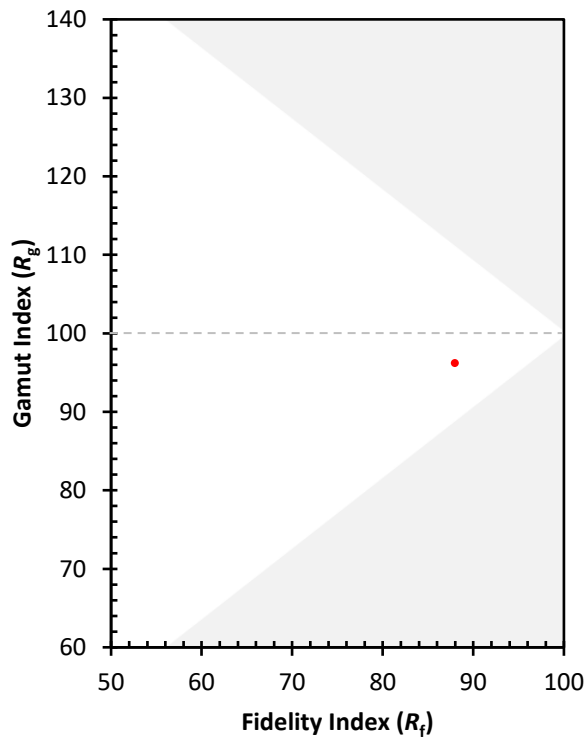

(END OF REPORT)