

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P734059

Luminaire Tested: **24FCZ2-30HE-B2750-W2D-CP375-4000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P734059  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272053)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 24FCZ2-30HE-B2750-W2D-CP375-4000K  
Description: 2X4 3000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 4000K CCT  
AND RIBBED LENS, WITH, CP375 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2370.0 lumens  
Efficiency: N/A  
Efficacy: 107.7 lumens/watt  
Spacing Criteria (0/90/45): 1.21 / 1.27 / 1.37  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 22  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P734059

CATALOG NUMBER: 24FCZ2-30HE-B2750-W2D-CP375-4000K

### Luminous Intensity Polar Plot

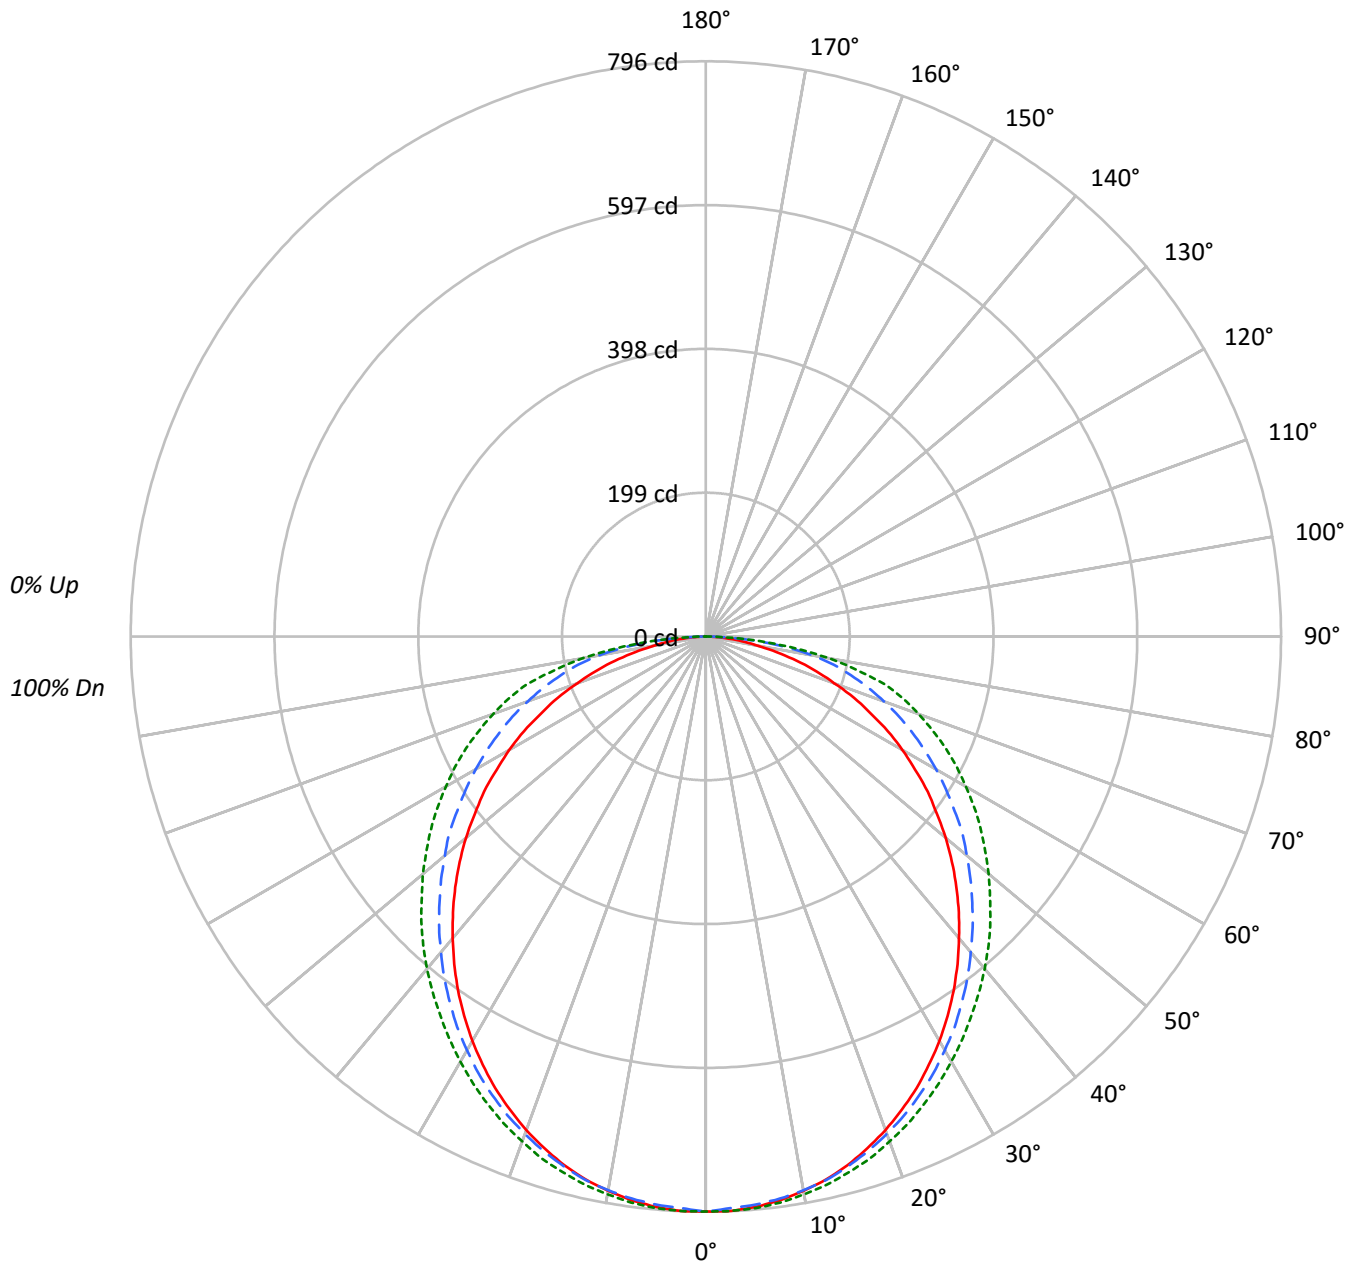



TEST NUMBER: P734059

CATALOG NUMBER: 24FCZ2-30HE-B2750-W2D-CP375-4000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 0  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 100 | 96  | 92  | 96  | 93  | 89  | 92  | 89  | 87  | 89  | 86  | 84  | 82  |    |    |
| 2   | 98  | 89  | 82  | 76  | 95  | 87  | 80  | 75  | 83  | 78  | 73  | 80  | 75  | 71  | 77  | 73  | 70  | 67  |    |    |
| 3   | 89  | 78  | 69  | 62  | 86  | 76  | 68  | 62  | 73  | 66  | 61  | 70  | 64  | 60  | 68  | 63  | 58  | 56  |    |    |
| 4   | 81  | 69  | 59  | 52  | 79  | 67  | 59  | 52  | 65  | 57  | 51  | 62  | 56  | 51  | 60  | 55  | 50  | 48  |    |    |
| 5   | 74  | 61  | 52  | 45  | 72  | 60  | 51  | 45  | 58  | 50  | 44  | 56  | 49  | 44  | 54  | 48  | 43  | 41  |    |    |
| 6   | 69  | 55  | 46  | 39  | 67  | 54  | 45  | 39  | 52  | 44  | 39  | 50  | 44  | 38  | 49  | 43  | 38  | 36  |    |    |
| 7   | 64  | 50  | 41  | 35  | 62  | 49  | 40  | 34  | 47  | 40  | 34  | 46  | 39  | 34  | 45  | 38  | 34  | 32  |    |    |
| 8   | 59  | 45  | 37  | 31  | 58  | 45  | 36  | 31  | 43  | 36  | 30  | 42  | 35  | 30  | 41  | 35  | 30  | 28  |    |    |
| 9   | 55  | 42  | 33  | 28  | 54  | 41  | 33  | 28  | 40  | 33  | 27  | 39  | 32  | 27  | 38  | 32  | 27  | 25  |    |    |
| 10  | 52  | 38  | 30  | 25  | 51  | 38  | 30  | 25  | 37  | 30  | 25  | 36  | 29  | 25  | 35  | 29  | 25  | 23  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1123 | 1123 | 1123 |
| 5°  | 1123 | 1118 | 1125 |
| 10° | 1117 | 1115 | 1123 |
| 15° | 1107 | 1109 | 1121 |
| 20° | 1092 | 1100 | 1117 |
| 25° | 1074 | 1090 | 1112 |
| 30° | 1053 | 1078 | 1107 |
| 35° | 1030 | 1064 | 1104 |
| 40° | 1004 | 1051 | 1106 |
| 45° | 979  | 1040 | 1111 |
| 50° | 952  | 1035 | 1122 |
| 55° | 923  | 1033 | 1142 |
| 60° | 886  | 1038 | 1172 |
| 65° | 840  | 1054 | 1223 |
| 70° | 780  | 1080 | 1293 |
| 75° | 712  | 1134 | 1401 |
| 80° | 585  | 1221 | 1402 |
| 85° | 447  | 1127 | 1205 |



TEST NUMBER: P734059

CATALOG NUMBER: 24FCZ2-30HE-B2750-W2D-CP375-4000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 75.3   | 3.2       |
| 10°-20°   | 214.9  | 9.1       |
| 20°-30°   | 323.3  | 13.6      |
| 30°-40°   | 387.5  | 16.3      |
| 40°-50°   | 403.8  | 17.0      |
| 50°-60°   | 375.7  | 15.9      |
| 60°-70°   | 309.4  | 13.1      |
| 70°-80°   | 210.7  | 8.9       |
| 80°-90°   | 69.6   | 2.9       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 613.4  | 25.9      |
| 0°-40°    | 1000.9 | 42.2      |
| 0°-60°    | 1780.3 | 75.1      |
| 0°-90°    | 2370.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2370.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 796 | 796   | 796 | 796   | 796 |      |
| 5°  | 792 | 792   | 789 | 793   | 794 | 75   |
| 15° | 758 | 759   | 759 | 766   | 767 | 213  |
| 25° | 690 | 693   | 700 | 712   | 714 | 318  |
| 35° | 598 | 605   | 618 | 634   | 641 | 374  |
| 45° | 490 | 501   | 521 | 547   | 557 | 378  |
| 55° | 375 | 388   | 420 | 453   | 464 | 334  |
| 65° | 252 | 273   | 316 | 353   | 366 | 250  |
| 75° | 130 | 160   | 208 | 245   | 257 | 138  |
| 85° | 28  | 54    | 70  | 74    | 74  | 34   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P734059

CATALOG NUMBER: 24FCZ2-30HE-B2750-W2D-CP375-4000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 795.8 | 795.8 | 795.8 | 795.8 | 795.8 |
| 2.5°  | 795.8 | 795.8 | 791.8 | 795.8 | 795.8 |
| 5°    | 792.5 | 792.5 | 789.4 | 793.4 | 794.1 |
| 7.5°  | 787.0 | 787.8 | 784.7 | 789.4 | 790.2 |
| 10°   | 779.1 | 779.9 | 778.3 | 783.1 | 783.8 |
| 12.5° | 769.6 | 770.4 | 770.4 | 775.9 | 776.8 |
| 15°   | 757.7 | 758.6 | 759.3 | 766.5 | 767.3 |
| 17.5° | 742.8 | 745.1 | 746.7 | 755.4 | 757.0 |
| 20°   | 726.9 | 729.3 | 732.5 | 741.9 | 743.5 |
| 22.5° | 708.7 | 711.9 | 717.4 | 727.7 | 730.1 |
| 25°   | 689.7 | 692.9 | 700.0 | 711.9 | 714.2 |
| 27.5° | 668.4 | 673.2 | 681.8 | 694.5 | 697.7 |
| 30°   | 646.3 | 650.9 | 661.2 | 674.7 | 679.4 |
| 32.5° | 622.5 | 628.8 | 640.6 | 655.7 | 660.5 |
| 35°   | 597.9 | 605.1 | 617.8 | 634.4 | 640.6 |
| 37.5° | 571.9 | 579.8 | 594.8 | 613.0 | 620.9 |
| 40°   | 545.0 | 554.5 | 570.3 | 591.6 | 600.3 |
| 42.5° | 518.0 | 526.8 | 546.6 | 569.5 | 579.0 |
| 45°   | 490.4 | 500.7 | 521.3 | 547.3 | 556.8 |
| 47.5° | 461.9 | 472.2 | 496.7 | 524.4 | 533.1 |
| 50°   | 433.5 | 443.8 | 471.4 | 500.7 | 511.0 |
| 52.5° | 402.6 | 416.0 | 447.7 | 477.0 | 487.3 |
| 55°   | 375.0 | 387.5 | 420.0 | 453.2 | 464.3 |
| 57.5° | 343.3 | 358.3 | 393.9 | 428.7 | 440.5 |
| 60°   | 314.0 | 329.9 | 367.8 | 403.4 | 415.3 |
| 62.5° | 284.0 | 301.4 | 341.7 | 378.1 | 391.5 |
| 65°   | 251.5 | 272.8 | 315.6 | 352.7 | 366.2 |
| 67.5° | 222.2 | 244.4 | 289.5 | 327.5 | 339.3 |
| 70°   | 189.0 | 215.9 | 261.8 | 299.8 | 313.3 |
| 72.5° | 160.5 | 187.4 | 235.7 | 272.8 | 286.3 |
| 75°   | 130.5 | 159.8 | 208.0 | 245.2 | 257.0 |
| 77.5° | 100.5 | 132.9 | 181.1 | 209.6 | 213.5 |
| 80°   | 72.0  | 106.0 | 150.2 | 166.9 | 172.5 |
| 82.5° | 50.6  | 81.5  | 110.8 | 121.8 | 125.0 |
| 85°   | 27.6  | 53.8  | 69.6  | 74.4  | 74.4  |
| 87.5° | 11.8  | 23.0  | 27.6  | 28.5  | 29.3  |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG







— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-4

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-4000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-4000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-4000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 4000K-315MA, PROGRAMMED @ 5.0Vdc.

### Spectral Parameters

CCT (K): 4009  
 CIE  $u'$ : 0.2311  
 CIE  $v'$ : 0.4879  
 Duv: -0.0109  
 CIE x: 0.3728  
 CIE y: 0.3498  
 CIE z: 0.2775  
 Peak Wavelength (nm): 632  
 Dominant Wavelength (nm): 588  
 Purity: 17.1


CRI (Ra): 87.8

|     |      |      |      |
|-----|------|------|------|
| R1: | 94.2 | R9:  | 79.5 |
| R2: | 88.6 | R10: | 77.2 |
| R3: | 84.5 | R11: | 92.9 |
| R4: | 91.1 | R12: | 72.5 |
| R5: | 92.1 | R13: | 92.1 |
| R6: | 82.3 | R14: | 92.6 |
| R7: | 84.3 |      |      |
| R8: | 84.9 |      |      |

Rf: 88  
 Rg: 96.2

### Test Conditions

Stabilization Time: 44M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

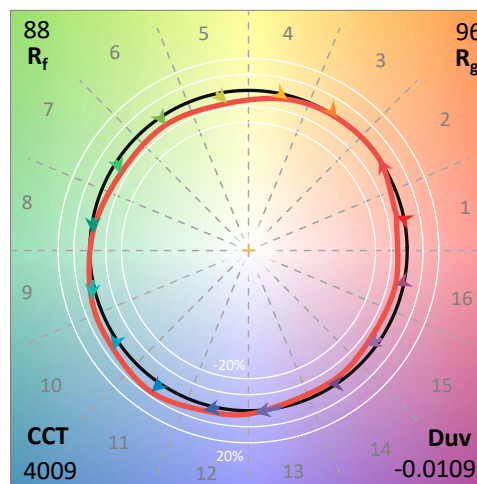


REPORT NUMBER: SP1-2210-795-4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-4

**CIE 1931 Chromaticity Diagram**

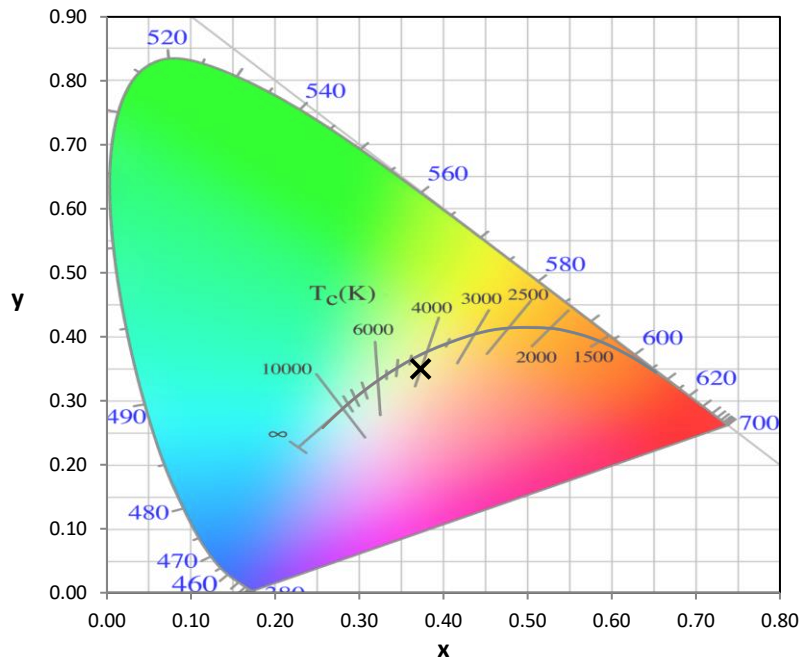

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

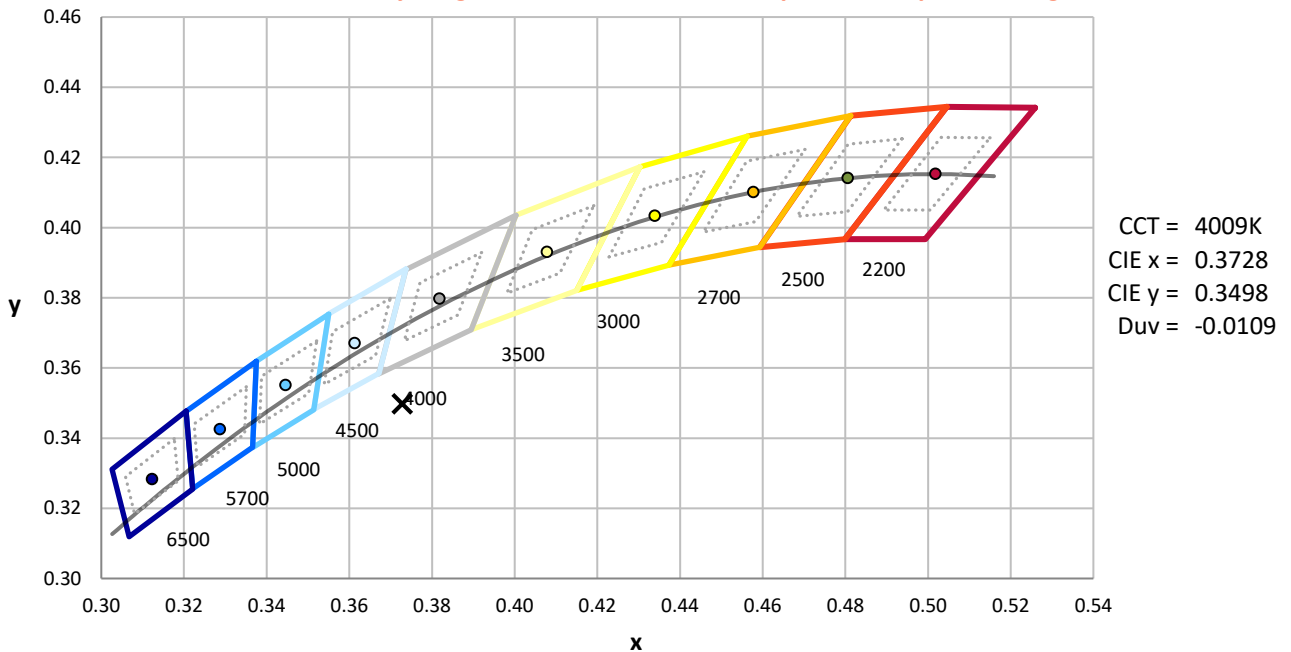


Point lies outside the range



REPORT NUMBER: SP1-2210-795-4

**Photopic Flux vs. Wavelength**

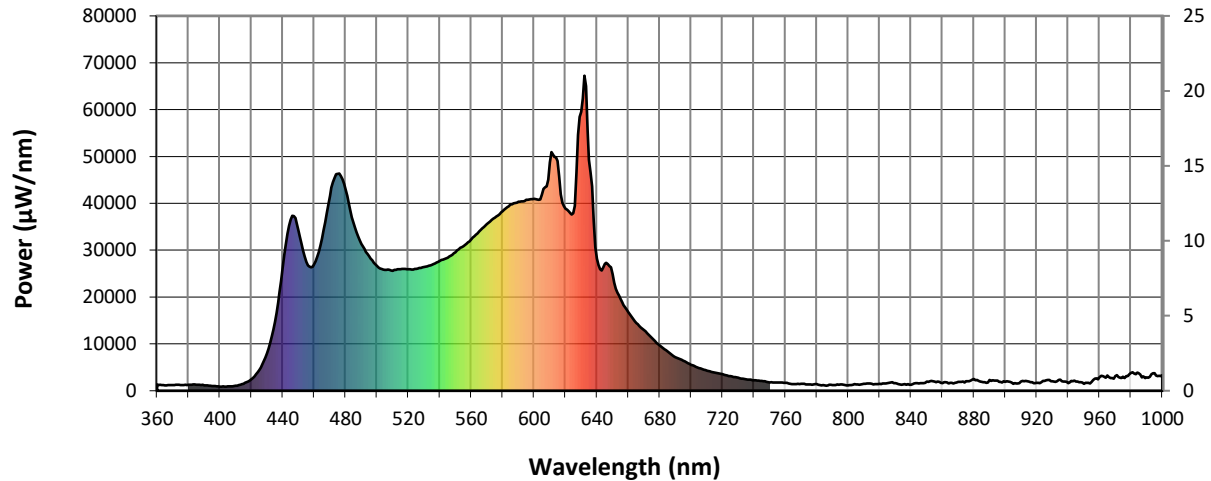


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Scotopic Flux vs. Wavelength**

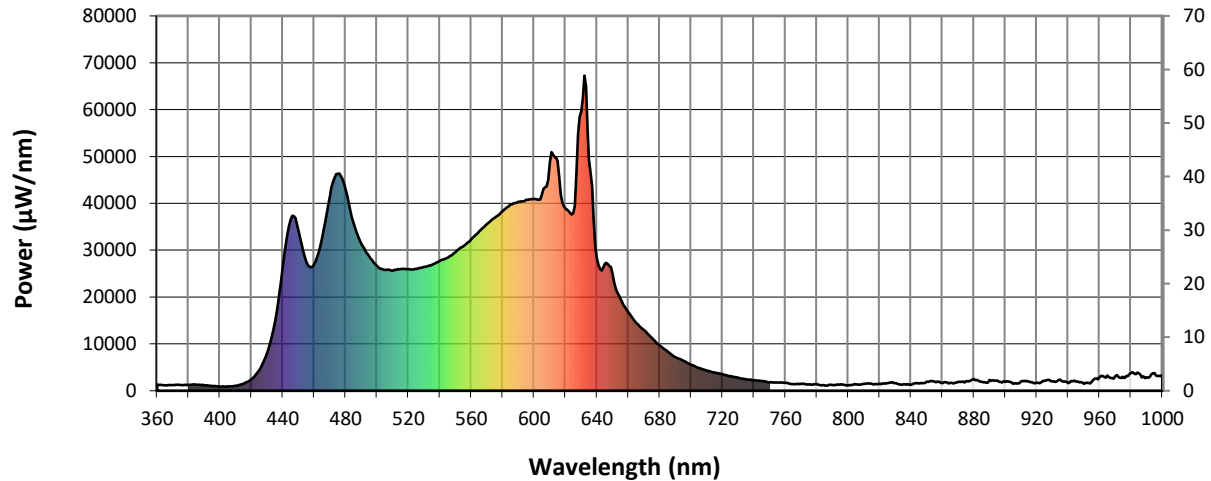


**Scotopic Lumens: 4927.4**

**S/P: 2.02**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4

**Melanopic Flux vs. Wavelength**

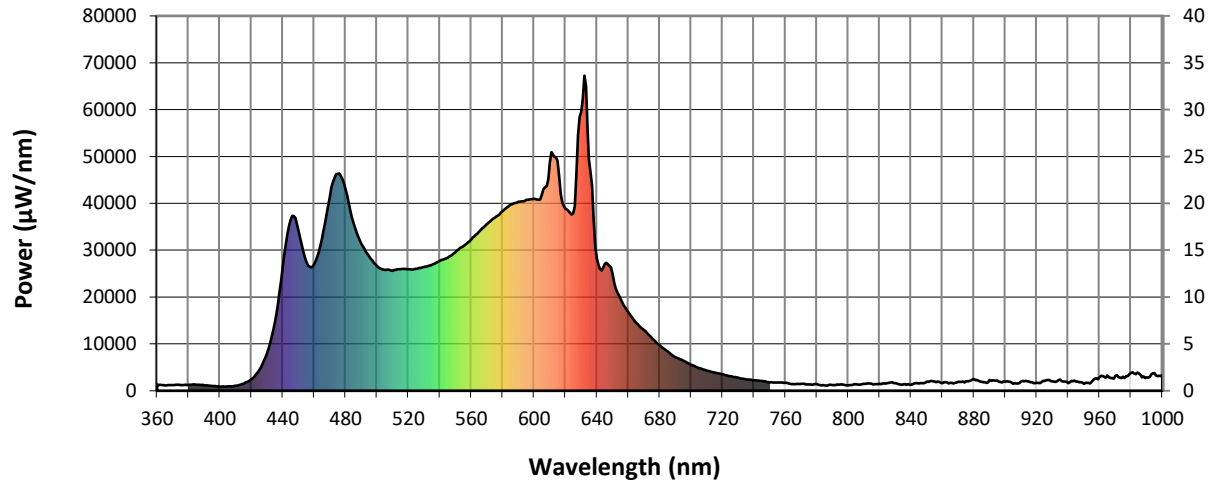

**Melanopic Lumens: 2189.1**

**S/P: 0.9**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1347             | NR               | 490       | 31353            | NR               | 620       | 38840            | NR               | 750       | 1762             | NR               | 880       | 2493             | NR               |
| 365       | 1168             | NR               | 495       | 28718            | NR               | 625       | 37861            | NR               | 755       | 1752             | NR               | 885       | 1913             | NR               |
| 370       | 1204             | NR               | 500       | 26605            | NR               | 630       | 59547            | NR               | 760       | 1690             | NR               | 890       | 2275             | NR               |
| 375       | 1232             | NR               | 505       | 25784            | NR               | 635       | 49312            | NR               | 765       | 1395             | NR               | 895       | 2173             | NR               |
| 380       | 1249             | NR               | 510       | 25614            | NR               | 640       | 28168            | NR               | 770       | 1452             | NR               | 900       | 1923             | NR               |
| 385       | 1285             | NR               | 515       | 25941            | NR               | 645       | 27115            | NR               | 775       | 1370             | NR               | 905       | 1511             | NR               |
| 390       | 1154             | NR               | 520       | 25900            | NR               | 650       | 24916            | NR               | 780       | 1429             | NR               | 910       | 1971             | NR               |
| 395       | 1036             | NR               | 525       | 26015            | NR               | 655       | 19572            | NR               | 785       | 1112             | NR               | 915       | 1957             | NR               |
| 400       | 873              | NR               | 530       | 26424            | NR               | 660       | 16766            | NR               | 790       | 1222             | NR               | 920       | 1699             | NR               |
| 405       | 908              | NR               | 535       | 26869            | NR               | 665       | 14487            | NR               | 795       | 1347             | NR               | 925       | 2123             | NR               |
| 410       | 1056             | NR               | 540       | 27684            | NR               | 670       | 12943            | NR               | 800       | 1132             | NR               | 930       | 2029             | NR               |
| 415       | 1492             | NR               | 545       | 28407            | NR               | 675       | 11228            | NR               | 805       | 1360             | NR               | 935       | 2371             | NR               |
| 420       | 2426             | NR               | 550       | 29571            | NR               | 680       | 9665             | NR               | 810       | 1451             | NR               | 940       | 1649             | NR               |
| 425       | 4409             | NR               | 555       | 30862            | NR               | 685       | 8389             | NR               | 815       | 1507             | NR               | 945       | 1984             | NR               |
| 430       | 7984             | NR               | 560       | 32297            | NR               | 690       | 7170             | NR               | 820       | 1466             | NR               | 950       | 1495             | NR               |
| 435       | 14687            | NR               | 565       | 33979            | NR               | 695       | 6398             | NR               | 825       | 1609             | NR               | 955       | 1862             | NR               |
| 440       | 26286            | NR               | 570       | 35579            | NR               | 700       | 5544             | NR               | 830       | 1642             | NR               | 960       | 2951             | NR               |
| 445       | 36513            | NR               | 575       | 36922            | NR               | 705       | 4845             | NR               | 835       | 1363             | NR               | 965       | 3240             | NR               |
| 450       | 34274            | NR               | 580       | 38319            | NR               | 710       | 4309             | NR               | 840       | 1294             | NR               | 970       | 3119             | NR               |
| 455       | 27519            | NR               | 585       | 39771            | NR               | 715       | 3879             | NR               | 845       | 1584             | NR               | 975       | 3020             | NR               |
| 460       | 26986            | NR               | 590       | 40329            | NR               | 720       | 3504             | NR               | 850       | 1930             | NR               | 980       | 3800             | NR               |
| 465       | 32511            | NR               | 595       | 40738            | NR               | 725       | 3094             | NR               | 855       | 1952             | NR               | 985       | 3748             | NR               |
| 470       | 41588            | NR               | 600       | 40944            | NR               | 730       | 2758             | NR               | 860       | 1631             | NR               | 990       | 2878             | NR               |
| 475       | 46297            | NR               | 605       | 41826            | NR               | 735       | 2441             | NR               | 865       | 1714             | NR               | 995       | 3708             | NR               |
| 480       | 42885            | NR               | 610       | 48714            | NR               | 740       | 2221             | NR               | 870       | 1878             | NR               | 1000      | 3359             | NR               |
| 485       | 35895            | NR               | 615       | 48984            | NR               | 745       | 2091             | NR               | 875       | 2024             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-4





TM-30-18

### Summary

$R_f = 88$   
 $R_g = 96.2$   
 CIE  $R_a = 87.8$   
 $R_g = 79.5$

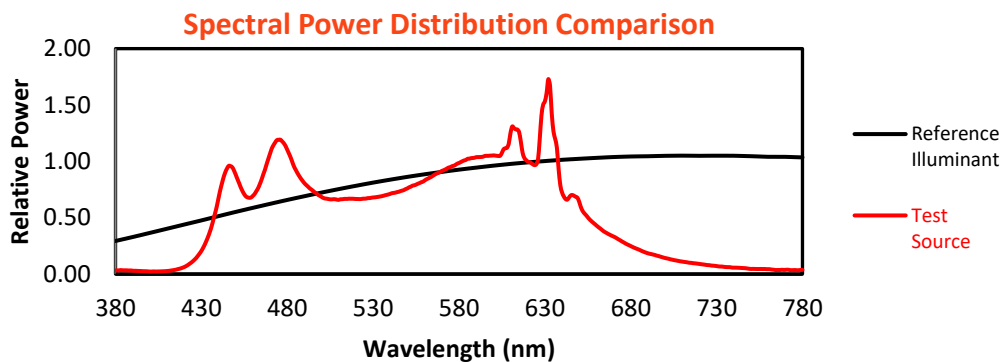

### Color Vector Graphics

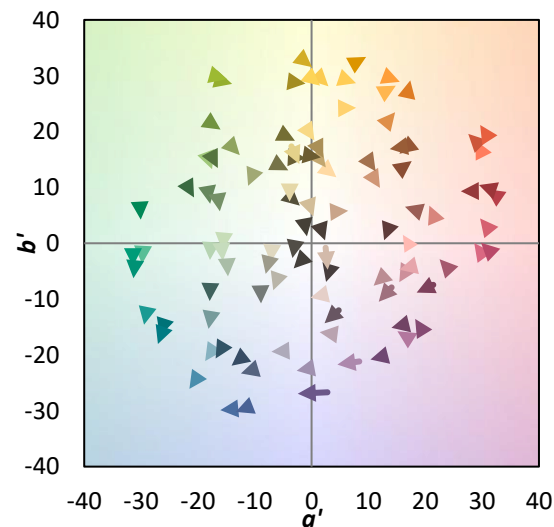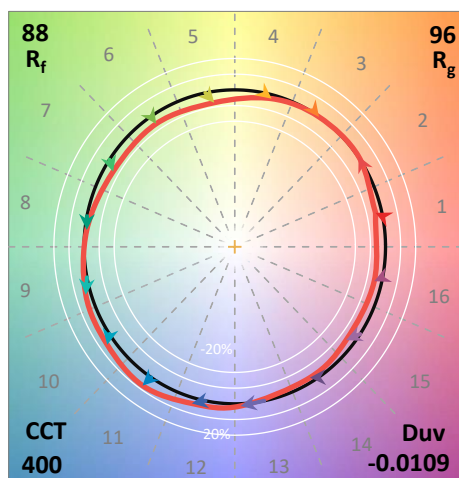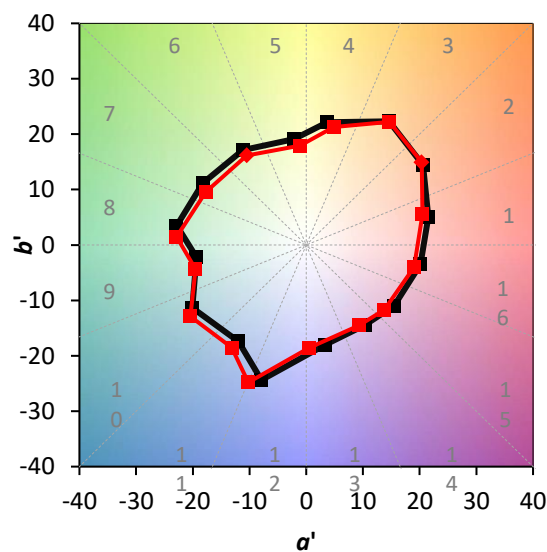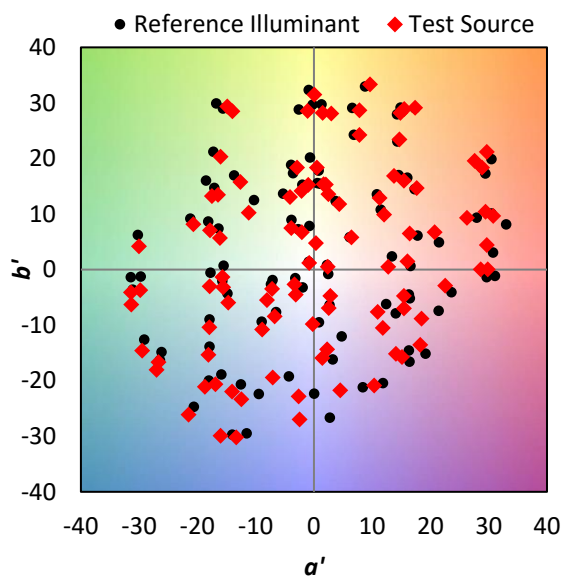


REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 91 | CES51 = 88 | CES76 = 86 |
| CES02 = 62 | CES27 = 85 | CES52 = 91 | CES77 = 79 |
| CES03 = 31 | CES28 = 93 | CES53 = 85 | CES78 = 87 |
| CES04 = 70 | CES29 = 84 | CES54 = 86 | CES79 = 81 |
| CES05 = 49 | CES30 = 81 | CES55 = 84 | CES80 = 82 |
| CES06 = 51 | CES31 = 85 | CES56 = 83 | CES81 = 65 |
| CES07 = 42 | CES32 = 92 | CES57 = 81 | CES82 = 93 |
| CES08 = 41 | CES33 = 86 | CES58 = 82 | CES83 = 87 |
| CES09 = 29 | CES34 = 90 | CES59 = 93 | CES84 = 96 |
| CES10 = 75 | CES35 = 94 | CES60 = 90 | CES85 = 77 |
| CES11 = 58 | CES36 = 78 | CES61 = 89 | CES86 = 74 |
| CES12 = 64 | CES37 = 92 | CES62 = 80 | CES87 = 89 |
| CES13 = 43 | CES38 = 77 | CES63 = 92 | CES88 = 89 |
| CES14 = 74 | CES39 = 95 | CES64 = 86 | CES89 = 84 |
| CES15 = 71 | CES40 = 91 | CES65 = 91 | CES90 = 87 |
| CES16 = 47 | CES41 = 90 | CES66 = 87 | CES91 = 74 |
| CES17 = 49 | CES42 = 87 | CES67 = 88 | CES92 = 77 |
| CES18 = 56 | CES43 = 86 | CES68 = 90 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 89 | CES70 = 91 | CES95 = 86 |
| CES21 = 85 | CES46 = 90 | CES71 = 86 | CES96 = 94 |
| CES22 = 78 | CES47 = 84 | CES72 = 95 | CES97 = 88 |
| CES23 = 91 | CES48 = 80 | CES73 = 89 | CES98 = 87 |
| CES24 = 90 | CES49 = 90 | CES74 = 88 | CES99 = 88 |
| CES25 = 71 | CES50 = 89 | CES75 = 86 |            |

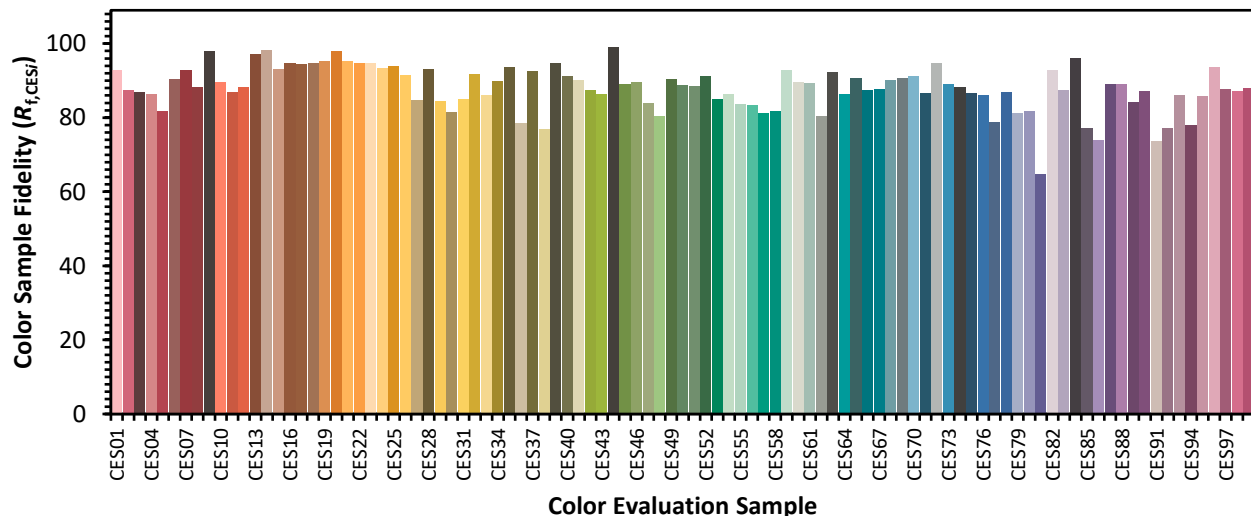

REPORT NUMBER: SP1-2210-795-4

**TM-30-18**



Color Rendition by Hue-Angle Bin

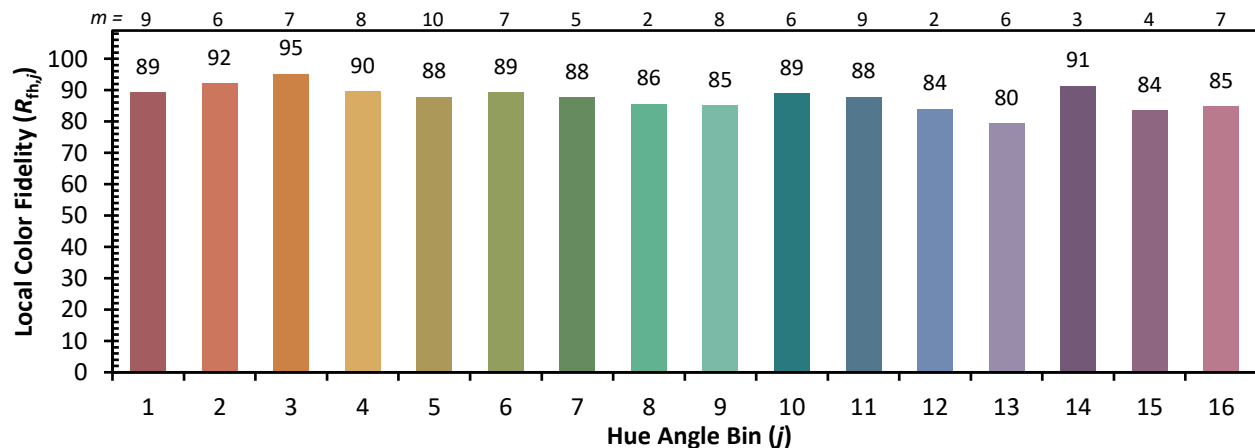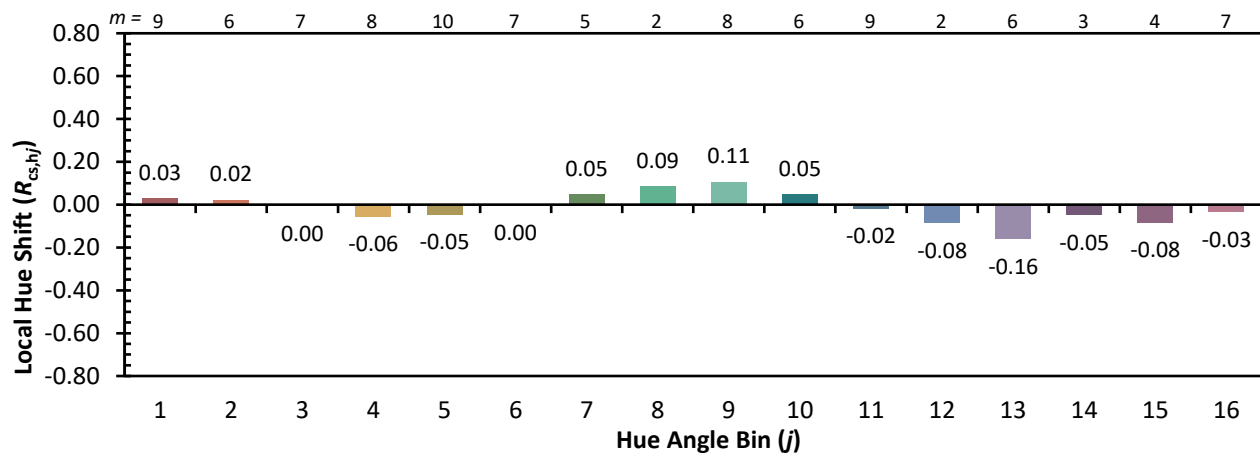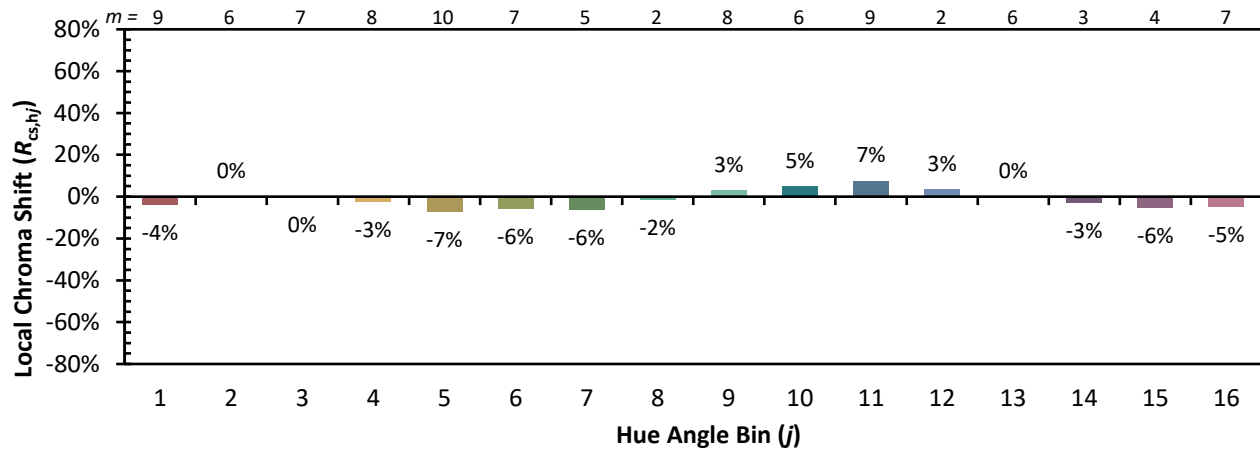

REPORT NUMBER: SP1-2210-795-4

**TM-30-18**

**Measure Comparisons**

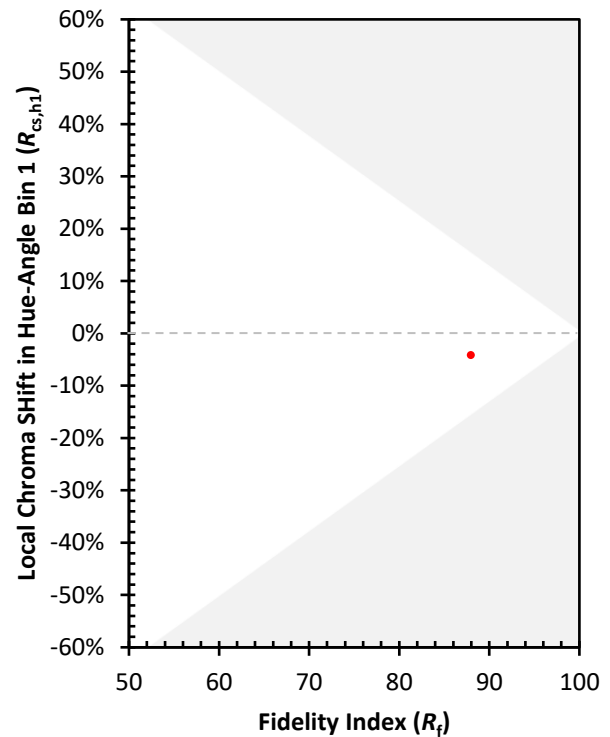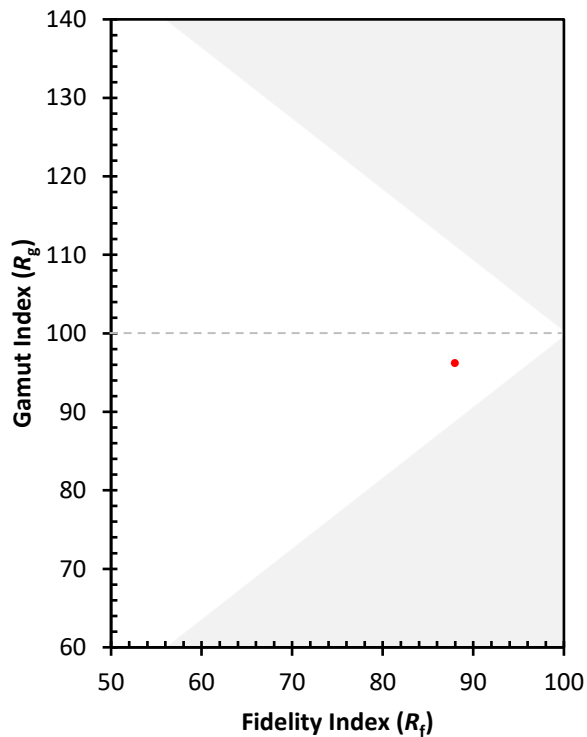

(END OF REPORT)