

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P734061

Luminaire Tested: **24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P734061
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P295011)
Test Lab: INNOVATIONS CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: FAIL-SAFE
Catalog Number: 24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K
Description: 2X4 3000 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 2700K CCT
AND HRP LENS, WITH, CA08 BOTTOM LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 2296.0 lumens
Efficiency: N/A
Efficacy: 104.4 lumens/watt
Spacing Criteria (0/90/45): 1.24 / 1.3 / 1.4
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 22
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P734061

CATALOG NUMBER: 24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K

Luminous Intensity Polar Plot

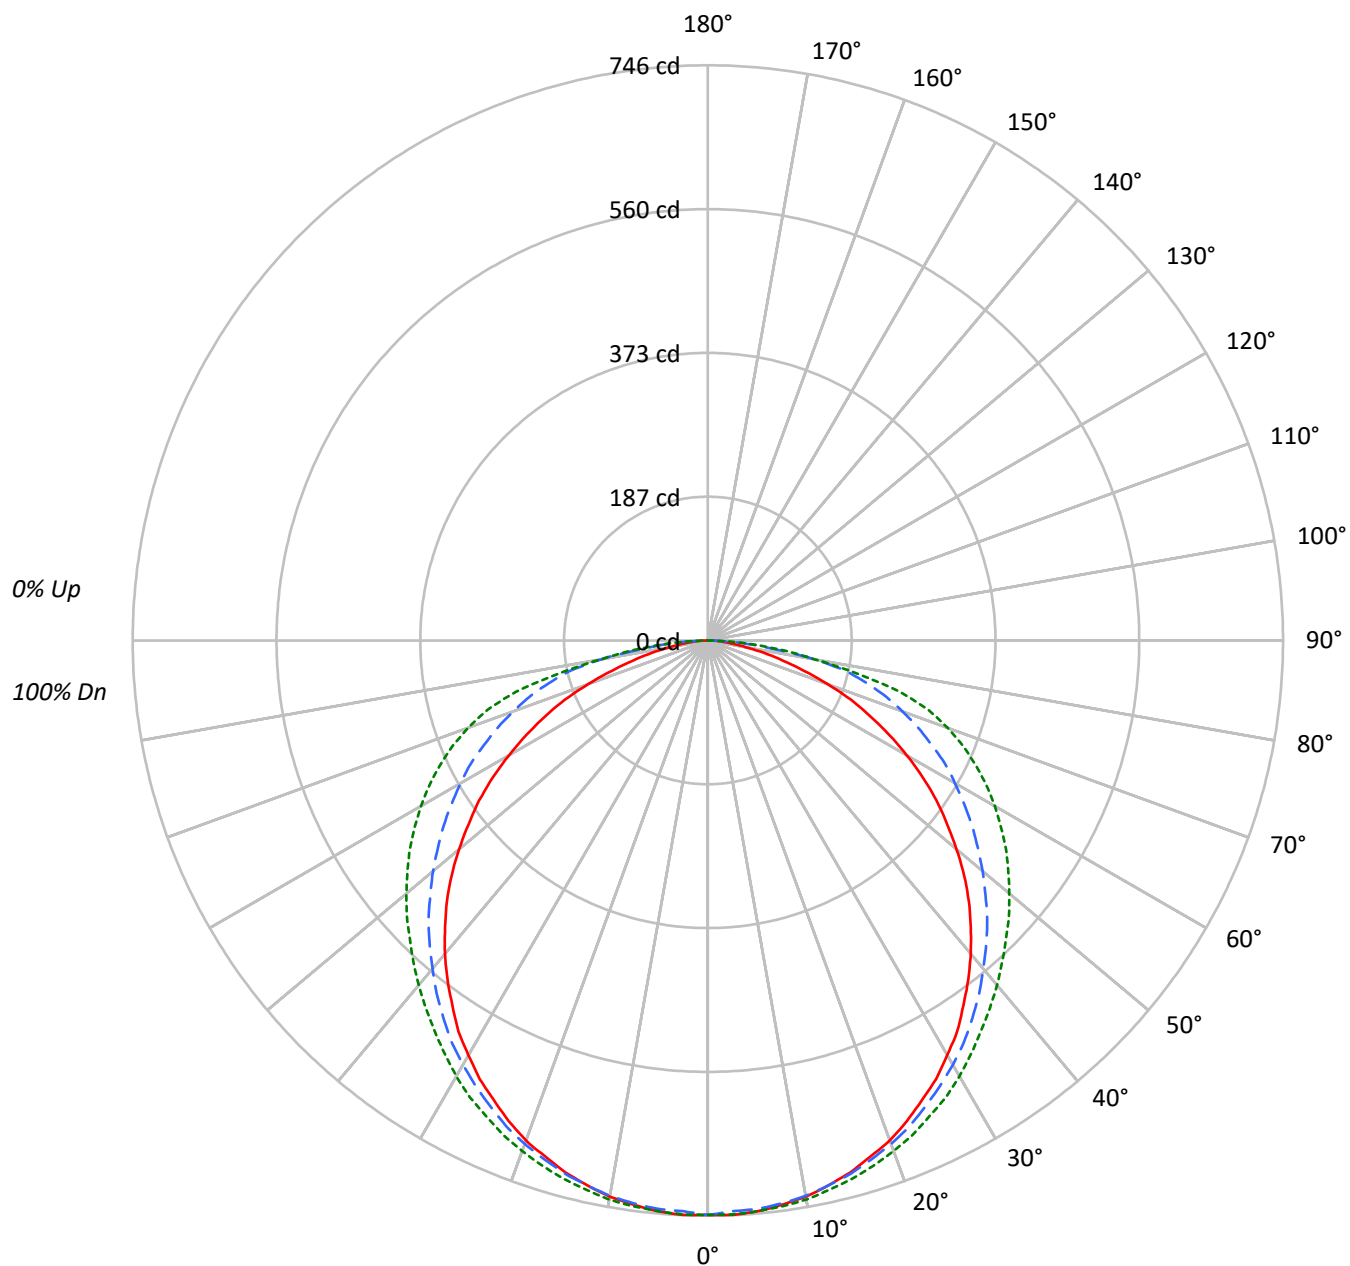



TEST NUMBER: P734061

CATALOG NUMBER: 24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	98	94	105	101	96	93	96	93	90	92	90	87	89	86	84	82		
2	98	89	82	76	95	87	80	75	83	78	73	80	75	71	77	73	70	67		
3	89	78	69	62	86	76	68	62	73	66	61	70	64	59	68	63	58	56		
4	81	68	59	52	79	67	59	52	65	57	51	62	56	50	60	54	50	48		
5	74	61	52	45	72	60	51	45	58	50	44	56	49	44	54	48	43	41		
6	69	55	46	39	67	54	45	39	52	44	38	50	43	38	49	42	38	36		
7	63	50	41	34	62	49	40	34	47	39	34	46	39	34	44	38	33	31		
8	59	45	36	30	57	44	36	30	43	36	30	42	35	30	41	34	30	28		
9	55	41	33	27	54	41	33	27	40	32	27	39	32	27	38	31	27	25		
10	52	38	30	25	50	38	30	25	37	30	25	36	29	24	35	29	24	23		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1051	1051	1051
5°	1053	1049	1053
10°	1050	1048	1055
15°	1044	1046	1056
20°	1037	1044	1058
25°	1024	1039	1060
30°	1012	1035	1064
35°	995	1030	1065
40°	977	1024	1075
45°	955	1023	1092
50°	924	1022	1121
55°	891	1029	1161
60°	841	1044	1213
65°	777	1069	1281
70°	678	1107	1365
75°	550	1164	1410
80°	406	1141	1141
85°	313	840	949



TEST NUMBER: P734061

CATALOG NUMBER: 24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	70.6	3.1
10°-20°	202.6	8.8
20°-30°	308.5	13.4
30°-40°	374.6	16.3
40°-50°	395.8	17.2
50°-60°	373.4	16.3
60°-70°	310.5	13.5
70°-80°	204.3	8.9
80°-90°	55.7	2.4
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	581.7	25.3
0°-40°	956.3	41.7
0°-60°	1725.5	75.2
0°-90°	2296.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	2296.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	745	745	745	745	745	
5°	743	743	740	743	743	71
15°	714	715	716	723	723	201
25°	658	661	667	679	680	303
35°	578	584	598	613	618	362
45°	479	488	512	537	547	369
55°	362	378	418	458	472	323
65°	233	260	320	367	384	230
75°	101	147	213	253	258	109
85°	19	42	52	58	59	24
90°	0	0	0	0	0	



TEST NUMBER: P734061

CATALOG NUMBER: 24FCZ2-30HE-HRP-B2750-W2D-CA08-2700K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	745.0	745.0	745.0	745.0	745.0
2.5°	745.9	745.0	741.0	745.0	745.0
5°	743.1	743.1	740.1	743.1	743.1
7.5°	738.2	738.2	736.3	740.1	740.1
10°	732.5	732.5	731.4	736.3	736.3
12.5°	723.8	724.8	723.8	729.5	729.5
15°	714.2	715.1	716.1	722.9	722.9
17.5°	701.7	703.6	705.5	713.2	714.2
20°	690.2	691.1	694.9	703.6	704.6
22.5°	674.7	677.7	682.4	691.1	694.0
25°	657.5	661.3	667.1	678.6	680.5
27.5°	641.1	644.0	651.7	664.1	668.1
30°	621.0	625.7	635.4	647.8	652.6
32.5°	601.7	606.5	618.0	631.6	635.4
35°	577.7	584.4	597.9	613.3	618.0
37.5°	554.7	561.3	577.7	595.0	600.8
40°	530.5	538.3	555.6	575.8	583.4
42.5°	504.6	515.2	534.4	556.6	565.2
45°	478.7	488.3	512.3	537.3	546.9
47.5°	450.8	462.3	488.3	518.0	529.6
50°	421.0	435.4	465.3	498.0	510.4
52.5°	391.2	407.5	441.1	477.7	491.2
55°	362.3	377.8	418.1	457.5	471.9
57.5°	330.7	349.8	394.1	436.4	450.8
60°	298.0	319.2	370.0	414.3	429.6
62.5°	265.3	289.3	347.0	391.2	407.5
65°	232.6	259.5	320.1	367.2	383.5
67.5°	200.9	230.7	295.0	342.2	358.5
70°	164.4	201.8	268.2	314.3	330.7
72.5°	130.8	174.0	242.3	285.5	299.9
75°	100.9	147.0	213.4	252.8	258.5
77.5°	74.1	120.2	183.5	197.1	198.0
80°	49.9	96.2	140.4	138.4	140.4
82.5°	32.7	72.0	88.4	99.0	100.0
85°	19.3	42.3	51.9	57.7	58.6
87.5°	9.6	14.4	18.3	19.3	21.2
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-1

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-2700K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-2700K.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-2700K-315MA**
 Description: METALUX

TUNABLE BOARD, 2700K-315MA, PROGRAMMED @0Vdc

Spectral Parameters

CCT (K): 2666
 CIE u' : 0.2643
 CIE v' : 0.5262
 Duv: -0.0012
 CIE x: 0.4604
 CIE y: 0.4075
 CIE z: 0.1321
 Peak Wavelength (nm): 632
 Dominant Wavelength (nm): 584
 Purity: 61


CRI (Ra): 94.1

R1:	96.2	R9:	58.8
R2:	97.9	R10:	93.6
R3:	98.1	R11:	96.6
R4:	96.1	R12:	90.2
R5:	96.2	R13:	96.8
R6:	96.5	R14:	97.5
R7:	90.7		
R8:	81.4		

Rf: 91.5
 Rg: 101.3

Test Conditions

Stabilization Time: 146M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

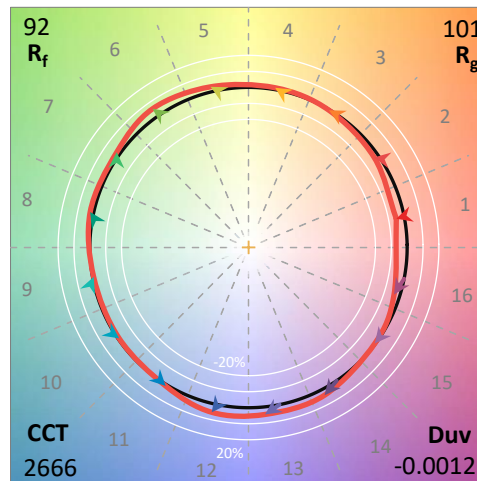


REPORT NUMBER: SP1-2210-795-1


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-1

CIE 1931 Chromaticity Diagram

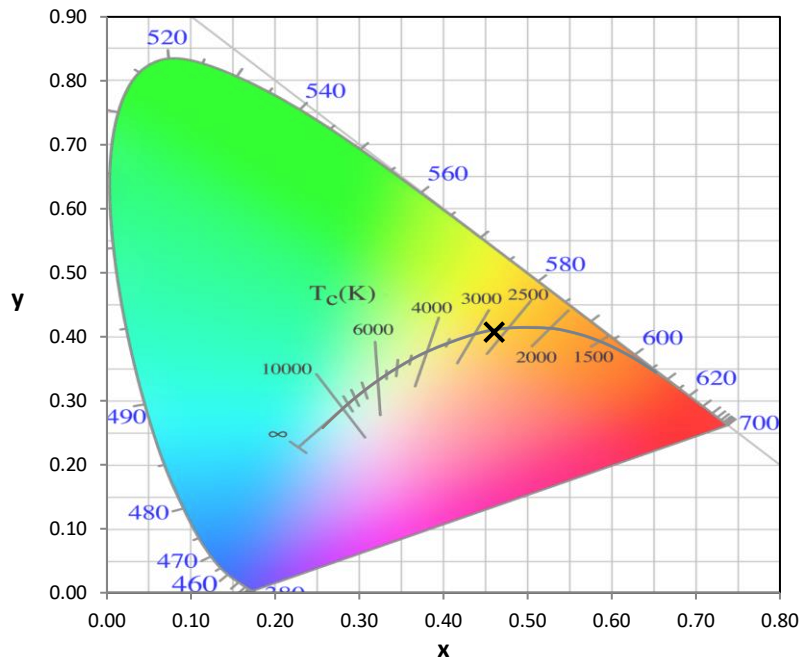


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

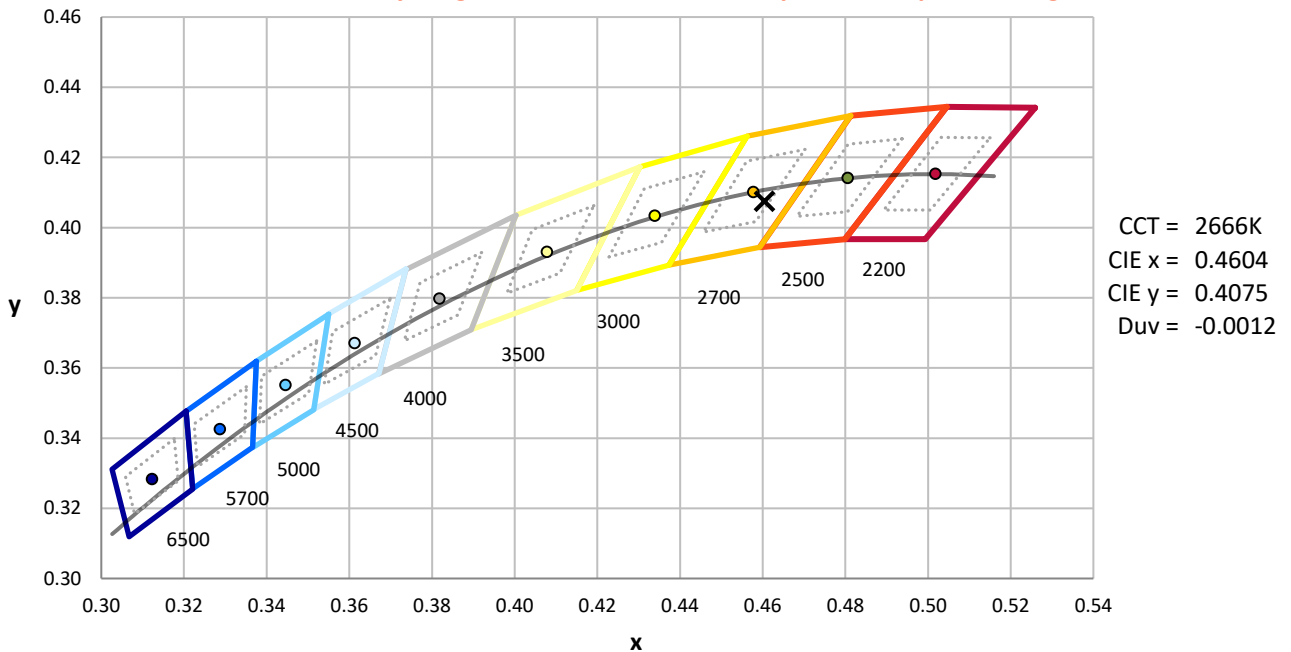

Point lies inside the ANSI 2700K 4-step quadrangle

REPORT NUMBER: SP1-2210-795-1

Photopic Flux vs. Wavelength

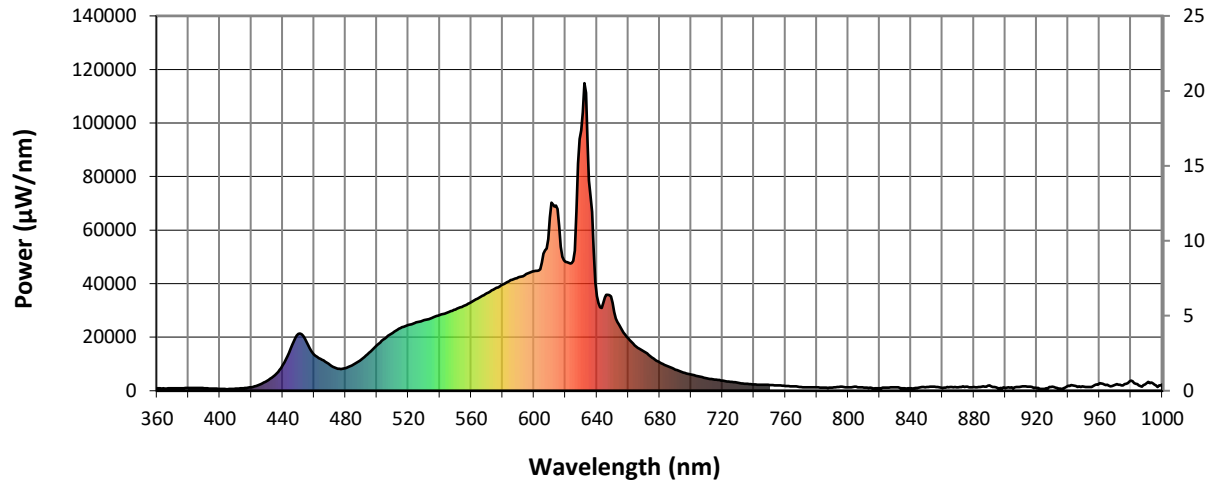


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1

Scotopic Flux vs. Wavelength

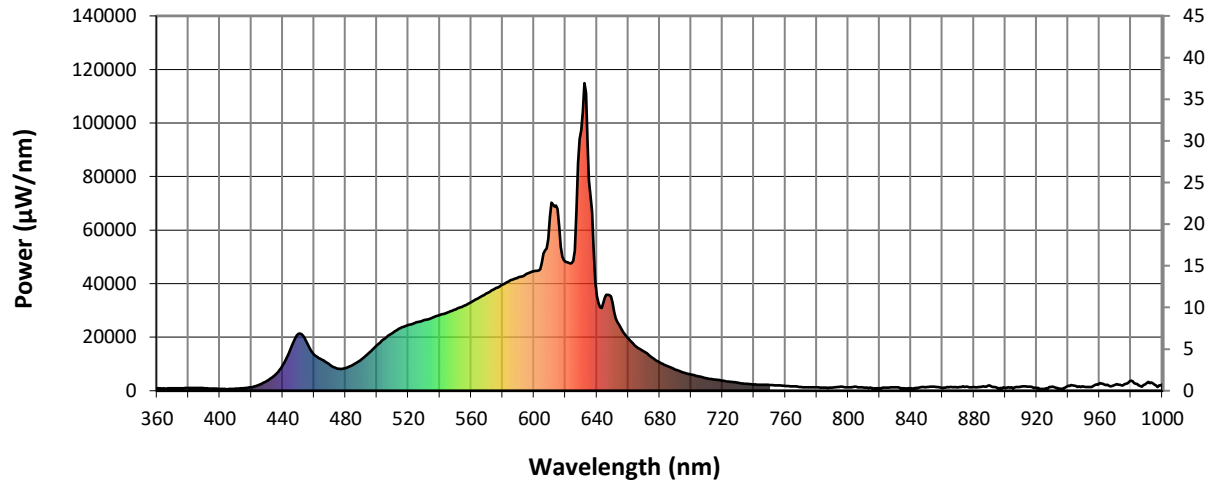


Scotopic Lumens: 3229.5

S/P: 1.28

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1

Melanopic Flux vs. Wavelength

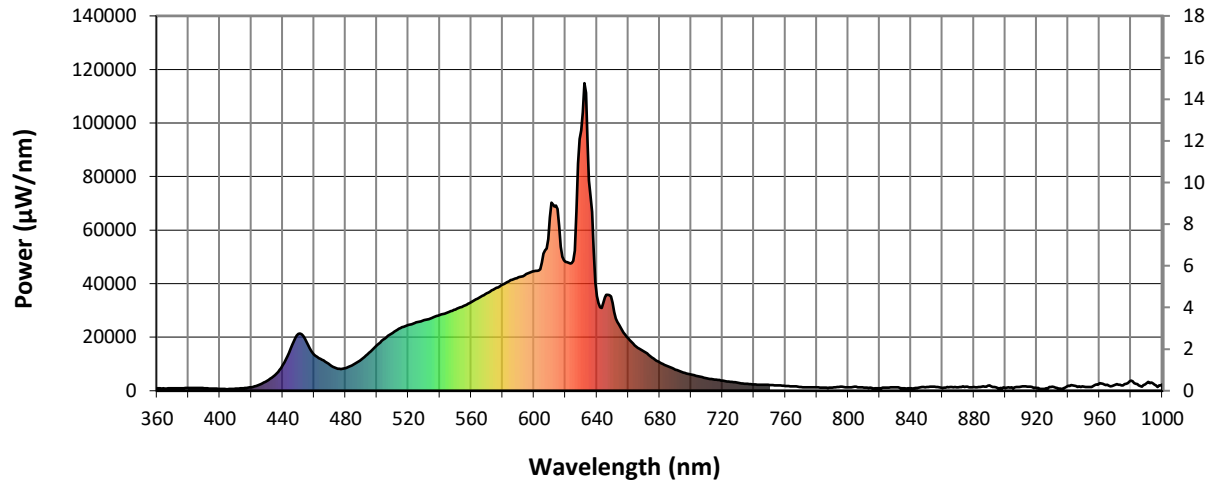

Melanopic Lumens: 1204.8

S/P: 0.48


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1





TM-30-18

Summary

$R_f = 91.5$
 $R_g = 101.3$
 CIE $R_a = 94.1$
 $R_g = 58.8$

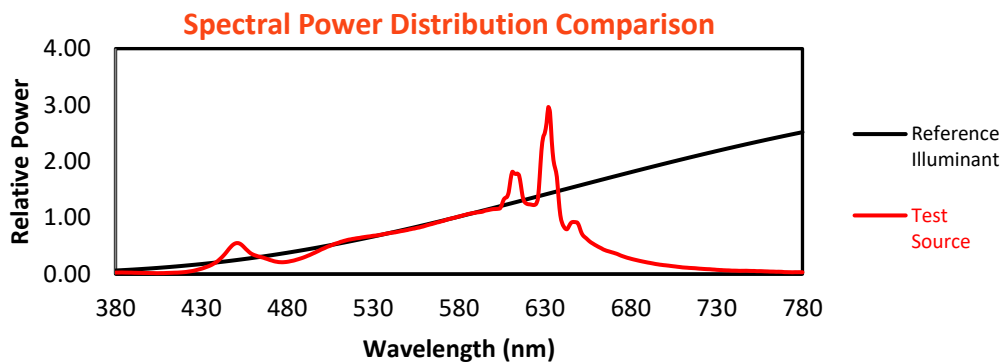

Color Vector Graphics

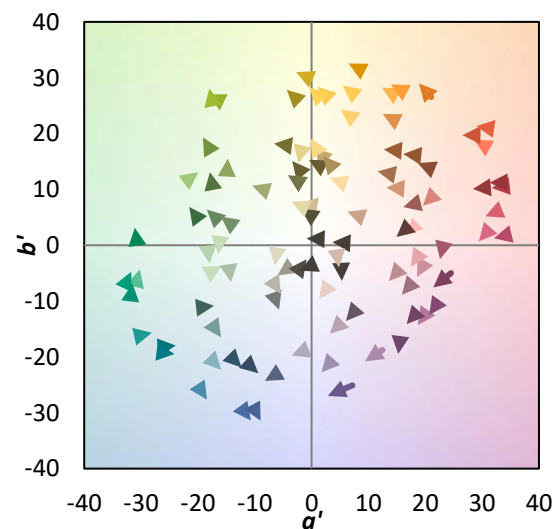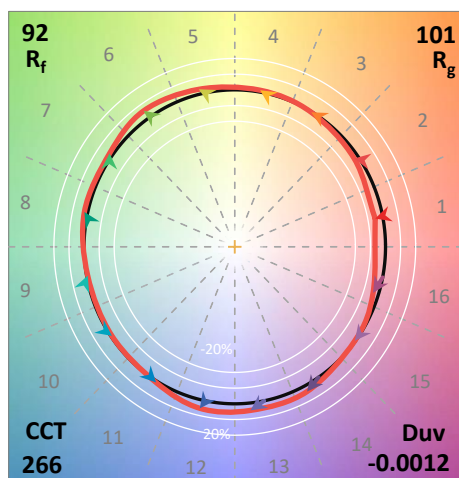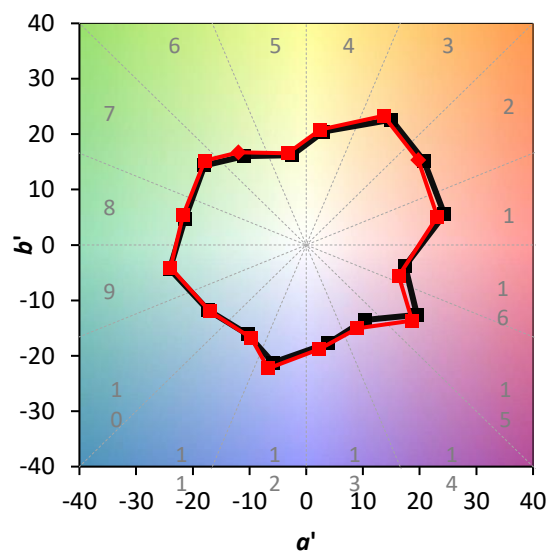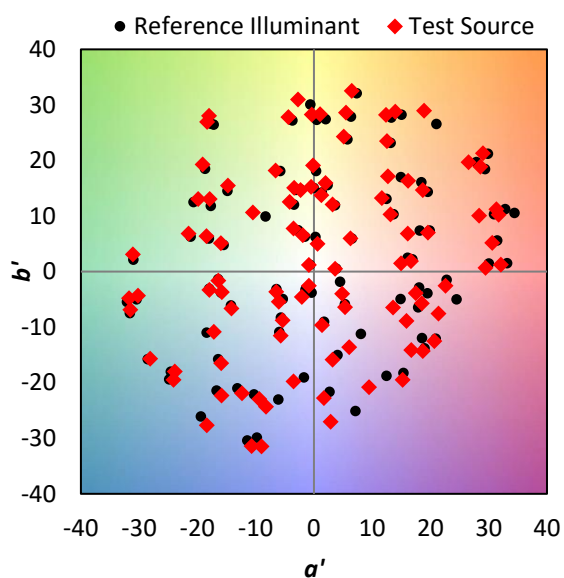


REPORT NUMBER: SP1-2210-795-1

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 92	CES51 = 96	CES76 = 91
CES02 = 64	CES27 = 97	CES52 = 95	CES77 = 83
CES03 = 32	CES28 = 97	CES53 = 93	CES78 = 88
CES04 = 71	CES29 = 91	CES54 = 98	CES79 = 87
CES05 = 51	CES30 = 96	CES55 = 99	CES80 = 90
CES06 = 51	CES31 = 91	CES56 = 95	CES81 = 67
CES07 = 44	CES32 = 84	CES57 = 95	CES82 = 95
CES08 = 43	CES33 = 92	CES58 = 95	CES83 = 92
CES09 = 29	CES34 = 94	CES59 = 99	CES84 = 96
CES10 = 77	CES35 = 97	CES60 = 97	CES85 = 79
CES11 = 59	CES36 = 91	CES61 = 97	CES86 = 75
CES12 = 66	CES37 = 94	CES62 = 94	CES87 = 92
CES13 = 45	CES38 = 99	CES63 = 94	CES88 = 96
CES14 = 74	CES39 = 97	CES64 = 97	CES89 = 81
CES15 = 72	CES40 = 94	CES65 = 92	CES90 = 97
CES16 = 48	CES41 = 94	CES66 = 95	CES91 = 86
CES17 = 50	CES42 = 92	CES67 = 95	CES92 = 78
CES18 = 57	CES43 = 90	CES68 = 94	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 95	CES94 = 72
CES20 = 68	CES45 = 94	CES70 = 92	CES95 = 86
CES21 = 87	CES46 = 93	CES71 = 92	CES96 = 92
CES22 = 79	CES47 = 84	CES72 = 97	CES97 = 93
CES23 = 92	CES48 = 94	CES73 = 88	CES98 = 93
CES24 = 91	CES49 = 91	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 96	CES75 = 92	

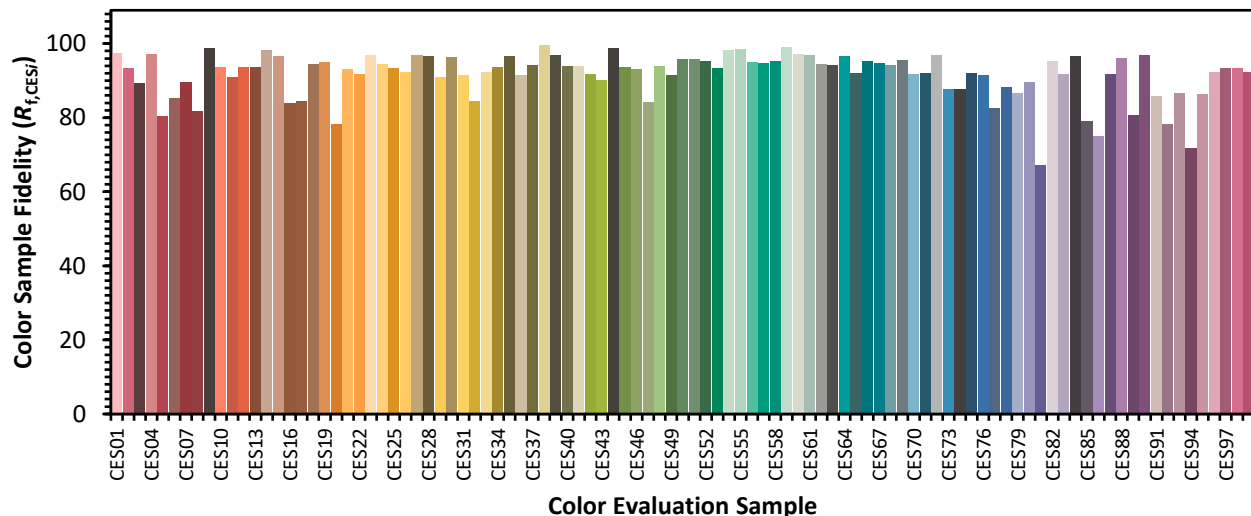

REPORT NUMBER: SP1-2210-795-1

TM-30-18



Color Rendition by Hue-Angle Bin

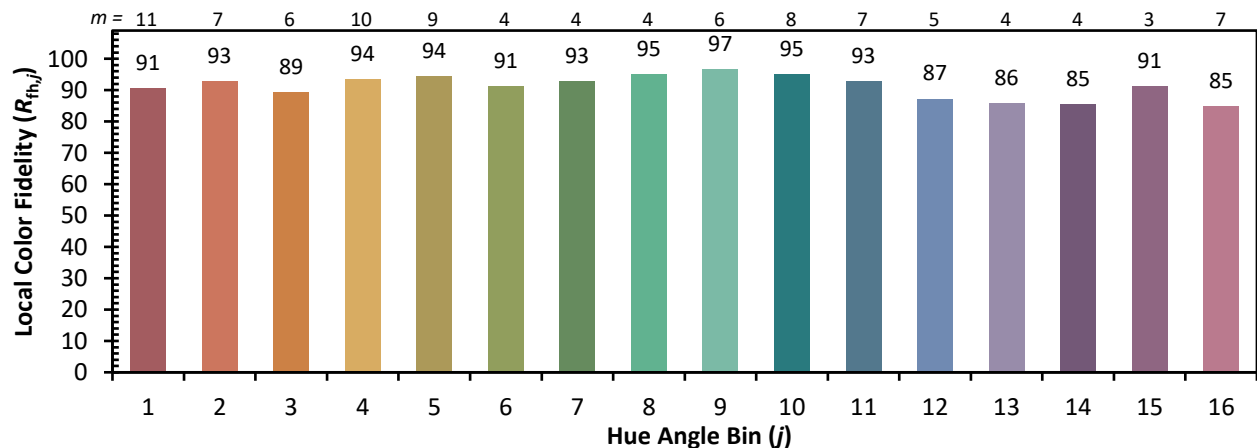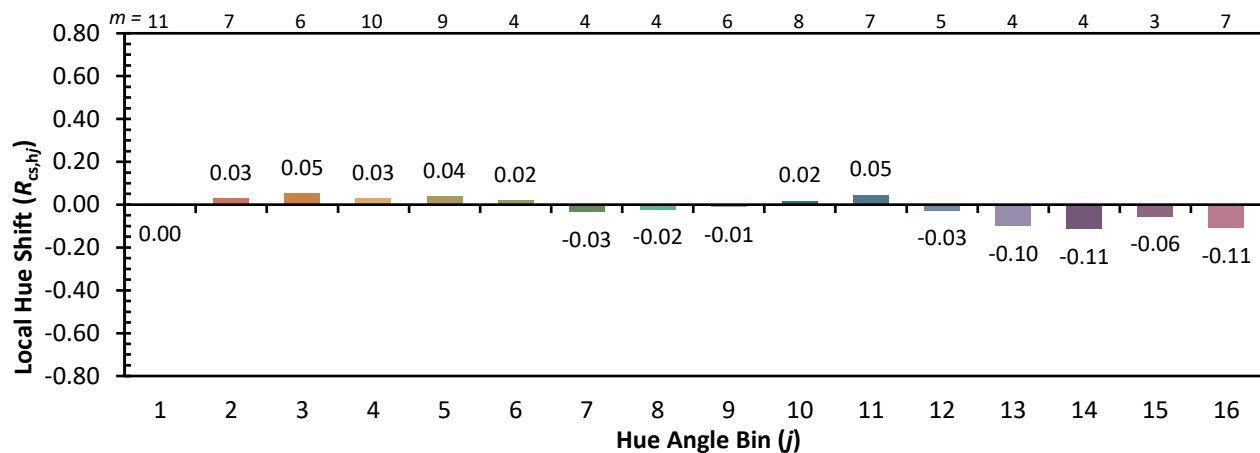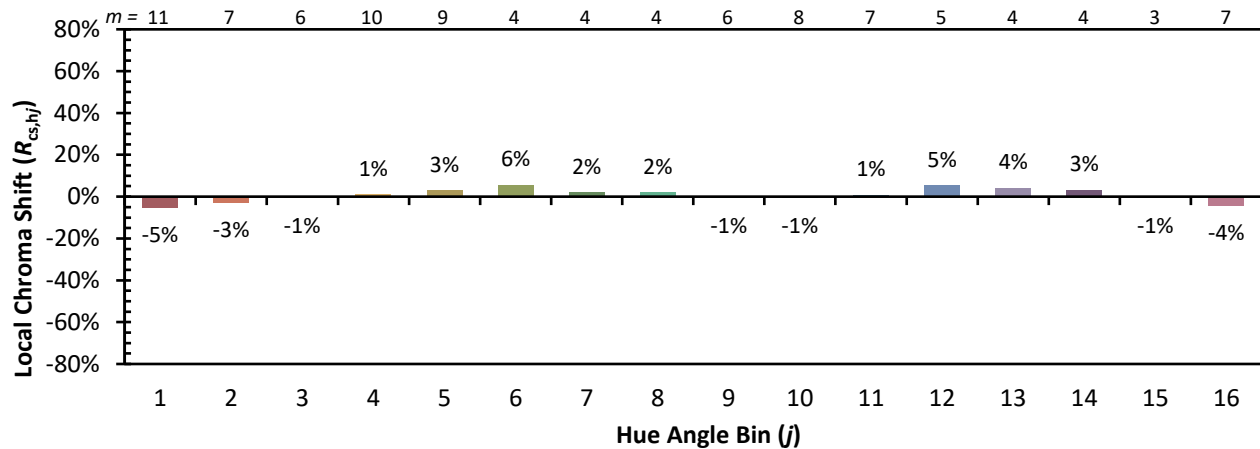

REPORT NUMBER: SP1-2210-795-1

TM-30-18

Measure Comparisons

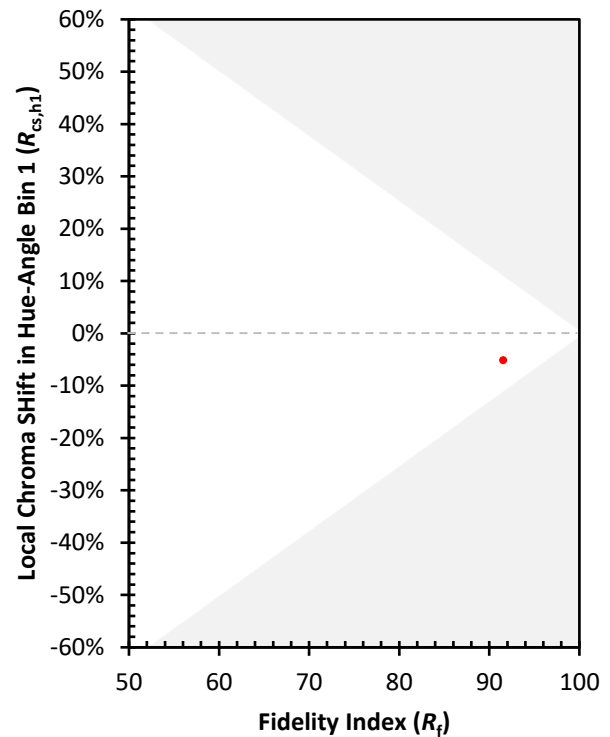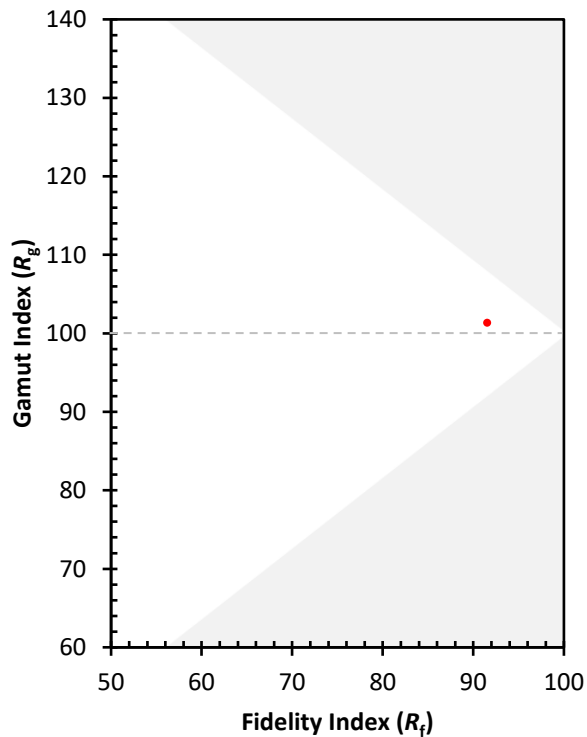

(END OF REPORT)