

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: FAIL-SAFE

Report Number: P734328

Luminaire Tested: **24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P734328  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P295011)  
Test Lab: INNOVATIONS CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: FAIL-SAFE  
Catalog Number: 24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K  
Description: 2X4 3500 LUMEN SEALED CRUZE TROFFER WITH BIO UP LEDS AT 3500K CCT  
AND HRP LENS, WITH, CP250 BOTTOM LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2390.0 lumens  
Efficiency: N/A  
Efficacy: 91.9 lumens/watt  
Spacing Criteria (0/90/45): 1.24 / 1.3 / 1.4  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 26  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P734328

CATALOG NUMBER: 24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K

### Luminous Intensity Polar Plot

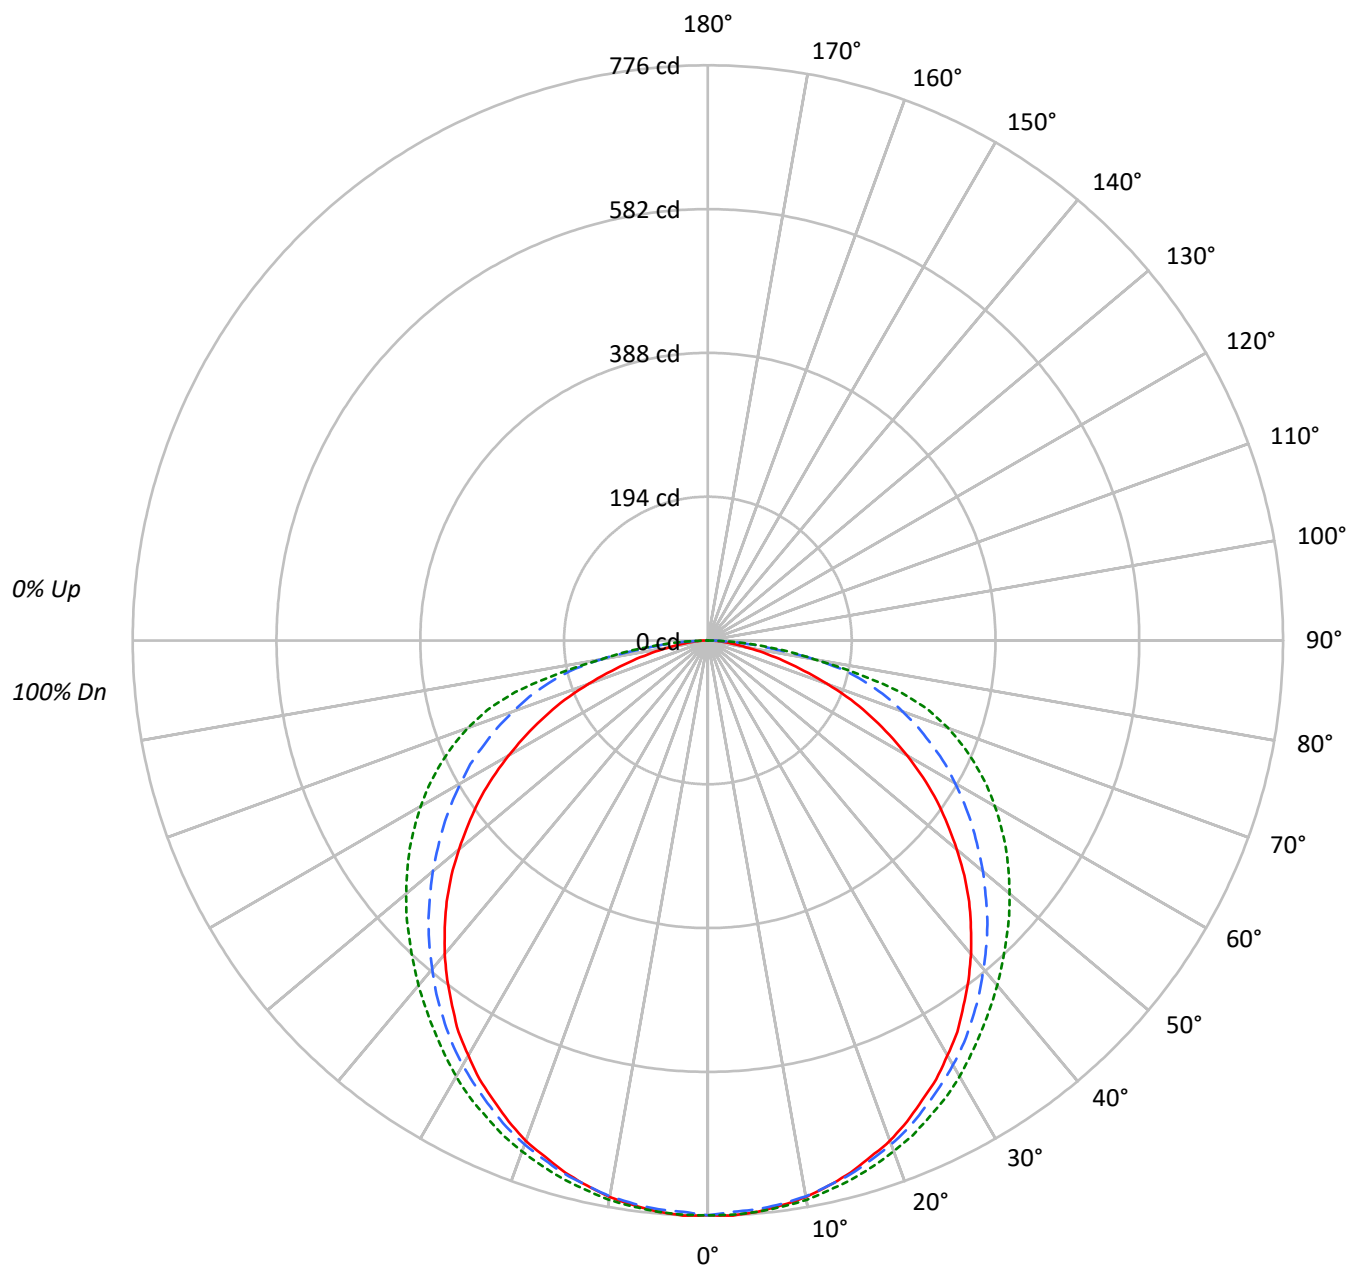



TEST NUMBER: P734328

CATALOG NUMBER: 24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 0  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 101 | 96  | 93  | 96  | 93  | 90  | 92  | 90  | 87  | 89  | 86  | 84  | 82  |    |    |
| 2   | 98  | 89  | 82  | 76  | 95  | 87  | 80  | 75  | 83  | 78  | 73  | 80  | 75  | 71  | 77  | 73  | 70  | 67  |    |    |
| 3   | 89  | 78  | 69  | 62  | 86  | 76  | 68  | 62  | 73  | 66  | 61  | 70  | 64  | 59  | 68  | 63  | 58  | 56  |    |    |
| 4   | 81  | 68  | 59  | 52  | 79  | 67  | 59  | 52  | 65  | 57  | 51  | 62  | 56  | 50  | 60  | 54  | 50  | 48  |    |    |
| 5   | 74  | 61  | 52  | 45  | 72  | 60  | 51  | 45  | 58  | 50  | 44  | 56  | 49  | 44  | 54  | 48  | 43  | 41  |    |    |
| 6   | 69  | 55  | 46  | 39  | 67  | 54  | 45  | 39  | 52  | 44  | 38  | 50  | 43  | 38  | 49  | 42  | 38  | 36  |    |    |
| 7   | 63  | 50  | 41  | 34  | 62  | 49  | 40  | 34  | 47  | 39  | 34  | 46  | 39  | 34  | 44  | 38  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 36  | 30  | 43  | 36  | 30  | 42  | 35  | 30  | 41  | 34  | 30  | 28  |    |    |
| 9   | 55  | 41  | 33  | 27  | 54  | 41  | 33  | 27  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 27  | 25  |    |    |
| 10  | 52  | 38  | 30  | 25  | 50  | 38  | 30  | 25  | 37  | 30  | 25  | 36  | 29  | 24  | 35  | 29  | 24  | 23  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1094 | 1094 | 1094 |
| 5°  | 1096 | 1091 | 1096 |
| 10° | 1093 | 1091 | 1098 |
| 15° | 1086 | 1089 | 1099 |
| 20° | 1079 | 1086 | 1102 |
| 25° | 1066 | 1081 | 1103 |
| 30° | 1053 | 1078 | 1107 |
| 35° | 1036 | 1072 | 1108 |
| 40° | 1017 | 1066 | 1119 |
| 45° | 995  | 1064 | 1136 |
| 50° | 962  | 1063 | 1167 |
| 55° | 928  | 1071 | 1209 |
| 60° | 876  | 1087 | 1262 |
| 65° | 809  | 1113 | 1333 |
| 70° | 706  | 1152 | 1420 |
| 75° | 573  | 1211 | 1467 |
| 80° | 423  | 1187 | 1187 |
| 85° | 324  | 876  | 988  |



TEST NUMBER: P734328

CATALOG NUMBER: 24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 73.5   | 3.1       |
| 10°-20°   | 210.9  | 8.8       |
| 20°-30°   | 321.1  | 13.4      |
| 30°-40°   | 389.9  | 16.3      |
| 40°-50°   | 412.0  | 17.2      |
| 50°-60°   | 388.7  | 16.3      |
| 60°-70°   | 323.2  | 13.5      |
| 70°-80°   | 212.7  | 8.9       |
| 80°-90°   | 58.0   | 2.4       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 605.5  | 25.3      |
| 0°-40°    | 995.5  | 41.7      |
| 0°-60°    | 1796.2 | 75.2      |
| 0°-90°    | 2390.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2390.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 776 | 776   | 776 | 776   | 776 |      |
| 5°  | 774 | 774   | 770 | 774   | 774 | 73   |
| 15° | 743 | 744   | 745 | 752   | 752 | 210  |
| 25° | 684 | 688   | 694 | 706   | 708 | 316  |
| 35° | 601 | 608   | 622 | 638   | 643 | 376  |
| 45° | 498 | 508   | 533 | 559   | 569 | 384  |
| 55° | 377 | 393   | 435 | 476   | 491 | 336  |
| 65° | 242 | 270   | 333 | 382   | 399 | 239  |
| 75° | 105 | 153   | 222 | 263   | 269 | 113  |
| 85° | 20  | 44    | 54  | 60    | 61  | 24   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P734328

CATALOG NUMBER: 24FCZ2-35HE-HRP-B2750-W2D-CP250-3500K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 775.5 | 775.5 | 775.5 | 775.5 | 775.5 |
| 2.5°  | 776.5 | 775.5 | 771.4 | 775.5 | 775.5 |
| 5°    | 773.5 | 773.5 | 770.4 | 773.5 | 773.5 |
| 7.5°  | 768.4 | 768.4 | 766.4 | 770.4 | 770.4 |
| 10°   | 762.5 | 762.5 | 761.4 | 766.4 | 766.4 |
| 12.5° | 753.4 | 754.4 | 753.4 | 759.4 | 759.4 |
| 15°   | 743.4 | 744.4 | 745.4 | 752.5 | 752.5 |
| 17.5° | 730.4 | 732.4 | 734.4 | 742.4 | 743.4 |
| 20°   | 718.4 | 719.4 | 723.4 | 732.4 | 733.4 |
| 22.5° | 702.3 | 705.4 | 710.4 | 719.4 | 722.4 |
| 25°   | 684.4 | 688.4 | 694.4 | 706.4 | 708.4 |
| 27.5° | 667.3 | 670.4 | 678.3 | 691.3 | 695.4 |
| 30°   | 646.4 | 651.4 | 661.4 | 674.4 | 679.3 |
| 32.5° | 626.4 | 631.3 | 643.3 | 657.4 | 661.4 |
| 35°   | 601.4 | 608.3 | 622.4 | 638.4 | 643.3 |
| 37.5° | 577.4 | 584.3 | 601.4 | 619.3 | 625.4 |
| 40°   | 552.2 | 560.3 | 578.4 | 599.4 | 607.3 |
| 42.5° | 525.3 | 536.3 | 556.3 | 579.3 | 588.4 |
| 45°   | 498.3 | 508.3 | 533.3 | 559.3 | 569.3 |
| 47.5° | 469.2 | 481.2 | 508.3 | 539.3 | 551.3 |
| 50°   | 438.3 | 453.3 | 484.3 | 518.3 | 531.3 |
| 52.5° | 407.2 | 424.2 | 459.2 | 497.3 | 511.3 |
| 55°   | 377.2 | 393.2 | 435.2 | 476.3 | 491.2 |
| 57.5° | 344.2 | 364.2 | 410.2 | 454.2 | 469.2 |
| 60°   | 310.2 | 332.2 | 385.2 | 431.2 | 447.2 |
| 62.5° | 276.2 | 301.2 | 361.2 | 407.2 | 424.2 |
| 65°   | 242.2 | 270.1 | 333.2 | 382.2 | 399.2 |
| 67.5° | 209.1 | 240.2 | 307.1 | 356.2 | 373.2 |
| 70°   | 171.1 | 210.1 | 279.2 | 327.2 | 344.2 |
| 72.5° | 136.1 | 181.2 | 252.2 | 297.2 | 312.2 |
| 75°   | 105.1 | 153.1 | 222.1 | 263.2 | 269.1 |
| 77.5° | 77.1  | 125.1 | 191.1 | 205.2 | 206.1 |
| 80°   | 52.0  | 100.1 | 146.1 | 144.0 | 146.1 |
| 82.5° | 34.0  | 75.0  | 92.1  | 103.1 | 104.1 |
| 85°   | 20.0  | 44.1  | 54.1  | 60.0  | 61.0  |
| 87.5° | 10.0  | 15.0  | 19.1  | 20.0  | 22.0  |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-3

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3500K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3500K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-3  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-3500K-315MA**  
 Description: METALUX

TUNABLE BOARD, 3500K-315MA, PROGRAMMED @ 4.0Vdc.

### Spectral Parameters


CCT (K): 3506  
 CIE  $u'$ : 0.2401  
 CIE  $v'$ : 0.4983  
 Duv: -0.0097  
 CIE x: 0.3952  
 CIE y: 0.3646  
 CIE z: 0.2402  
 Peak Wavelength (nm): 632  
 Dominant Wavelength (nm): 586  
 Purity: 28.3

CRI (Ra): 90.1  
 R1: 96.2  
 R2: 91.5  
 R3: 88.2  
 R4: 94.5  
 R5: 94.6  
 R6: 84.9  
 R7: 86.1  
 R8: 84.7  
 R9: 75.4  
 R10: 83.5  
 R11: 96.0  
 R12: 76.6  
 R13: 94.5  
 R14: 94.8

Rf: 90.4  
 Rg: 97.8

### Test Conditions

Stabilization Time: 42M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

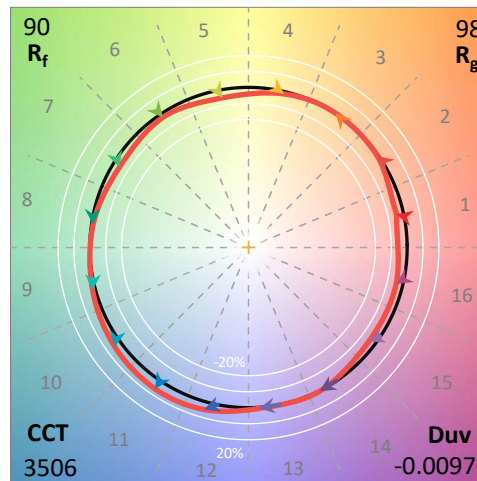


REPORT NUMBER: SP1-2210-795-3


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-3

**CIE 1931 Chromaticity Diagram**

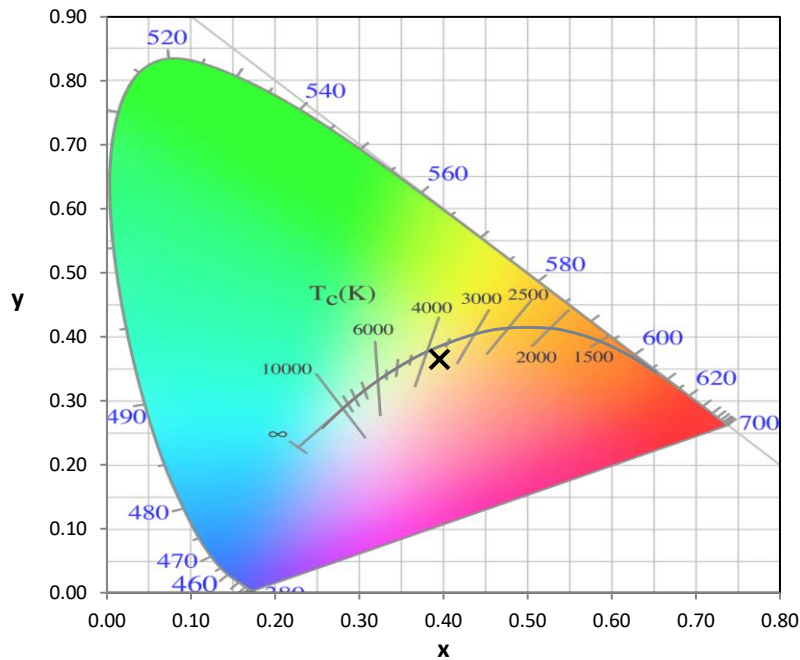


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

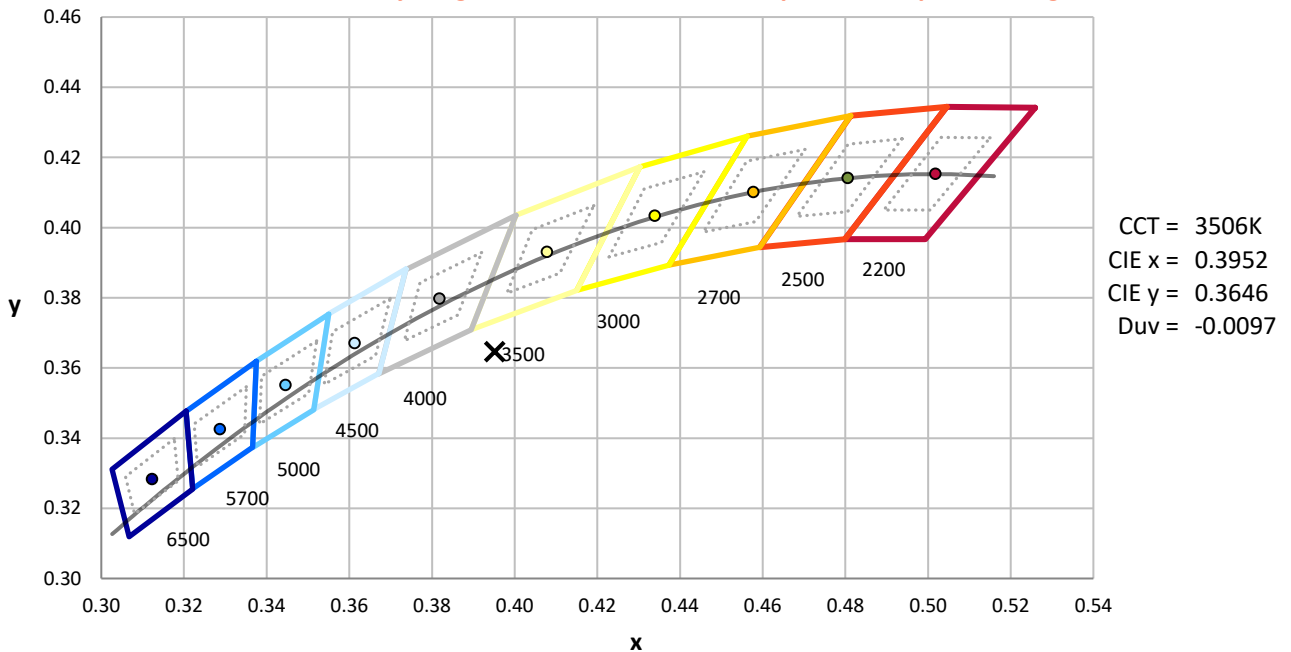

Point lies outside the range

REPORT NUMBER: SP1-2210-795-3

**Photopic Flux vs. Wavelength**

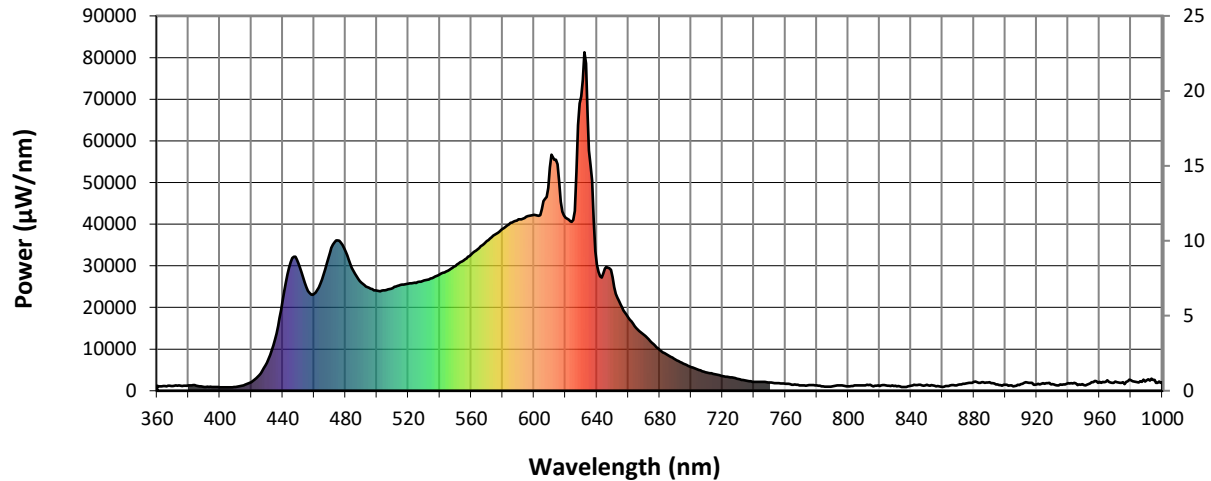


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3

**Scotopic Flux vs. Wavelength**

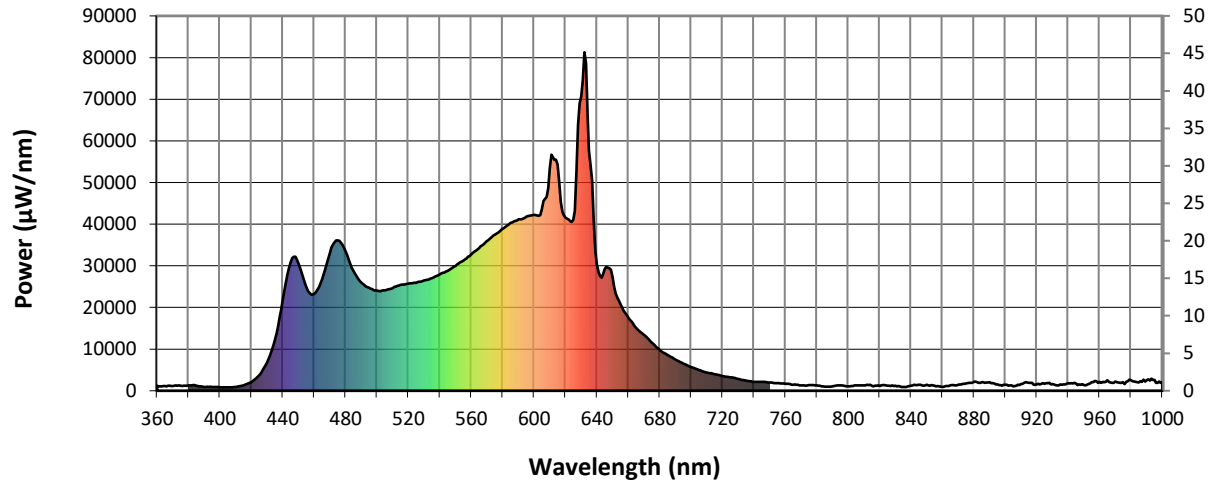


**Scotopic Lumens: 4472.9**

**S/P: 1.81**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3

**Melanopic Flux vs. Wavelength**

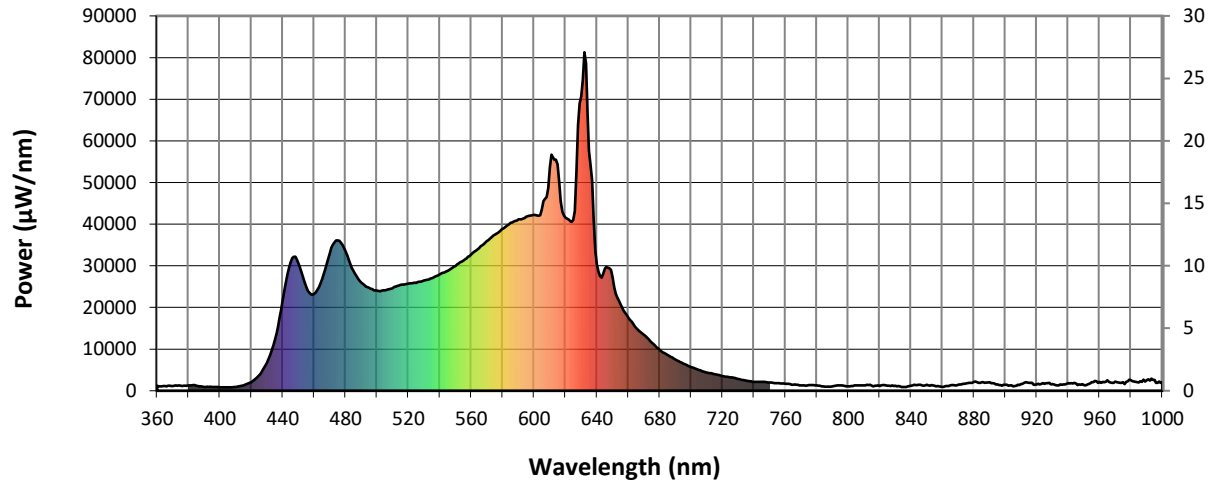

**Melanopic Lumens: 1922.8**

**S/P: 0.78**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3





**TM-30-18**

### Summary

$R_f = 90.4$   
 $R_g = 97.8$   
 CIE  $R_a = 90.1$   
 $R_g = 75.4$

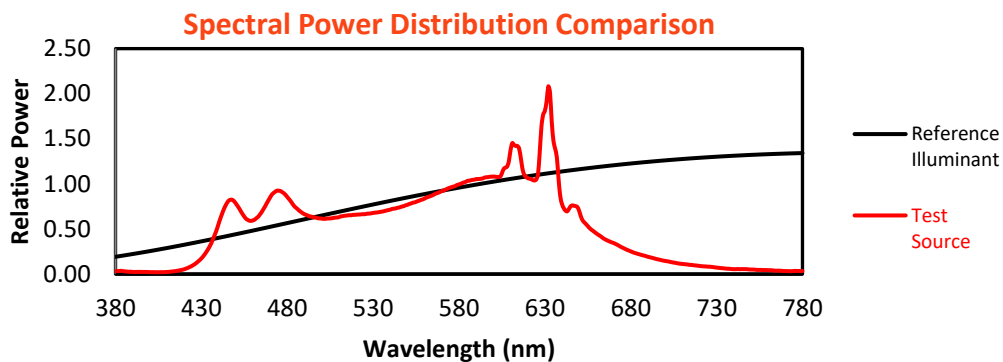

### Color Vector Graphics

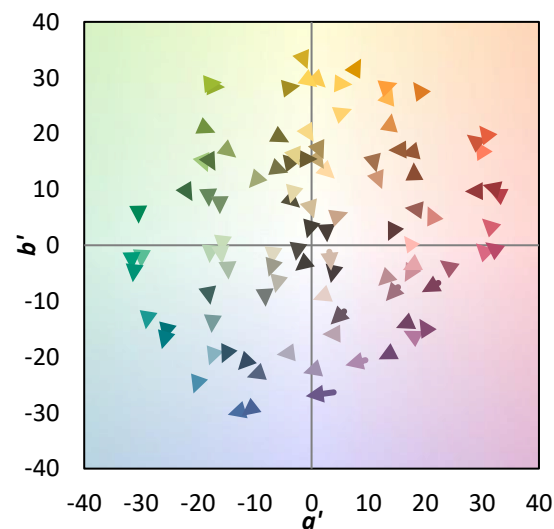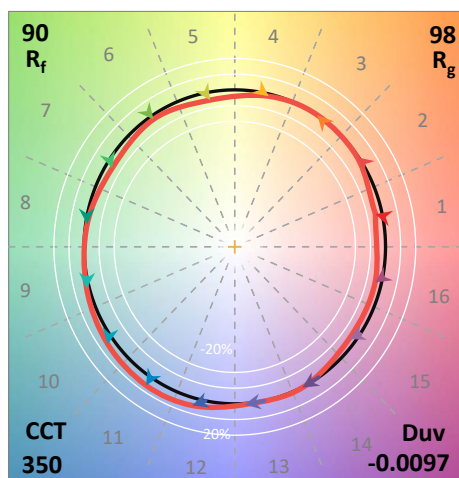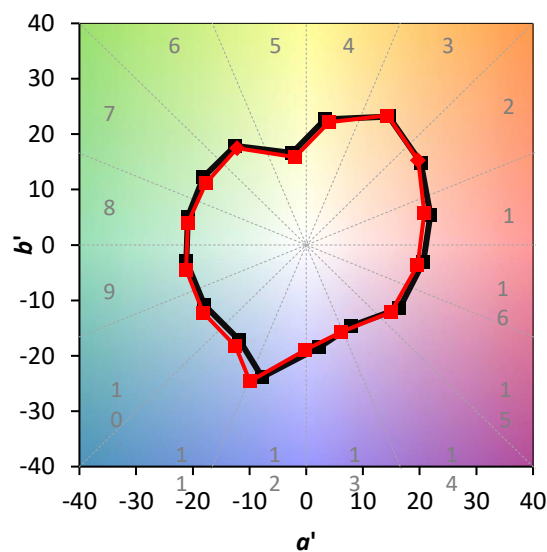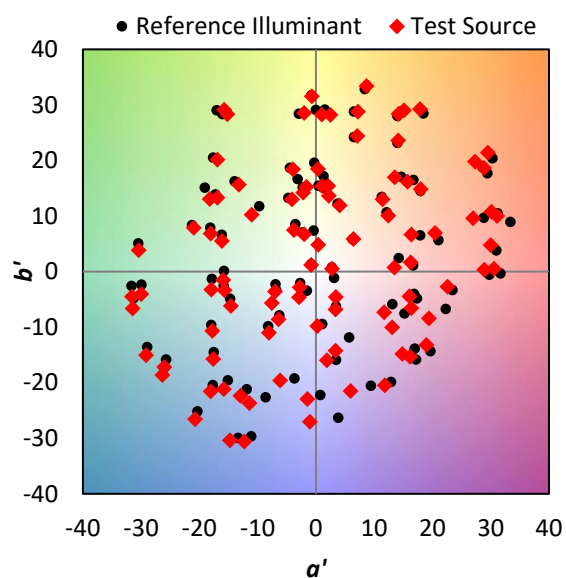


REPORT NUMBER: SP1-2210-795-3

TM-30-18

Individual Sample Fidelity Index ( $R_{f,i}$ )




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 96 | CES51 = 92 | CES76 = 90 |
| CES02 = 63 | CES27 = 88 | CES52 = 95 | CES77 = 80 |
| CES03 = 32 | CES28 = 96 | CES53 = 91 | CES78 = 90 |
| CES04 = 70 | CES29 = 91 | CES54 = 89 | CES79 = 83 |
| CES05 = 50 | CES30 = 87 | CES55 = 87 | CES80 = 84 |
| CES06 = 51 | CES31 = 92 | CES56 = 88 | CES81 = 66 |
| CES07 = 43 | CES32 = 97 | CES57 = 87 | CES82 = 94 |
| CES08 = 42 | CES33 = 92 | CES58 = 87 | CES83 = 89 |
| CES09 = 29 | CES34 = 94 | CES59 = 95 | CES84 = 96 |
| CES10 = 76 | CES35 = 96 | CES60 = 91 | CES85 = 77 |
| CES11 = 58 | CES36 = 82 | CES61 = 91 | CES86 = 75 |
| CES12 = 64 | CES37 = 96 | CES62 = 84 | CES87 = 91 |
| CES13 = 44 | CES38 = 83 | CES63 = 95 | CES88 = 92 |
| CES14 = 74 | CES39 = 97 | CES64 = 90 | CES89 = 84 |
| CES15 = 72 | CES40 = 95 | CES65 = 93 | CES90 = 91 |
| CES16 = 48 | CES41 = 93 | CES66 = 91 | CES91 = 77 |
| CES17 = 49 | CES42 = 93 | CES67 = 91 | CES92 = 78 |
| CES18 = 56 | CES43 = 91 | CES68 = 92 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 92 | CES94 = 77 |
| CES20 = 67 | CES45 = 94 | CES70 = 92 | CES95 = 86 |
| CES21 = 86 | CES46 = 94 | CES71 = 89 | CES96 = 94 |
| CES22 = 78 | CES47 = 86 | CES72 = 95 | CES97 = 92 |
| CES23 = 91 | CES48 = 86 | CES73 = 90 | CES98 = 91 |
| CES24 = 90 | CES49 = 95 | CES74 = 88 | CES99 = 90 |
| CES25 = 71 | CES50 = 92 | CES75 = 89 |            |

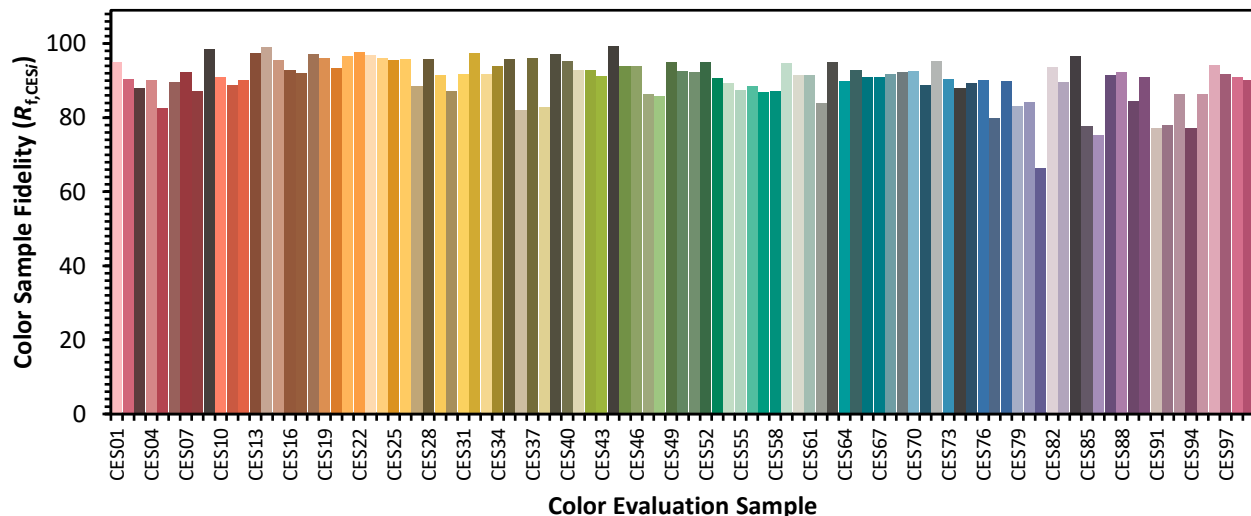

REPORT NUMBER: SP1-2210-795-3

**TM-30-18**



Color Rendition by Hue-Angle Bin

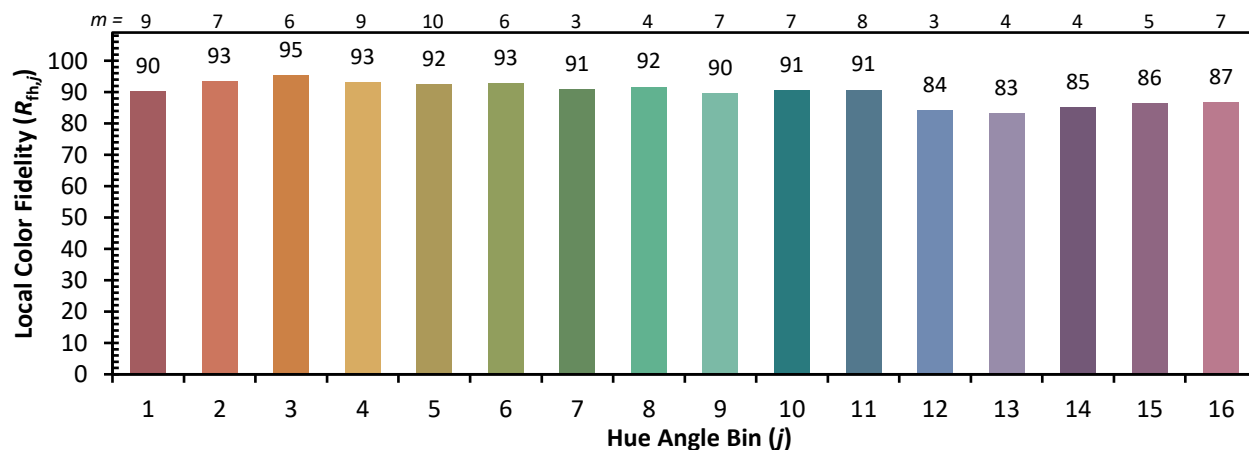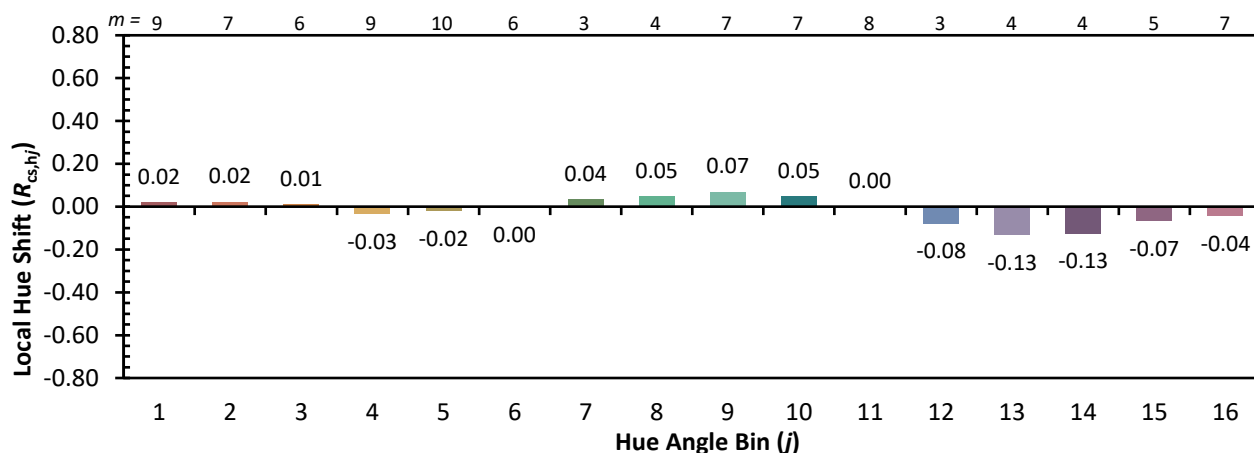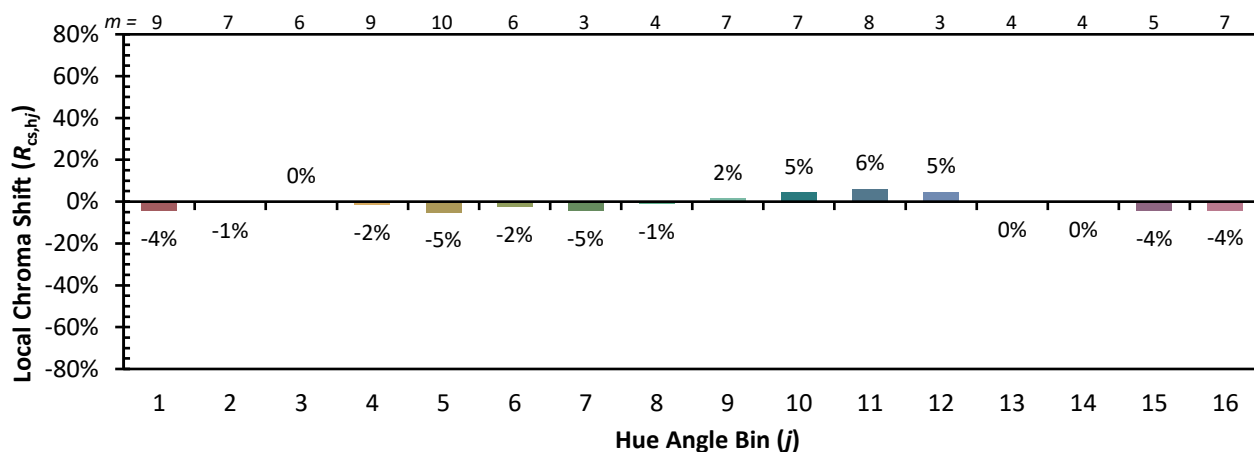

REPORT NUMBER: SP1-2210-795-3

**TM-30-18**

**Measure Comparisons**

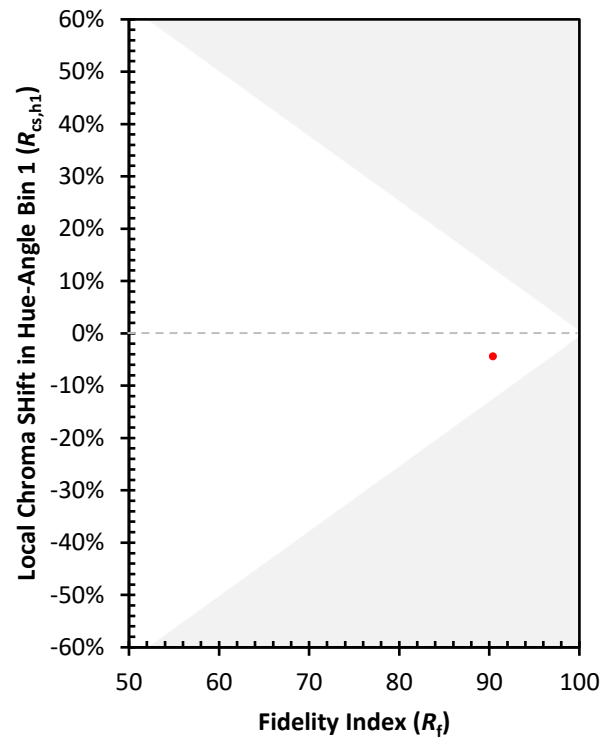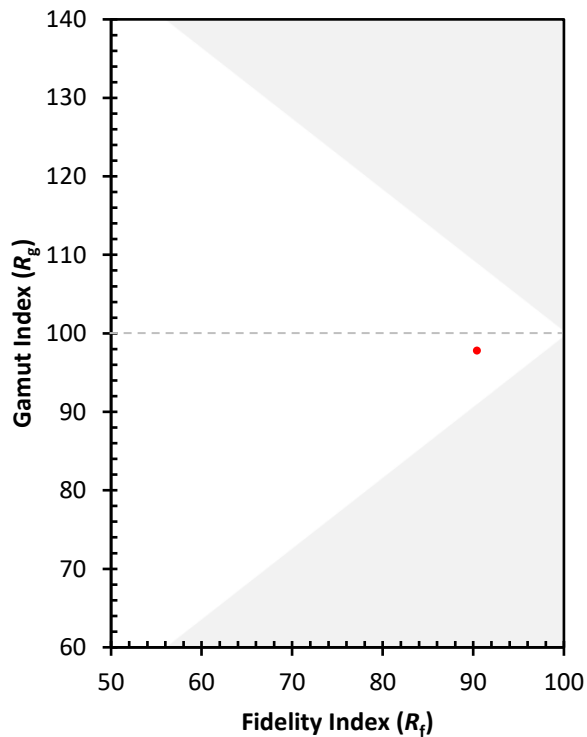

(END OF REPORT)