

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: INVUE

Report Number: P822867

Luminaire Tested: **MSA-SA2D-840-U-5MQ**

Issue Date: 04/10/2024

**Test Information**

Test Method: LM-79-08  
Report Number: P822867  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1910-543-6)  
Test Lab: INNOVATION CENTER  
Issue Date: 04/10/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: INVUE  
Catalog Number: MSA-SA2D-840-U-5MQ  
Description: MESA POST TOP DECORATIVE LUMINAIRE. (2) LIGHTSQUARES WITH 16 LEDS  
EACH AND TYPE V MEDIUM OPTICS.  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 12215.7 lumens  
Efficiency: N/A  
Efficacy: 94.7 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B4 - U0 - G2


Input Watts (W): 129  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

REPORT NUMBER: P822867

CATALOG NUMBER: MSA-SA2D-840-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

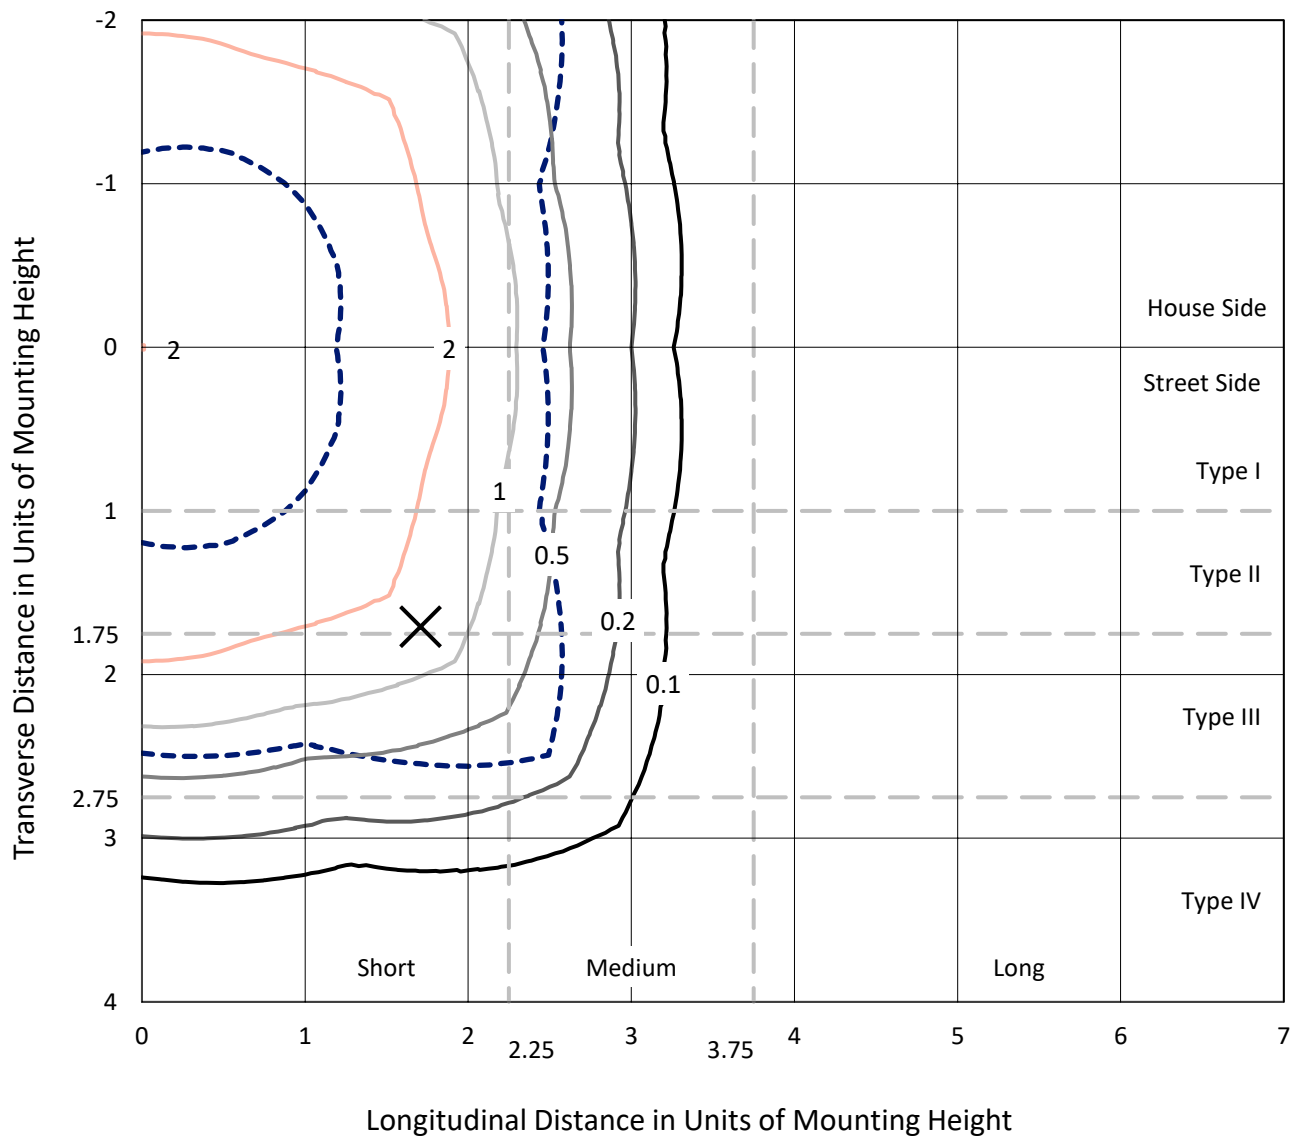

Based on 15 foot mounting height. Maximum calculated value = 3.9 fc  
 Type V - Short - N/A

REPORT NUMBER: P822867  
CATALOG NUMBER: MSA-SA2D-840-U-5MQ

## Luminous Intensity Polar Plot

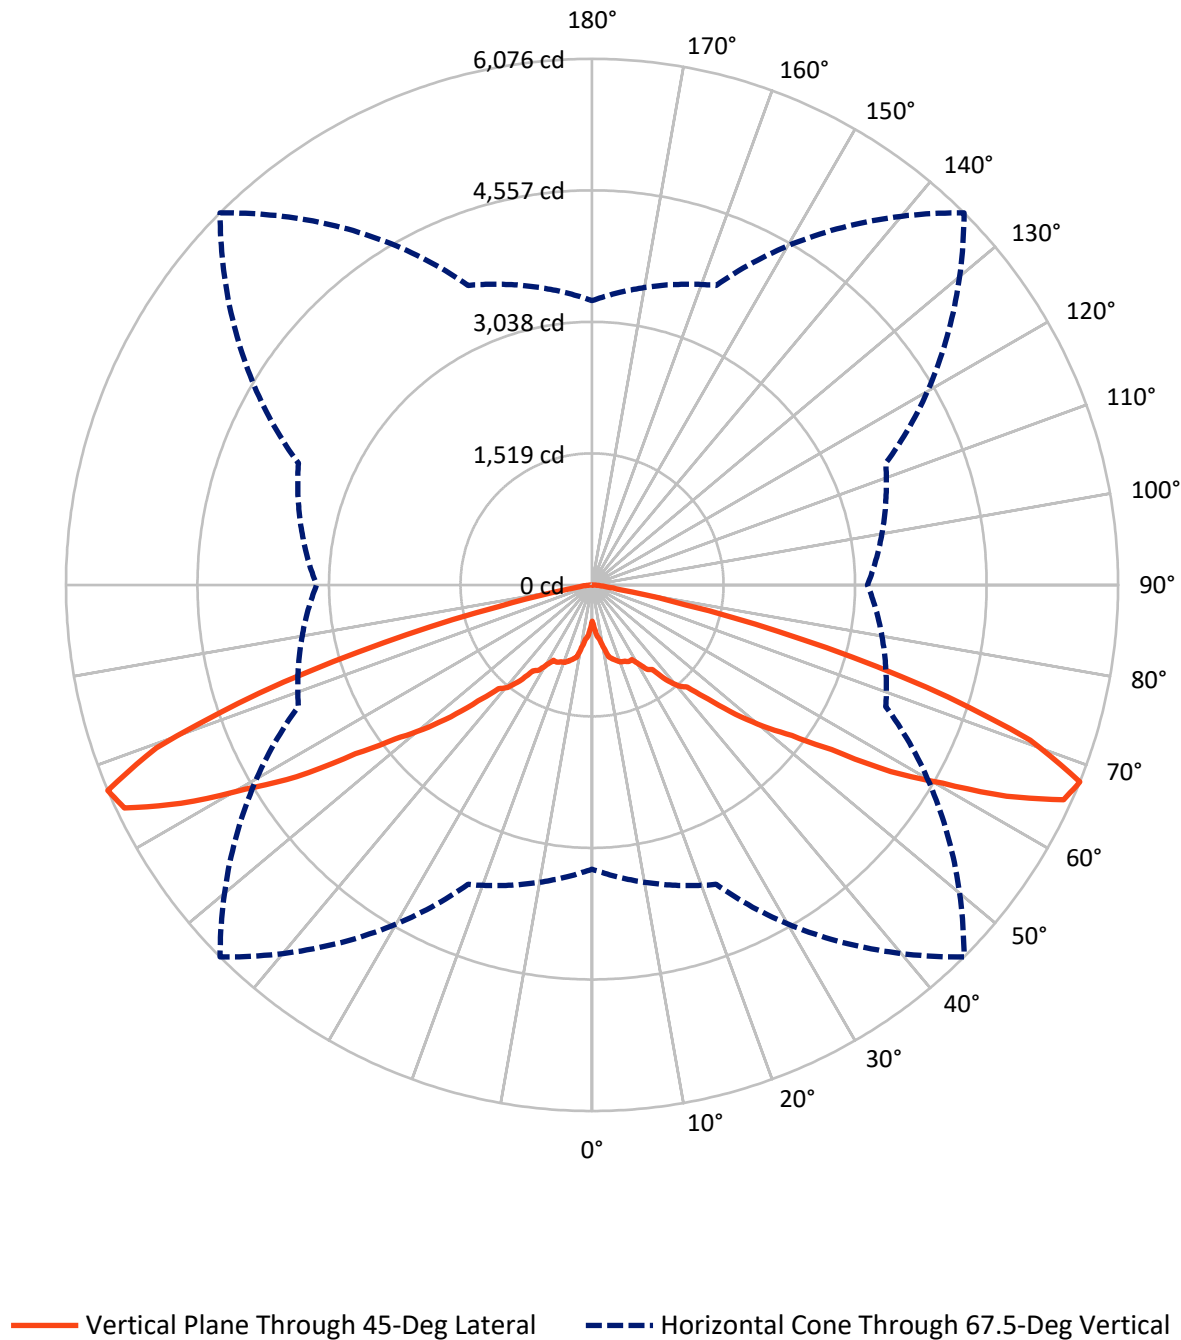

REPORT NUMBER: P822867

CATALOG NUMBER: MSA-SA2D-840-U-5MQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 6107.9   | 0.0    | 6107.9  |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 6107.9   | 0.0    | 6107.9  |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 12215.7  | 0.0    | 12215.7 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 62.4    | 0.5       |
| 10°-20°   | 246.8   | 2.0       |
| 20°-30°   | 470.9   | 3.9       |
| 30°-40°   | 861.0   | 7.0       |
| 40°-50°   | 1669.4  | 13.7      |
| 50°-60°   | 3188.0  | 26.1      |
| 60°-70°   | 4307.4  | 35.3      |
| 70°-80°   | 1337.7  | 11.0      |
| 80°-90°   | 72.1    | 0.6       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 12215.7 | 100.0     |
| 0°-180°   | 12215.7 | 100.0     |

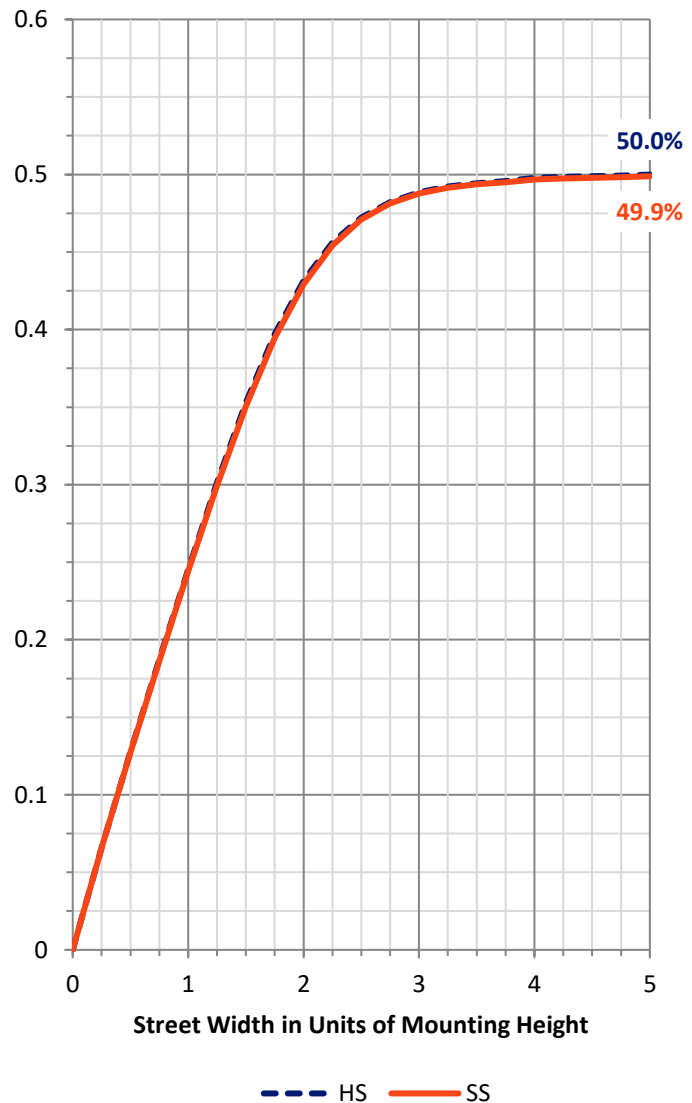

REPORT NUMBER: P822867


CATALOG NUMBER: MSA-SA2D-840-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 390.1  | 3.2       |                         |      |         |
| FM   | (30°-60°)   | 2859.2 | 23.4      |                         |      |         |
| FH   | (60°-80°)   | 2822.5 | 23.1      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 36.0   | 0.3       |                         |      | G1/100  |
| BL   | (0°-30°)    | 390.1  | 3.2       | B1/500                  |      |         |
| BM   | (30°-60°)   | 2859.2 | 23.4      | B3/5000                 |      |         |
| BH   | (60°-80°)   | 2822.5 | 23.1      | B4/5000                 |      | G2/5000 |
| BVH  | (80°-90°)   | 36.0   | 0.3       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B4-U0-G2**

Type V Short

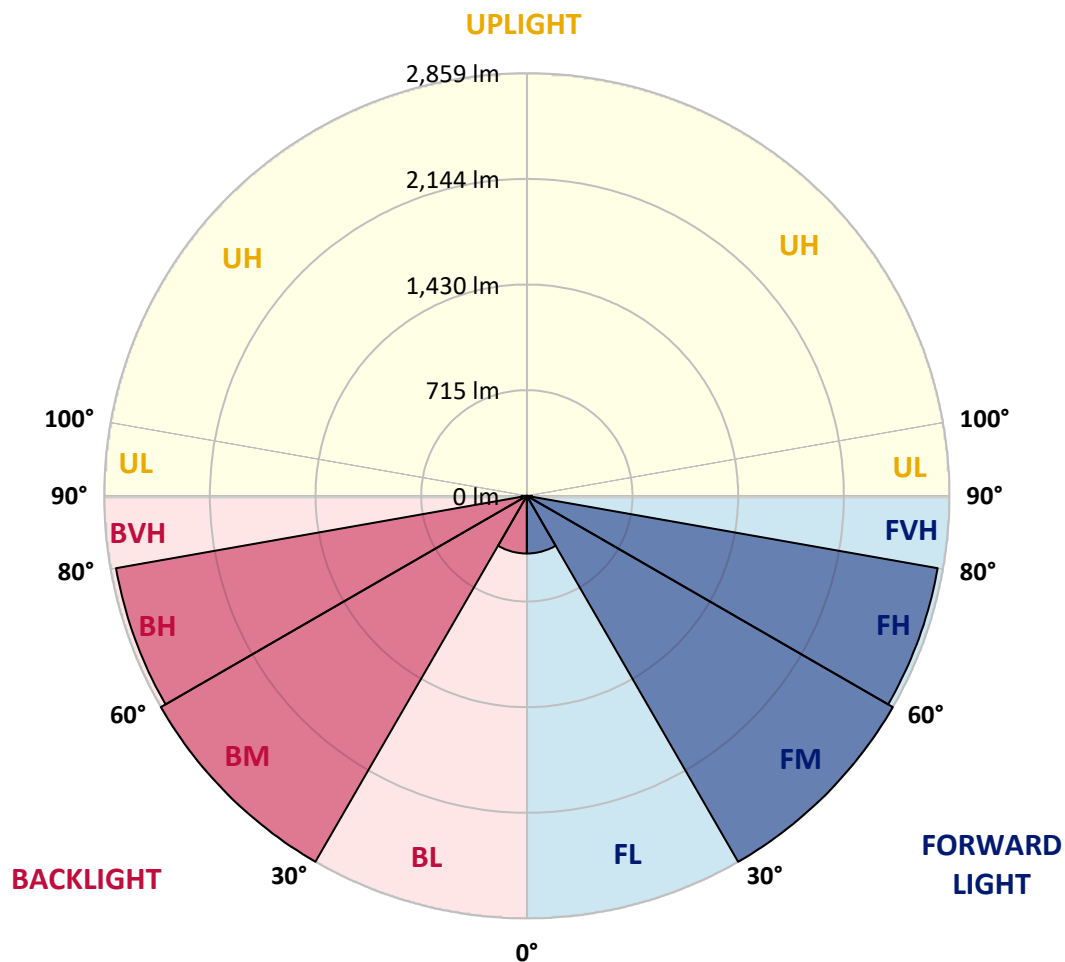

REPORT NUMBER: P822867

CATALOG NUMBER: MSA-SA2D-840-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 418.6  | 418.6  | 418.6  | 418.6  | 418.6  |
| 2.5°  | 515.4  | 482.3  | 497.4  | 482.3  | 515.4  |
| 5°    | 655.1  | 620.6  | 590.4  | 612.1  | 656.9  |
| 7.5°  | 752.8  | 701.3  | 637.6  | 695.6  | 748.5  |
| 10°   | 769.3  | 740.5  | 737.6  | 737.1  | 767.3  |
| 12.5° | 831.1  | 811.7  | 850.4  | 813.6  | 833.0  |
| 15°   | 879.2  | 868.3  | 885.8  | 882.0  | 881.1  |
| 17.5° | 953.7  | 880.2  | 919.8  | 875.9  | 951.4  |
| 20°   | 986.8  | 882.5  | 949.0  | 877.3  | 986.4  |
| 22.5° | 1027.4 | 938.2  | 958.0  | 940.5  | 1023.6 |
| 25°   | 1050.5 | 974.1  | 981.2  | 975.0  | 1051.0 |
| 27.5° | 1145.4 | 1053.3 | 977.9  | 1066.1 | 1162.9 |
| 30°   | 1217.6 | 1104.8 | 1055.2 | 1106.2 | 1226.5 |
| 32.5° | 1321.9 | 1181.7 | 1162.4 | 1200.6 | 1338.4 |
| 35°   | 1451.2 | 1311.0 | 1202.5 | 1311.5 | 1478.6 |
| 37.5° | 1704.6 | 1428.5 | 1390.3 | 1470.1 | 1723.5 |
| 40°   | 1883.4 | 1614.0 | 1532.4 | 1643.7 | 1914.1 |
| 42.5° | 2158.2 | 1822.1 | 1614.9 | 1837.2 | 2205.3 |
| 45°   | 2414.0 | 2074.6 | 1878.3 | 2092.1 | 2448.4 |
| 47.5° | 2684.3 | 2306.3 | 2232.7 | 2328.0 | 2709.8 |
| 50°   | 3003.9 | 2620.2 | 2568.7 | 2644.7 | 3014.7 |
| 52.5° | 3380.9 | 3040.2 | 2888.2 | 3054.3 | 3384.7 |
| 55°   | 3828.8 | 3392.7 | 3358.7 | 3431.4 | 3834.4 |
| 57.5° | 4266.7 | 3849.6 | 4067.6 | 3853.8 | 4190.8 |
| 60°   | 4579.1 | 4270.5 | 4650.4 | 4162.0 | 4410.7 |
| 62.5° | 4599.0 | 4582.5 | 5376.2 | 4398.4 | 4363.5 |
| 65°   | 4170.4 | 4456.4 | 5984.1 | 4312.6 | 3960.9 |
| 67.5° | 3282.8 | 3743.9 | 6076.1 | 3671.2 | 3182.2 |
| 70°   | 2062.8 | 2592.3 | 5371.5 | 2691.9 | 2121.3 |
| 72.5° | 951.4  | 1396.9 | 4044.9 | 1572.5 | 1005.7 |
| 75°   | 340.7  | 534.7  | 2495.5 | 574.3  | 356.3  |
| 77.5° | 193.5  | 216.6  | 1102.9 | 217.5  | 200.1  |
| 80°   | 124.6  | 135.0  | 318.5  | 142.5  | 121.3  |
| 82.5° | 70.8   | 94.3   | 139.7  | 100.1  | 65.1   |
| 85°   | 38.3   | 60.0   | 61.8   | 61.4   | 38.3   |
| 87.5° | 13.7   | 23.6   | 13.7   | 26.9   | 12.8   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-2309-178-2

Test Date: 09/22/2023

Luminaire Tested: GALN-SA2A-840-U-T4W

Data in this report applies to families of products including GALN-SA2A-840-U-T4W.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2309-178-2  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 09/22/2023  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **GALN-SA2A-840-U-T4W**  
 Description: GALLEON 2 AREA AND ROADWAY LUMINAIRE. (2) 80 CRI, 4000K, 615MA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE IV WIDE OPTICS

LIGHTSQUARES WITH 16 LEDS EACH AND TYPE IV WIDE OPTICS

### Spectral Parameters

|                           |        |           |      |      |      |
|---------------------------|--------|-----------|------|------|------|
| CCT (K):                  | 3867   | CRI (Ra): | 79.8 |      |      |
| CIE u':                   | 0.2254 | R1:       | 76.6 | R9:  | -8.6 |
| CIE v':                   | 0.5090 | R2:       | 84.7 | R10: | 66.3 |
| Duv:                      | 0.0039 | R3:       | 93.7 | R11: | 80.5 |
| CIE x:                    | 0.3895 | R4:       | 80.6 | R12: | 67.3 |
| CIE y:                    | 0.3908 | R5:       | 77.9 | R13: | 77.9 |
| CIE z:                    | 0.2197 | R6:       | 81.2 | R14: | 96.6 |
| Peak Wavelength (nm):     | 593    | R7:       | 84.2 |      |      |
| Dominant Wavelength (nm): | 577    | R8:       | 59.0 |      |      |
| Purity:                   | 34.3   |           |      |      |      |
| Rf:                       | 82.7   |           |      |      |      |
| Rg:                       | 96.5   |           |      |      |      |



### Test Conditions


Stabilization Time: 25M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.8/46%  
 Sphere Temperature (°C): 24.7

REPORT NUMBER: SP1-2309-178-2


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/9/2023         | 2/9/2024             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2022       | 11/29/2023           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/28/2022       | 11/28/2023           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/28/2022       | 11/28/2023           |
| Sphere Thermometer             | ONSET IN0085          | 11/28/2022       | 11/28/2023           |
| Room Thermometer               | ONSET IN0046          | 11/28/2022       | 11/28/2023           |

REPORT NUMBER: SP1-2309-178-2

**CIE 1931 Chromaticity Diagram**

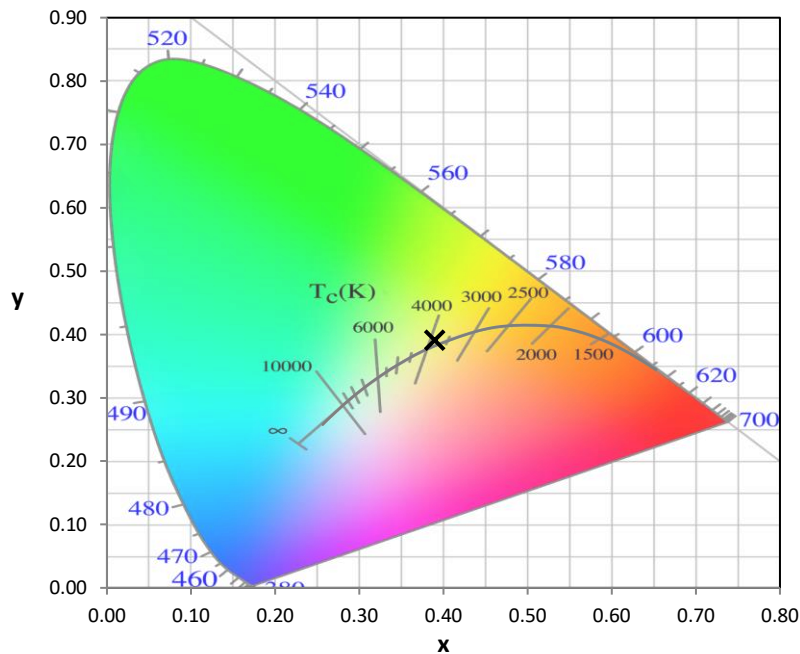

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

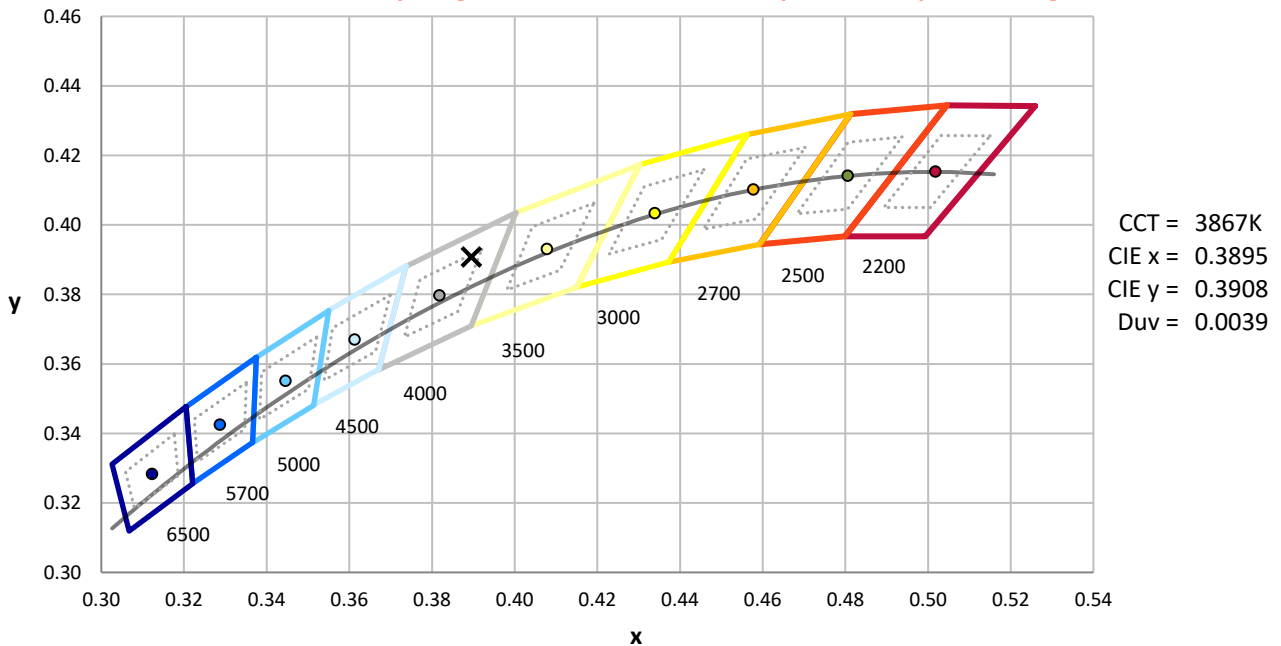

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2309-178-2

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3123             | NR               | 490       | 57459            | NR               | 620       | 129941           | NR               | 750       | 5858             | NR               | 880       | 4622             | NR               |
| 365       | 3041             | NR               | 495       | 69038            | NR               | 625       | 121678           | NR               | 755       | 5395             | NR               | 885       | 3949             | NR               |
| 370       | 2965             | NR               | 500       | 79493            | NR               | 630       | 112252           | NR               | 760       | 5011             | NR               | 890       | 4035             | NR               |
| 375       | 3195             | NR               | 505       | 87950            | NR               | 635       | 102369           | NR               | 765       | 4514             | NR               | 895       | 3391             | NR               |
| 380       | 3028             | NR               | 510       | 94704            | NR               | 640       | 93616            | NR               | 770       | 4375             | NR               | 900       | 3268             | NR               |
| 385       | 2738             | NR               | 515       | 100214           | NR               | 645       | 84211            | NR               | 775       | 3450             | NR               | 905       | 2767             | NR               |
| 390       | 2690             | NR               | 520       | 103961           | NR               | 650       | 75380            | NR               | 780       | 3547             | NR               | 910       | 3391             | NR               |
| 395       | 2604             | NR               | 525       | 106854           | NR               | 655       | 66946            | NR               | 785       | 3648             | NR               | 915       | 3784             | NR               |
| 400       | 2384             | NR               | 530       | 109533           | NR               | 660       | 59483            | NR               | 790       | 3081             | NR               | 920       | 3790             | NR               |
| 405       | 3031             | NR               | 535       | 112417           | NR               | 665       | 51858            | NR               | 795       | 3104             | NR               | 925       | 3175             | NR               |
| 410       | 5239             | NR               | 540       | 115725           | NR               | 670       | 44882            | NR               | 800       | 3444             | NR               | 930       | 3642             | NR               |
| 415       | 10499            | NR               | 545       | 119091           | NR               | 675       | 38742            | NR               | 805       | 3315             | NR               | 935       | 3040             | NR               |
| 420       | 20790            | NR               | 550       | 122884           | NR               | 680       | 33597            | NR               | 810       | 3022             | NR               | 940       | 4039             | NR               |
| 425       | 39276            | NR               | 555       | 128300           | NR               | 685       | 29101            | NR               | 815       | 2832             | NR               | 945       | 4797             | NR               |
| 430       | 66418            | NR               | 560       | 133274           | NR               | 690       | 24855            | NR               | 820       | 3142             | NR               | 950       | 4945             | NR               |
| 435       | 101961           | NR               | 565       | 139112           | NR               | 695       | 21367            | NR               | 825       | 3115             | NR               | 955       | 3757             | NR               |
| 440       | 134023           | NR               | 570       | 144467           | NR               | 700       | 18479            | NR               | 830       | 2520             | NR               | 960       | 4539             | NR               |
| 445       | 129385           | NR               | 575       | 149331           | NR               | 705       | 16131            | NR               | 835       | 2783             | NR               | 965       | 4857             | NR               |
| 450       | 90434            | NR               | 580       | 154784           | NR               | 710       | 14388            | NR               | 840       | 3364             | NR               | 970       | 4463             | NR               |
| 455       | 63521            | NR               | 585       | 156899           | NR               | 715       | 12865            | NR               | 845       | 3807             | NR               | 975       | 3718             | NR               |
| 460       | 48429            | NR               | 590       | 157796           | NR               | 720       | 11277            | NR               | 850       | 2907             | NR               | 980       | 3955             | NR               |
| 465       | 36445            | NR               | 595       | 157849           | NR               | 725       | 10063            | NR               | 855       | 3470             | NR               | 985       | 4314             | NR               |
| 470       | 31953            | NR               | 600       | 155418           | NR               | 730       | 8942             | NR               | 860       | 3820             | NR               | 990       | 4478             | NR               |
| 475       | 32768            | NR               | 605       | 151601           | NR               | 735       | 7722             | NR               | 865       | 3922             | NR               | 995       | 2959             | NR               |
| 480       | 37631            | NR               | 610       | 146416           | NR               | 740       | 6964             | NR               | 870       | 4061             | NR               | 1000      | 4570             | NR               |
| 485       | 46354            | NR               | 615       | 139241           | NR               | 745       | 6117             | NR               | 875       | 3975             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2309-178-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 14236

S/P: 1.59

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3123             | NR               | 490       | 57459            | NR               | 620       | 129941           | NR               | 750       | 5858             | NR               | 880       | 4622             | NR               |
| 365       | 3041             | NR               | 495       | 69038            | NR               | 625       | 121678           | NR               | 755       | 5395             | NR               | 885       | 3949             | NR               |
| 370       | 2965             | NR               | 500       | 79493            | NR               | 630       | 112252           | NR               | 760       | 5011             | NR               | 890       | 4035             | NR               |
| 375       | 3195             | NR               | 505       | 87950            | NR               | 635       | 102369           | NR               | 765       | 4514             | NR               | 895       | 3391             | NR               |
| 380       | 3028             | NR               | 510       | 94704            | NR               | 640       | 93616            | NR               | 770       | 4375             | NR               | 900       | 3268             | NR               |
| 385       | 2738             | NR               | 515       | 100214           | NR               | 645       | 84211            | NR               | 775       | 3450             | NR               | 905       | 2767             | NR               |
| 390       | 2690             | NR               | 520       | 103961           | NR               | 650       | 75380            | NR               | 780       | 3547             | NR               | 910       | 3391             | NR               |
| 395       | 2604             | NR               | 525       | 106854           | NR               | 655       | 66946            | NR               | 785       | 3648             | NR               | 915       | 3784             | NR               |
| 400       | 2384             | NR               | 530       | 109533           | NR               | 660       | 59483            | NR               | 790       | 3081             | NR               | 920       | 3790             | NR               |
| 405       | 3031             | NR               | 535       | 112417           | NR               | 665       | 51858            | NR               | 795       | 3104             | NR               | 925       | 3175             | NR               |
| 410       | 5239             | NR               | 540       | 115725           | NR               | 670       | 44882            | NR               | 800       | 3444             | NR               | 930       | 3642             | NR               |
| 415       | 10499            | NR               | 545       | 119091           | NR               | 675       | 38742            | NR               | 805       | 3315             | NR               | 935       | 3040             | NR               |
| 420       | 20790            | NR               | 550       | 122884           | NR               | 680       | 33597            | NR               | 810       | 3022             | NR               | 940       | 4039             | NR               |
| 425       | 39276            | NR               | 555       | 128300           | NR               | 685       | 29101            | NR               | 815       | 2832             | NR               | 945       | 4797             | NR               |
| 430       | 66418            | NR               | 560       | 133274           | NR               | 690       | 24855            | NR               | 820       | 3142             | NR               | 950       | 4945             | NR               |
| 435       | 101961           | NR               | 565       | 139112           | NR               | 695       | 21367            | NR               | 825       | 3115             | NR               | 955       | 3757             | NR               |
| 440       | 134023           | NR               | 570       | 144467           | NR               | 700       | 18479            | NR               | 830       | 2520             | NR               | 960       | 4539             | NR               |
| 445       | 129385           | NR               | 575       | 149331           | NR               | 705       | 16131            | NR               | 835       | 2783             | NR               | 965       | 4857             | NR               |
| 450       | 90434            | NR               | 580       | 154784           | NR               | 710       | 14388            | NR               | 840       | 3364             | NR               | 970       | 4463             | NR               |
| 455       | 63521            | NR               | 585       | 156899           | NR               | 715       | 12865            | NR               | 845       | 3807             | NR               | 975       | 3718             | NR               |
| 460       | 48429            | NR               | 590       | 157796           | NR               | 720       | 11277            | NR               | 850       | 2907             | NR               | 980       | 3955             | NR               |
| 465       | 36445            | NR               | 595       | 157849           | NR               | 725       | 10063            | NR               | 855       | 3470             | NR               | 985       | 4314             | NR               |
| 470       | 31953            | NR               | 600       | 155418           | NR               | 730       | 8942             | NR               | 860       | 3820             | NR               | 990       | 4478             | NR               |
| 475       | 32768            | NR               | 605       | 151601           | NR               | 735       | 7722             | NR               | 865       | 3922             | NR               | 995       | 2959             | NR               |
| 480       | 37631            | NR               | 610       | 146416           | NR               | 740       | 6964             | NR               | 870       | 4061             | NR               | 1000      | 4570             | NR               |
| 485       | 46354            | NR               | 615       | 139241           | NR               | 745       | 6117             | NR               | 875       | 3975             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2309-178-2

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 5542.6**

**M/P: 0.62**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3123             | NR               | 490       | 57459            | NR               | 620       | 129941           | NR               | 750       | 5858             | NR               | 880       | 4622             | NR               |
| 365       | 3041             | NR               | 495       | 69038            | NR               | 625       | 121678           | NR               | 755       | 5395             | NR               | 885       | 3949             | NR               |
| 370       | 2965             | NR               | 500       | 79493            | NR               | 630       | 112252           | NR               | 760       | 5011             | NR               | 890       | 4035             | NR               |
| 375       | 3195             | NR               | 505       | 87950            | NR               | 635       | 102369           | NR               | 765       | 4514             | NR               | 895       | 3391             | NR               |
| 380       | 3028             | NR               | 510       | 94704            | NR               | 640       | 93616            | NR               | 770       | 4375             | NR               | 900       | 3268             | NR               |
| 385       | 2738             | NR               | 515       | 100214           | NR               | 645       | 84211            | NR               | 775       | 3450             | NR               | 905       | 2767             | NR               |
| 390       | 2690             | NR               | 520       | 103961           | NR               | 650       | 75380            | NR               | 780       | 3547             | NR               | 910       | 3391             | NR               |
| 395       | 2604             | NR               | 525       | 106854           | NR               | 655       | 66946            | NR               | 785       | 3648             | NR               | 915       | 3784             | NR               |
| 400       | 2384             | NR               | 530       | 109533           | NR               | 660       | 59483            | NR               | 790       | 3081             | NR               | 920       | 3790             | NR               |
| 405       | 3031             | NR               | 535       | 112417           | NR               | 665       | 51858            | NR               | 795       | 3104             | NR               | 925       | 3175             | NR               |
| 410       | 5239             | NR               | 540       | 115725           | NR               | 670       | 44882            | NR               | 800       | 3444             | NR               | 930       | 3642             | NR               |
| 415       | 10499            | NR               | 545       | 119091           | NR               | 675       | 38742            | NR               | 805       | 3315             | NR               | 935       | 3040             | NR               |
| 420       | 20790            | NR               | 550       | 122884           | NR               | 680       | 33597            | NR               | 810       | 3022             | NR               | 940       | 4039             | NR               |
| 425       | 39276            | NR               | 555       | 128300           | NR               | 685       | 29101            | NR               | 815       | 2832             | NR               | 945       | 4797             | NR               |
| 430       | 66418            | NR               | 560       | 133274           | NR               | 690       | 24855            | NR               | 820       | 3142             | NR               | 950       | 4945             | NR               |
| 435       | 101961           | NR               | 565       | 139112           | NR               | 695       | 21367            | NR               | 825       | 3115             | NR               | 955       | 3757             | NR               |
| 440       | 134023           | NR               | 570       | 144467           | NR               | 700       | 18479            | NR               | 830       | 2520             | NR               | 960       | 4539             | NR               |
| 445       | 129385           | NR               | 575       | 149331           | NR               | 705       | 16131            | NR               | 835       | 2783             | NR               | 965       | 4857             | NR               |
| 450       | 90434            | NR               | 580       | 154784           | NR               | 710       | 14388            | NR               | 840       | 3364             | NR               | 970       | 4463             | NR               |
| 455       | 63521            | NR               | 585       | 156899           | NR               | 715       | 12865            | NR               | 845       | 3807             | NR               | 975       | 3718             | NR               |
| 460       | 48429            | NR               | 590       | 157796           | NR               | 720       | 11277            | NR               | 850       | 2907             | NR               | 980       | 3955             | NR               |
| 465       | 36445            | NR               | 595       | 157849           | NR               | 725       | 10063            | NR               | 855       | 3470             | NR               | 985       | 4314             | NR               |
| 470       | 31953            | NR               | 600       | 155418           | NR               | 730       | 8942             | NR               | 860       | 3820             | NR               | 990       | 4478             | NR               |
| 475       | 32768            | NR               | 605       | 151601           | NR               | 735       | 7722             | NR               | 865       | 3922             | NR               | 995       | 2959             | NR               |
| 480       | 37631            | NR               | 610       | 146416           | NR               | 740       | 6964             | NR               | 870       | 4061             | NR               | 1000      | 4570             | NR               |
| 485       | 46354            | NR               | 615       | 139241           | NR               | 745       | 6117             | NR               | 875       | 3975             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2309-178-2



**TM-30-18**

**Summary**

$R_f = 82.7$   
 $R_g = 96.5$   
 $CIE R_a = 79.8$   
 $R_g = -8.6$

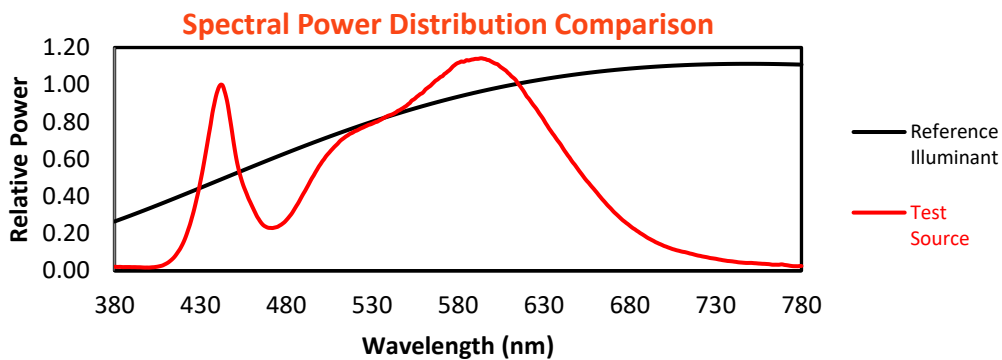

**Color Vector Graphics**

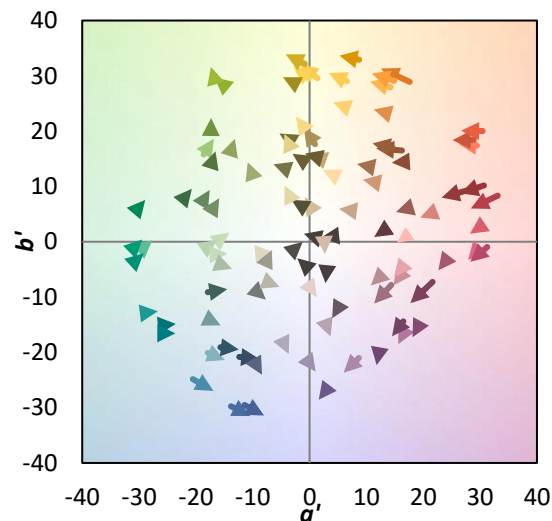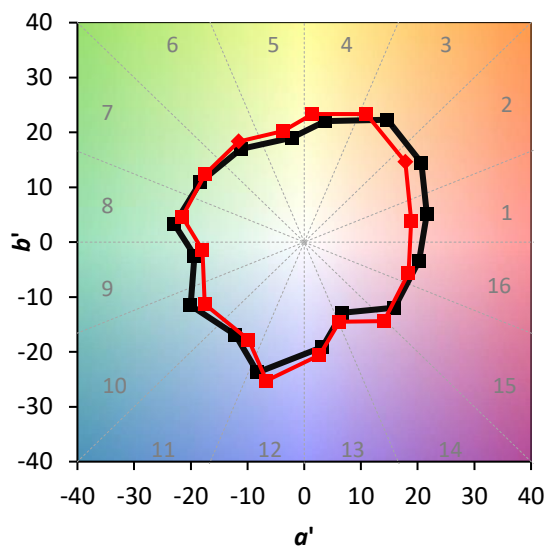

REPORT NUMBER: SP1-2309-178-2

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 76 | CES51 = 94 | CES76 = 73 |
| CES02 = 61 | CES27 = 91 | CES52 = 94 | CES77 = 85 |
| CES03 = 31 | CES28 = 90 | CES53 = 86 | CES78 = 73 |
| CES04 = 69 | CES29 = 73 | CES54 = 88 | CES79 = 91 |
| CES05 = 48 | CES30 = 76 | CES55 = 88 | CES80 = 89 |
| CES06 = 50 | CES31 = 77 | CES56 = 81 | CES81 = 80 |
| CES07 = 40 | CES32 = 74 | CES57 = 80 | CES82 = 95 |
| CES08 = 39 | CES33 = 78 | CES58 = 82 | CES83 = 92 |
| CES09 = 29 | CES34 = 84 | CES59 = 91 | CES84 = 92 |
| CES10 = 74 | CES35 = 92 | CES60 = 96 | CES85 = 85 |
| CES11 = 57 | CES36 = 97 | CES61 = 92 | CES86 = 73 |
| CES12 = 63 | CES37 = 89 | CES62 = 90 | CES87 = 85 |
| CES13 = 42 | CES38 = 83 | CES63 = 83 | CES88 = 83 |
| CES14 = 74 | CES39 = 95 | CES64 = 83 | CES89 = 77 |
| CES15 = 71 | CES40 = 91 | CES65 = 77 | CES90 = 82 |
| CES16 = 47 | CES41 = 90 | CES66 = 82 | CES91 = 91 |
| CES17 = 49 | CES42 = 90 | CES67 = 80 | CES92 = 68 |
| CES18 = 56 | CES43 = 86 | CES68 = 83 | CES93 = 82 |
| CES19 = 71 | CES44 = 99 | CES69 = 90 | CES94 = 61 |
| CES20 = 65 | CES45 = 91 | CES70 = 77 | CES95 = 76 |
| CES21 = 86 | CES46 = 87 | CES71 = 77 | CES96 = 82 |
| CES22 = 78 | CES47 = 85 | CES72 = 92 | CES97 = 89 |
| CES23 = 91 | CES48 = 77 | CES73 = 71 | CES98 = 81 |
| CES24 = 90 | CES49 = 87 | CES74 = 97 | CES99 = 70 |
| CES25 = 71 | CES50 = 93 | CES75 = 76 |            |



REPORT NUMBER: SP1-2309-178-2

**TM-30-18**



Color Rendition by Hue-Angle Bin

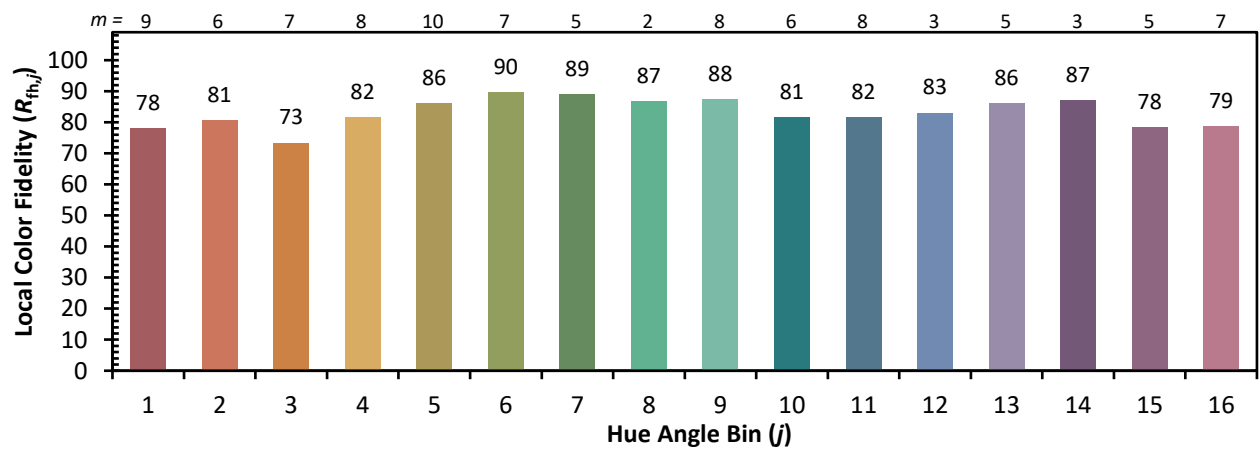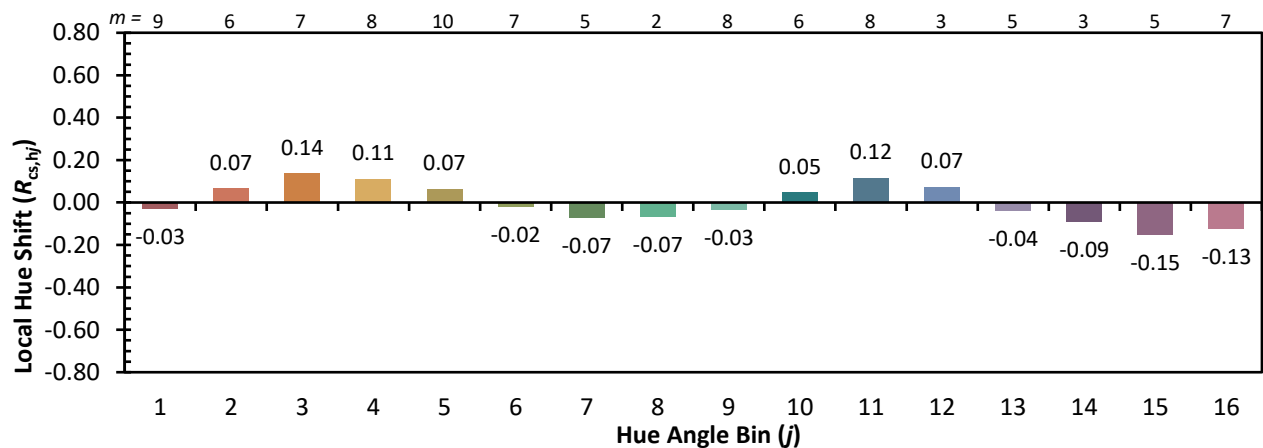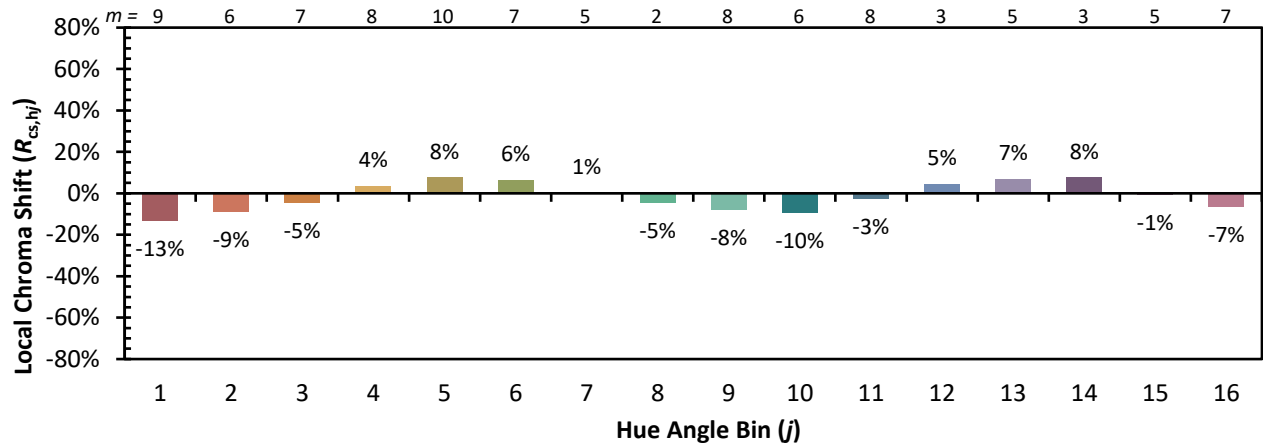

REPORT NUMBER: SP1-2309-178-2

**TM-30-18**

**Measure Comparisons**

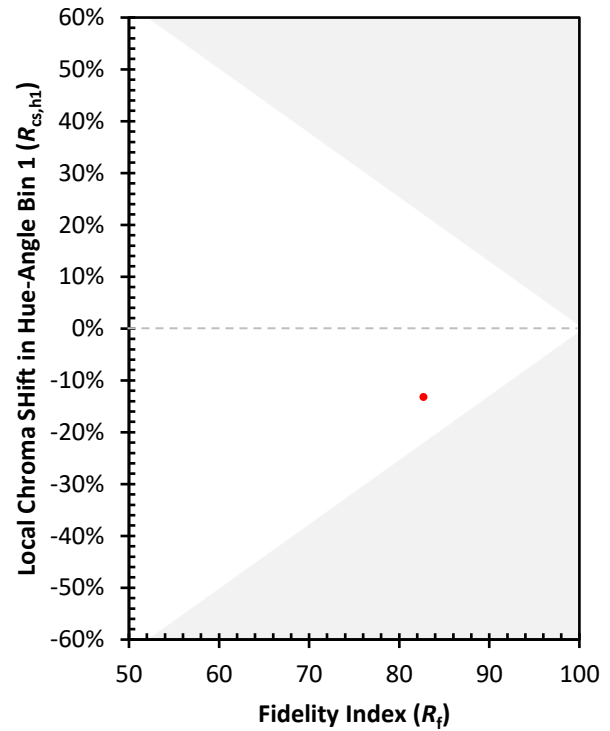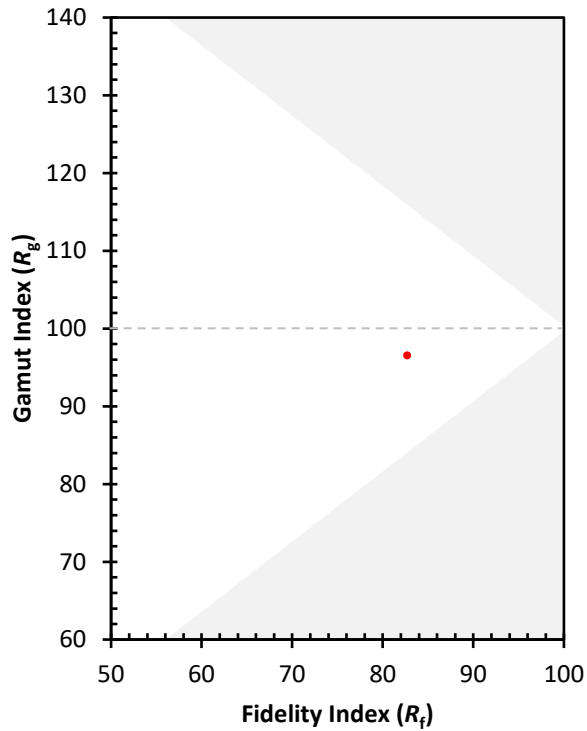

(END OF REPORT)