

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1251012

Luminaire Tested: P3A02R709030DE010 E3LDWW1H

Issue Date: 1/29/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1251012  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2509-551-13)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/29/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A02R709030DE010 E3LDWW1H  
Description: 3in Adjustable LED luminaire with, R70 optic, 3000K CCT AND, 90CRI , E3LDWW1H TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 215.0 lumens  
Efficiency: N/A  
Efficacy: 59.7 lumens/watt  
Spacing Criteria (0/90/45): 0.87 / 0.89 / 0.97  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 3.6  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1251012

CATALOG NUMBER: P3A02R709030DE010 E3LDWW1H

### Luminous Intensity Polar Plot

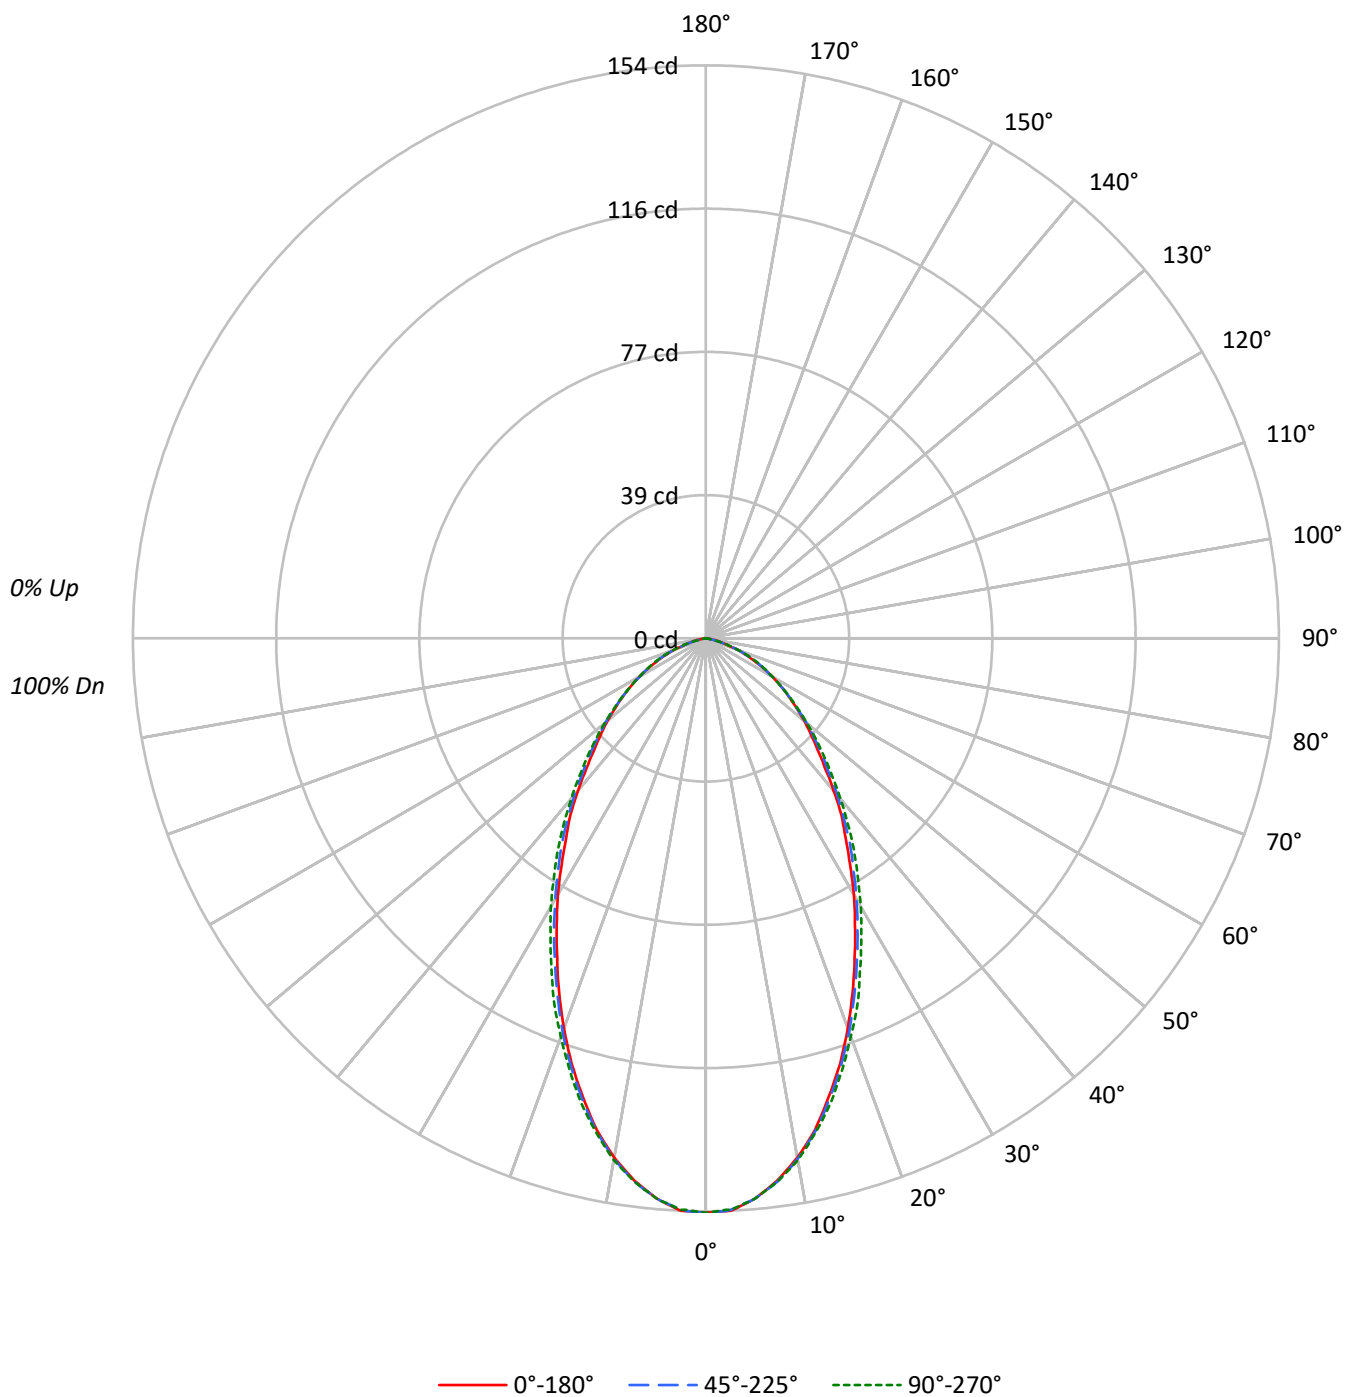

TEST NUMBER: P1251012

CATALOG NUMBER: P3A02R709030DE010 E3LDWW1H

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 111 | 108 | 104 | 101 | 109 | 105 | 102 | 100 | 101 | 99  | 97  |  | 97  | 95  | 94  |  | 94  |
| 2   | 103 | 97  | 91  | 87  | 101 | 95  | 90  | 86  | 92  | 87  | 84  |  | 88  | 85  | 82  |  | 85  |
| 3   | 96  | 87  | 81  | 75  | 94  | 86  | 80  | 75  | 83  | 78  | 73  |  | 80  | 76  | 72  |  | 78  |
| 4   | 89  | 79  | 72  | 66  | 87  | 78  | 71  | 66  | 75  | 70  | 65  |  | 73  | 68  | 64  |  | 71  |
| 5   | 83  | 72  | 64  | 59  | 81  | 71  | 64  | 59  | 69  | 63  | 58  |  | 67  | 62  | 57  |  | 66  |
| 6   | 78  | 66  | 58  | 53  | 76  | 65  | 58  | 53  | 64  | 57  | 52  |  | 62  | 56  | 52  |  | 60  |
| 7   | 73  | 61  | 53  | 48  | 71  | 60  | 53  | 48  | 59  | 52  | 47  |  | 57  | 52  | 47  |  | 56  |
| 8   | 68  | 56  | 49  | 44  | 67  | 56  | 49  | 44  | 54  | 48  | 43  |  | 53  | 47  | 43  |  | 52  |
| 9   | 64  | 52  | 45  | 40  | 63  | 52  | 45  | 40  | 51  | 44  | 40  |  | 50  | 44  | 40  |  | 49  |
| 10  | 61  | 49  | 42  | 37  | 60  | 48  | 42  | 37  | 47  | 41  | 37  |  | 47  | 41  | 37  |  | 46  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°    | 45°   | 90°   |
|-----|-------|-------|-------|
| 0°  | 33857 | 33857 | 33857 |
| 5°  | 33282 | 33282 | 33282 |
| 10° | 31551 | 31640 | 31707 |
| 15° | 28967 | 29126 | 29376 |
| 20° | 26019 | 26252 | 26579 |
| 25° | 22888 | 23227 | 23735 |
| 30° | 20130 | 20484 | 21092 |
| 35° | 17507 | 18069 | 18551 |
| 40° | 15286 | 15715 | 16116 |
| 45° | 13180 | 13645 | 13955 |
| 50° | 11769 | 12008 | 12110 |
| 55° | 10360 | 10475 | 10475 |
| 60° | 9078  | 8947  | 9078  |
| 65° | 7472  | 7679  | 7835  |
| 70° | 5834  | 5834  | 6091  |
| 75° | 3897  | 3558  | 3558  |
| 80° | 2273  | 1768  | 1389  |
| 85° | 1006  | 0     | 0     |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 75°

Vertical Angle: 45°

Luminance: 13955 cd/sqm

TEST NUMBER: P1251012

CATALOG NUMBER: P3A02R709030DE010 E3LDWW1H

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 14.1   | 6.6       |
| 10°-20°   | 35.8   | 16.7      |
| 20°-30°   | 44.2   | 20.6      |
| 30°-40°   | 42.1   | 19.6      |
| 40°-50°   | 34.1   | 15.9      |
| 50°-60°   | 24.5   | 11.4      |
| 60°-70°   | 14.7   | 6.8       |
| 70°-80°   | 4.9    | 2.3       |
| 80°-90°   | 0.4    | 0.2       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 94.2   | 43.8      |
| 0°-40°    | 136.3  | 63.4      |
| 0°-60°    | 195.0  | 90.7      |
| 0°-90°    | 215.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 215.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 154 | 154   | 154 | 154   | 154 |      |
| 5°  | 151 | 151   | 151 | 151   | 151 | 14   |
| 15° | 128 | 128   | 128 | 129   | 129 | 36   |
| 25° | 95  | 95    | 96  | 97    | 98  | 44   |
| 35° | 65  | 66    | 68  | 69    | 69  | 41   |
| 45° | 42  | 43    | 44  | 45    | 45  | 33   |
| 55° | 27  | 27    | 27  | 27    | 27  | 24   |
| 65° | 14  | 15    | 15  | 15    | 15  | 14   |
| 75° | 5   | 5     | 4   | 4     | 4   | 5    |
| 85° | 0   | 0     | 0   | 0     | 0   | 1    |
| 90° | 0   | 0     | 0   | 0     | 0   |      |

TEST NUMBER: P1251012

CATALOG NUMBER: P3A02R709030DE010 E3LDWW1H

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 5°    | 15°   | 25°   | 35°   | 45°   | 55°   | 65°   | 75°   | 85°   | 90°   |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0°    | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 | 154.4 |
| 2°    | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 154.0 | 153.7 |
| 2.5°  | 154.0 | 153.7 | 153.7 | 153.7 | 153.7 | 153.7 | 153.7 | 153.7 | 153.7 | 154.0 | 153.7 |
| 5°    | 151.2 | 151.2 | 151.2 | 151.2 | 151.2 | 151.2 | 151.2 | 151.2 | 151.5 | 151.2 | 151.2 |
| 7.5°  | 147.0 | 147.0 | 147.0 | 147.0 | 147.3 | 147.3 | 147.3 | 147.3 | 147.7 | 147.7 | 147.3 |
| 10°   | 141.7 | 141.7 | 141.7 | 141.7 | 142.1 | 142.1 | 142.4 | 142.1 | 142.1 | 142.4 | 142.4 |
| 12.5° | 135.4 | 135.0 | 135.0 | 135.0 | 135.4 | 135.7 | 135.7 | 135.7 | 136.1 | 136.1 | 136.1 |
| 15°   | 127.6 | 127.6 | 127.6 | 128.0 | 128.0 | 128.3 | 128.7 | 128.7 | 129.0 | 129.0 | 129.4 |
| 17.5° | 119.9 | 119.9 | 119.5 | 119.9 | 120.3 | 120.6 | 121.0 | 121.3 | 121.7 | 121.7 | 121.7 |
| 20°   | 111.5 | 111.1 | 111.5 | 111.8 | 112.2 | 112.5 | 112.9 | 113.6 | 113.9 | 113.9 | 113.9 |
| 22.5° | 103.0 | 102.7 | 103.0 | 103.4 | 103.7 | 104.1 | 105.1 | 105.5 | 105.8 | 105.8 | 106.5 |
| 25°   | 94.6  | 94.6  | 94.9  | 95.3  | 95.6  | 96.0  | 96.7  | 97.4  | 97.7  | 98.1  | 98.1  |
| 27.5° | 86.8  | 86.8  | 86.8  | 86.8  | 87.6  | 88.3  | 89.0  | 89.7  | 90.0  | 90.4  | 90.4  |
| 30°   | 79.5  | 79.1  | 79.1  | 79.5  | 80.2  | 80.9  | 81.6  | 82.3  | 82.6  | 83.0  | 83.3  |
| 32.5° | 72.1  | 72.1  | 72.1  | 72.4  | 72.8  | 73.8  | 74.5  | 74.9  | 75.6  | 75.9  | 75.9  |
| 35°   | 65.4  | 65.4  | 65.4  | 66.1  | 66.8  | 67.5  | 67.9  | 68.6  | 69.3  | 69.3  | 69.3  |
| 37.5° | 59.8  | 60.1  | 60.8  | 60.5  | 60.5  | 60.8  | 61.2  | 61.9  | 62.6  | 62.6  | 62.6  |
| 40°   | 53.4  | 53.8  | 54.1  | 53.8  | 54.1  | 54.9  | 55.2  | 55.6  | 55.9  | 56.3  | 56.3  |
| 42.5° | 47.5  | 47.5  | 47.5  | 47.8  | 48.5  | 48.9  | 49.6  | 49.9  | 50.3  | 50.3  | 50.3  |
| 45°   | 42.5  | 42.5  | 42.9  | 43.2  | 43.6  | 44.0  | 44.3  | 44.7  | 45.0  | 45.0  | 45.0  |
| 47.5° | 38.3  | 38.3  | 38.7  | 38.7  | 39.0  | 39.4  | 39.7  | 39.7  | 40.1  | 40.4  | 40.1  |
| 50°   | 34.5  | 34.5  | 34.5  | 34.8  | 34.8  | 35.2  | 35.2  | 35.5  | 35.5  | 35.5  | 35.5  |
| 52.5° | 30.6  | 30.6  | 30.6  | 30.6  | 30.9  | 30.9  | 30.9  | 31.3  | 31.3  | 31.3  | 31.3  |
| 55°   | 27.1  | 27.1  | 27.1  | 27.1  | 27.1  | 27.4  | 27.4  | 27.4  | 27.4  | 27.4  | 27.4  |
| 57.5° | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  | 23.9  |
| 60°   | 20.7  | 20.7  | 20.7  | 20.7  | 20.7  | 20.4  | 20.7  | 20.7  | 20.7  | 20.7  | 20.7  |
| 62.5° | 17.6  | 17.6  | 17.6  | 17.6  | 17.6  | 17.6  | 17.6  | 17.9  | 17.9  | 17.9  | 17.9  |
| 65°   | 14.4  | 14.8  | 14.8  | 14.8  | 14.8  | 14.8  | 14.8  | 15.1  | 15.1  | 15.1  | 15.1  |
| 67.5° | 11.6  | 12.0  | 12.0  | 12.0  | 12.0  | 12.0  | 12.0  | 12.0  | 12.3  | 12.3  | 12.3  |
| 70°   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.1   | 9.5   |
| 72.5° | 6.3   | 6.3   | 6.3   | 6.3   | 6.3   | 6.3   | 6.3   | 6.3   | 6.7   | 6.7   | 6.7   |
| 75°   | 4.6   | 4.6   | 4.6   | 4.6   | 4.2   | 4.2   | 4.2   | 4.2   | 4.2   | 4.2   | 4.2   |
| 77.5° | 3.2   | 3.2   | 3.2   | 2.8   | 2.8   | 2.5   | 2.5   | 2.5   | 2.5   | 2.5   | 2.1   |
| 80°   | 1.8   | 1.8   | 1.8   | 1.8   | 1.8   | 1.4   | 1.4   | 1.1   | 1.1   | 1.1   | 1.1   |
| 82.5° | 1.1   | 1.1   | 1.1   | 0.7   | 0.7   | 0.7   | 0.7   | 0.4   | 0.4   | 0.4   | 0.4   |
| 85°   | 0.4   | 0.4   | 0.4   | 0.4   | 0.4   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| 87.5° | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-28

Test Date: 05/16/2025

Luminaire Tested: LD3A09R159030D010 E3D1H

Data in this report applies to families of products including LD3A

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-28  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 01/06/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A09R159030D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R15 optic, 3000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 3032  
 CIE  $u'$ : 0.2493  
 CIE  $v'$ : 0.5211  
 Duv: 0.0003  
 CIE x: 0.4351  
 CIE y: 0.4042  
 CIE z: 0.1608  
 Peak Wavelength (nm): 615  
 Dominant Wavelength (nm): 582  
 Purity: 51.90029  
 R<sub>f</sub>: 91.6  
 R<sub>g</sub>: 98.2

CRI (Ra): 92.8  
 R1: 93.5  
 R2: 97.3  
 R3: 98.7  
 R4: 93.9  
 R5: 93.6  
 R6: 96.7  
 R7: 90.3  
 R8: 78.4  
 R9: 51.3  
 R10: 93.2  
 R11: 96.4  
 R12: 82.1  
 R13: 94.8  
 R14: 99.6  
 R15: 87.6



### Test Conditions

Stabilization Time: 40M  
 Operation Time: 1H 40M  
 Sphere Temperature (°C): 25.1

REPORT NUMBER: SP1-2504-409-28

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 12/16/2024       | 6/16/2025            |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-28

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-28

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 285                                  | NR                             | 620               | 993                                  | NR                             | 750               | 55                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 338                                  | NR                             | 625               | 970                                  | NR                             | 755               | 47                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 392                                  | NR                             | 630               | 942                                  | NR                             | 760               | 41                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 440                                  | NR                             | 635               | 902                                  | NR                             | 765               | 35                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 478                                  | NR                             | 640               | 855                                  | NR                             | 770               | 30                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 505                                  | NR                             | 645               | 800                                  | NR                             | 775               | 26                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 524                                  | NR                             | 650               | 743                                  | NR                             | 780               | 22                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 539                                  | NR                             | 655               | 682                                  | NR                             | 785               | 19                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 2                                    | NR                             | 530               | 554                                  | NR                             | 660               | 621                                  | NR                             | 790               | 16                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 565                                  | NR                             | 665               | 563                                  | NR                             | 795               | 14                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 5                                    | NR                             | 540               | 581                                  | NR                             | 670               | 505                                  | NR                             | 800               | 12                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 10                                   | NR                             | 545               | 593                                  | NR                             | 675               | 451                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 17                                   | NR                             | 550               | 606                                  | NR                             | 680               | 401                                  | NR                             | 810               | 9                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 32                                   | NR                             | 555               | 623                                  | NR                             | 685               | 356                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 57                                   | NR                             | 560               | 645                                  | NR                             | 690               | 313                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 103                                  | NR                             | 565               | 667                                  | NR                             | 695               | 274                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 175                                  | NR                             | 570               | 699                                  | NR                             | 700               | 238                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 287                                  | NR                             | 575               | 732                                  | NR                             | 705               | 208                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 460                                  | NR                             | 580               | 774                                  | NR                             | 710               | 180                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 550                                  | NR                             | 585               | 816                                  | NR                             | 715               | 157                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 423                                  | NR                             | 590               | 862                                  | NR                             | 720               | 136                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 309                                  | NR                             | 595               | 907                                  | NR                             | 725               | 117                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 269                                  | NR                             | 600               | 943                                  | NR                             | 730               | 100                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 229                                  | NR                             | 605               | 974                                  | NR                             | 735               | 86                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 214                                  | NR                             | 610               | 991                                  | NR                             | 740               | 72                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 241                                  | NR                             | 615               | 1000                                 | NR                             | 745               | 62                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-28

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.44

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 285                                  | NR                             | 620               | 993                                  | NR                             | 750               | 55                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 338                                  | NR                             | 625               | 970                                  | NR                             | 755               | 47                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 392                                  | NR                             | 630               | 942                                  | NR                             | 760               | 41                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 440                                  | NR                             | 635               | 902                                  | NR                             | 765               | 35                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 478                                  | NR                             | 640               | 855                                  | NR                             | 770               | 30                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 505                                  | NR                             | 645               | 800                                  | NR                             | 775               | 26                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 524                                  | NR                             | 650               | 743                                  | NR                             | 780               | 22                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 539                                  | NR                             | 655               | 682                                  | NR                             | 785               | 19                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 2                                    | NR                             | 530               | 554                                  | NR                             | 660               | 621                                  | NR                             | 790               | 16                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 565                                  | NR                             | 665               | 563                                  | NR                             | 795               | 14                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 5                                    | NR                             | 540               | 581                                  | NR                             | 670               | 505                                  | NR                             | 800               | 12                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 10                                   | NR                             | 545               | 593                                  | NR                             | 675               | 451                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 17                                   | NR                             | 550               | 606                                  | NR                             | 680               | 401                                  | NR                             | 810               | 9                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 32                                   | NR                             | 555               | 623                                  | NR                             | 685               | 356                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 57                                   | NR                             | 560               | 645                                  | NR                             | 690               | 313                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 103                                  | NR                             | 565               | 667                                  | NR                             | 695               | 274                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 175                                  | NR                             | 570               | 699                                  | NR                             | 700               | 238                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 287                                  | NR                             | 575               | 732                                  | NR                             | 705               | 208                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 460                                  | NR                             | 580               | 774                                  | NR                             | 710               | 180                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 550                                  | NR                             | 585               | 816                                  | NR                             | 715               | 157                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 423                                  | NR                             | 590               | 862                                  | NR                             | 720               | 136                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 309                                  | NR                             | 595               | 907                                  | NR                             | 725               | 117                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 269                                  | NR                             | 600               | 943                                  | NR                             | 730               | 100                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 229                                  | NR                             | 605               | 974                                  | NR                             | 735               | 86                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 214                                  | NR                             | 610               | 991                                  | NR                             | 740               | 72                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 241                                  | NR                             | 615               | 1000                                 | NR                             | 745               | 62                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-28

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 2.84**

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 285                                    | NR                             | 620               | 993                                    | NR                             | 750               | 55                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 338                                    | NR                             | 625               | 970                                    | NR                             | 755               | 47                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 392                                    | NR                             | 630               | 942                                    | NR                             | 760               | 41                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 440                                    | NR                             | 635               | 902                                    | NR                             | 765               | 35                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 478                                    | NR                             | 640               | 855                                    | NR                             | 770               | 30                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 505                                    | NR                             | 645               | 800                                    | NR                             | 775               | 26                                     | NR                             | 905               | 1                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 524                                    | NR                             | 650               | 743                                    | NR                             | 780               | 22                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 1                                      | NR                             | 525               | 539                                    | NR                             | 655               | 682                                    | NR                             | 785               | 19                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 2                                      | NR                             | 530               | 554                                    | NR                             | 660               | 621                                    | NR                             | 790               | 16                                     | NR                             | 920               | 0                                      | NR                             |
| 405               | 3                                      | NR                             | 535               | 565                                    | NR                             | 665               | 563                                    | NR                             | 795               | 14                                     | NR                             | 925               | 1                                      | NR                             |
| 410               | 5                                      | NR                             | 540               | 581                                    | NR                             | 670               | 505                                    | NR                             | 800               | 12                                     | NR                             | 930               | 0                                      | NR                             |
| 415               | 10                                     | NR                             | 545               | 593                                    | NR                             | 675               | 451                                    | NR                             | 805               | 10                                     | NR                             | 935               | 0                                      | NR                             |
| 420               | 17                                     | NR                             | 550               | 606                                    | NR                             | 680               | 401                                    | NR                             | 810               | 9                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 32                                     | NR                             | 555               | 623                                    | NR                             | 685               | 356                                    | NR                             | 815               | 8                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 57                                     | NR                             | 560               | 645                                    | NR                             | 690               | 313                                    | NR                             | 820               | 7                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 103                                    | NR                             | 565               | 667                                    | NR                             | 695               | 274                                    | NR                             | 825               | 6                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 175                                    | NR                             | 570               | 699                                    | NR                             | 700               | 238                                    | NR                             | 830               | 5                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 287                                    | NR                             | 575               | 732                                    | NR                             | 705               | 208                                    | NR                             | 835               | 4                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 460                                    | NR                             | 580               | 774                                    | NR                             | 710               | 180                                    | NR                             | 840               | 4                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 550                                    | NR                             | 585               | 816                                    | NR                             | 715               | 157                                    | NR                             | 845               | 3                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 423                                    | NR                             | 590               | 862                                    | NR                             | 720               | 136                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 309                                    | NR                             | 595               | 907                                    | NR                             | 725               | 117                                    | NR                             | 855               | 2                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 269                                    | NR                             | 600               | 943                                    | NR                             | 730               | 100                                    | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 229                                    | NR                             | 605               | 974                                    | NR                             | 735               | 86                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 214                                    | NR                             | 610               | 991                                    | NR                             | 740               | 72                                     | NR                             | 870               | 2                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 241                                    | NR                             | 615               | 1000                                   | NR                             | 745               | 62                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-28

TM-30-18

### Summary

$R_f = 91.6$   
 $R_g = 98.2$   
 $CIE R_a = 92.8$   
 $R_9 = 51.3$



### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 96 | CES51 = 97 | CES76 = 92 |
| CES02 = 63 | CES27 = 91 | CES52 = 99 | CES77 = 88 |
| CES03 = 32 | CES28 = 98 | CES53 = 98 | CES78 = 88 |
| CES04 = 70 | CES29 = 97 | CES54 = 93 | CES79 = 91 |
| CES05 = 50 | CES30 = 90 | CES55 = 91 | CES80 = 92 |
| CES06 = 51 | CES31 = 97 | CES56 = 94 | CES81 = 78 |
| CES07 = 43 | CES32 = 93 | CES57 = 93 | CES82 = 96 |
| CES08 = 42 | CES33 = 97 | CES58 = 94 | CES83 = 95 |
| CES09 = 29 | CES34 = 97 | CES59 = 97 | CES84 = 95 |
| CES10 = 76 | CES35 = 98 | CES60 = 93 | CES85 = 80 |
| CES11 = 59 | CES36 = 82 | CES61 = 93 | CES86 = 79 |
| CES12 = 65 | CES37 = 98 | CES62 = 87 | CES87 = 91 |
| CES13 = 44 | CES38 = 86 | CES63 = 94 | CES88 = 95 |
| CES14 = 74 | CES39 = 98 | CES64 = 92 | CES89 = 84 |
| CES15 = 72 | CES40 = 97 | CES65 = 89 | CES90 = 94 |
| CES16 = 48 | CES41 = 96 | CES66 = 90 | CES91 = 77 |
| CES17 = 50 | CES42 = 97 | CES67 = 89 | CES92 = 76 |
| CES18 = 57 | CES43 = 96 | CES68 = 91 | CES93 = 86 |
| CES19 = 72 | CES44 = 99 | CES69 = 92 | CES94 = 76 |
| CES20 = 67 | CES45 = 99 | CES70 = 89 | CES95 = 83 |
| CES21 = 86 | CES46 = 96 | CES71 = 85 | CES96 = 91 |
| CES22 = 79 | CES47 = 93 | CES72 = 95 | CES97 = 96 |
| CES23 = 92 | CES48 = 89 | CES73 = 85 | CES98 = 93 |
| CES24 = 90 | CES49 = 97 | CES74 = 90 | CES99 = 89 |
| CES25 = 72 | CES50 = 97 | CES75 = 86 |            |



Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)