

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1251029

Luminaire Tested: P3A05R109030DE010 E3D1WMH

Issue Date: 1/30/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1251029  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2501-338-19)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/30/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A05R109030DE010 E3D1WMH  
Description: 3in Adjustable LED luminaire with, R10 optic, 3000K CCT AND, 90CRI , E3D1WMH TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 557.0 lumens  
Efficiency: N/A  
Efficacy: 70.5 lumens/watt  
Spacing Criteria (0/90/45): 0.18 / 0.18 / 0.18  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 7.9  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1251029

CATALOG NUMBER: P3A05R109030DE010 E3D1WMH

### Luminous Intensity Polar Plot

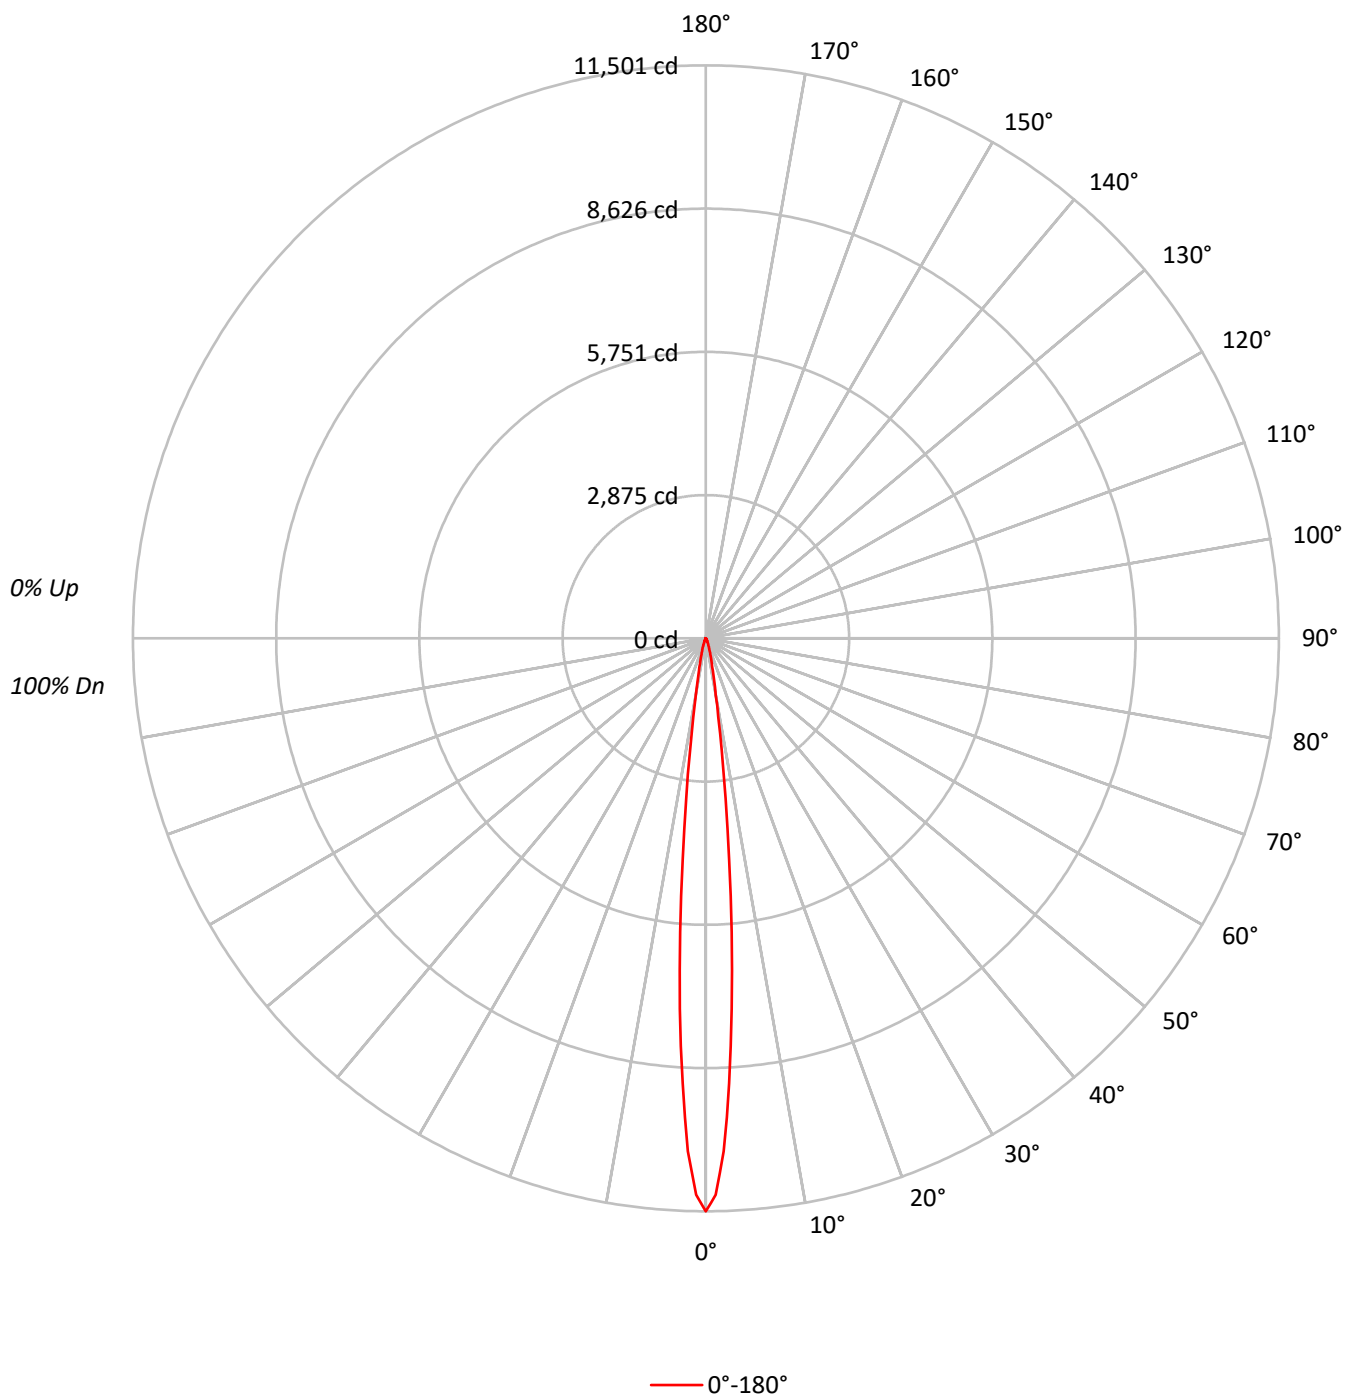

TEST NUMBER: P1251029

CATALOG NUMBER: P3A05R109030DE010 E3D1WMH

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |     | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 | 100 | 100 |
| 1   | 116 | 114 | 113 | 111 | 114 | 112 | 111 | 110 | 108 | 107 | 106 | 105 | 104 | 103 | 101 | 101 | 100 | 99  | 99  | 99  |
| 2   | 113 | 110 | 108 | 106 | 111 | 109 | 107 | 105 | 106 | 104 | 103 | 103 | 102 | 101 | 100 | 99  | 98  | 97  | 97  | 97  |
| 3   | 111 | 107 | 104 | 102 | 109 | 106 | 103 | 101 | 104 | 102 | 100 | 101 | 100 | 98  | 99  | 98  | 97  | 96  | 96  | 96  |
| 4   | 109 | 105 | 102 | 99  | 107 | 104 | 101 | 99  | 102 | 99  | 98  | 100 | 98  | 97  | 98  | 97  | 96  | 95  | 95  | 95  |
| 5   | 107 | 102 | 99  | 97  | 105 | 101 | 99  | 97  | 100 | 98  | 96  | 99  | 97  | 95  | 97  | 96  | 94  | 93  | 93  | 93  |
| 6   | 105 | 100 | 97  | 95  | 104 | 100 | 97  | 95  | 98  | 96  | 94  | 97  | 95  | 94  | 96  | 95  | 93  | 92  | 92  | 92  |
| 7   | 103 | 99  | 96  | 93  | 102 | 98  | 95  | 93  | 97  | 95  | 93  | 96  | 94  | 92  | 95  | 93  | 92  | 91  | 91  | 91  |
| 8   | 102 | 97  | 94  | 92  | 101 | 97  | 94  | 92  | 96  | 93  | 92  | 95  | 93  | 91  | 94  | 92  | 91  | 90  | 90  | 90  |
| 9   | 100 | 96  | 93  | 91  | 100 | 95  | 93  | 91  | 95  | 92  | 90  | 94  | 92  | 90  | 93  | 91  | 90  | 89  | 89  | 89  |
| 10  | 99  | 94  | 92  | 90  | 98  | 94  | 91  | 90  | 94  | 91  | 89  | 93  | 91  | 89  | 92  | 91  | 89  | 88  | 88  | 88  |

**AVERAGE LUMINANCE (cd/sqm):**

|     |         |
|-----|---------|
|     | 0°      |
| 0°  | 2521991 |
| 5°  | 1302858 |
| 10° | 256041  |
| 15° | 80613   |
| 20° | 35213   |
| 25° | 15582   |
| 30° | 8381    |
| 35° | 4444    |
| 40° | 1574    |
| 45° | 558     |
| 50° | 0       |
| 55° | 0       |
| 60° | 0       |
| 65° | 0       |
| 70° | 0       |
| 75° | 0       |
| 80° | 0       |
| 85° | 0       |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 47.5°

Luminance: 584 cd/sqm

TEST NUMBER: P1251029

CATALOG NUMBER: P3A05R109030DE010 E3D1WMH

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 398.2  | 71.5      |
| 10°-20°   | 113.2  | 20.3      |
| 20°-30°   | 33.0   | 5.9       |
| 30°-40°   | 10.8   | 1.9       |
| 40°-50°   | 1.9    | 0.3       |
| 50°-60°   | 0.0    | 0.0       |
| 60°-70°   | 0.0    | 0.0       |
| 70°-80°   | 0.0    | 0.0       |
| 80°-90°   | 0.0    | 0.0       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 544.3  | 97.7      |
| 0°-40°    | 555.1  | 99.7      |
| 0°-60°    | 557.0  | 100.0     |
| 0°-90°    | 557.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 557.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°    | Flux |
|-----|-------|------|
| 0°  | 11501 |      |
| 5°  | 5919  | 398  |
| 15° | 355   | 113  |
| 25° | 64    | 33   |
| 35° | 17    | 11   |
| 45° | 2     | 2    |
| 55° | 0     | 0    |
| 65° | 0     | 0    |
| 75° | 0     | 0    |
| 85° | 0     | 0    |
| 90° | 0     |      |

TEST NUMBER: P1251029

CATALOG NUMBER: P3A05R109030DE010 E3D1WMH

**CANDELA DISTRIBUTION (FULL):**

| 0°    |         |
|-------|---------|
| 0°    | 11501.2 |
| 1°    | 11170.0 |
| 2°    | 10303.4 |
| 3°    | 8943.7  |
| 4°    | 7457.1  |
| 5°    | 5918.9  |
| 6°    | 4463.6  |
| 7°    | 3232.7  |
| 8°    | 2274.1  |
| 9°    | 1598.9  |
| 10°   | 1149.9  |
| 11°   | 851.9   |
| 12°   | 655.0   |
| 13°   | 526.2   |
| 14°   | 428.7   |
| 15°   | 355.1   |
| 17.5° | 235.5   |
| 20°   | 150.9   |
| 22.5° | 95.7    |
| 25°   | 64.4    |
| 27.5° | 46.0    |
| 30°   | 33.1    |
| 32.5° | 23.9    |
| 35°   | 16.6    |
| 37.5° | 11.0    |
| 40°   | 5.5     |
| 42.5° | 3.7     |
| 45°   | 1.8     |
| 47.5° | 1.8     |
| 50°   | 0.0     |
| 52.5° | 0.0     |
| 55°   | 0.0     |
| 57.5° | 0.0     |
| 60°   | 0.0     |
| 62.5° | 0.0     |
| 65°   | 0.0     |
| 67.5° | 0.0     |
| 70°   | 0.0     |
| 72.5° | 0.0     |
| 75°   | 0.0     |
| 77.5° | 0.0     |
| 80°   | 0.0     |
| 82.5° | 0.0     |
| 85°   | 0.0     |
| 87.5° | 0.0     |



TEST NUMBER: P1251029

CATALOG NUMBER: P3A05R109030DE010 E3D1WMH

CANDELA DISTRIBUTION (continued):



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-28

Test Date: 05/16/2025

Luminaire Tested: LD3A09R159030D010 E3D1H

Data in this report applies to families of products including LD3A



### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-28  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 01/06/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A09R159030D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R15 optic, 3000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 3032  
 CIE  $u'$ : 0.2493  
 CIE  $v'$ : 0.5211  
 Duv: 0.0003  
 CIE x: 0.4351  
 CIE y: 0.4042  
 CIE z: 0.1608  
 Peak Wavelength (nm): 615  
 Dominant Wavelength (nm): 582  
 Purity: 51.90029  
 R<sub>f</sub>: 91.6  
 R<sub>g</sub>: 98.2

CRI (Ra): 92.8  
 R1: 93.5  
 R2: 97.3  
 R3: 98.7  
 R4: 93.9  
 R5: 93.6  
 R6: 96.7  
 R7: 90.3  
 R8: 78.4  
 R9: 51.3  
 R10: 93.2  
 R11: 96.4  
 R12: 82.1  
 R13: 94.8  
 R14: 99.6  
 R15: 87.6



### Test Conditions

Stabilization Time: 40M  
 Operation Time: 1H 40M  
 Sphere Temperature (°C): 25.1

REPORT NUMBER: SP1-2504-409-28


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 12/16/2024       | 6/16/2025            |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-28

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

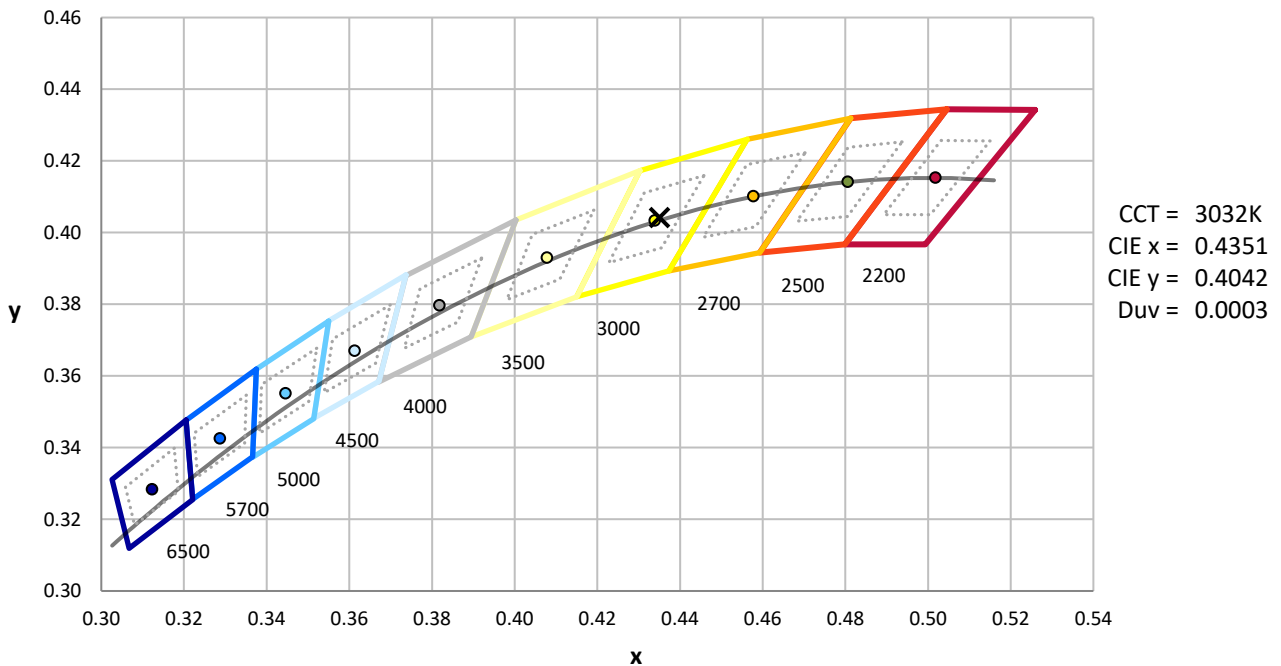

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-28

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 285                         | NR               | 620       | 993                         | NR               | 750       | 55                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 338                         | NR               | 625       | 970                         | NR               | 755       | 47                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 392                         | NR               | 630       | 942                         | NR               | 760       | 41                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 440                         | NR               | 635       | 902                         | NR               | 765       | 35                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 478                         | NR               | 640       | 855                         | NR               | 770       | 30                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 505                         | NR               | 645       | 800                         | NR               | 775       | 26                          | NR               | 905       | 1                           | NR               |
| 390       | 0                           | NR               | 520       | 524                         | NR               | 650       | 743                         | NR               | 780       | 22                          | NR               | 910       | 0                           | NR               |
| 395       | 1                           | NR               | 525       | 539                         | NR               | 655       | 682                         | NR               | 785       | 19                          | NR               | 915       | 0                           | NR               |
| 400       | 2                           | NR               | 530       | 554                         | NR               | 660       | 621                         | NR               | 790       | 16                          | NR               | 920       | 0                           | NR               |
| 405       | 3                           | NR               | 535       | 565                         | NR               | 665       | 563                         | NR               | 795       | 14                          | NR               | 925       | 1                           | NR               |
| 410       | 5                           | NR               | 540       | 581                         | NR               | 670       | 505                         | NR               | 800       | 12                          | NR               | 930       | 0                           | NR               |
| 415       | 10                          | NR               | 545       | 593                         | NR               | 675       | 451                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 17                          | NR               | 550       | 606                         | NR               | 680       | 401                         | NR               | 810       | 9                           | NR               | 940       | 0                           | NR               |
| 425       | 32                          | NR               | 555       | 623                         | NR               | 685       | 356                         | NR               | 815       | 8                           | NR               | 945       | 0                           | NR               |
| 430       | 57                          | NR               | 560       | 645                         | NR               | 690       | 313                         | NR               | 820       | 7                           | NR               | 950       | 0                           | NR               |
| 435       | 103                         | NR               | 565       | 667                         | NR               | 695       | 274                         | NR               | 825       | 6                           | NR               | 955       | 0                           | NR               |
| 440       | 175                         | NR               | 570       | 699                         | NR               | 700       | 238                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 287                         | NR               | 575       | 732                         | NR               | 705       | 208                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 460                         | NR               | 580       | 774                         | NR               | 710       | 180                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 550                         | NR               | 585       | 816                         | NR               | 715       | 157                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 423                         | NR               | 590       | 862                         | NR               | 720       | 136                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 309                         | NR               | 595       | 907                         | NR               | 725       | 117                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 269                         | NR               | 600       | 943                         | NR               | 730       | 100                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 229                         | NR               | 605       | 974                         | NR               | 735       | 86                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 214                         | NR               | 610       | 991                         | NR               | 740       | 72                          | NR               | 870       | 2                           | NR               | 1000      | 0                           | NR               |
| 485       | 241                         | NR               | 615       | 1000                        | NR               | 745       | 62                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2504-409-28

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.44

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 285                                  | NR                             | 620               | 993                                  | NR                             | 750               | 55                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 338                                  | NR                             | 625               | 970                                  | NR                             | 755               | 47                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 392                                  | NR                             | 630               | 942                                  | NR                             | 760               | 41                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 440                                  | NR                             | 635               | 902                                  | NR                             | 765               | 35                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 478                                  | NR                             | 640               | 855                                  | NR                             | 770               | 30                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 505                                  | NR                             | 645               | 800                                  | NR                             | 775               | 26                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 524                                  | NR                             | 650               | 743                                  | NR                             | 780               | 22                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 1                                    | NR                             | 525               | 539                                  | NR                             | 655               | 682                                  | NR                             | 785               | 19                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 2                                    | NR                             | 530               | 554                                  | NR                             | 660               | 621                                  | NR                             | 790               | 16                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 565                                  | NR                             | 665               | 563                                  | NR                             | 795               | 14                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 5                                    | NR                             | 540               | 581                                  | NR                             | 670               | 505                                  | NR                             | 800               | 12                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 10                                   | NR                             | 545               | 593                                  | NR                             | 675               | 451                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 17                                   | NR                             | 550               | 606                                  | NR                             | 680               | 401                                  | NR                             | 810               | 9                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 32                                   | NR                             | 555               | 623                                  | NR                             | 685               | 356                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 57                                   | NR                             | 560               | 645                                  | NR                             | 690               | 313                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 103                                  | NR                             | 565               | 667                                  | NR                             | 695               | 274                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 175                                  | NR                             | 570               | 699                                  | NR                             | 700               | 238                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 287                                  | NR                             | 575               | 732                                  | NR                             | 705               | 208                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 460                                  | NR                             | 580               | 774                                  | NR                             | 710               | 180                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 550                                  | NR                             | 585               | 816                                  | NR                             | 715               | 157                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 423                                  | NR                             | 590               | 862                                  | NR                             | 720               | 136                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 309                                  | NR                             | 595               | 907                                  | NR                             | 725               | 117                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 269                                  | NR                             | 600               | 943                                  | NR                             | 730               | 100                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 229                                  | NR                             | 605               | 974                                  | NR                             | 735               | 86                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 214                                  | NR                             | 610               | 991                                  | NR                             | 740               | 72                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 241                                  | NR                             | 615               | 1000                                 | NR                             | 745               | 62                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-28

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 2.84**


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 285                                    | NR                             | 620               | 993                                    | NR                             | 750               | 55                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 338                                    | NR                             | 625               | 970                                    | NR                             | 755               | 47                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 392                                    | NR                             | 630               | 942                                    | NR                             | 760               | 41                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 440                                    | NR                             | 635               | 902                                    | NR                             | 765               | 35                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 478                                    | NR                             | 640               | 855                                    | NR                             | 770               | 30                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 505                                    | NR                             | 645               | 800                                    | NR                             | 775               | 26                                     | NR                             | 905               | 1                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 524                                    | NR                             | 650               | 743                                    | NR                             | 780               | 22                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 1                                      | NR                             | 525               | 539                                    | NR                             | 655               | 682                                    | NR                             | 785               | 19                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 2                                      | NR                             | 530               | 554                                    | NR                             | 660               | 621                                    | NR                             | 790               | 16                                     | NR                             | 920               | 0                                      | NR                             |
| 405               | 3                                      | NR                             | 535               | 565                                    | NR                             | 665               | 563                                    | NR                             | 795               | 14                                     | NR                             | 925               | 1                                      | NR                             |
| 410               | 5                                      | NR                             | 540               | 581                                    | NR                             | 670               | 505                                    | NR                             | 800               | 12                                     | NR                             | 930               | 0                                      | NR                             |
| 415               | 10                                     | NR                             | 545               | 593                                    | NR                             | 675               | 451                                    | NR                             | 805               | 10                                     | NR                             | 935               | 0                                      | NR                             |
| 420               | 17                                     | NR                             | 550               | 606                                    | NR                             | 680               | 401                                    | NR                             | 810               | 9                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 32                                     | NR                             | 555               | 623                                    | NR                             | 685               | 356                                    | NR                             | 815               | 8                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 57                                     | NR                             | 560               | 645                                    | NR                             | 690               | 313                                    | NR                             | 820               | 7                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 103                                    | NR                             | 565               | 667                                    | NR                             | 695               | 274                                    | NR                             | 825               | 6                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 175                                    | NR                             | 570               | 699                                    | NR                             | 700               | 238                                    | NR                             | 830               | 5                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 287                                    | NR                             | 575               | 732                                    | NR                             | 705               | 208                                    | NR                             | 835               | 4                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 460                                    | NR                             | 580               | 774                                    | NR                             | 710               | 180                                    | NR                             | 840               | 4                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 550                                    | NR                             | 585               | 816                                    | NR                             | 715               | 157                                    | NR                             | 845               | 3                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 423                                    | NR                             | 590               | 862                                    | NR                             | 720               | 136                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 309                                    | NR                             | 595               | 907                                    | NR                             | 725               | 117                                    | NR                             | 855               | 2                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 269                                    | NR                             | 600               | 943                                    | NR                             | 730               | 100                                    | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 229                                    | NR                             | 605               | 974                                    | NR                             | 735               | 86                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 214                                    | NR                             | 610               | 991                                    | NR                             | 740               | 72                                     | NR                             | 870               | 2                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 241                                    | NR                             | 615               | 1000                                   | NR                             | 745               | 62                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-28

TM-30-18

### Summary

$R_f = 91.6$   
 $R_g = 98.2$   
 $CIE R_a = 92.8$   
 $R_9 = 51.3$

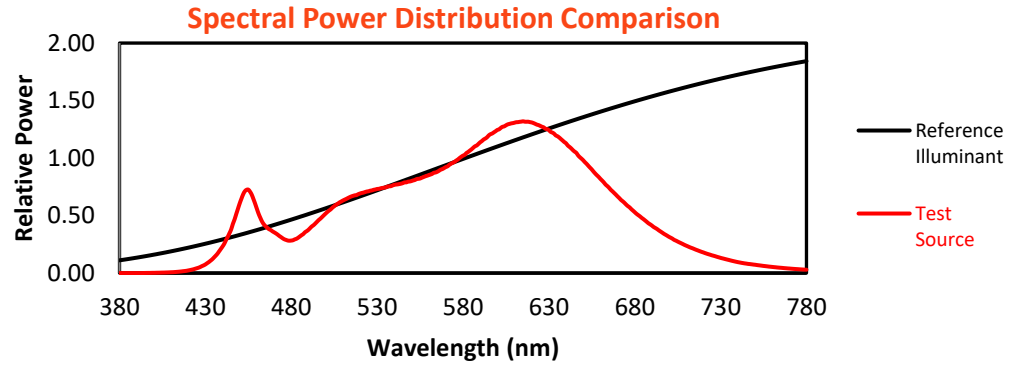


### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 96 | CES51 = 97 | CES76 = 92 |
| CES02 = 63 | CES27 = 91 | CES52 = 99 | CES77 = 88 |
| CES03 = 32 | CES28 = 98 | CES53 = 98 | CES78 = 88 |
| CES04 = 70 | CES29 = 97 | CES54 = 93 | CES79 = 91 |
| CES05 = 50 | CES30 = 90 | CES55 = 91 | CES80 = 92 |
| CES06 = 51 | CES31 = 97 | CES56 = 94 | CES81 = 78 |
| CES07 = 43 | CES32 = 93 | CES57 = 93 | CES82 = 96 |
| CES08 = 42 | CES33 = 97 | CES58 = 94 | CES83 = 95 |
| CES09 = 29 | CES34 = 97 | CES59 = 97 | CES84 = 95 |
| CES10 = 76 | CES35 = 98 | CES60 = 93 | CES85 = 80 |
| CES11 = 59 | CES36 = 82 | CES61 = 93 | CES86 = 79 |
| CES12 = 65 | CES37 = 98 | CES62 = 87 | CES87 = 91 |
| CES13 = 44 | CES38 = 86 | CES63 = 94 | CES88 = 95 |
| CES14 = 74 | CES39 = 98 | CES64 = 92 | CES89 = 84 |
| CES15 = 72 | CES40 = 97 | CES65 = 89 | CES90 = 94 |
| CES16 = 48 | CES41 = 96 | CES66 = 90 | CES91 = 77 |
| CES17 = 50 | CES42 = 97 | CES67 = 89 | CES92 = 76 |
| CES18 = 57 | CES43 = 96 | CES68 = 91 | CES93 = 86 |
| CES19 = 72 | CES44 = 99 | CES69 = 92 | CES94 = 76 |
| CES20 = 67 | CES45 = 99 | CES70 = 89 | CES95 = 83 |
| CES21 = 86 | CES46 = 96 | CES71 = 85 | CES96 = 91 |
| CES22 = 79 | CES47 = 93 | CES72 = 95 | CES97 = 96 |
| CES23 = 92 | CES48 = 89 | CES73 = 85 | CES98 = 93 |
| CES24 = 90 | CES49 = 97 | CES74 = 90 | CES99 = 89 |
| CES25 = 72 | CES50 = 97 | CES75 = 86 |            |

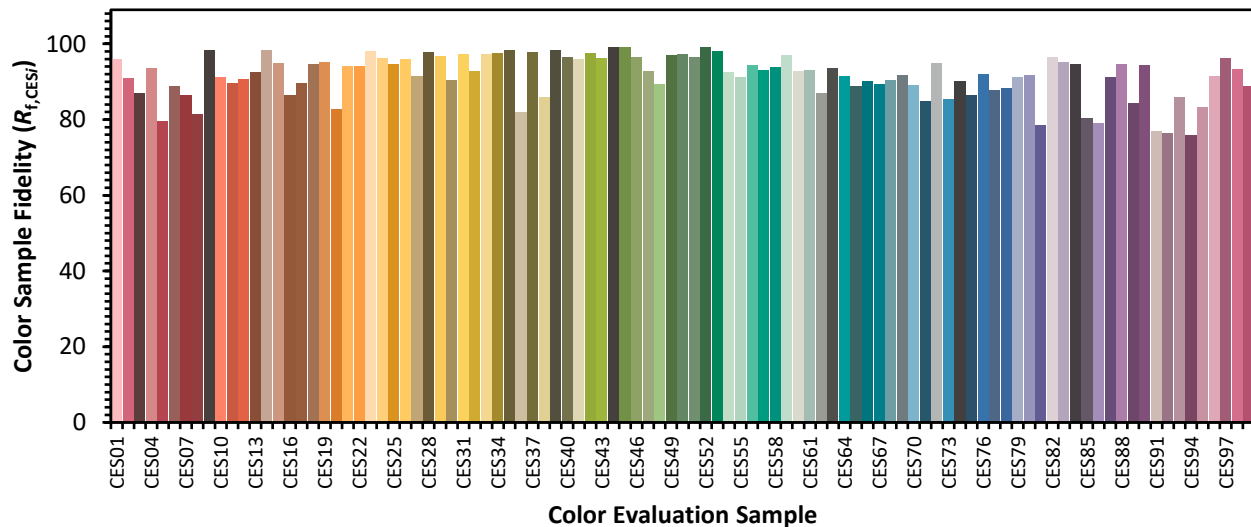



**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**



(END OF REPORT)