

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1253931

Luminaire Tested: P3A05R359035DE010 E3PHLD1MW

Issue Date: 1/29/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1253931  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2510-583-20)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/29/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A05R359035DE010 E3PHLD1MW  
Description: 3in Adjustable LED luminaire with, R35 optic, 3500K CCT AND, 90CRI , E3PHLD1MW TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 399.0 lumens  
Efficiency: N/A  
Efficacy: 55.4 lumens/watt  
Spacing Criteria (0/90/45): 0.83 / 0.83 / 0.92  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 7.2  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1253931

CATALOG NUMBER: P3A05R359035DE010 E3PHLD1MW

### Luminous Intensity Polar Plot

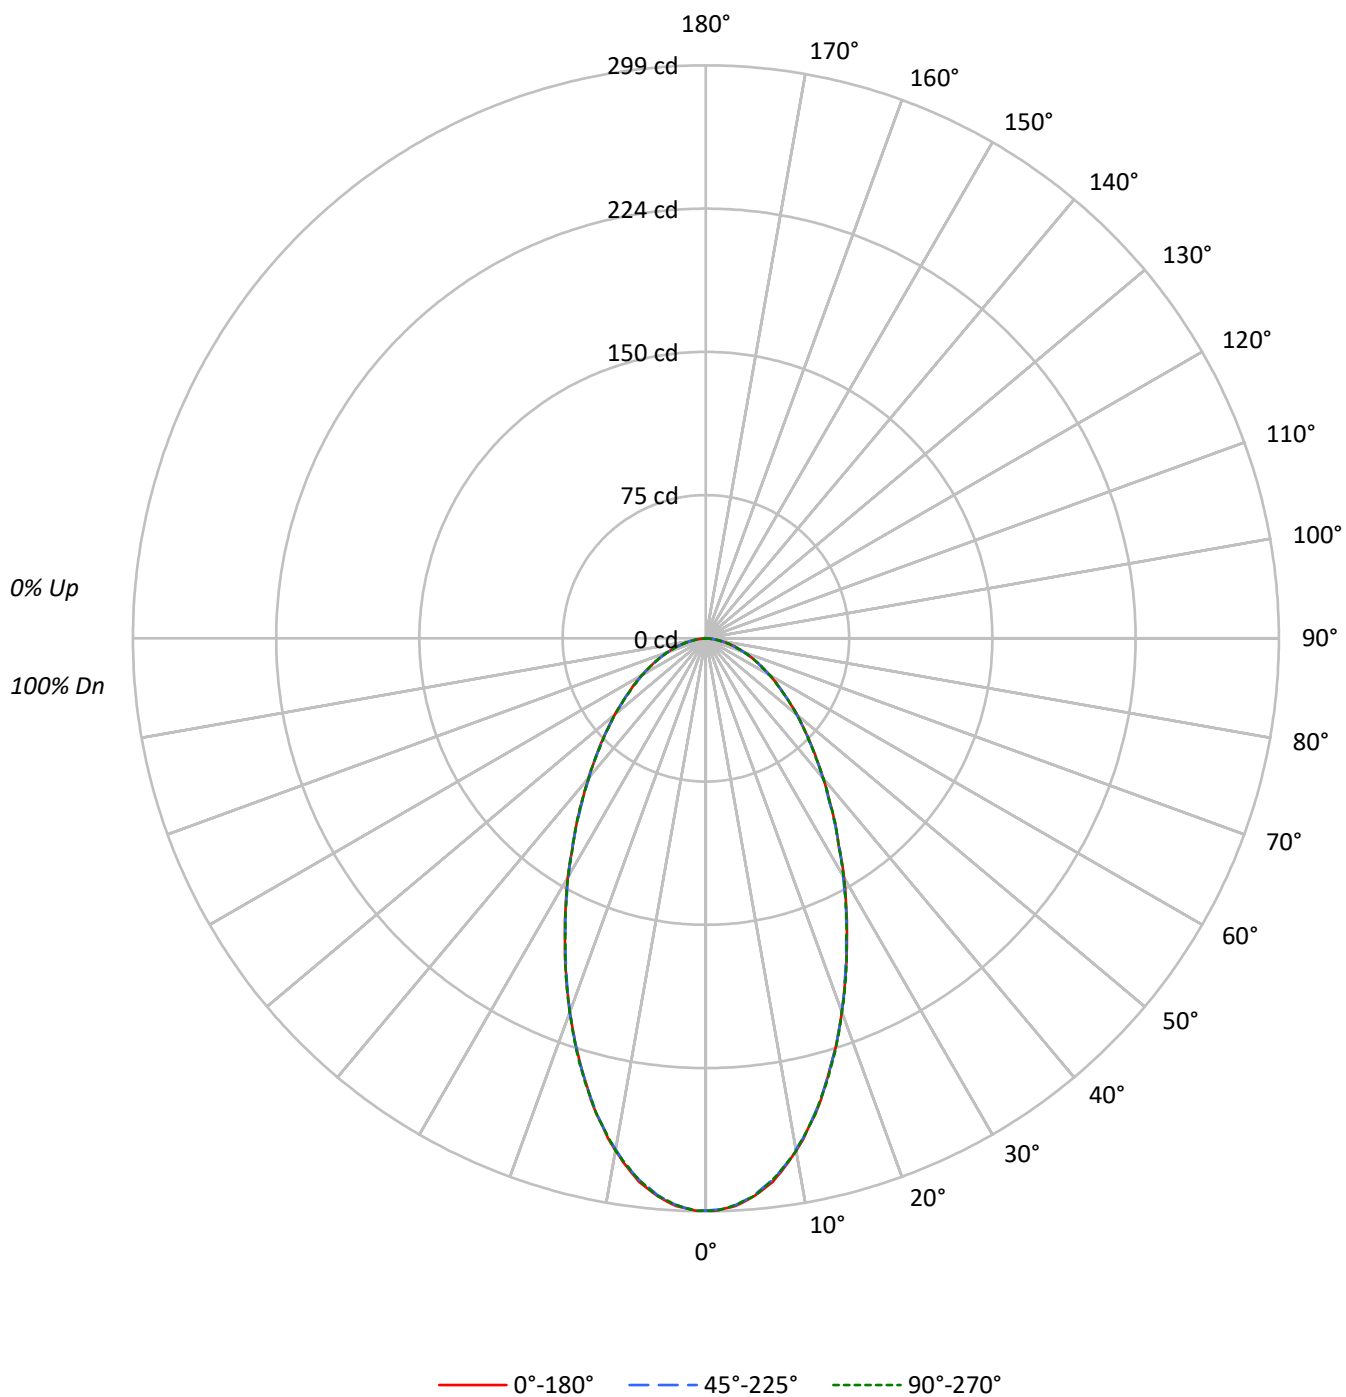

TEST NUMBER: P1253931

CATALOG NUMBER: P3A05R359035DE010 E3PHLD1MW

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 111 | 107 | 103 | 100 | 108 | 105 | 101 | 99  | 100 | 98  | 95  |  | 97  | 95  | 93  |  | 93  |
| 2   | 103 | 96  | 90  | 85  | 100 | 94  | 89  | 84  | 90  | 86  | 82  |  | 87  | 84  | 81  |  | 84  |
| 3   | 95  | 86  | 79  | 74  | 93  | 85  | 78  | 73  | 82  | 76  | 72  |  | 79  | 75  | 71  |  | 77  |
| 4   | 88  | 78  | 71  | 65  | 86  | 77  | 70  | 65  | 75  | 68  | 64  |  | 72  | 67  | 63  |  | 70  |
| 5   | 82  | 71  | 64  | 58  | 80  | 70  | 63  | 58  | 68  | 62  | 57  |  | 66  | 61  | 56  |  | 65  |
| 6   | 77  | 65  | 58  | 52  | 75  | 65  | 57  | 52  | 63  | 56  | 51  |  | 61  | 55  | 51  |  | 60  |
| 7   | 72  | 60  | 53  | 47  | 71  | 60  | 52  | 47  | 58  | 52  | 47  |  | 57  | 51  | 46  |  | 55  |
| 8   | 68  | 56  | 48  | 43  | 66  | 55  | 48  | 43  | 54  | 47  | 43  |  | 53  | 47  | 43  |  | 52  |
| 9   | 64  | 52  | 45  | 40  | 63  | 51  | 44  | 40  | 50  | 44  | 39  |  | 49  | 44  | 39  |  | 48  |
| 10  | 60  | 49  | 42  | 37  | 59  | 48  | 41  | 37  | 47  | 41  | 37  |  | 46  | 41  | 36  |  | 45  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°    | 45°   | 90°   |
|-----|-------|-------|-------|
| 0°  | 65499 | 65499 | 65499 |
| 5°  | 64275 | 64164 | 64275 |
| 10° | 60431 | 60320 | 60431 |
| 15° | 54711 | 54711 | 54824 |
| 20° | 48421 | 48421 | 48421 |
| 25° | 42123 | 41978 | 41978 |
| 30° | 36512 | 36259 | 36385 |
| 35° | 31427 | 31293 | 31427 |
| 40° | 27280 | 27108 | 27280 |
| 45° | 23940 | 23785 | 23785 |
| 50° | 21253 | 21082 | 21082 |
| 55° | 18695 | 18695 | 18695 |
| 60° | 16928 | 16709 | 16928 |
| 65° | 15255 | 15255 | 15255 |
| 70° | 13528 | 13528 | 13528 |
| 75° | 12200 | 11777 | 12200 |
| 80° | 10355 | 10355 | 10355 |
| 85° | 6542  | 6542  | 6542  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 23940 cd/sqm

TEST NUMBER: P1253931

CATALOG NUMBER: P3A05R359035DE010 E3PHLD1MW

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 27.2   | 6.8       |
| 10°-20°   | 67.2   | 16.8      |
| 20°-30°   | 79.9   | 20.0      |
| 30°-40°   | 73.4   | 18.4      |
| 40°-50°   | 59.6   | 14.9      |
| 50°-60°   | 44.1   | 11.1      |
| 60°-70°   | 29.1   | 7.3       |
| 70°-80°   | 15.1   | 3.8       |
| 80°-90°   | 3.4    | 0.8       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 174.3  | 43.7      |
| 0°-40°    | 247.7  | 62.1      |
| 0°-60°    | 351.4  | 88.1      |
| 0°-90°    | 399.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 399.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 299 | 299   | 299 | 299   | 299 |      |
| 5°  | 292 | 292   | 292 | 292   | 292 | 27   |
| 15° | 241 | 241   | 241 | 241   | 242 | 67   |
| 25° | 174 | 174   | 174 | 174   | 174 | 80   |
| 35° | 117 | 117   | 117 | 117   | 117 | 74   |
| 45° | 77  | 77    | 77  | 77    | 77  | 60   |
| 55° | 49  | 49    | 49  | 49    | 49  | 44   |
| 65° | 29  | 29    | 29  | 29    | 29  | 29   |
| 75° | 14  | 14    | 14  | 14    | 14  | 15   |
| 85° | 3   | 3     | 3   | 3     | 3   | 3    |
| 90° | 0   | 0     | 0   | 0     | 0   |      |

TEST NUMBER: P1253931

CATALOG NUMBER: P3A05R359035DE010 E3PHLD1MW

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 298.7 | 298.7 | 298.7 | 298.7 | 298.7 |
| 1°    | 298.7 | 298.2 | 298.2 | 298.2 | 298.7 |
| 2°    | 297.6 | 297.6 | 297.6 | 297.6 | 297.6 |
| 3°    | 296.6 | 296.1 | 296.1 | 296.1 | 296.1 |
| 4°    | 294.5 | 294.0 | 294.0 | 294.0 | 294.0 |
| 5°    | 292.0 | 291.5 | 291.5 | 291.5 | 292.0 |
| 6°    | 288.9 | 288.4 | 287.9 | 287.9 | 288.4 |
| 7°    | 285.8 | 284.8 | 284.8 | 284.8 | 284.8 |
| 8°    | 281.2 | 280.6 | 280.6 | 280.6 | 280.6 |
| 9°    | 276.5 | 275.5 | 276.0 | 276.0 | 276.0 |
| 10°   | 271.4 | 270.9 | 270.9 | 270.9 | 271.4 |
| 11°   | 266.2 | 265.7 | 265.7 | 265.2 | 265.7 |
| 12°   | 260.0 | 260.0 | 260.0 | 260.0 | 260.0 |
| 13°   | 254.4 | 253.9 | 253.9 | 253.9 | 254.4 |
| 14°   | 248.2 | 247.7 | 247.7 | 247.7 | 247.7 |
| 15°   | 241.0 | 241.0 | 241.0 | 241.0 | 241.5 |
| 17.5° | 224.5 | 224.0 | 224.5 | 224.5 | 225.0 |
| 20°   | 207.5 | 207.0 | 207.5 | 207.5 | 207.5 |
| 22.5° | 190.5 | 190.5 | 190.0 | 190.5 | 191.0 |
| 25°   | 174.1 | 173.5 | 173.5 | 174.1 | 173.5 |
| 27.5° | 158.6 | 158.1 | 158.1 | 158.1 | 158.1 |
| 30°   | 144.2 | 143.2 | 143.2 | 143.7 | 143.7 |
| 32.5° | 129.3 | 129.3 | 129.8 | 129.3 | 129.3 |
| 35°   | 117.4 | 116.9 | 116.9 | 117.4 | 117.4 |
| 37.5° | 105.6 | 105.0 | 105.0 | 105.6 | 105.6 |
| 40°   | 95.3  | 95.3  | 94.7  | 95.3  | 95.3  |
| 42.5° | 85.5  | 85.5  | 85.5  | 85.5  | 85.5  |
| 45°   | 77.2  | 76.7  | 76.7  | 76.7  | 76.7  |
| 47.5° | 69.0  | 69.0  | 69.0  | 68.5  | 69.0  |
| 50°   | 62.3  | 61.8  | 61.8  | 61.8  | 61.8  |
| 52.5° | 55.1  | 55.1  | 55.1  | 55.1  | 55.1  |
| 55°   | 48.9  | 48.9  | 48.9  | 48.9  | 48.9  |
| 57.5° | 43.8  | 43.3  | 43.3  | 43.3  | 43.3  |
| 60°   | 38.6  | 38.6  | 38.1  | 38.6  | 38.6  |
| 62.5° | 33.5  | 33.5  | 33.5  | 33.5  | 33.5  |
| 65°   | 29.4  | 29.4  | 29.4  | 29.4  | 29.4  |
| 67.5° | 25.2  | 25.2  | 25.2  | 25.2  | 25.2  |
| 70°   | 21.1  | 21.1  | 21.1  | 21.1  | 21.1  |
| 72.5° | 18.0  | 17.5  | 17.5  | 17.5  | 17.5  |
| 75°   | 14.4  | 14.4  | 13.9  | 14.4  | 14.4  |
| 77.5° | 10.8  | 10.8  | 10.8  | 10.8  | 10.8  |
| 80°   | 8.2   | 8.2   | 8.2   | 7.7   | 8.2   |
| 82.5° | 5.1   | 5.1   | 5.1   | 5.1   | 5.1   |
| 85°   | 2.6   | 2.6   | 2.6   | 2.6   | 2.6   |
| 87.5° | 0.5   | 0.5   | 0.5   | 1.0   | 1.0   |



TEST NUMBER: P1253931

CATALOG NUMBER: P3A05R359035DE010 E3PHLD1MW

**CANDELA DISTRIBUTION (continued):**

|     | 0°  | 22.5° | 45° | 67.5° | 90° |
|-----|-----|-------|-----|-------|-----|
| 90° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-24

Test Date: 05/15/2025

Luminaire Tested: LD3A17R159035D010 E3D1WH

Data in this report applies to families of products including LD3A


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-24  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 09/15/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A17R159035D010 E3D1WH**  
 Description: 3in Adjustable LED luminaire with, R15 optic, 3500K CCT AND, 90CRI LEDS, E3D1WH TRIM

### Spectral Parameters

CCT (K): 3464  
 CIE  $u'$ : 0.2361  
 CIE  $v'$ : 0.5136  
 Duv: 0.0012  
 CIE x: 0.4086  
 CIE y: 0.3951  
 CIE z: 0.1963  
 Peak Wavelength (nm): 614  
 Dominant Wavelength (nm): 580  
 Purity: 41.2143  
 R<sub>f</sub>: 91.8  
 R<sub>g</sub>: 98.4

CRI (Ra): 92.8  
 R1: 93.1  
 R2: 95.9  
 R3: 98.0  
 R4: 94.1  
 R5: 92.9  
 R6: 95.0  
 R7: 92.5  
 R8: 81.1  
 R9: 53.9  
 R10: 89.9  
 R11: 95.7  
 R12: 78.6  
 R13: 94.0  
 R14: 98.5  
 R15: 88.0

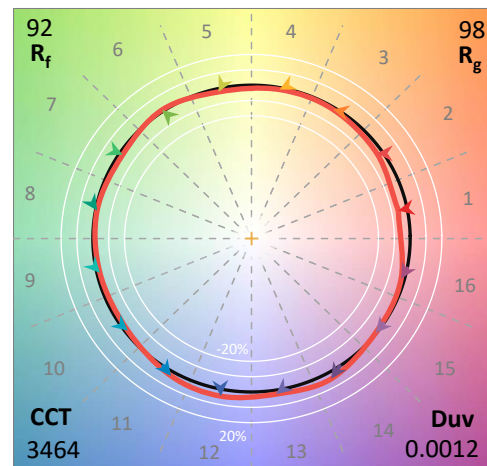

### Test Conditions


Stabilization Time: 62M  
 Operation Time: 2H 2M  
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP1-2504-409-24


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-24

**CIE 1931 Chromaticity Diagram**

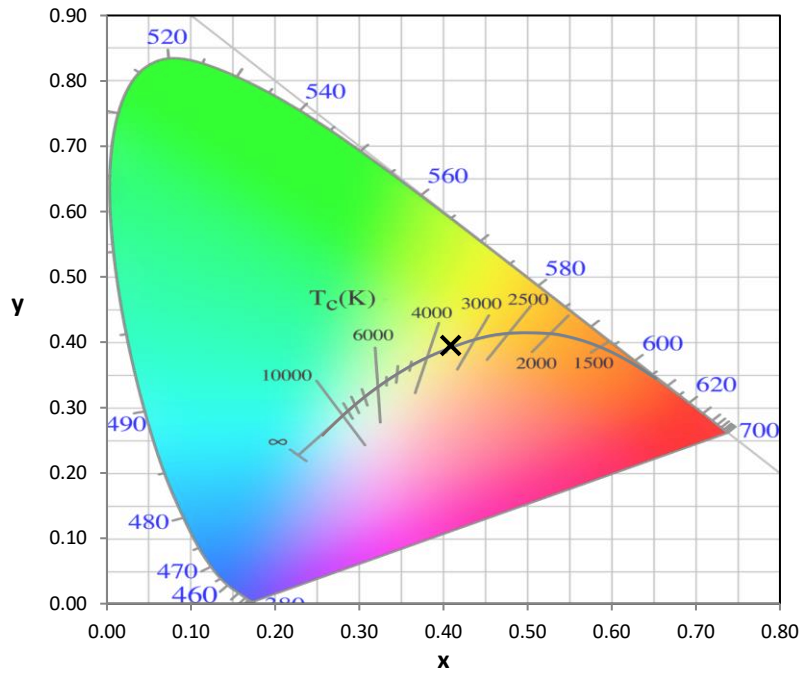


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

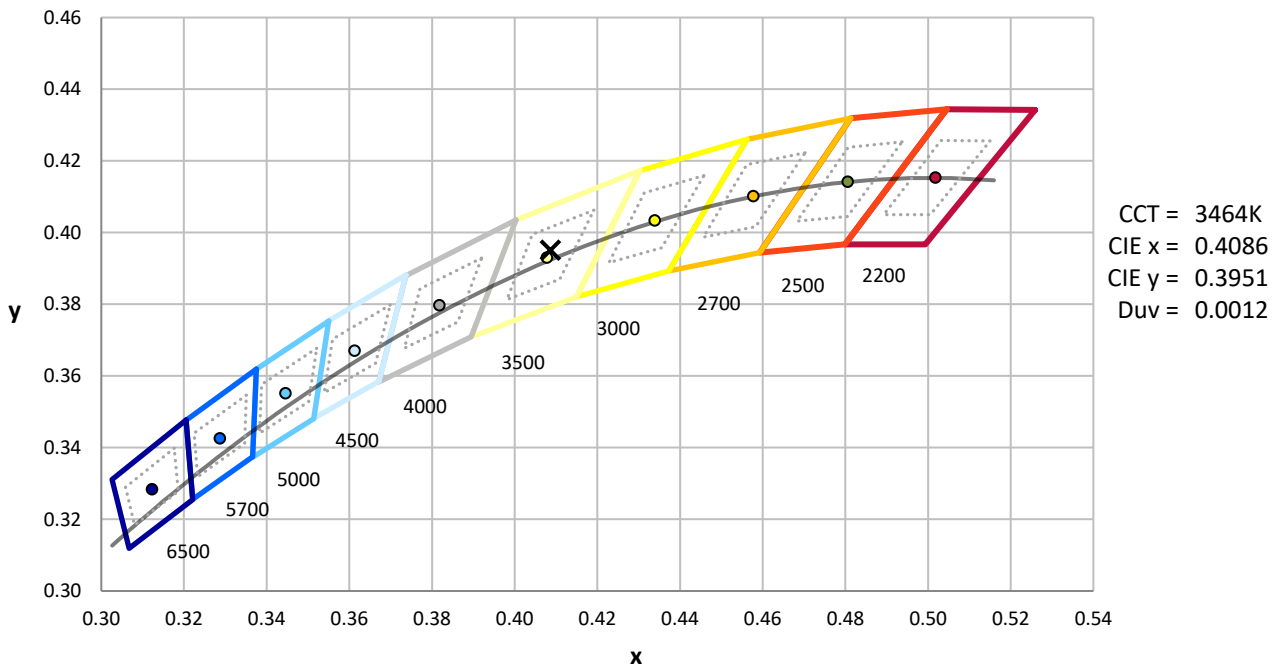

Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-24

### Photopic Flux vs. Wavelength

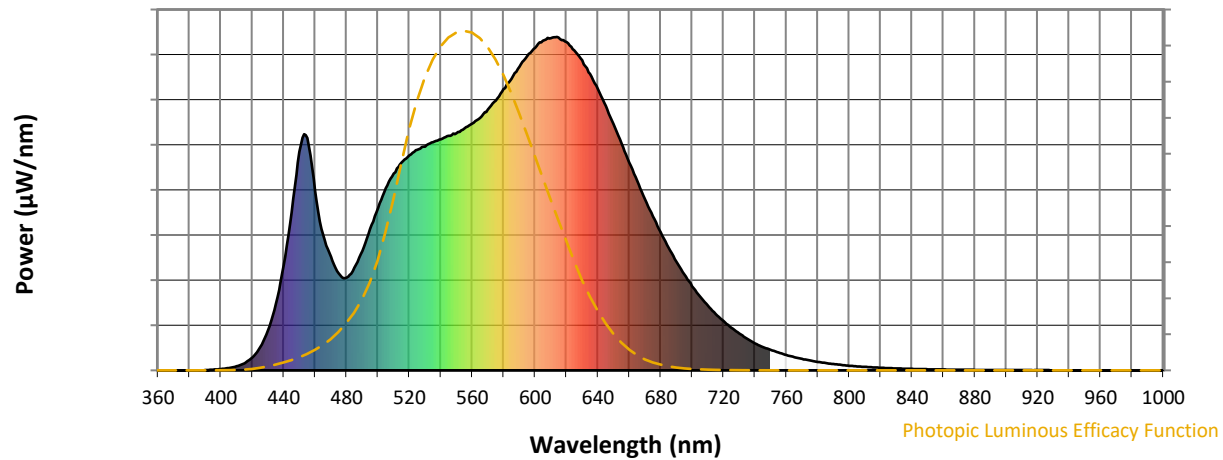


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 358                                  | NR                             | 620               | 985                                  | NR                             | 750               | 62                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 424                                  | NR                             | 625               | 960                                  | NR                             | 755               | 53                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 486                                  | NR                             | 630               | 930                                  | NR                             | 760               | 46                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 547                                  | NR                             | 635               | 889                                  | NR                             | 765               | 40                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 590                                  | NR                             | 640               | 844                                  | NR                             | 770               | 34                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 623                                  | NR                             | 645               | 792                                  | NR                             | 775               | 30                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 645                                  | NR                             | 650               | 738                                  | NR                             | 780               | 25                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 662                                  | NR                             | 655               | 681                                  | NR                             | 785               | 22                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 671                                  | NR                             | 660               | 623                                  | NR                             | 790               | 19                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 7                                    | NR                             | 535               | 685                                  | NR                             | 665               | 568                                  | NR                             | 795               | 16                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 12                                   | NR                             | 540               | 693                                  | NR                             | 670               | 513                                  | NR                             | 800               | 14                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 22                                   | NR                             | 545               | 704                                  | NR                             | 675               | 461                                  | NR                             | 805               | 12                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 39                                   | NR                             | 550               | 712                                  | NR                             | 680               | 414                                  | NR                             | 810               | 10                                   | NR                             | 940               | 0                                    | NR                             |
| 425               | 70                                   | NR                             | 555               | 726                                  | NR                             | 685               | 368                                  | NR                             | 815               | 9                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 120                                  | NR                             | 560               | 740                                  | NR                             | 690               | 326                                  | NR                             | 820               | 8                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 200                                  | NR                             | 565               | 757                                  | NR                             | 695               | 288                                  | NR                             | 825               | 7                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 315                                  | NR                             | 570               | 782                                  | NR                             | 700               | 253                                  | NR                             | 830               | 6                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 475                                  | NR                             | 575               | 809                                  | NR                             | 705               | 222                                  | NR                             | 835               | 5                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 656                                  | NR                             | 580               | 844                                  | NR                             | 710               | 194                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 697                                  | NR                             | 585               | 874                                  | NR                             | 715               | 169                                  | NR                             | 845               | 4                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 539                                  | NR                             | 590               | 911                                  | NR                             | 720               | 148                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 408                                  | NR                             | 595               | 943                                  | NR                             | 725               | 128                                  | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 341                                  | NR                             | 600               | 968                                  | NR                             | 730               | 111                                  | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 291                                  | NR                             | 605               | 988                                  | NR                             | 735               | 95                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 278                                  | NR                             | 610               | 996                                  | NR                             | 740               | 81                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 308                                  | NR                             | 615               | 998                                  | NR                             | 745               | 70                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-24

### Scotopic Flux vs. Wavelength

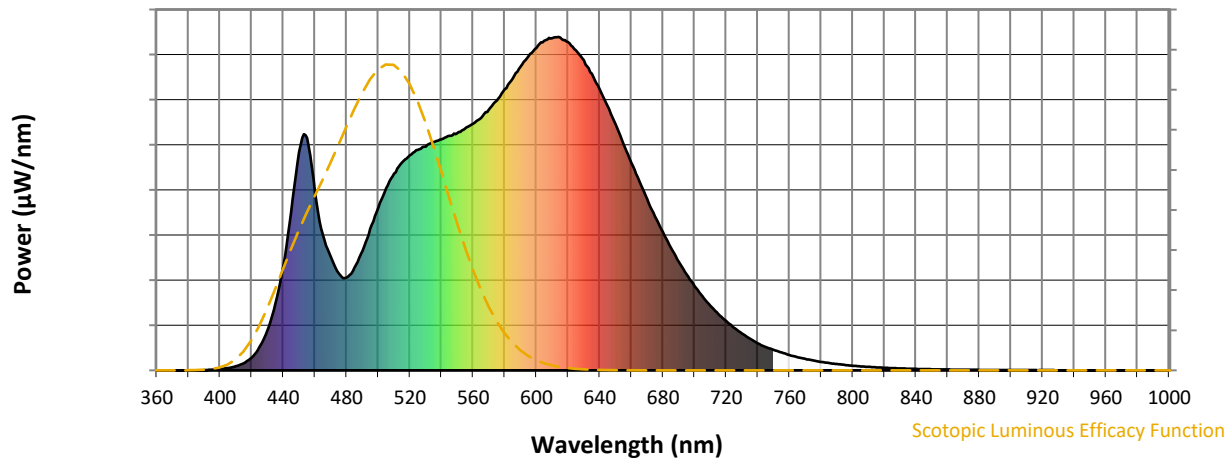


Scotopic Lumens: NR

S/P: 1.6

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 358                         | NR               | 620       | 985                         | NR               | 750       | 62                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 424                         | NR               | 625       | 960                         | NR               | 755       | 53                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 486                         | NR               | 630       | 930                         | NR               | 760       | 46                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 547                         | NR               | 635       | 889                         | NR               | 765       | 40                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 590                         | NR               | 640       | 844                         | NR               | 770       | 34                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 623                         | NR               | 645       | 792                         | NR               | 775       | 30                          | NR               | 905       | 1                           | NR               |
| 390       | 1                           | NR               | 520       | 645                         | NR               | 650       | 738                         | NR               | 780       | 25                          | NR               | 910       | 1                           | NR               |
| 395       | 2                           | NR               | 525       | 662                         | NR               | 655       | 681                         | NR               | 785       | 22                          | NR               | 915       | 1                           | NR               |
| 400       | 4                           | NR               | 530       | 671                         | NR               | 660       | 623                         | NR               | 790       | 19                          | NR               | 920       | 1                           | NR               |
| 405       | 7                           | NR               | 535       | 685                         | NR               | 665       | 568                         | NR               | 795       | 16                          | NR               | 925       | 1                           | NR               |
| 410       | 12                          | NR               | 540       | 693                         | NR               | 670       | 513                         | NR               | 800       | 14                          | NR               | 930       | 0                           | NR               |
| 415       | 22                          | NR               | 545       | 704                         | NR               | 675       | 461                         | NR               | 805       | 12                          | NR               | 935       | 0                           | NR               |
| 420       | 39                          | NR               | 550       | 712                         | NR               | 680       | 414                         | NR               | 810       | 10                          | NR               | 940       | 0                           | NR               |
| 425       | 70                          | NR               | 555       | 726                         | NR               | 685       | 368                         | NR               | 815       | 9                           | NR               | 945       | 0                           | NR               |
| 430       | 120                         | NR               | 560       | 740                         | NR               | 690       | 326                         | NR               | 820       | 8                           | NR               | 950       | 0                           | NR               |
| 435       | 200                         | NR               | 565       | 757                         | NR               | 695       | 288                         | NR               | 825       | 7                           | NR               | 955       | 0                           | NR               |
| 440       | 315                         | NR               | 570       | 782                         | NR               | 700       | 253                         | NR               | 830       | 6                           | NR               | 960       | 0                           | NR               |
| 445       | 475                         | NR               | 575       | 809                         | NR               | 705       | 222                         | NR               | 835       | 5                           | NR               | 965       | 0                           | NR               |
| 450       | 656                         | NR               | 580       | 844                         | NR               | 710       | 194                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 697                         | NR               | 585       | 874                         | NR               | 715       | 169                         | NR               | 845       | 4                           | NR               | 975       | 0                           | NR               |
| 460       | 539                         | NR               | 590       | 911                         | NR               | 720       | 148                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 408                         | NR               | 595       | 943                         | NR               | 725       | 128                         | NR               | 855       | 3                           | NR               | 985       | 0                           | NR               |
| 470       | 341                         | NR               | 600       | 968                         | NR               | 730       | 111                         | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 291                         | NR               | 605       | 988                         | NR               | 735       | 95                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 278                         | NR               | 610       | 996                         | NR               | 740       | 81                          | NR               | 870       | 2                           | NR               | 1000      | 0                           | NR               |
| 485       | 308                         | NR               | 615       | 998                         | NR               | 745       | 70                          | NR               | 875       | 2                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2504-409-24

### Melanopic Flux vs. Wavelength

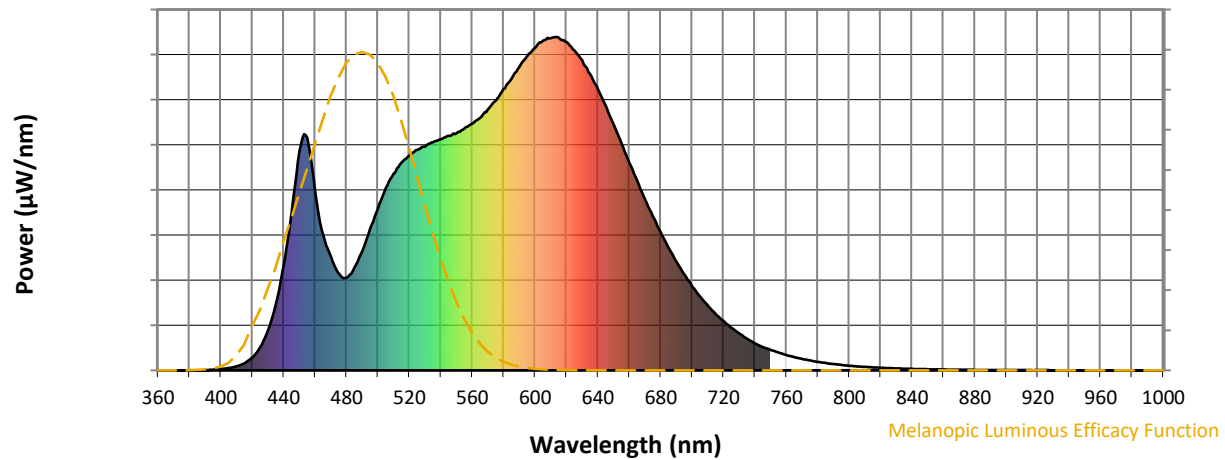
**Melanopic Lumens: NR**
**M/P: 3.22**


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 358                                    | NR                             | 620               | 985                                    | NR                             | 750               | 62                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 424                                    | NR                             | 625               | 960                                    | NR                             | 755               | 53                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 486                                    | NR                             | 630               | 930                                    | NR                             | 760               | 46                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 547                                    | NR                             | 635               | 889                                    | NR                             | 765               | 40                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 590                                    | NR                             | 640               | 844                                    | NR                             | 770               | 34                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 623                                    | NR                             | 645               | 792                                    | NR                             | 775               | 30                                     | NR                             | 905               | 1                                      | NR                             |
| 390               | 1                                      | NR                             | 520               | 645                                    | NR                             | 650               | 738                                    | NR                             | 780               | 25                                     | NR                             | 910               | 1                                      | NR                             |
| 395               | 2                                      | NR                             | 525               | 662                                    | NR                             | 655               | 681                                    | NR                             | 785               | 22                                     | NR                             | 915               | 1                                      | NR                             |
| 400               | 4                                      | NR                             | 530               | 671                                    | NR                             | 660               | 623                                    | NR                             | 790               | 19                                     | NR                             | 920               | 1                                      | NR                             |
| 405               | 7                                      | NR                             | 535               | 685                                    | NR                             | 665               | 568                                    | NR                             | 795               | 16                                     | NR                             | 925               | 1                                      | NR                             |
| 410               | 12                                     | NR                             | 540               | 693                                    | NR                             | 670               | 513                                    | NR                             | 800               | 14                                     | NR                             | 930               | 0                                      | NR                             |
| 415               | 22                                     | NR                             | 545               | 704                                    | NR                             | 675               | 461                                    | NR                             | 805               | 12                                     | NR                             | 935               | 0                                      | NR                             |
| 420               | 39                                     | NR                             | 550               | 712                                    | NR                             | 680               | 414                                    | NR                             | 810               | 10                                     | NR                             | 940               | 0                                      | NR                             |
| 425               | 70                                     | NR                             | 555               | 726                                    | NR                             | 685               | 368                                    | NR                             | 815               | 9                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 120                                    | NR                             | 560               | 740                                    | NR                             | 690               | 326                                    | NR                             | 820               | 8                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 200                                    | NR                             | 565               | 757                                    | NR                             | 695               | 288                                    | NR                             | 825               | 7                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 315                                    | NR                             | 570               | 782                                    | NR                             | 700               | 253                                    | NR                             | 830               | 6                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 475                                    | NR                             | 575               | 809                                    | NR                             | 705               | 222                                    | NR                             | 835               | 5                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 656                                    | NR                             | 580               | 844                                    | NR                             | 710               | 194                                    | NR                             | 840               | 4                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 697                                    | NR                             | 585               | 874                                    | NR                             | 715               | 169                                    | NR                             | 845               | 4                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 539                                    | NR                             | 590               | 911                                    | NR                             | 720               | 148                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 408                                    | NR                             | 595               | 943                                    | NR                             | 725               | 128                                    | NR                             | 855               | 3                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 341                                    | NR                             | 600               | 968                                    | NR                             | 730               | 111                                    | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 291                                    | NR                             | 605               | 988                                    | NR                             | 735               | 95                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 278                                    | NR                             | 610               | 996                                    | NR                             | 740               | 81                                     | NR                             | 870               | 2                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 308                                    | NR                             | 615               | 998                                    | NR                             | 745               | 70                                     | NR                             | 875               | 2                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-24





TM-30-18

### Summary

$R_f = 91.8$   
 $R_g = 98.4$   
 $CIE R_a = 92.8$   
 $R_9 = 53.9$

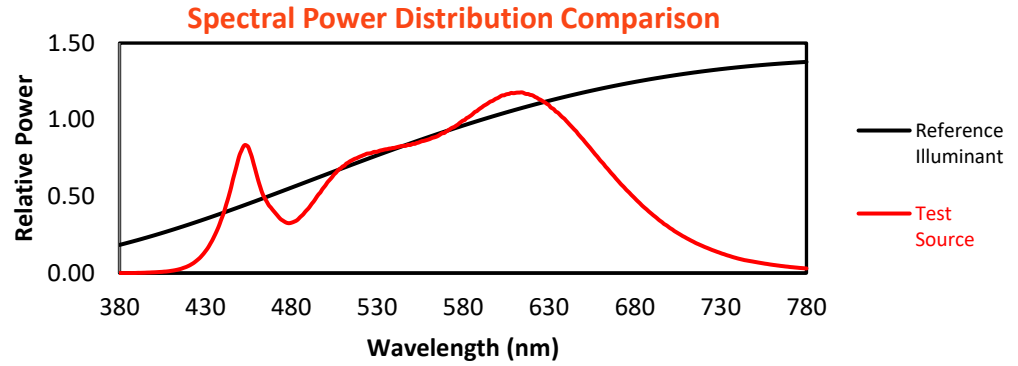





### Color Vector Graphics

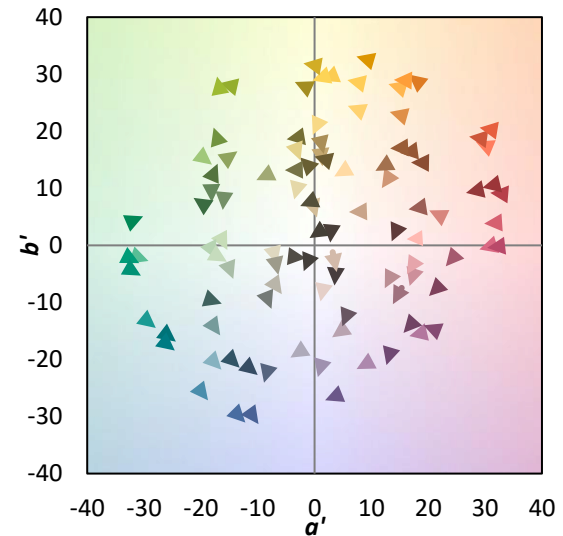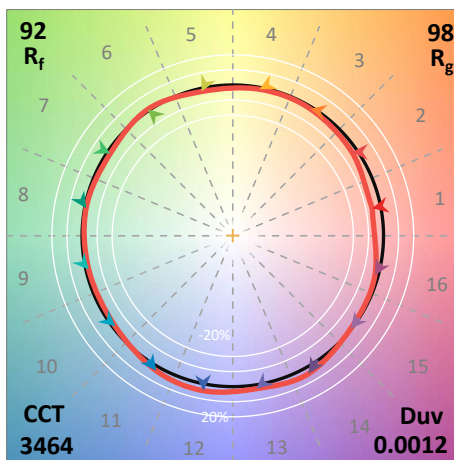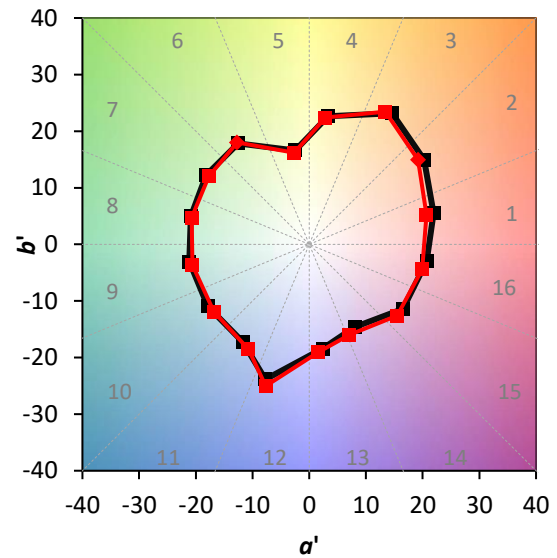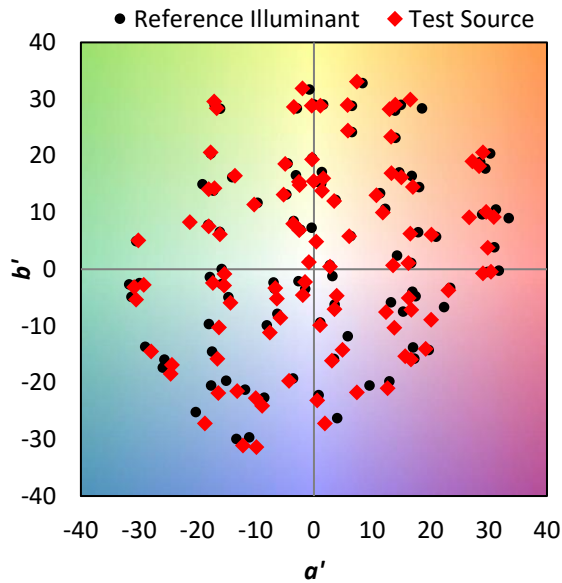



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 95 | CES51 = 98 | CES76 = 89 |
| CES02 = 62 | CES27 = 92 | CES52 = 99 | CES77 = 90 |
| CES03 = 31 | CES28 = 97 | CES53 = 98 | CES78 = 86 |
| CES04 = 70 | CES29 = 97 | CES54 = 93 | CES79 = 94 |
| CES05 = 49 | CES30 = 93 | CES55 = 92 | CES80 = 93 |
| CES06 = 51 | CES31 = 97 | CES56 = 95 | CES81 = 84 |
| CES07 = 42 | CES32 = 92 | CES57 = 94 | CES82 = 97 |
| CES08 = 41 | CES33 = 99 | CES58 = 94 | CES83 = 97 |
| CES09 = 29 | CES34 = 96 | CES59 = 97 | CES84 = 95 |
| CES10 = 75 | CES35 = 97 | CES60 = 93 | CES85 = 83 |
| CES11 = 58 | CES36 = 83 | CES61 = 93 | CES86 = 83 |
| CES12 = 64 | CES37 = 97 | CES62 = 88 | CES87 = 92 |
| CES13 = 43 | CES38 = 88 | CES63 = 93 | CES88 = 96 |
| CES14 = 74 | CES39 = 98 | CES64 = 91 | CES89 = 86 |
| CES15 = 71 | CES40 = 96 | CES65 = 88 | CES90 = 96 |
| CES16 = 47 | CES41 = 97 | CES66 = 89 | CES91 = 76 |
| CES17 = 49 | CES42 = 96 | CES67 = 88 | CES92 = 78 |
| CES18 = 56 | CES43 = 96 | CES68 = 90 | CES93 = 87 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 78 |
| CES20 = 66 | CES45 = 98 | CES70 = 88 | CES95 = 83 |
| CES21 = 86 | CES46 = 97 | CES71 = 83 | CES96 = 91 |
| CES22 = 78 | CES47 = 95 | CES72 = 95 | CES97 = 96 |
| CES23 = 91 | CES48 = 91 | CES73 = 83 | CES98 = 94 |
| CES24 = 90 | CES49 = 96 | CES74 = 92 | CES99 = 90 |
| CES25 = 71 | CES50 = 98 | CES75 = 84 |            |

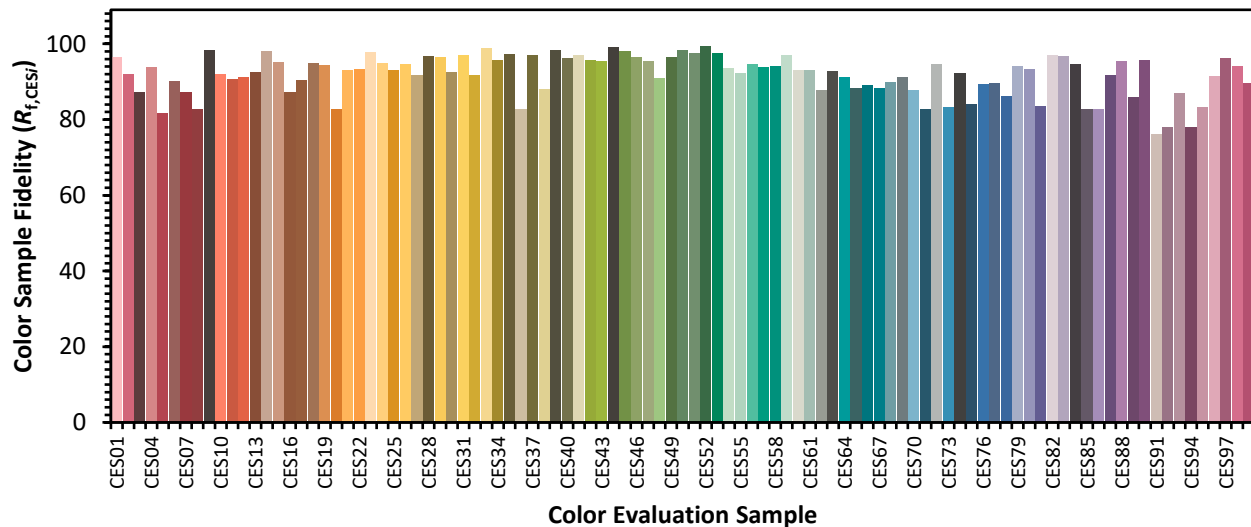

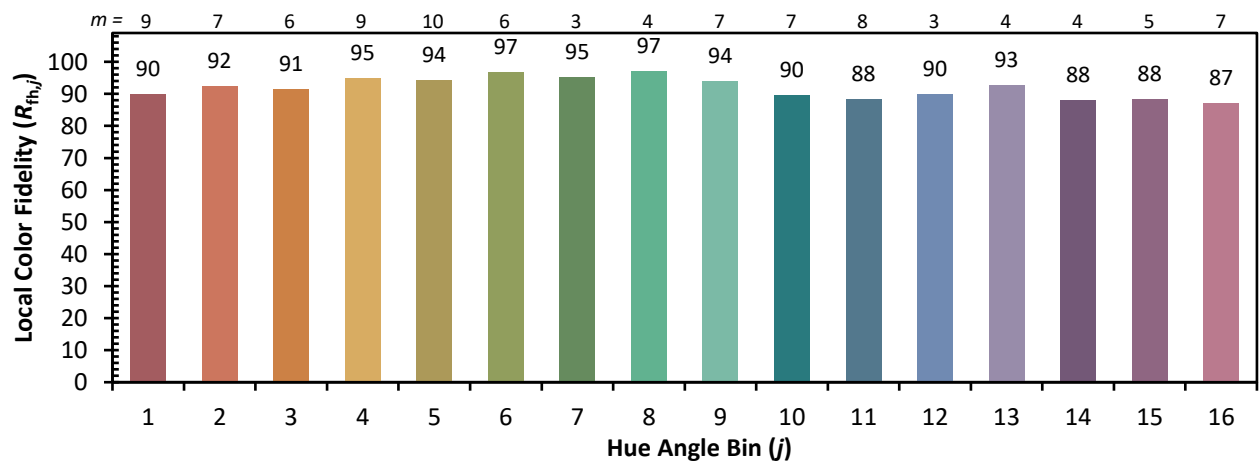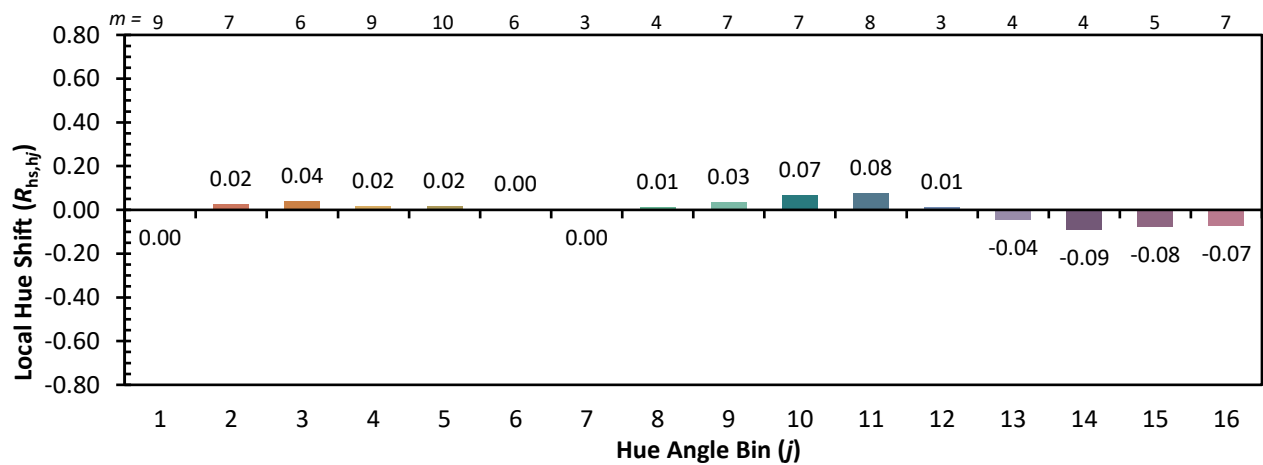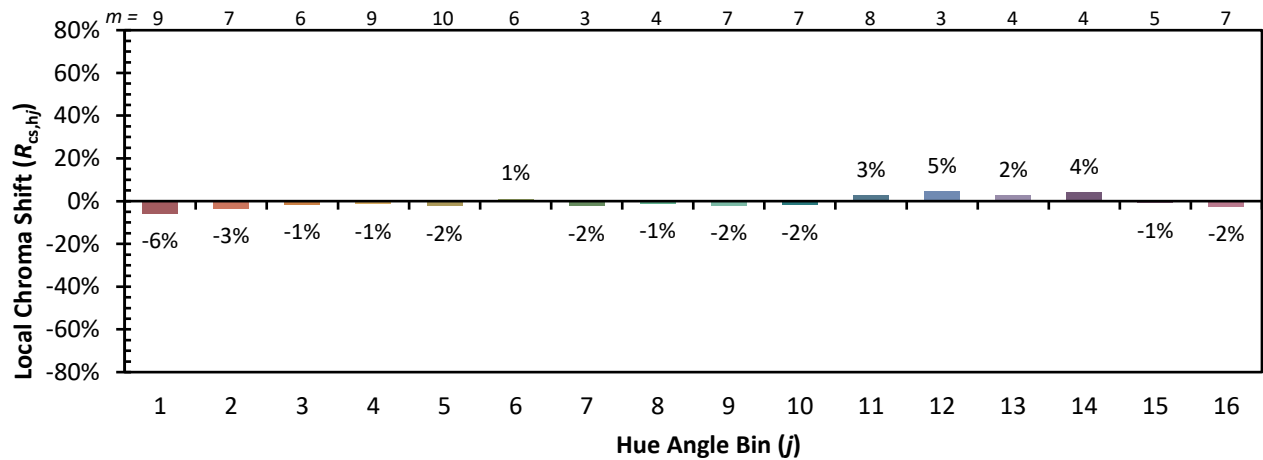**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**

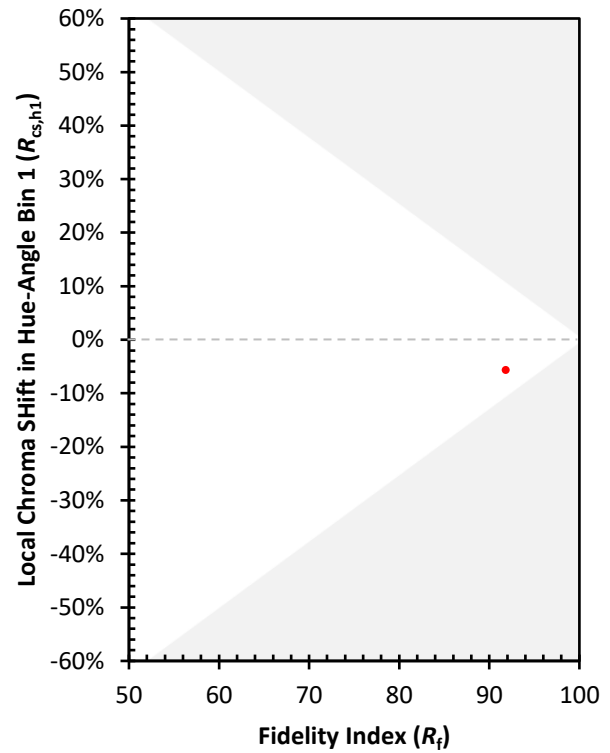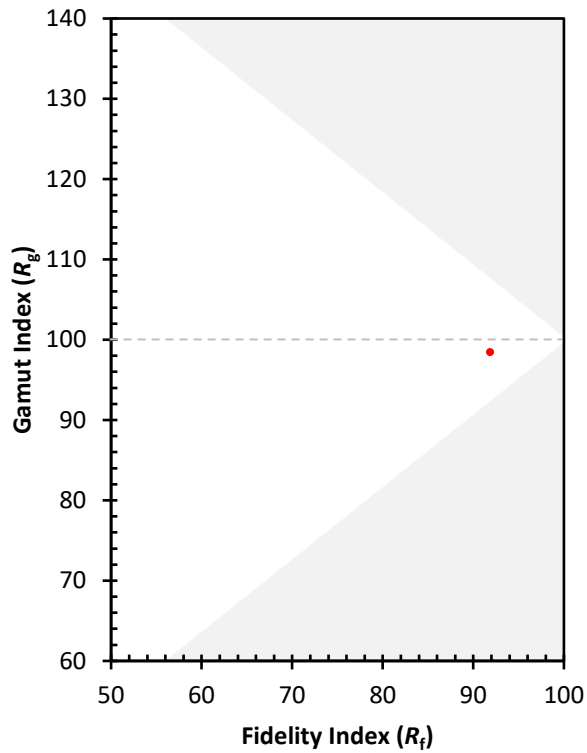

(END OF REPORT)