

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1257735

Luminaire Tested: P3A17R259040DE010 E3DLP1WMH

Issue Date: 1/30/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1257735  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2601-647-9)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/30/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A17R259040DE010 E3DLP1WMH  
Description: 3in Adjustable LED luminaire with, R25 optic, 4000K CCT AND, 90CRI , E3DLP1WMH TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 888.0 lumens  
Efficiency: N/A  
Efficacy: 41.9 lumens/watt  
Spacing Criteria (0/90/45): 0.62 / 0.62 / 0.68  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 21.2  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1257735

CATALOG NUMBER: P3A17R259040DE010 E3DLP1WMH

### Luminous Intensity Polar Plot

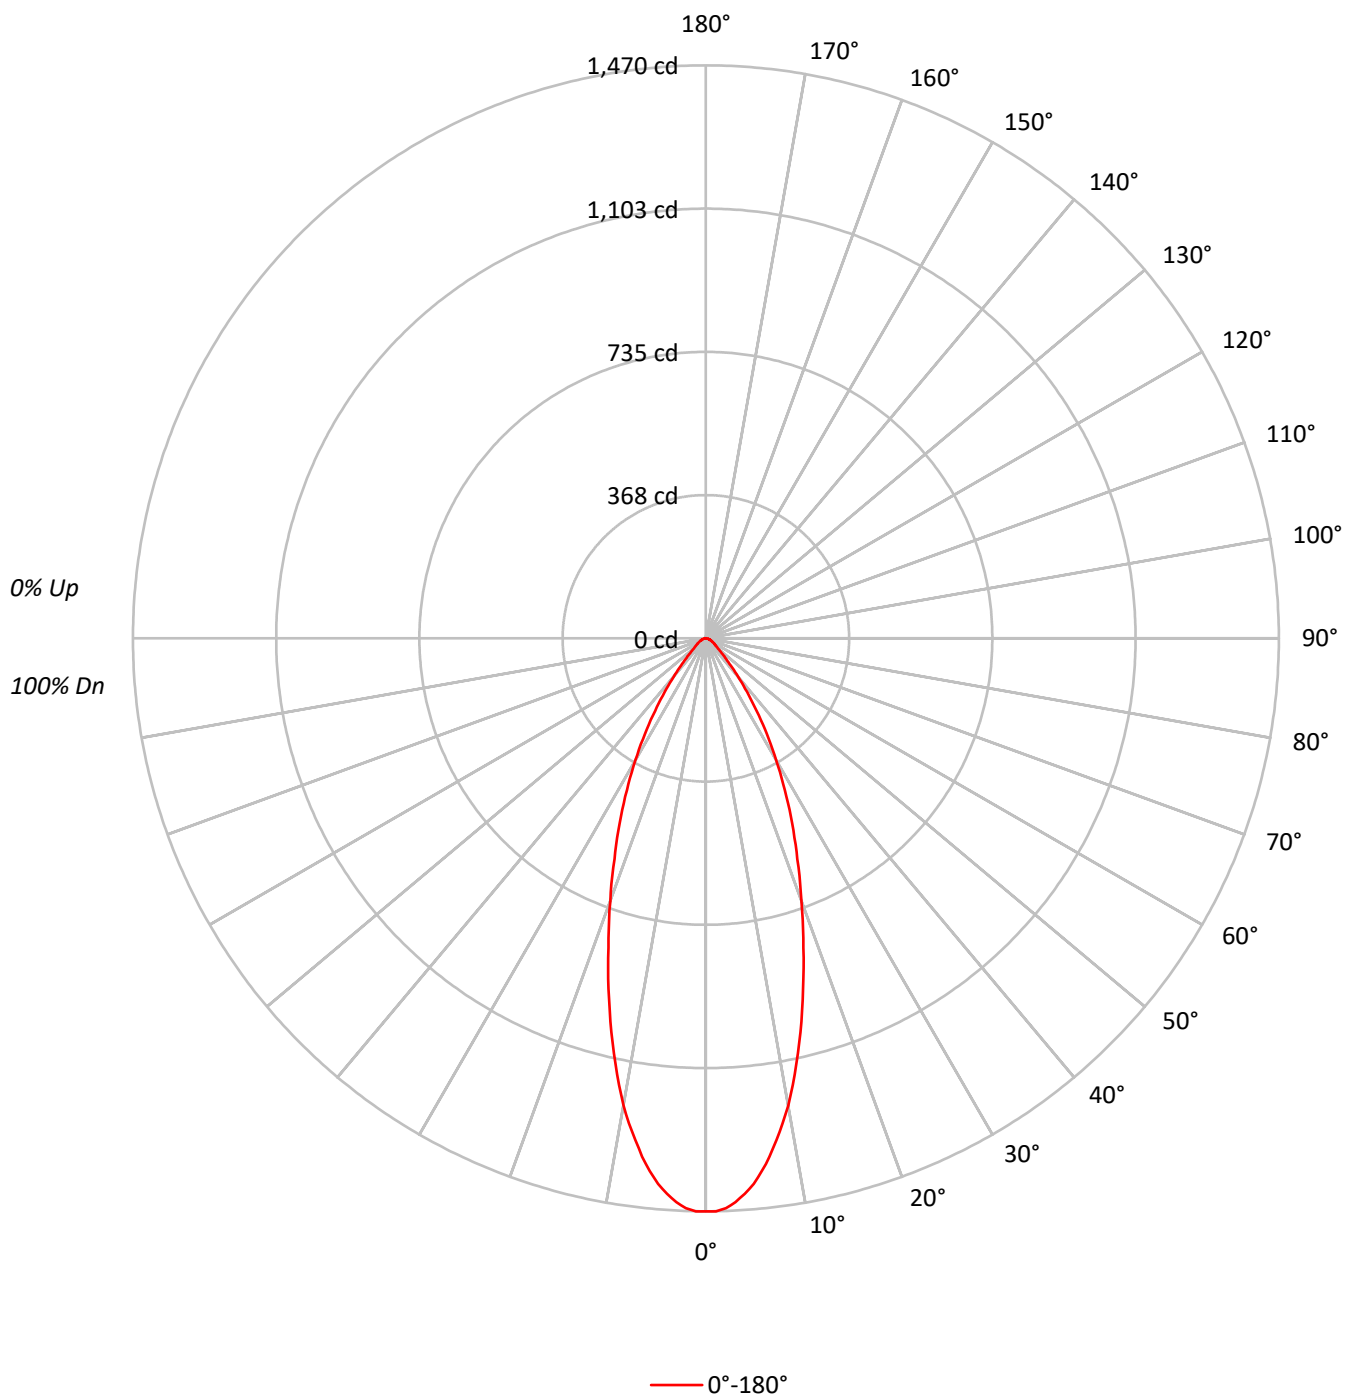

TEST NUMBER: P1257735

CATALOG NUMBER: P3A17R259040DE010 E3DLP1WMH

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 113 | 110 | 108 | 105 | 111 | 108 | 106 | 104 | 104 | 102 | 101 |  | 100 | 99  | 98  |  | 97  |
| 2   | 107 | 102 | 98  | 95  | 105 | 101 | 97  | 94  | 97  | 94  | 92  |  | 94  | 92  | 90  |  | 92  |
| 3   | 102 | 95  | 90  | 86  | 100 | 94  | 89  | 86  | 91  | 87  | 84  |  | 89  | 86  | 83  |  | 87  |
| 4   | 97  | 89  | 84  | 79  | 95  | 88  | 83  | 79  | 86  | 81  | 78  |  | 84  | 80  | 77  |  | 82  |
| 5   | 92  | 84  | 78  | 74  | 91  | 83  | 77  | 73  | 81  | 76  | 73  |  | 79  | 75  | 72  |  | 78  |
| 6   | 88  | 79  | 73  | 69  | 86  | 78  | 72  | 68  | 77  | 72  | 68  |  | 75  | 71  | 67  |  | 74  |
| 7   | 84  | 74  | 68  | 64  | 82  | 74  | 68  | 64  | 72  | 67  | 64  |  | 71  | 67  | 63  |  | 70  |
| 8   | 80  | 70  | 65  | 60  | 79  | 70  | 64  | 60  | 69  | 64  | 60  |  | 68  | 63  | 60  |  | 67  |
| 9   | 76  | 67  | 61  | 57  | 75  | 66  | 61  | 57  | 65  | 60  | 57  |  | 65  | 60  | 57  |  | 64  |
| 10  | 73  | 64  | 58  | 54  | 72  | 63  | 58  | 54  | 62  | 57  | 54  |  | 62  | 57  | 54  |  | 61  |

**AVERAGE LUMINANCE (cd/sqm):**

|     |        |
|-----|--------|
|     | 0°     |
| 0°  | 322386 |
| 5°  | 309310 |
| 10° | 270959 |
| 15° | 217799 |
| 20° | 167338 |
| 25° | 126612 |
| 30° | 91482  |
| 35° | 60766  |
| 40° | 36840  |
| 45° | 21460  |
| 50° | 13680  |
| 55° | 11125  |
| 60° | 9736   |
| 65° | 8613   |
| 70° | 7117   |
| 75° | 7032   |
| 80° | 5304   |
| 85° | 7045   |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 21460 cd/sqm

TEST NUMBER: P1257735

CATALOG NUMBER: P3A17R259040DE010 E3DLP1WMH

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 127.9  | 14.4      |
| 10°-20°   | 265.3  | 29.9      |
| 20°-30°   | 239.9  | 27.0      |
| 30°-40°   | 144.1  | 16.2      |
| 40°-50°   | 57.2   | 6.4       |
| 50°-60°   | 26.4   | 3.0       |
| 60°-70°   | 16.1   | 1.8       |
| 70°-80°   | 8.6    | 1.0       |
| 80°-90°   | 2.5    | 0.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 633.1  | 71.3      |
| 0°-40°    | 777.2  | 87.5      |
| 0°-60°    | 860.8  | 96.9      |
| 0°-90°    | 888.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 888.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | Flux |
|-----|------|------|
| 0°  | 1470 |      |
| 5°  | 1405 | 128  |
| 15° | 959  | 265  |
| 25° | 523  | 240  |
| 35° | 227  | 144  |
| 45° | 69   | 57   |
| 55° | 29   | 26   |
| 65° | 17   | 16   |
| 75° | 8    | 9    |
| 85° | 3    | 2    |
| 90° | 0    |      |

TEST NUMBER: P1257735

CATALOG NUMBER: P3A17R259040DE010 E3DLP1WMH

**CANDELA DISTRIBUTION (FULL):**

| 0°    |        |
|-------|--------|
| 0°    | 1470.2 |
| 1°    | 1470.2 |
| 2°    | 1463.3 |
| 3°    | 1448.1 |
| 4°    | 1428.7 |
| 5°    | 1405.2 |
| 6°    | 1374.7 |
| 7°    | 1340.1 |
| 8°    | 1299.9 |
| 9°    | 1259.8 |
| 10°   | 1216.9 |
| 11°   | 1167.0 |
| 12°   | 1115.8 |
| 13°   | 1064.6 |
| 14°   | 1013.4 |
| 15°   | 959.4  |
| 17.5° | 832.0  |
| 20°   | 717.1  |
| 22.5° | 613.3  |
| 25°   | 523.3  |
| 27.5° | 438.9  |
| 30°   | 361.3  |
| 32.5° | 290.7  |
| 35°   | 227.0  |
| 37.5° | 173.0  |
| 40°   | 128.7  |
| 42.5° | 94.1   |
| 45°   | 69.2   |
| 47.5° | 52.6   |
| 50°   | 40.1   |
| 52.5° | 33.2   |
| 55°   | 29.1   |
| 57.5° | 24.9   |
| 60°   | 22.2   |
| 62.5° | 18.0   |
| 65°   | 16.6   |
| 67.5° | 13.8   |
| 70°   | 11.1   |
| 72.5° | 9.7    |
| 75°   | 8.3    |
| 77.5° | 6.9    |
| 80°   | 4.2    |
| 82.5° | 2.8    |
| 85°   | 2.8    |
| 87.5° | 1.4    |



TEST NUMBER: P1257735

CATALOG NUMBER: P3A17R259040DE010 E3DLP1WMH

CANDELA DISTRIBUTION (continued):



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-14

Test Date: 05/14/2025

Luminaire Tested: LD3A05R129040D010 E3D1H

Data in this report applies to families of products including LD3A

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-14  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 05/18/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A05R129040D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R12 optic, 4000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 4015  
 CIE  $u'$ : 0.2239  
 CIE  $v'$ : 0.5033  
 Duv: 0.0016  
 CIE x: 0.3809  
 CIE y: 0.3805  
 CIE z: 0.2386  
 Peak Wavelength (nm): 450  
 Dominant Wavelength (nm): 578  
 Purity: 28.51686  
 R<sub>f</sub>: 91.5  
 R<sub>g</sub>: 100.3

CRI (Ra): 92.3  
 R1: 93.1  
 R2: 93.8  
 R3: 94.2  
 R4: 94.2  
 R5: 92.7  
 R6: 91.9  
 R7: 94.0  
 R8: 84.8  
 R9: 58.4  
 R10: 85.3  
 R11: 94.4  
 R12: 74.9  
 R13: 93.3  
 R14: 96.5  
 R15: 89.0



### Test Conditions

Stabilization Time: 26M  
 Operation Time: 1H 26M  
 Sphere Temperature (°C): 24.9

REPORT NUMBER: SP1-2504-409-14

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 12/16/2024       | 6/16/2025            |
| Power Meter                    | INXT2011004           | 1/21/2025        | 1/21/2026            |
| AC Power Source                | IN0063                | 10/22/2024       | 10/22/2025           |
| DC Power Source                | IN0208                | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | IN0085                | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | IN0046                | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-14

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-14

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>λ</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 385                      | NR            | 620    | 871                      | NR            | 750    | 49                       | NR            | 880    | 1                        | NR            |
| 365    | 0                        | NR            | 495    | 468                      | NR            | 625    | 849                      | NR            | 755    | 42                       | NR            | 885    | 1                        | NR            |
| 370    | 0                        | NR            | 500    | 547                      | NR            | 630    | 819                      | NR            | 760    | 36                       | NR            | 890    | 1                        | NR            |
| 375    | 0                        | NR            | 505    | 609                      | NR            | 635    | 784                      | NR            | 765    | 31                       | NR            | 895    | 1                        | NR            |
| 380    | 0                        | NR            | 510    | 652                      | NR            | 640    | 744                      | NR            | 770    | 27                       | NR            | 900    | 1                        | NR            |
| 385    | 1                        | NR            | 515    | 684                      | NR            | 645    | 697                      | NR            | 775    | 23                       | NR            | 905    | 0                        | NR            |
| 390    | 2                        | NR            | 520    | 702                      | NR            | 650    | 645                      | NR            | 780    | 20                       | NR            | 910    | 0                        | NR            |
| 395    | 4                        | NR            | 525    | 710                      | NR            | 655    | 594                      | NR            | 785    | 17                       | NR            | 915    | 0                        | NR            |
| 400    | 6                        | NR            | 530    | 718                      | NR            | 660    | 541                      | NR            | 790    | 14                       | NR            | 920    | 0                        | NR            |
| 405    | 9                        | NR            | 535    | 723                      | NR            | 665    | 491                      | NR            | 795    | 12                       | NR            | 925    | 0                        | NR            |
| 410    | 15                       | NR            | 540    | 729                      | NR            | 670    | 441                      | NR            | 800    | 11                       | NR            | 930    | 0                        | NR            |
| 415    | 26                       | NR            | 545    | 731                      | NR            | 675    | 395                      | NR            | 805    | 9                        | NR            | 935    | 0                        | NR            |
| 420    | 49                       | NR            | 550    | 731                      | NR            | 680    | 352                      | NR            | 810    | 8                        | NR            | 940    | 0                        | NR            |
| 425    | 95                       | NR            | 555    | 736                      | NR            | 685    | 312                      | NR            | 815    | 7                        | NR            | 945    | 0                        | NR            |
| 430    | 173                      | NR            | 560    | 740                      | NR            | 690    | 275                      | NR            | 820    | 6                        | NR            | 950    | 0                        | NR            |
| 435    | 305                      | NR            | 565    | 746                      | NR            | 695    | 241                      | NR            | 825    | 5                        | NR            | 955    | 0                        | NR            |
| 440    | 511                      | NR            | 570    | 757                      | NR            | 700    | 210                      | NR            | 830    | 4                        | NR            | 960    | 0                        | NR            |
| 445    | 811                      | NR            | 575    | 768                      | NR            | 705    | 184                      | NR            | 835    | 4                        | NR            | 965    | 0                        | NR            |
| 450    | 1000                     | NR            | 580    | 785                      | NR            | 710    | 159                      | NR            | 840    | 3                        | NR            | 970    | 0                        | NR            |
| 455    | 760                      | NR            | 585    | 803                      | NR            | 715    | 139                      | NR            | 845    | 3                        | NR            | 975    | 0                        | NR            |
| 460    | 496                      | NR            | 590    | 826                      | NR            | 720    | 120                      | NR            | 850    | 3                        | NR            | 980    | 0                        | NR            |
| 465    | 392                      | NR            | 595    | 848                      | NR            | 725    | 104                      | NR            | 855    | 2                        | NR            | 985    | 0                        | NR            |
| 470    | 302                      | NR            | 600    | 865                      | NR            | 730    | 89                       | NR            | 860    | 2                        | NR            | 990    | 0                        | NR            |
| 475    | 253                      | NR            | 605    | 879                      | NR            | 735    | 76                       | NR            | 865    | 2                        | NR            | 995    | 0                        | NR            |
| 480    | 269                      | NR            | 610    | 882                      | NR            | 740    | 65                       | NR            | 870    | 1                        | NR            | 1000   | 0                        | NR            |
| 485    | 319                      | NR            | 615    | 881                      | NR            | 745    | 55                       | NR            | 875    | 1                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2504-409-14

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.77

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(Φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 385                         | NR               | 620       | 871                         | NR               | 750       | 49                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 468                         | NR               | 625       | 849                         | NR               | 755       | 42                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 547                         | NR               | 630       | 819                         | NR               | 760       | 36                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 609                         | NR               | 635       | 784                         | NR               | 765       | 31                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 652                         | NR               | 640       | 744                         | NR               | 770       | 27                          | NR               | 900       | 1                           | NR               |
| 385       | 1                           | NR               | 515       | 684                         | NR               | 645       | 697                         | NR               | 775       | 23                          | NR               | 905       | 0                           | NR               |
| 390       | 2                           | NR               | 520       | 702                         | NR               | 650       | 645                         | NR               | 780       | 20                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 710                         | NR               | 655       | 594                         | NR               | 785       | 17                          | NR               | 915       | 0                           | NR               |
| 400       | 6                           | NR               | 530       | 718                         | NR               | 660       | 541                         | NR               | 790       | 14                          | NR               | 920       | 0                           | NR               |
| 405       | 9                           | NR               | 535       | 723                         | NR               | 665       | 491                         | NR               | 795       | 12                          | NR               | 925       | 0                           | NR               |
| 410       | 15                          | NR               | 540       | 729                         | NR               | 670       | 441                         | NR               | 800       | 11                          | NR               | 930       | 0                           | NR               |
| 415       | 26                          | NR               | 545       | 731                         | NR               | 675       | 395                         | NR               | 805       | 9                           | NR               | 935       | 0                           | NR               |
| 420       | 49                          | NR               | 550       | 731                         | NR               | 680       | 352                         | NR               | 810       | 8                           | NR               | 940       | 0                           | NR               |
| 425       | 95                          | NR               | 555       | 736                         | NR               | 685       | 312                         | NR               | 815       | 7                           | NR               | 945       | 0                           | NR               |
| 430       | 173                         | NR               | 560       | 740                         | NR               | 690       | 275                         | NR               | 820       | 6                           | NR               | 950       | 0                           | NR               |
| 435       | 305                         | NR               | 565       | 746                         | NR               | 695       | 241                         | NR               | 825       | 5                           | NR               | 955       | 0                           | NR               |
| 440       | 511                         | NR               | 570       | 757                         | NR               | 700       | 210                         | NR               | 830       | 4                           | NR               | 960       | 0                           | NR               |
| 445       | 811                         | NR               | 575       | 768                         | NR               | 705       | 184                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 1000                        | NR               | 580       | 785                         | NR               | 710       | 159                         | NR               | 840       | 3                           | NR               | 970       | 0                           | NR               |
| 455       | 760                         | NR               | 585       | 803                         | NR               | 715       | 139                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 496                         | NR               | 590       | 826                         | NR               | 720       | 120                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 392                         | NR               | 595       | 848                         | NR               | 725       | 104                         | NR               | 855       | 2                           | NR               | 985       | 0                           | NR               |
| 470       | 302                         | NR               | 600       | 865                         | NR               | 730       | 89                          | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 253                         | NR               | 605       | 879                         | NR               | 735       | 76                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 269                         | NR               | 610       | 882                         | NR               | 740       | 65                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 319                         | NR               | 615       | 881                         | NR               | 745       | 55                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2504-409-14

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.62

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 385                                    | NR                             | 620               | 871                                    | NR                             | 750               | 49                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 468                                    | NR                             | 625               | 849                                    | NR                             | 755               | 42                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 547                                    | NR                             | 630               | 819                                    | NR                             | 760               | 36                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 609                                    | NR                             | 635               | 784                                    | NR                             | 765               | 31                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 652                                    | NR                             | 640               | 744                                    | NR                             | 770               | 27                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 684                                    | NR                             | 645               | 697                                    | NR                             | 775               | 23                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 702                                    | NR                             | 650               | 645                                    | NR                             | 780               | 20                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 710                                    | NR                             | 655               | 594                                    | NR                             | 785               | 17                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 6                                      | NR                             | 530               | 718                                    | NR                             | 660               | 541                                    | NR                             | 790               | 14                                     | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 723                                    | NR                             | 665               | 491                                    | NR                             | 795               | 12                                     | NR                             | 925               | 0                                      | NR                             |
| 410               | 15                                     | NR                             | 540               | 729                                    | NR                             | 670               | 441                                    | NR                             | 800               | 11                                     | NR                             | 930               | 0                                      | NR                             |
| 415               | 26                                     | NR                             | 545               | 731                                    | NR                             | 675               | 395                                    | NR                             | 805               | 9                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 49                                     | NR                             | 550               | 731                                    | NR                             | 680               | 352                                    | NR                             | 810               | 8                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 95                                     | NR                             | 555               | 736                                    | NR                             | 685               | 312                                    | NR                             | 815               | 7                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 173                                    | NR                             | 560               | 740                                    | NR                             | 690               | 275                                    | NR                             | 820               | 6                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 305                                    | NR                             | 565               | 746                                    | NR                             | 695               | 241                                    | NR                             | 825               | 5                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 511                                    | NR                             | 570               | 757                                    | NR                             | 700               | 210                                    | NR                             | 830               | 4                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 811                                    | NR                             | 575               | 768                                    | NR                             | 705               | 184                                    | NR                             | 835               | 4                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 1000                                   | NR                             | 580               | 785                                    | NR                             | 710               | 159                                    | NR                             | 840               | 3                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 760                                    | NR                             | 585               | 803                                    | NR                             | 715               | 139                                    | NR                             | 845               | 3                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 496                                    | NR                             | 590               | 826                                    | NR                             | 720               | 120                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 392                                    | NR                             | 595               | 848                                    | NR                             | 725               | 104                                    | NR                             | 855               | 2                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 302                                    | NR                             | 600               | 865                                    | NR                             | 730               | 89                                     | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 253                                    | NR                             | 605               | 879                                    | NR                             | 735               | 76                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 269                                    | NR                             | 610               | 882                                    | NR                             | 740               | 65                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 319                                    | NR                             | 615               | 881                                    | NR                             | 745               | 55                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-14

TM-30-18

### Summary

$R_f = 91.5$   
 $R_g = 100.3$   
 CIE  $R_a = 92.3$   
 $R_9 = 58.4$



### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 91 | CES51 = 99 | CES76 = 84 |
| CES02 = 61 | CES27 = 93 | CES52 = 97 | CES77 = 88 |
| CES03 = 31 | CES28 = 95 | CES53 = 95 | CES78 = 80 |
| CES04 = 69 | CES29 = 92 | CES54 = 96 | CES79 = 96 |
| CES05 = 49 | CES30 = 99 | CES55 = 95 | CES80 = 92 |
| CES06 = 50 | CES31 = 93 | CES56 = 94 | CES81 = 89 |
| CES07 = 42 | CES32 = 88 | CES57 = 94 | CES82 = 96 |
| CES08 = 41 | CES33 = 95 | CES58 = 94 | CES83 = 97 |
| CES09 = 29 | CES34 = 92 | CES59 = 98 | CES84 = 94 |
| CES10 = 74 | CES35 = 95 | CES60 = 94 | CES85 = 84 |
| CES11 = 57 | CES36 = 85 | CES61 = 94 | CES86 = 87 |
| CES12 = 63 | CES37 = 94 | CES62 = 92 | CES87 = 91 |
| CES13 = 43 | CES38 = 94 | CES63 = 92 | CES88 = 96 |
| CES14 = 74 | CES39 = 98 | CES64 = 93 | CES89 = 87 |
| CES15 = 71 | CES40 = 94 | CES65 = 88 | CES90 = 97 |
| CES16 = 47 | CES41 = 99 | CES66 = 90 | CES91 = 75 |
| CES17 = 49 | CES42 = 91 | CES67 = 89 | CES92 = 79 |
| CES18 = 56 | CES43 = 91 | CES68 = 89 | CES93 = 88 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 80 |
| CES20 = 66 | CES45 = 94 | CES70 = 86 | CES95 = 83 |
| CES21 = 85 | CES46 = 95 | CES71 = 81 | CES96 = 91 |
| CES22 = 78 | CES47 = 95 | CES72 = 94 | CES97 = 93 |
| CES23 = 91 | CES48 = 95 | CES73 = 79 | CES98 = 93 |
| CES24 = 90 | CES49 = 93 | CES74 = 94 | CES99 = 91 |
| CES25 = 71 | CES50 = 99 | CES75 = 81 |            |



Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)