

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1258482

Luminaire Tested: P3A24R359040D010 E3DLP1LI

Issue Date: 1/30/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1258482  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2601-647-17)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/30/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A24R359040D010 E3DLP1LI  
Description: 3in Adjustable LED luminaire with, R35 optic, 4000K CCT AND, 90CRI , E3DLP1LI TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1348.0 lumens  
Efficiency: N/A  
Efficacy: 46.8 lumens/watt  
Spacing Criteria (0/90/45): 0.69 / 0.69 / 0.72  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 28.8  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1258482

CATALOG NUMBER: P3A24R359040D010 E3DLP1LI

### Luminous Intensity Polar Plot

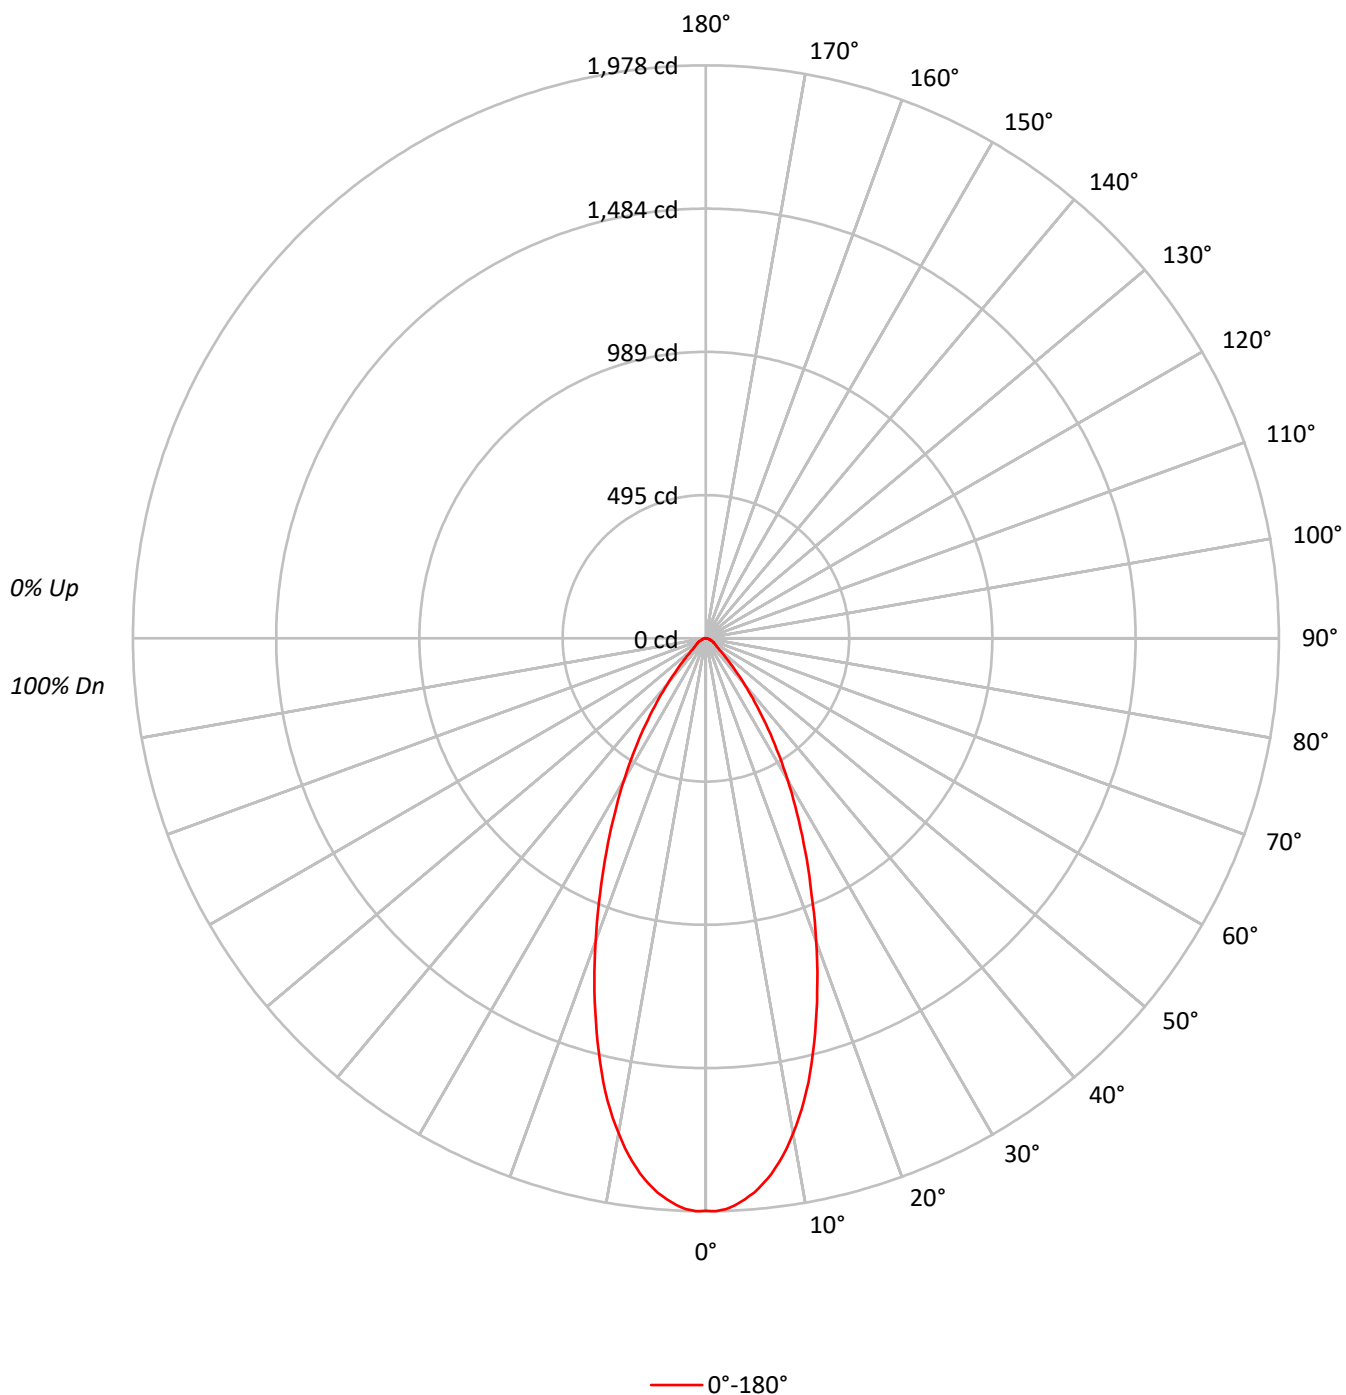

TEST NUMBER: P1258482

CATALOG NUMBER: P3A24R359040D010 E3DLP1LI

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 113 | 110 | 108 | 105 | 111 | 108 | 106 | 104 | 104 | 102 | 100 |  | 100 | 99  | 97  |  | 97  |
| 2   | 107 | 102 | 98  | 94  | 105 | 100 | 97  | 93  | 97  | 94  | 91  |  | 94  | 92  | 89  |  | 91  |
| 3   | 102 | 95  | 90  | 86  | 100 | 94  | 89  | 85  | 91  | 87  | 84  |  | 89  | 85  | 82  |  | 86  |
| 4   | 97  | 89  | 83  | 79  | 95  | 88  | 82  | 78  | 86  | 81  | 77  |  | 84  | 80  | 77  |  | 82  |
| 5   | 92  | 83  | 77  | 73  | 90  | 82  | 77  | 73  | 81  | 76  | 72  |  | 79  | 75  | 71  |  | 77  |
| 6   | 87  | 78  | 72  | 68  | 86  | 77  | 72  | 68  | 76  | 71  | 67  |  | 75  | 70  | 67  |  | 73  |
| 7   | 83  | 74  | 68  | 63  | 82  | 73  | 67  | 63  | 72  | 67  | 63  |  | 71  | 66  | 63  |  | 69  |
| 8   | 79  | 70  | 64  | 60  | 78  | 69  | 63  | 59  | 68  | 63  | 59  |  | 67  | 62  | 59  |  | 66  |
| 9   | 76  | 66  | 60  | 56  | 75  | 66  | 60  | 56  | 65  | 59  | 56  |  | 64  | 59  | 56  |  | 63  |
| 10  | 72  | 63  | 57  | 53  | 71  | 62  | 57  | 53  | 61  | 56  | 53  |  | 61  | 56  | 53  |  | 60  |

**AVERAGE LUMINANCE (cd/sqm):**

|     |        |
|-----|--------|
|     | 0°     |
| 0°  | 433277 |
| 5°  | 422605 |
| 10° | 386366 |
| 15° | 327947 |
| 20° | 259606 |
| 25° | 196342 |
| 30° | 142959 |
| 35° | 96664  |
| 40° | 59426  |
| 45° | 34112  |
| 50° | 20537  |
| 55° | 16668  |
| 60° | 14560  |
| 65° | 12920  |
| 70° | 10643  |
| 75° | 10590  |
| 80° | 10481  |
| 85° | 10567  |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 34112 cd/sqm

TEST NUMBER: P1258482

CATALOG NUMBER: P3A24R359040D010 E3DLP1LI

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 177.4  | 13.2      |
| 10°-20°   | 398.3  | 29.5      |
| 20°-30°   | 372.6  | 27.6      |
| 30°-40°   | 228.0  | 16.9      |
| 40°-50°   | 89.9   | 6.7       |
| 50°-60°   | 39.6   | 2.9       |
| 60°-70°   | 24.6   | 1.8       |
| 70°-80°   | 13.2   | 1.0       |
| 80°-90°   | 4.5    | 0.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 948.2  | 70.3      |
| 0°-40°    | 1176.2 | 87.3      |
| 0°-60°    | 1305.7 | 96.9      |
| 0°-90°    | 1348.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1348.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | Flux |
|-----|------|------|
| 0°  | 1976 |      |
| 5°  | 1920 | 177  |
| 15° | 1445 | 398  |
| 25° | 812  | 373  |
| 35° | 361  | 228  |
| 45° | 110  | 90   |
| 55° | 44   | 40   |
| 65° | 25   | 25   |
| 75° | 12   | 13   |
| 85° | 4    | 5    |
| 90° | 0    |      |

TEST NUMBER: P1258482

CATALOG NUMBER: P3A24R359040D010 E3DLP1LI

**CANDELA DISTRIBUTION (FULL):**

| 0°    |        |
|-------|--------|
| 0°    | 1975.9 |
| 1°    | 1978.0 |
| 2°    | 1971.8 |
| 3°    | 1959.3 |
| 4°    | 1940.6 |
| 5°    | 1919.9 |
| 6°    | 1892.9 |
| 7°    | 1861.8 |
| 8°    | 1824.4 |
| 9°    | 1782.9 |
| 10°   | 1735.2 |
| 11°   | 1685.4 |
| 12°   | 1631.4 |
| 13°   | 1573.3 |
| 14°   | 1508.9 |
| 15°   | 1444.6 |
| 17.5° | 1278.5 |
| 20°   | 1112.5 |
| 22.5° | 952.7  |
| 25°   | 811.5  |
| 27.5° | 680.8  |
| 30°   | 564.6  |
| 32.5° | 456.6  |
| 35°   | 361.1  |
| 37.5° | 276.0  |
| 40°   | 207.6  |
| 42.5° | 149.4  |
| 45°   | 110.0  |
| 47.5° | 78.9   |
| 50°   | 60.2   |
| 52.5° | 49.8   |
| 55°   | 43.6   |
| 57.5° | 37.4   |
| 60°   | 33.2   |
| 62.5° | 29.1   |
| 65°   | 24.9   |
| 67.5° | 20.8   |
| 70°   | 16.6   |
| 72.5° | 14.5   |
| 75°   | 12.5   |
| 77.5° | 10.4   |
| 80°   | 8.3    |
| 82.5° | 6.2    |
| 85°   | 4.2    |
| 87.5° | 2.1    |



TEST NUMBER: P1258482

CATALOG NUMBER: P3A24R359040D010 E3DLP1LI

CANDELA DISTRIBUTION (continued):



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-14

Test Date: 05/14/2025

Luminaire Tested: LD3A05R129040D010 E3D1H

Data in this report applies to families of products including LD3A

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-14  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 05/18/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A05R129040D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R12 optic, 4000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 4015  
 CIE  $u'$ : 0.2239  
 CIE  $v'$ : 0.5033  
 Duv: 0.0016  
 CIE x: 0.3809  
 CIE y: 0.3805  
 CIE z: 0.2386  
 Peak Wavelength (nm): 450  
 Dominant Wavelength (nm): 578  
 Purity: 28.51686  
 R<sub>f</sub>: 91.5  
 R<sub>g</sub>: 100.3

CRI (Ra): 92.3  
 R1: 93.1  
 R2: 93.8  
 R3: 94.2  
 R4: 94.2  
 R5: 92.7  
 R6: 91.9  
 R7: 94.0  
 R8: 84.8  
 R9: 58.4  
 R10: 85.3  
 R11: 94.4  
 R12: 74.9  
 R13: 93.3  
 R14: 96.5  
 R15: 89.0



### Test Conditions


Stabilization Time: 26M  
 Operation Time: 1H 26M  
 Sphere Temperature (°C): 24.9

REPORT NUMBER: SP1-2504-409-14


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 12/16/2024       | 6/16/2025            |
| Power Meter                    | INXT2011004           | 1/21/2025        | 1/21/2026            |
| AC Power Source                | IN0063                | 10/22/2024       | 10/22/2025           |
| DC Power Source                | IN0208                | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | IN0085                | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | IN0046                | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-14

**CIE 1931 Chromaticity Diagram**

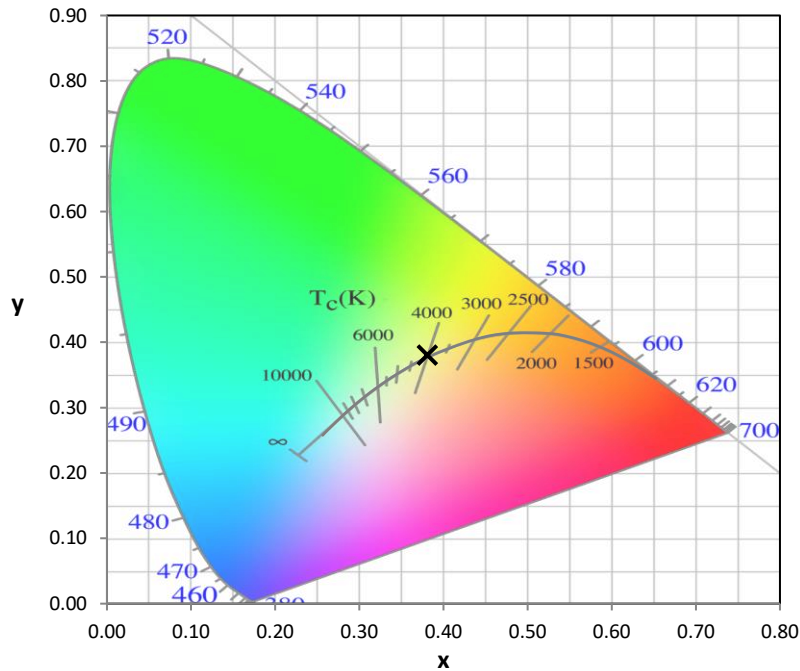

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

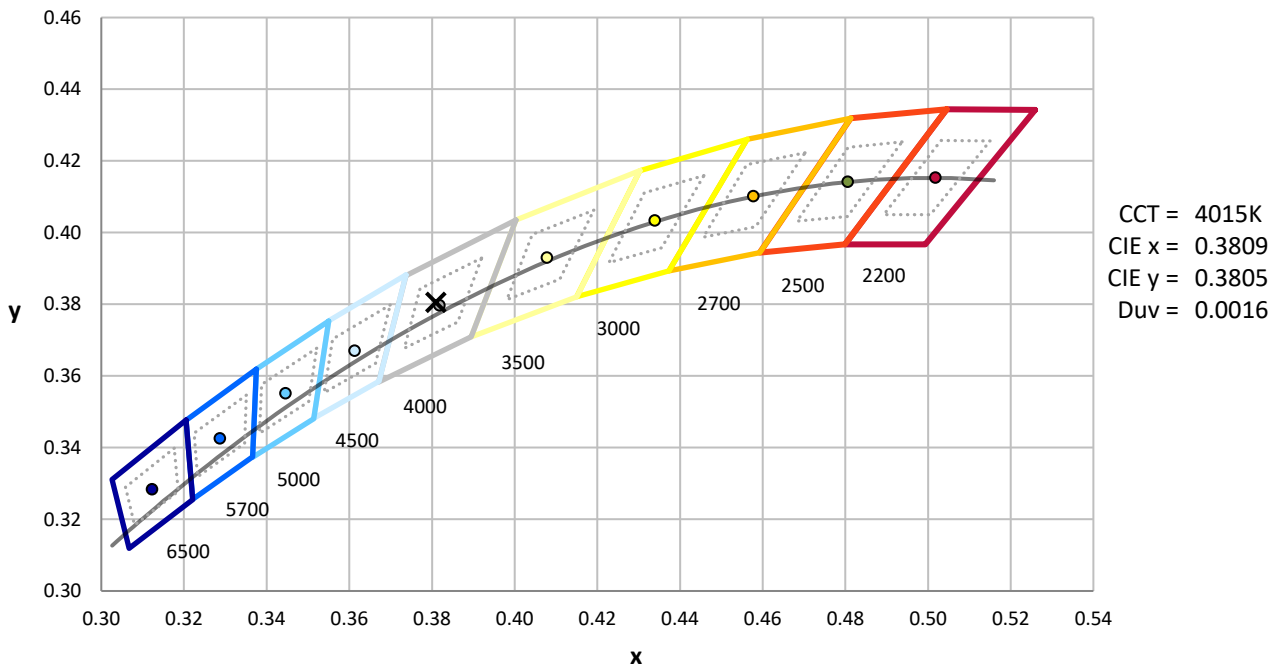

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-14

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 385                                  | NR                             | 620               | 871                                  | NR                             | 750               | 49                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 468                                  | NR                             | 625               | 849                                  | NR                             | 755               | 42                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 547                                  | NR                             | 630               | 819                                  | NR                             | 760               | 36                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 609                                  | NR                             | 635               | 784                                  | NR                             | 765               | 31                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 652                                  | NR                             | 640               | 744                                  | NR                             | 770               | 27                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 684                                  | NR                             | 645               | 697                                  | NR                             | 775               | 23                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 702                                  | NR                             | 650               | 645                                  | NR                             | 780               | 20                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 710                                  | NR                             | 655               | 594                                  | NR                             | 785               | 17                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 6                                    | NR                             | 530               | 718                                  | NR                             | 660               | 541                                  | NR                             | 790               | 14                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 9                                    | NR                             | 535               | 723                                  | NR                             | 665               | 491                                  | NR                             | 795               | 12                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 15                                   | NR                             | 540               | 729                                  | NR                             | 670               | 441                                  | NR                             | 800               | 11                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 26                                   | NR                             | 545               | 731                                  | NR                             | 675               | 395                                  | NR                             | 805               | 9                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 49                                   | NR                             | 550               | 731                                  | NR                             | 680               | 352                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 95                                   | NR                             | 555               | 736                                  | NR                             | 685               | 312                                  | NR                             | 815               | 7                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 173                                  | NR                             | 560               | 740                                  | NR                             | 690               | 275                                  | NR                             | 820               | 6                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 305                                  | NR                             | 565               | 746                                  | NR                             | 695               | 241                                  | NR                             | 825               | 5                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 511                                  | NR                             | 570               | 757                                  | NR                             | 700               | 210                                  | NR                             | 830               | 4                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 811                                  | NR                             | 575               | 768                                  | NR                             | 705               | 184                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 1000                                 | NR                             | 580               | 785                                  | NR                             | 710               | 159                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 760                                  | NR                             | 585               | 803                                  | NR                             | 715               | 139                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 496                                  | NR                             | 590               | 826                                  | NR                             | 720               | 120                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 392                                  | NR                             | 595               | 848                                  | NR                             | 725               | 104                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 302                                  | NR                             | 600               | 865                                  | NR                             | 730               | 89                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 253                                  | NR                             | 605               | 879                                  | NR                             | 735               | 76                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 269                                  | NR                             | 610               | 882                                  | NR                             | 740               | 65                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 319                                  | NR                             | 615               | 881                                  | NR                             | 745               | 55                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-14

### Scotopic Flux vs. Wavelength




Scotopic Lumens: NR

S/P: 1.77

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 385                                  | NR                             | 620               | 871                                  | NR                             | 750               | 49                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 468                                  | NR                             | 625               | 849                                  | NR                             | 755               | 42                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 547                                  | NR                             | 630               | 819                                  | NR                             | 760               | 36                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 609                                  | NR                             | 635               | 784                                  | NR                             | 765               | 31                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 652                                  | NR                             | 640               | 744                                  | NR                             | 770               | 27                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 684                                  | NR                             | 645               | 697                                  | NR                             | 775               | 23                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 702                                  | NR                             | 650               | 645                                  | NR                             | 780               | 20                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 710                                  | NR                             | 655               | 594                                  | NR                             | 785               | 17                                   | NR                             | 915               | 0                                    | NR                             |
| 400               | 6                                    | NR                             | 530               | 718                                  | NR                             | 660               | 541                                  | NR                             | 790               | 14                                   | NR                             | 920               | 0                                    | NR                             |
| 405               | 9                                    | NR                             | 535               | 723                                  | NR                             | 665               | 491                                  | NR                             | 795               | 12                                   | NR                             | 925               | 0                                    | NR                             |
| 410               | 15                                   | NR                             | 540               | 729                                  | NR                             | 670               | 441                                  | NR                             | 800               | 11                                   | NR                             | 930               | 0                                    | NR                             |
| 415               | 26                                   | NR                             | 545               | 731                                  | NR                             | 675               | 395                                  | NR                             | 805               | 9                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 49                                   | NR                             | 550               | 731                                  | NR                             | 680               | 352                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 95                                   | NR                             | 555               | 736                                  | NR                             | 685               | 312                                  | NR                             | 815               | 7                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 173                                  | NR                             | 560               | 740                                  | NR                             | 690               | 275                                  | NR                             | 820               | 6                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 305                                  | NR                             | 565               | 746                                  | NR                             | 695               | 241                                  | NR                             | 825               | 5                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 511                                  | NR                             | 570               | 757                                  | NR                             | 700               | 210                                  | NR                             | 830               | 4                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 811                                  | NR                             | 575               | 768                                  | NR                             | 705               | 184                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 1000                                 | NR                             | 580               | 785                                  | NR                             | 710               | 159                                  | NR                             | 840               | 3                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 760                                  | NR                             | 585               | 803                                  | NR                             | 715               | 139                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 496                                  | NR                             | 590               | 826                                  | NR                             | 720               | 120                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 392                                  | NR                             | 595               | 848                                  | NR                             | 725               | 104                                  | NR                             | 855               | 2                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 302                                  | NR                             | 600               | 865                                  | NR                             | 730               | 89                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 253                                  | NR                             | 605               | 879                                  | NR                             | 735               | 76                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 269                                  | NR                             | 610               | 882                                  | NR                             | 740               | 65                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 319                                  | NR                             | 615               | 881                                  | NR                             | 745               | 55                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-14

### Melanopic Flux vs. Wavelength





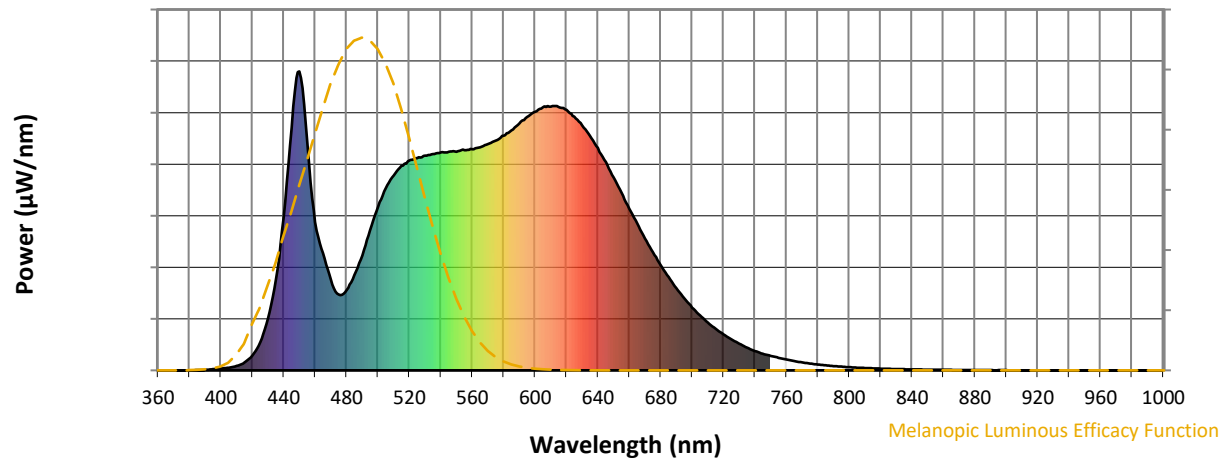


Melanopic Lumens: NR

M/P: 3.62


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 385                                    | NR                             | 620               | 871                                    | NR                             | 750               | 49                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 468                                    | NR                             | 625               | 849                                    | NR                             | 755               | 42                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 547                                    | NR                             | 630               | 819                                    | NR                             | 760               | 36                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 609                                    | NR                             | 635               | 784                                    | NR                             | 765               | 31                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 652                                    | NR                             | 640               | 744                                    | NR                             | 770               | 27                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 684                                    | NR                             | 645               | 697                                    | NR                             | 775               | 23                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 702                                    | NR                             | 650               | 645                                    | NR                             | 780               | 20                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 710                                    | NR                             | 655               | 594                                    | NR                             | 785               | 17                                     | NR                             | 915               | 0                                      | NR                             |
| 400               | 6                                      | NR                             | 530               | 718                                    | NR                             | 660               | 541                                    | NR                             | 790               | 14                                     | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 723                                    | NR                             | 665               | 491                                    | NR                             | 795               | 12                                     | NR                             | 925               | 0                                      | NR                             |
| 410               | 15                                     | NR                             | 540               | 729                                    | NR                             | 670               | 441                                    | NR                             | 800               | 11                                     | NR                             | 930               | 0                                      | NR                             |
| 415               | 26                                     | NR                             | 545               | 731                                    | NR                             | 675               | 395                                    | NR                             | 805               | 9                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 49                                     | NR                             | 550               | 731                                    | NR                             | 680               | 352                                    | NR                             | 810               | 8                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 95                                     | NR                             | 555               | 736                                    | NR                             | 685               | 312                                    | NR                             | 815               | 7                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 173                                    | NR                             | 560               | 740                                    | NR                             | 690               | 275                                    | NR                             | 820               | 6                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 305                                    | NR                             | 565               | 746                                    | NR                             | 695               | 241                                    | NR                             | 825               | 5                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 511                                    | NR                             | 570               | 757                                    | NR                             | 700               | 210                                    | NR                             | 830               | 4                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 811                                    | NR                             | 575               | 768                                    | NR                             | 705               | 184                                    | NR                             | 835               | 4                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 1000                                   | NR                             | 580               | 785                                    | NR                             | 710               | 159                                    | NR                             | 840               | 3                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 760                                    | NR                             | 585               | 803                                    | NR                             | 715               | 139                                    | NR                             | 845               | 3                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 496                                    | NR                             | 590               | 826                                    | NR                             | 720               | 120                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 392                                    | NR                             | 595               | 848                                    | NR                             | 725               | 104                                    | NR                             | 855               | 2                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 302                                    | NR                             | 600               | 865                                    | NR                             | 730               | 89                                     | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 253                                    | NR                             | 605               | 879                                    | NR                             | 735               | 76                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 269                                    | NR                             | 610               | 882                                    | NR                             | 740               | 65                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 319                                    | NR                             | 615               | 881                                    | NR                             | 745               | 55                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-14

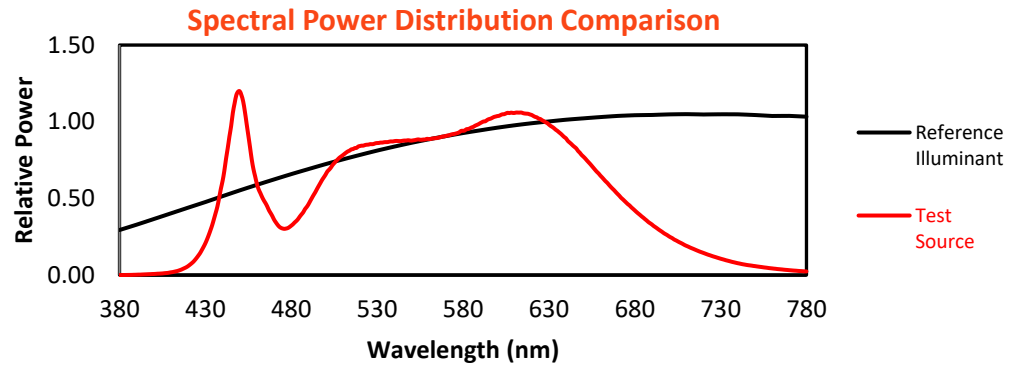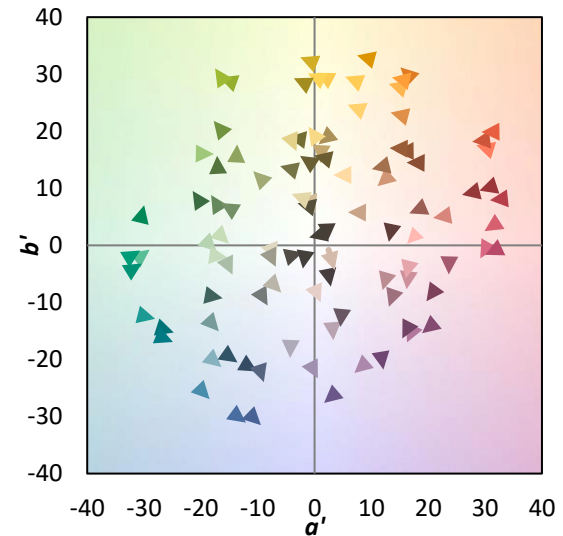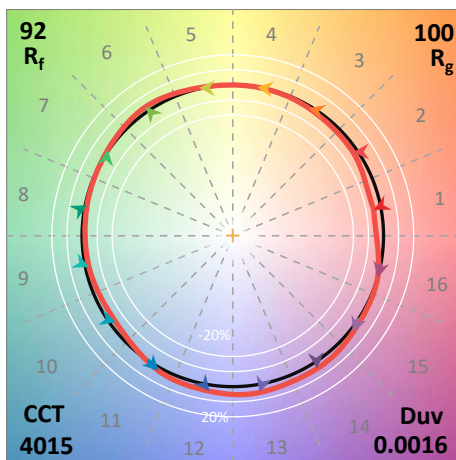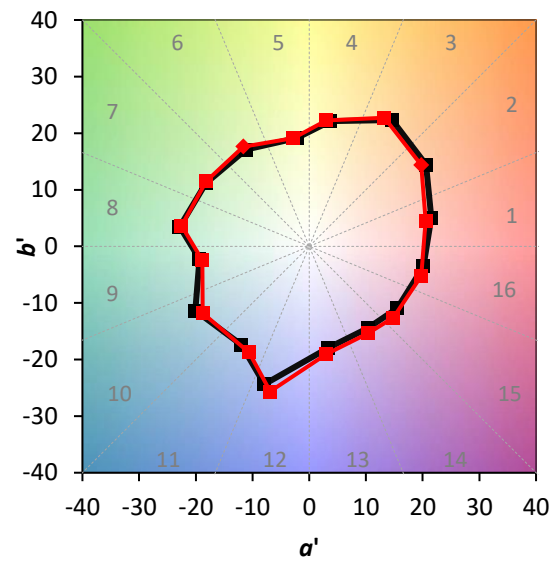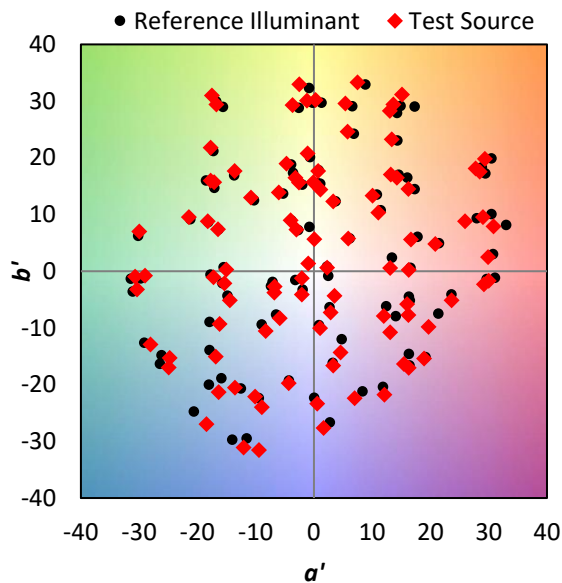
**TM-30-18**
**Summary**
 $R_f = 91.5$   
 $R_g = 100.3$   
 CIE  $R_a = 92.3$   
 $R_9 = 58.4$ 

**Color Vector Graphics**


**Individual Sample Fidelity Index ( $R_{f,i}$ )**

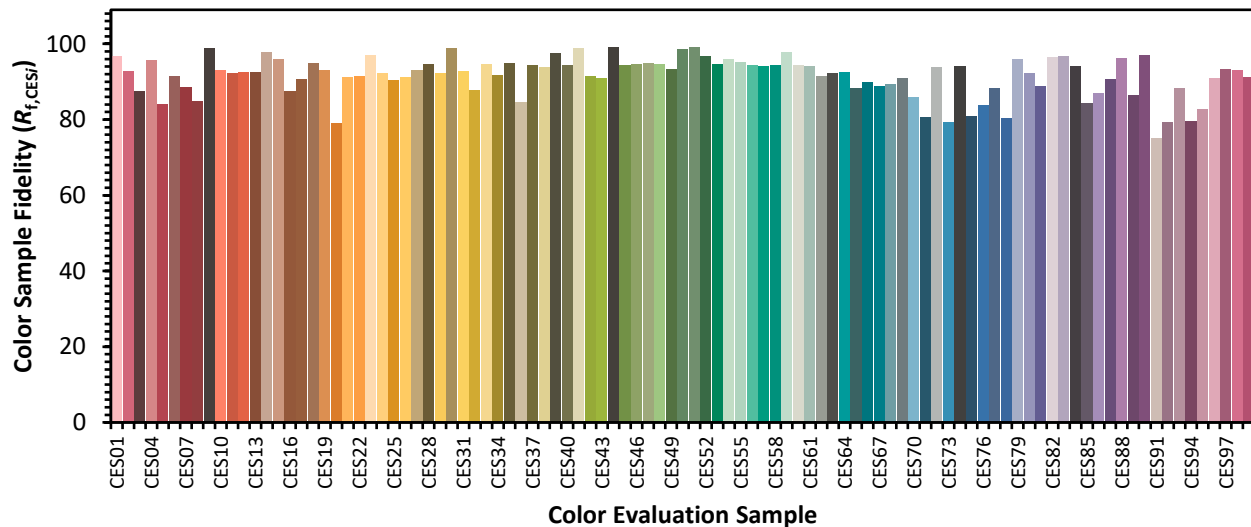
|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 91 | CES51 = 99 | CES76 = 84 |
| CES02 = 61 | CES27 = 93 | CES52 = 97 | CES77 = 88 |
| CES03 = 31 | CES28 = 95 | CES53 = 95 | CES78 = 80 |
| CES04 = 69 | CES29 = 92 | CES54 = 96 | CES79 = 96 |
| CES05 = 49 | CES30 = 99 | CES55 = 95 | CES80 = 92 |
| CES06 = 50 | CES31 = 93 | CES56 = 94 | CES81 = 89 |
| CES07 = 42 | CES32 = 88 | CES57 = 94 | CES82 = 96 |
| CES08 = 41 | CES33 = 95 | CES58 = 94 | CES83 = 97 |
| CES09 = 29 | CES34 = 92 | CES59 = 98 | CES84 = 94 |
| CES10 = 74 | CES35 = 95 | CES60 = 94 | CES85 = 84 |
| CES11 = 57 | CES36 = 85 | CES61 = 94 | CES86 = 87 |
| CES12 = 63 | CES37 = 94 | CES62 = 92 | CES87 = 91 |
| CES13 = 43 | CES38 = 94 | CES63 = 92 | CES88 = 96 |
| CES14 = 74 | CES39 = 98 | CES64 = 93 | CES89 = 87 |
| CES15 = 71 | CES40 = 94 | CES65 = 88 | CES90 = 97 |
| CES16 = 47 | CES41 = 99 | CES66 = 90 | CES91 = 75 |
| CES17 = 49 | CES42 = 91 | CES67 = 89 | CES92 = 79 |
| CES18 = 56 | CES43 = 91 | CES68 = 89 | CES93 = 88 |
| CES19 = 71 | CES44 = 99 | CES69 = 91 | CES94 = 80 |
| CES20 = 66 | CES45 = 94 | CES70 = 86 | CES95 = 83 |
| CES21 = 85 | CES46 = 95 | CES71 = 81 | CES96 = 91 |
| CES22 = 78 | CES47 = 95 | CES72 = 94 | CES97 = 93 |
| CES23 = 91 | CES48 = 95 | CES73 = 79 | CES98 = 93 |
| CES24 = 90 | CES49 = 93 | CES74 = 94 | CES99 = 91 |
| CES25 = 71 | CES50 = 99 | CES75 = 81 |            |

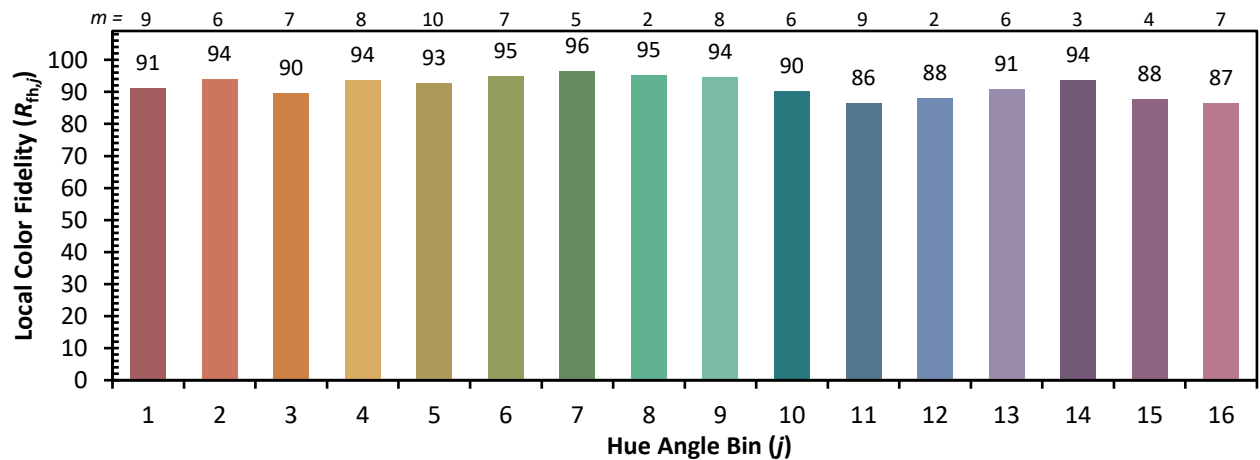

Color Rendition by Hue-Angle Bin



**Measure Comparisons**

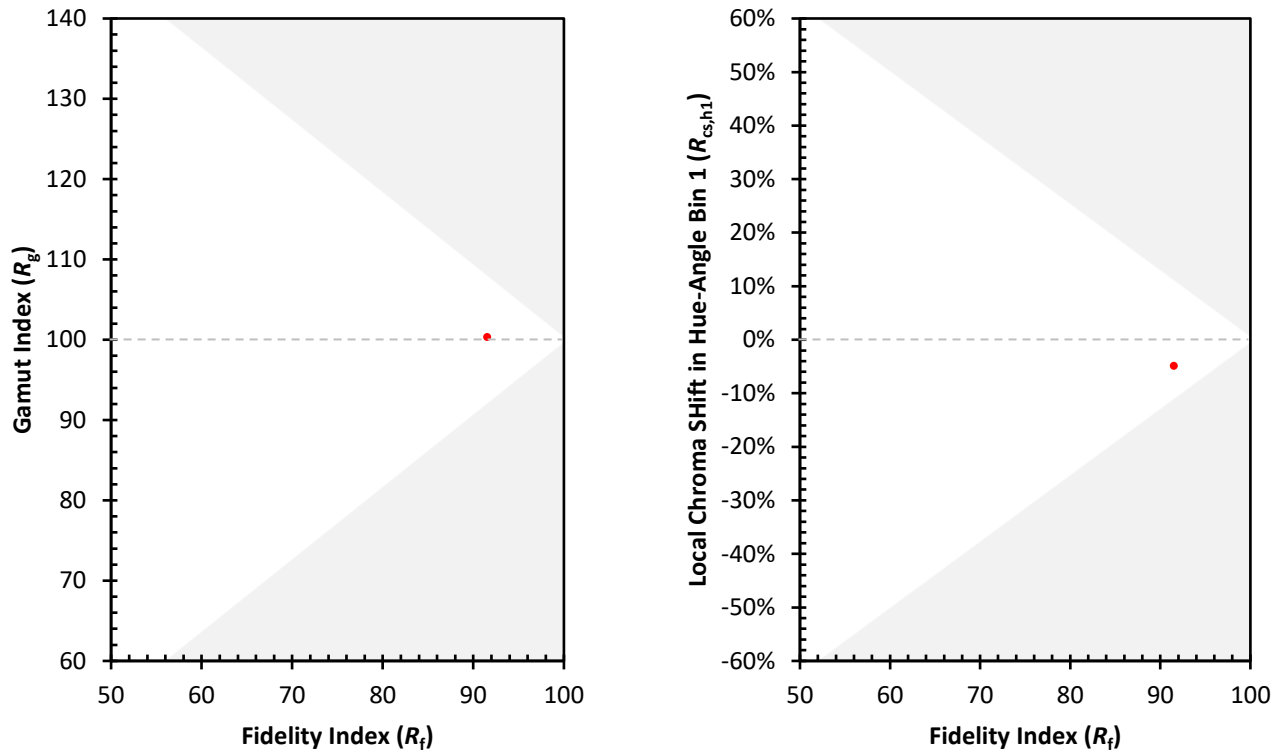

(END OF REPORT)