

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1259014

Luminaire Tested: P3A02R609050DE010 E3D1WMH

Issue Date: 1/29/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1259014  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2501-338-15)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/29/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A02R609050DE010 E3D1WMH  
Description: 3in Adjustable LED luminaire with, R60 optic, 5000K CCT AND, 90CRI , E3D1WMH TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 319.0 lumens  
Efficiency: N/A  
Efficacy: 88.6 lumens/watt  
Spacing Criteria (0/90/45): 0.94 / 0.94 / 0.88  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 3.6  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1259014

CATALOG NUMBER: P3A02R609050DE010 E3D1WMH

### Luminous Intensity Polar Plot

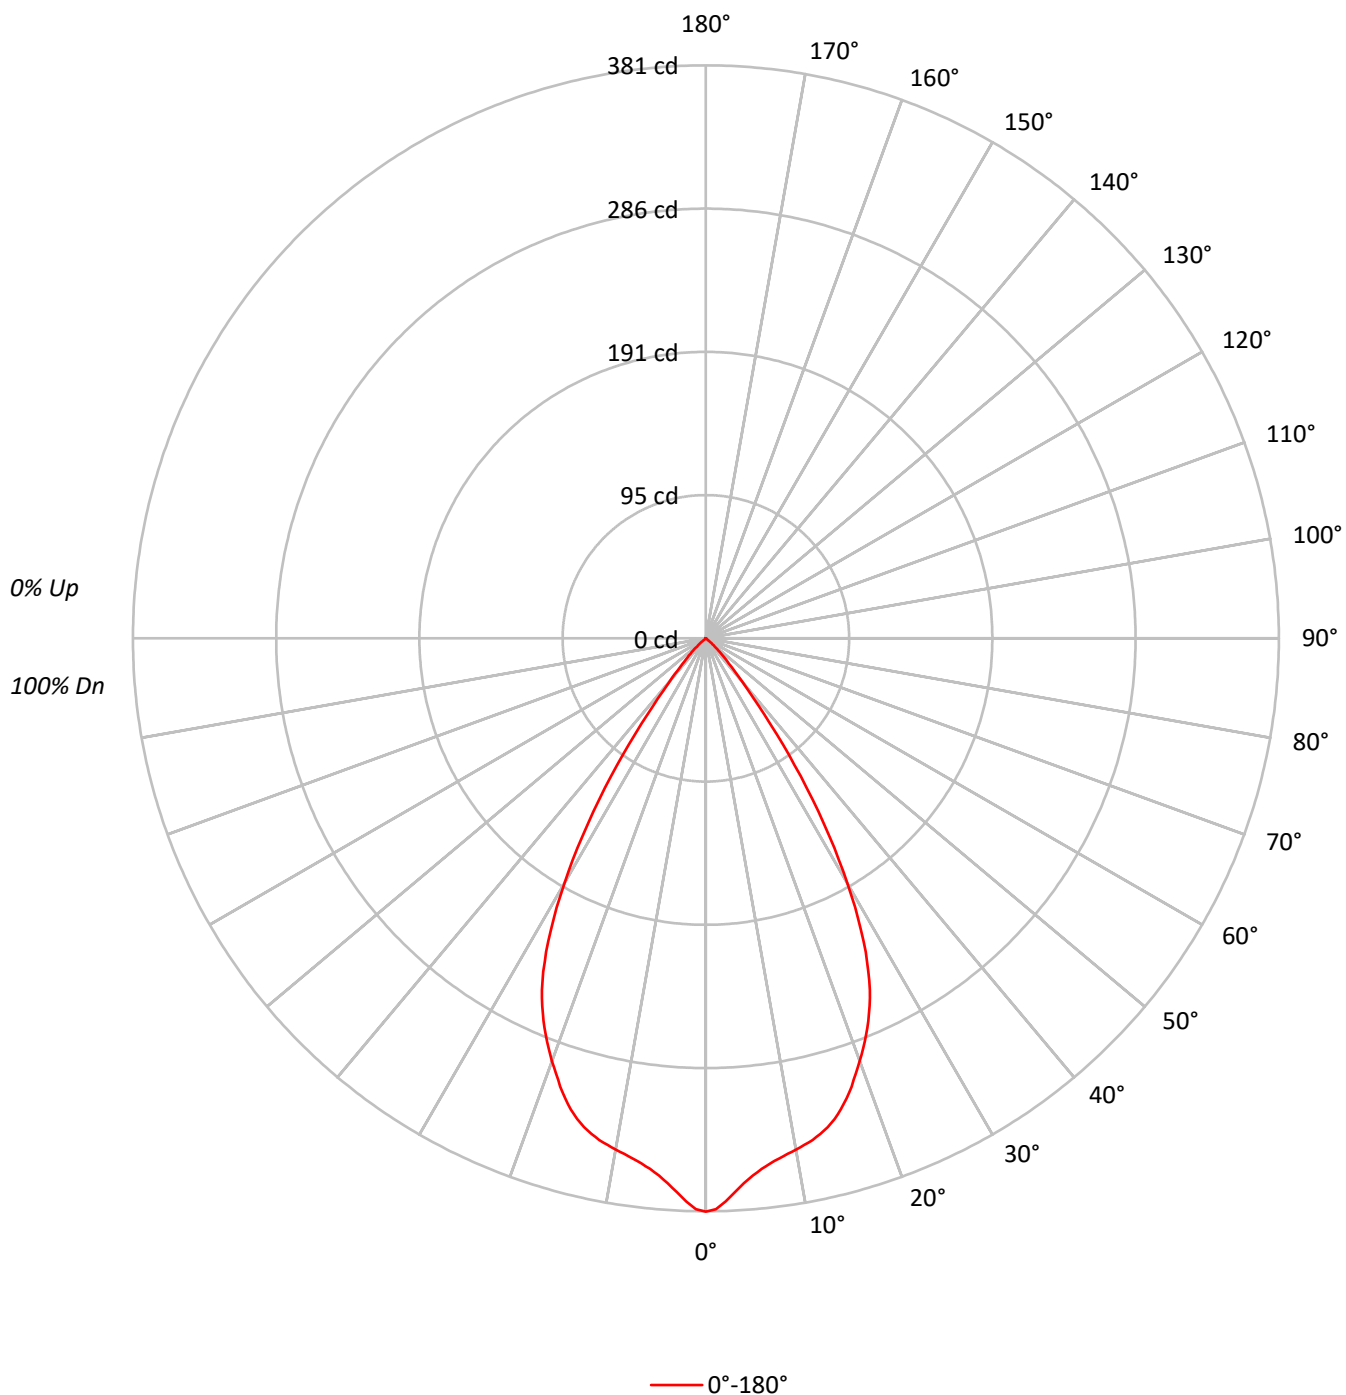

TEST NUMBER: P1259014

CATALOG NUMBER: P3A02R609050DE010 E3D1WMH

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 114 | 111 | 109 | 106 | 111 | 109 | 107 | 105 | 105 | 103 | 102 |  | 101 | 100 | 99  |  | 98  |
| 2   | 108 | 104 | 100 | 96  | 106 | 102 | 98  | 95  | 99  | 96  | 93  |  | 96  | 93  | 91  |  | 93  |
| 3   | 103 | 97  | 92  | 88  | 101 | 96  | 91  | 88  | 93  | 89  | 86  |  | 91  | 87  | 85  |  | 88  |
| 4   | 98  | 91  | 85  | 81  | 96  | 90  | 85  | 81  | 88  | 83  | 80  |  | 86  | 82  | 79  |  | 84  |
| 5   | 93  | 85  | 80  | 75  | 92  | 84  | 79  | 75  | 83  | 78  | 74  |  | 81  | 77  | 74  |  | 79  |
| 6   | 89  | 80  | 74  | 70  | 87  | 79  | 74  | 70  | 78  | 73  | 70  |  | 77  | 72  | 69  |  | 75  |
| 7   | 85  | 76  | 70  | 66  | 83  | 75  | 69  | 65  | 74  | 69  | 65  |  | 72  | 68  | 65  |  | 71  |
| 8   | 81  | 71  | 65  | 61  | 79  | 71  | 65  | 61  | 70  | 65  | 61  |  | 69  | 64  | 61  |  | 68  |
| 9   | 77  | 67  | 62  | 58  | 76  | 67  | 61  | 58  | 66  | 61  | 57  |  | 65  | 61  | 57  |  | 64  |
| 10  | 73  | 64  | 58  | 54  | 72  | 63  | 58  | 54  | 63  | 58  | 54  |  | 62  | 57  | 54  |  | 61  |

**AVERAGE LUMINANCE (cd/sqm):**

|     |       |
|-----|-------|
|     | 0°    |
| 0°  | 83590 |
| 5°  | 78912 |
| 10° | 76863 |
| 15° | 75097 |
| 20° | 69819 |
| 25° | 62423 |
| 30° | 47678 |
| 35° | 27519 |
| 40° | 10677 |
| 45° | 4466  |
| 50° | 989   |
| 55° | 153   |
| 60° | 132   |
| 65° | 52    |
| 70° | 64    |
| 75° | 0     |
| 80° | 0     |
| 85° | 0     |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°  
Vertical Angle: 45°  
Luminance: 4466 cd/sqm

TEST NUMBER: P1259014

CATALOG NUMBER: P3A02R609050DE010 E3D1WMH

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 33.8   | 10.6      |
| 10°-20°   | 92.1   | 28.9      |
| 20°-30°   | 115.4  | 36.2      |
| 30°-40°   | 64.5   | 20.2      |
| 40°-50°   | 12.3   | 3.8       |
| 50°-60°   | 0.7    | 0.2       |
| 60°-70°   | 0.1    | 0.0       |
| 70°-80°   | 0.0    | 0.0       |
| 80°-90°   | 0.0    | 0.0       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| <hr/>     |        |           |
| 0°-30°    | 241.4  | 75.7      |
| 0°-40°    | 305.9  | 95.9      |
| 0°-60°    | 318.8  | 99.9      |
| 0°-90°    | 319.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 319.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | Flux |
|-----|-----|------|
| 0°  | 381 |      |
| 5°  | 358 | 34   |
| 15° | 331 | 92   |
| 25° | 258 | 115  |
| 35° | 103 | 65   |
| 45° | 14  | 12   |
| 55° | 0   | 1    |
| 65° | 0   | 0    |
| 75° | 0   | 0    |
| 85° | 0   | 0    |
| 90° | 0   |      |

TEST NUMBER: P1259014

CATALOG NUMBER: P3A02R609050DE010 E3D1WMH

**CANDELA DISTRIBUTION (FULL):**

| 0°    |       |
|-------|-------|
| 0°    | 381.2 |
| 1°    | 379.6 |
| 2°    | 374.6 |
| 3°    | 368.8 |
| 4°    | 363.3 |
| 5°    | 358.5 |
| 6°    | 354.8 |
| 7°    | 351.7 |
| 8°    | 349.3 |
| 9°    | 347.1 |
| 10°   | 345.2 |
| 11°   | 343.2 |
| 12°   | 341.0 |
| 13°   | 338.2 |
| 14°   | 335.0 |
| 15°   | 330.8 |
| 16°   | 325.7 |
| 17°   | 320.0 |
| 18°   | 313.4 |
| 19°   | 306.0 |
| 20°   | 299.2 |
| 21°   | 291.9 |
| 22°   | 284.3 |
| 23°   | 276.4 |
| 24°   | 267.6 |
| 25°   | 258.0 |
| 26°   | 246.6 |
| 27°   | 234.0 |
| 28°   | 219.7 |
| 29°   | 204.6 |
| 30°   | 188.3 |
| 31°   | 171.9 |
| 32°   | 154.9 |
| 32.5° | 145.6 |
| 33°   | 137.3 |
| 34°   | 119.9 |
| 35°   | 102.8 |
| 36°   | 87.4  |
| 37°   | 71.1  |
| 37.5° | 63.7  |
| 38°   | 56.4  |
| 39°   | 45.4  |
| 40°   | 37.3  |
| 42.5° | 22.7  |
| 45°   | 14.4  |



TEST NUMBER: P1259014

CATALOG NUMBER: P3A02R609050DE010 E3D1WMH

**CANDELA DISTRIBUTION (continued):**

|       | 0°  |
|-------|-----|
| 47.5° | 8.0 |
| 50°   | 2.9 |
| 52.5° | 0.7 |
| 55°   | 0.4 |
| 57.5° | 0.3 |
| 60°   | 0.3 |
| 62.5° | 0.1 |
| 65°   | 0.1 |
| 67.5° | 0.1 |
| 70°   | 0.1 |
| 72.5° | 0.1 |
| 75°   | 0.0 |
| 77.5° | 0.0 |
| 80°   | 0.0 |
| 82.5° | 0.0 |
| 85°   | 0.0 |
| 87.5° | 0.0 |
| 90°   | 0.0 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-15

Test Date: 05/14/2025

Luminaire Tested: LD3A10R129050D010 E3D1H

Data in this report applies to families of products including LD3A


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-15  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 05/18/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A10R129050D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R12 optic, 5000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 5046  
 CIE  $u'$ : 0.2088  
 CIE  $v'$ : 0.4872  
 Duv: 0.0031  
 CIE x: 0.3444  
 CIE y: 0.3571  
 CIE z: 0.2985  
 Peak Wavelength (nm): 451  
 Dominant Wavelength (nm): 569  
 Purity: 10.48811  
 R<sub>f</sub>: 91.5  
 R<sub>g</sub>: 100.4

CRI (Ra): 92.6  
 R1: 93.5  
 R2: 94.3  
 R3: 95.0  
 R4: 94.2  
 R5: 93.6  
 R6: 92.5  
 R7: 93.4  
 R8: 84.3  
 R9: 54.8  
 R10: 86.7  
 R11: 94.1  
 R12: 76.8  
 R13: 93.9  
 R14: 97.2  
 R15: 89.2

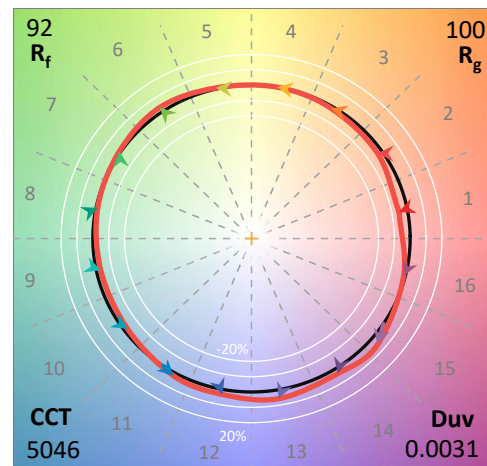

### Test Conditions


Stabilization Time: 48M  
 Operation Time: 1H 48M  
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2504-409-15


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 12/16/2024       | 6/16/2025            |
| Power Meter                    | INXT2011004           | 1/21/2025        | 1/21/2026            |
| AC Power Source                | IN0063                | 10/22/2024       | 10/22/2025           |
| DC Power Source                | IN0208                | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | IN0085                | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | IN0046                | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-15

**CIE 1931 Chromaticity Diagram**

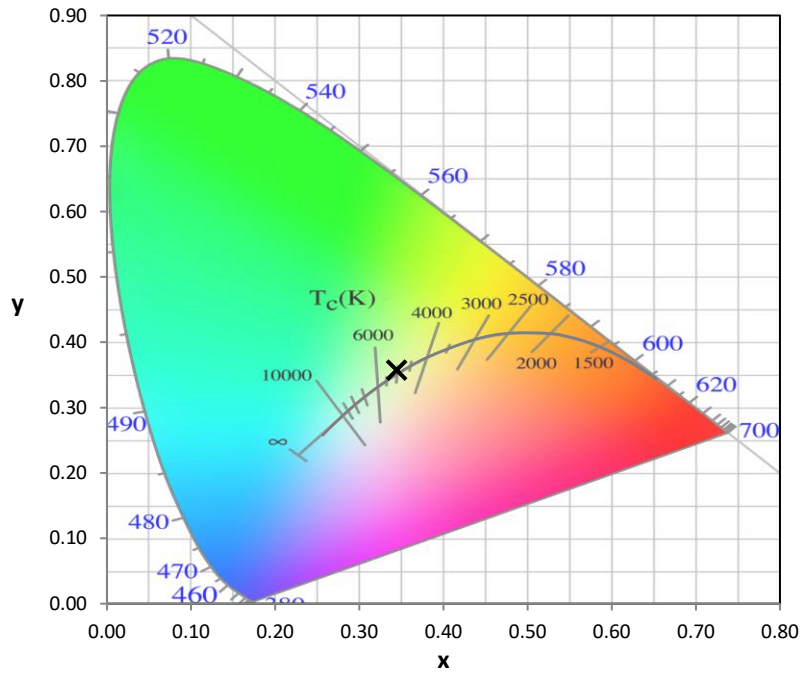


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

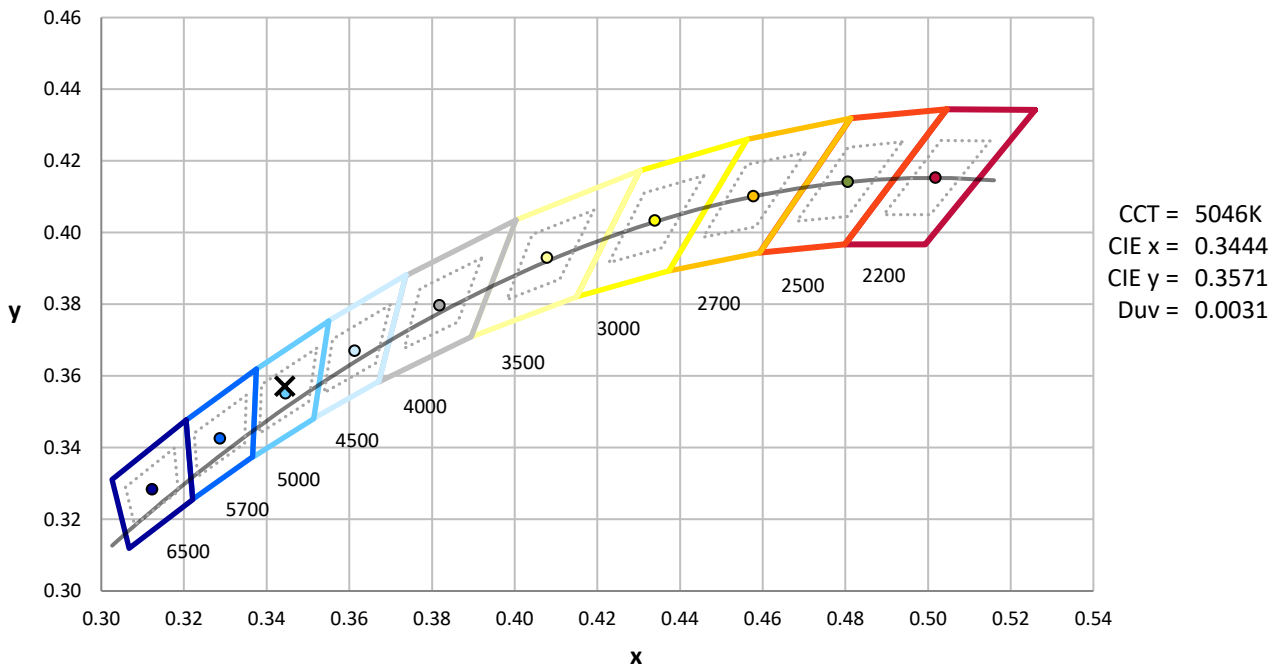

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-15

### Photopic Flux vs. Wavelength

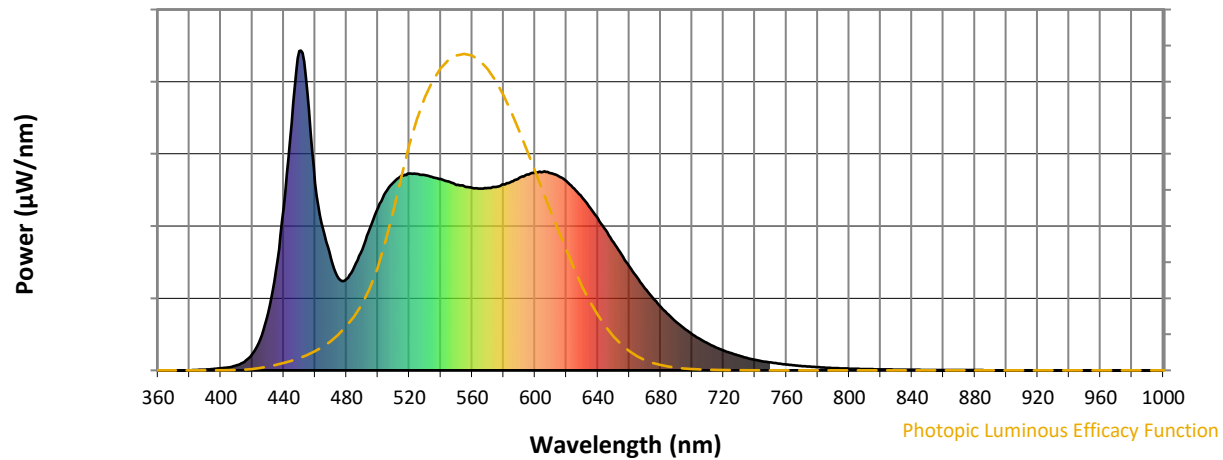


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 379                                    | NR                             | 620               | 592                                    | NR                             | 750               | 25                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 445                                    | NR                             | 625               | 568                                    | NR                             | 755               | 21                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 509                                    | NR                             | 630               | 540                                    | NR                             | 760               | 18                                     | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 557                                    | NR                             | 635               | 509                                    | NR                             | 765               | 16                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 589                                    | NR                             | 640               | 476                                    | NR                             | 770               | 13                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 608                                    | NR                             | 645               | 439                                    | NR                             | 775               | 12                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 616                                    | NR                             | 650               | 400                                    | NR                             | 780               | 10                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 614                                    | NR                             | 655               | 362                                    | NR                             | 785               | 8                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 7                                      | NR                             | 530               | 611                                    | NR                             | 660               | 325                                    | NR                             | 790               | 7                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 604                                    | NR                             | 665               | 290                                    | NR                             | 795               | 6                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 16                                     | NR                             | 540               | 598                                    | NR                             | 670               | 257                                    | NR                             | 800               | 5                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 27                                     | NR                             | 545               | 591                                    | NR                             | 675               | 227                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 51                                     | NR                             | 550               | 580                                    | NR                             | 680               | 199                                    | NR                             | 810               | 4                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 97                                     | NR                             | 555               | 575                                    | NR                             | 685               | 174                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 177                                    | NR                             | 560               | 570                                    | NR                             | 690               | 152                                    | NR                             | 820               | 3                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 312                                    | NR                             | 565               | 569                                    | NR                             | 695               | 131                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 507                                    | NR                             | 570               | 570                                    | NR                             | 700               | 113                                    | NR                             | 830               | 2                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 772                                    | NR                             | 575               | 573                                    | NR                             | 705               | 98                                     | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 998                                    | NR                             | 580               | 581                                    | NR                             | 710               | 84                                     | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 871                                    | NR                             | 585               | 590                                    | NR                             | 715               | 73                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 586                                    | NR                             | 590               | 602                                    | NR                             | 720               | 63                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 443                                    | NR                             | 595               | 612                                    | NR                             | 725               | 54                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 350                                    | NR                             | 600               | 618                                    | NR                             | 730               | 46                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 288                                    | NR                             | 605               | 620                                    | NR                             | 735               | 39                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 286                                    | NR                             | 610               | 616                                    | NR                             | 740               | 33                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 325                                    | NR                             | 615               | 608                                    | NR                             | 745               | 28                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-15

### Scotopic Flux vs. Wavelength

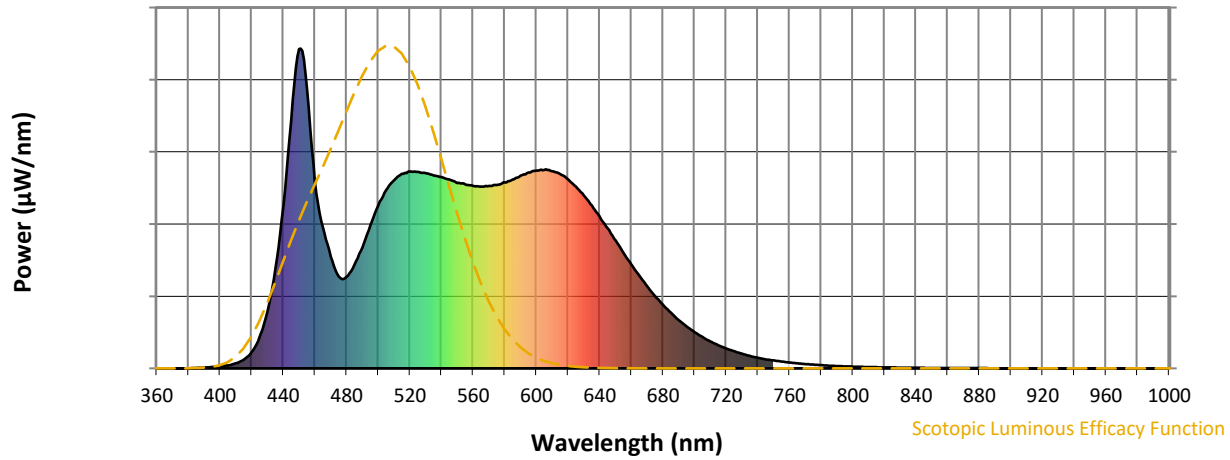


Scotopic Lumens: NR

S/P: 2.07

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 379                                  | NR                             | 620               | 592                                  | NR                             | 750               | 25                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 445                                  | NR                             | 625               | 568                                  | NR                             | 755               | 21                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 509                                  | NR                             | 630               | 540                                  | NR                             | 760               | 18                                   | NR                             | 890               | 0                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 557                                  | NR                             | 635               | 509                                  | NR                             | 765               | 16                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 589                                  | NR                             | 640               | 476                                  | NR                             | 770               | 13                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 608                                  | NR                             | 645               | 439                                  | NR                             | 775               | 12                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 616                                  | NR                             | 650               | 400                                  | NR                             | 780               | 10                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 614                                  | NR                             | 655               | 362                                  | NR                             | 785               | 8                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 7                                    | NR                             | 530               | 611                                  | NR                             | 660               | 325                                  | NR                             | 790               | 7                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 9                                    | NR                             | 535               | 604                                  | NR                             | 665               | 290                                  | NR                             | 795               | 6                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 16                                   | NR                             | 540               | 598                                  | NR                             | 670               | 257                                  | NR                             | 800               | 5                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 27                                   | NR                             | 545               | 591                                  | NR                             | 675               | 227                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 51                                   | NR                             | 550               | 580                                  | NR                             | 680               | 199                                  | NR                             | 810               | 4                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 97                                   | NR                             | 555               | 575                                  | NR                             | 685               | 174                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 177                                  | NR                             | 560               | 570                                  | NR                             | 690               | 152                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 312                                  | NR                             | 565               | 569                                  | NR                             | 695               | 131                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 507                                  | NR                             | 570               | 570                                  | NR                             | 700               | 113                                  | NR                             | 830               | 2                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 772                                  | NR                             | 575               | 573                                  | NR                             | 705               | 98                                   | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 998                                  | NR                             | 580               | 581                                  | NR                             | 710               | 84                                   | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 871                                  | NR                             | 585               | 590                                  | NR                             | 715               | 73                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 586                                  | NR                             | 590               | 602                                  | NR                             | 720               | 63                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 443                                  | NR                             | 595               | 612                                  | NR                             | 725               | 54                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 350                                  | NR                             | 600               | 618                                  | NR                             | 730               | 46                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 288                                  | NR                             | 605               | 620                                  | NR                             | 735               | 39                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 286                                  | NR                             | 610               | 616                                  | NR                             | 740               | 33                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 608                                  | NR                             | 745               | 28                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-15

### Melanopic Flux vs. Wavelength

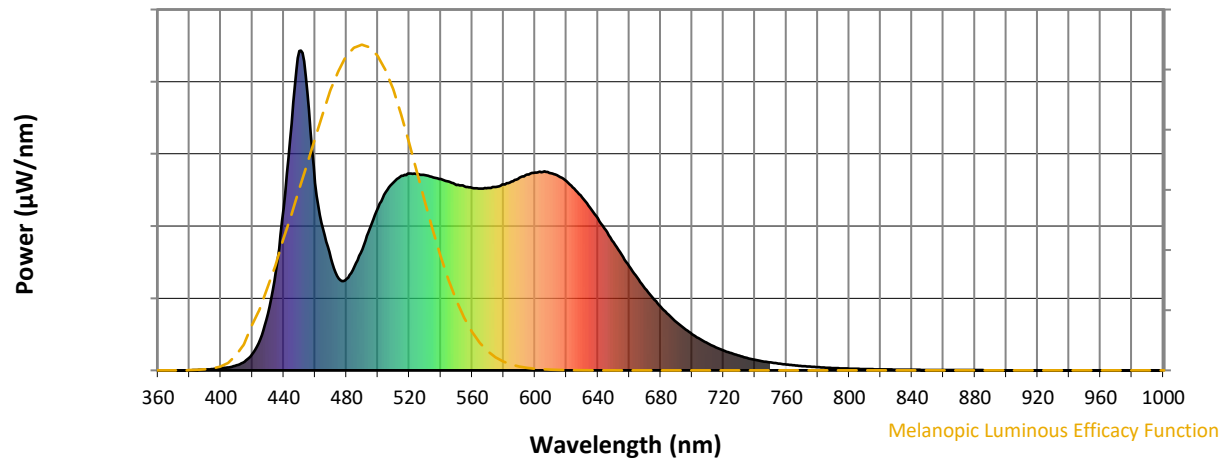

Melanopic Lumens: NR

M/P: 4.43


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 379                                    | NR                             | 620               | 592                                    | NR                             | 750               | 25                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 445                                    | NR                             | 625               | 568                                    | NR                             | 755               | 21                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 509                                    | NR                             | 630               | 540                                    | NR                             | 760               | 18                                     | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 557                                    | NR                             | 635               | 509                                    | NR                             | 765               | 16                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 589                                    | NR                             | 640               | 476                                    | NR                             | 770               | 13                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 608                                    | NR                             | 645               | 439                                    | NR                             | 775               | 12                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 616                                    | NR                             | 650               | 400                                    | NR                             | 780               | 10                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 614                                    | NR                             | 655               | 362                                    | NR                             | 785               | 8                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 7                                      | NR                             | 530               | 611                                    | NR                             | 660               | 325                                    | NR                             | 790               | 7                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 604                                    | NR                             | 665               | 290                                    | NR                             | 795               | 6                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 16                                     | NR                             | 540               | 598                                    | NR                             | 670               | 257                                    | NR                             | 800               | 5                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 27                                     | NR                             | 545               | 591                                    | NR                             | 675               | 227                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 51                                     | NR                             | 550               | 580                                    | NR                             | 680               | 199                                    | NR                             | 810               | 4                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 97                                     | NR                             | 555               | 575                                    | NR                             | 685               | 174                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 177                                    | NR                             | 560               | 570                                    | NR                             | 690               | 152                                    | NR                             | 820               | 3                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 312                                    | NR                             | 565               | 569                                    | NR                             | 695               | 131                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 507                                    | NR                             | 570               | 570                                    | NR                             | 700               | 113                                    | NR                             | 830               | 2                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 772                                    | NR                             | 575               | 573                                    | NR                             | 705               | 98                                     | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 998                                    | NR                             | 580               | 581                                    | NR                             | 710               | 84                                     | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 871                                    | NR                             | 585               | 590                                    | NR                             | 715               | 73                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 586                                    | NR                             | 590               | 602                                    | NR                             | 720               | 63                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 443                                    | NR                             | 595               | 612                                    | NR                             | 725               | 54                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 350                                    | NR                             | 600               | 618                                    | NR                             | 730               | 46                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 288                                    | NR                             | 605               | 620                                    | NR                             | 735               | 39                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 286                                    | NR                             | 610               | 616                                    | NR                             | 740               | 33                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 325                                    | NR                             | 615               | 608                                    | NR                             | 745               | 28                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-15





TM-30-18

### Summary

$R_f = 91.5$   
 $R_g = 100.4$   
 $\text{CIE } R_a = 92.6$   
 $R_9 = 54.8$

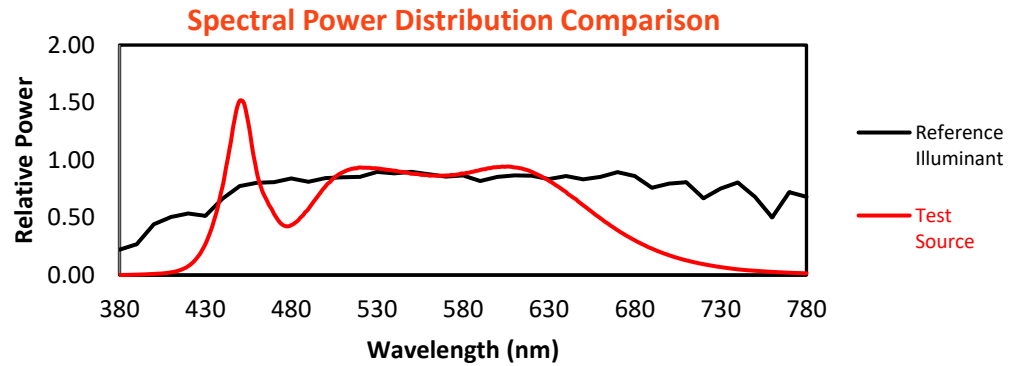


### Color Vector Graphics

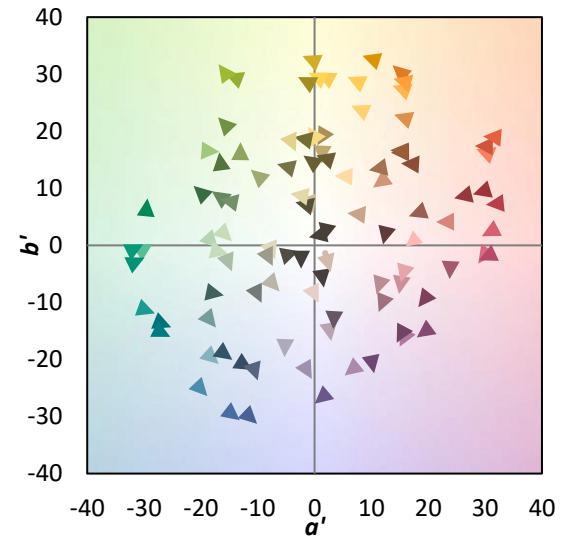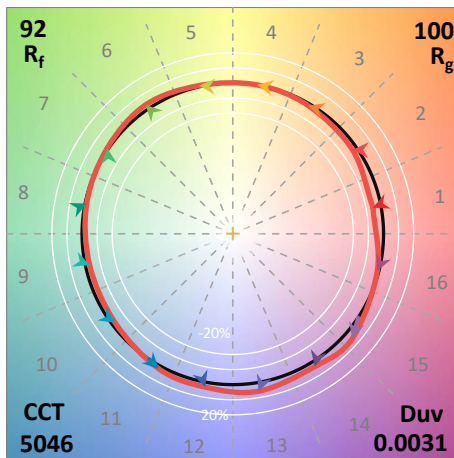
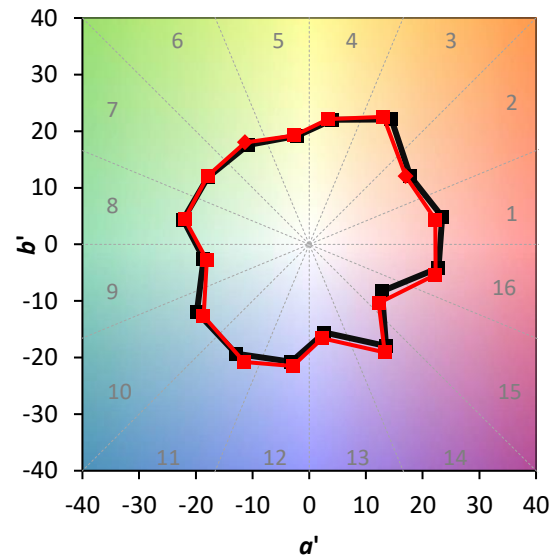
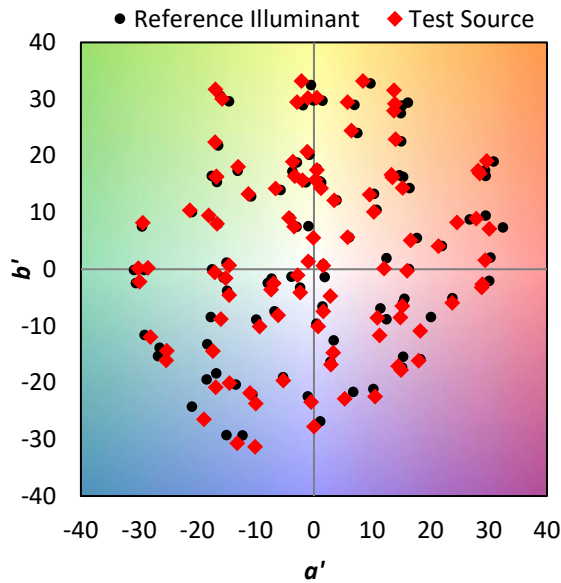




**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 91 | CES51 = 99 | CES76 = 84 |
| CES02 = 60 | CES27 = 94 | CES52 = 96 | CES77 = 88 |
| CES03 = 31 | CES28 = 95 | CES53 = 95 | CES78 = 80 |
| CES04 = 68 | CES29 = 92 | CES54 = 96 | CES79 = 96 |
| CES05 = 47 | CES30 = 99 | CES55 = 95 | CES80 = 92 |
| CES06 = 50 | CES31 = 93 | CES56 = 95 | CES81 = 89 |
| CES07 = 40 | CES32 = 88 | CES57 = 95 | CES82 = 96 |
| CES08 = 40 | CES33 = 95 | CES58 = 95 | CES83 = 97 |
| CES09 = 29 | CES34 = 92 | CES59 = 98 | CES84 = 94 |
| CES10 = 73 | CES35 = 95 | CES60 = 94 | CES85 = 85 |
| CES11 = 56 | CES36 = 85 | CES61 = 94 | CES86 = 87 |
| CES12 = 62 | CES37 = 95 | CES62 = 91 | CES87 = 91 |
| CES13 = 42 | CES38 = 94 | CES63 = 93 | CES88 = 96 |
| CES14 = 74 | CES39 = 97 | CES64 = 93 | CES89 = 87 |
| CES15 = 71 | CES40 = 94 | CES65 = 88 | CES90 = 97 |
| CES16 = 46 | CES41 = 99 | CES66 = 90 | CES91 = 76 |
| CES17 = 48 | CES42 = 91 | CES67 = 89 | CES92 = 79 |
| CES18 = 56 | CES43 = 90 | CES68 = 90 | CES93 = 88 |
| CES19 = 70 | CES44 = 99 | CES69 = 91 | CES94 = 79 |
| CES20 = 65 | CES45 = 94 | CES70 = 86 | CES95 = 83 |
| CES21 = 84 | CES46 = 95 | CES71 = 81 | CES96 = 91 |
| CES22 = 77 | CES47 = 95 | CES72 = 94 | CES97 = 95 |
| CES23 = 91 | CES48 = 95 | CES73 = 80 | CES98 = 94 |
| CES24 = 89 | CES49 = 94 | CES74 = 94 | CES99 = 90 |
| CES25 = 70 | CES50 = 98 | CES75 = 81 |            |

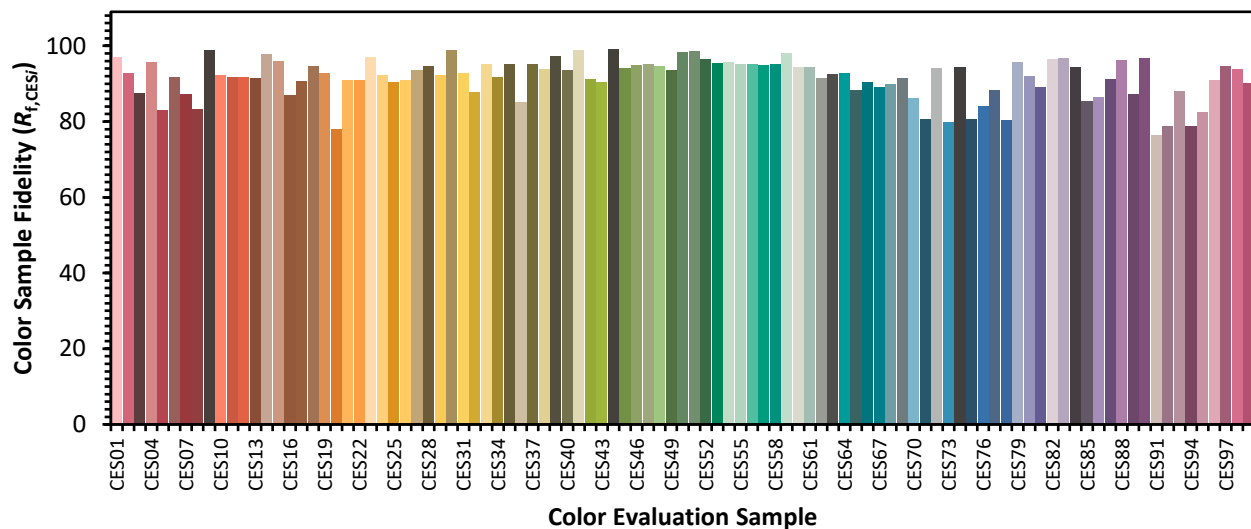

Color Rendition by Hue-Angle Bin

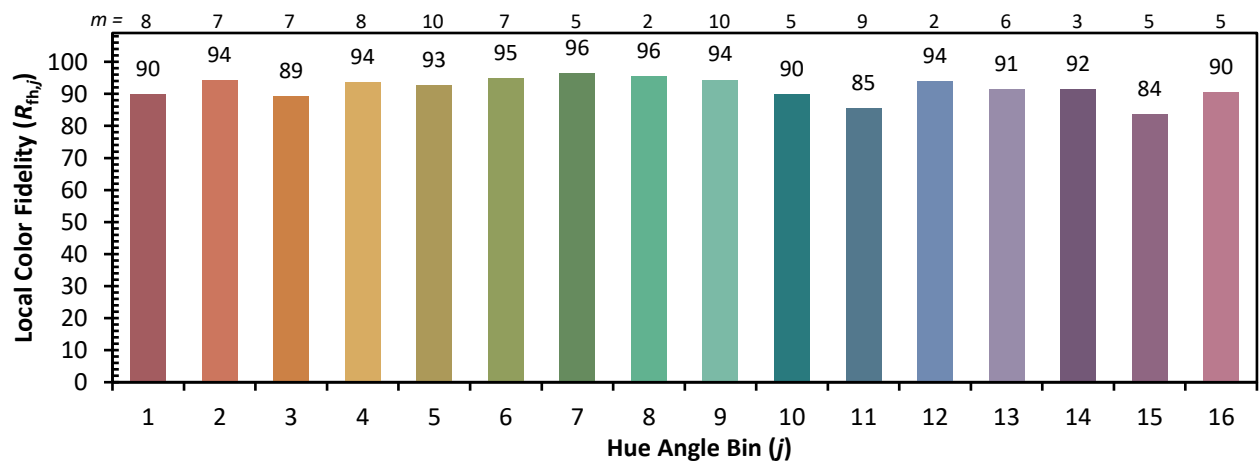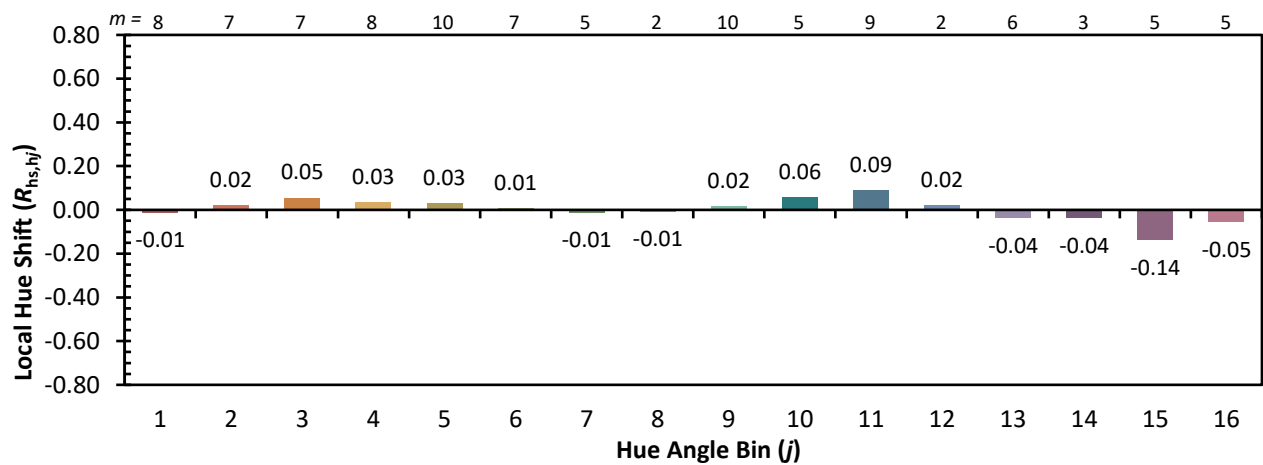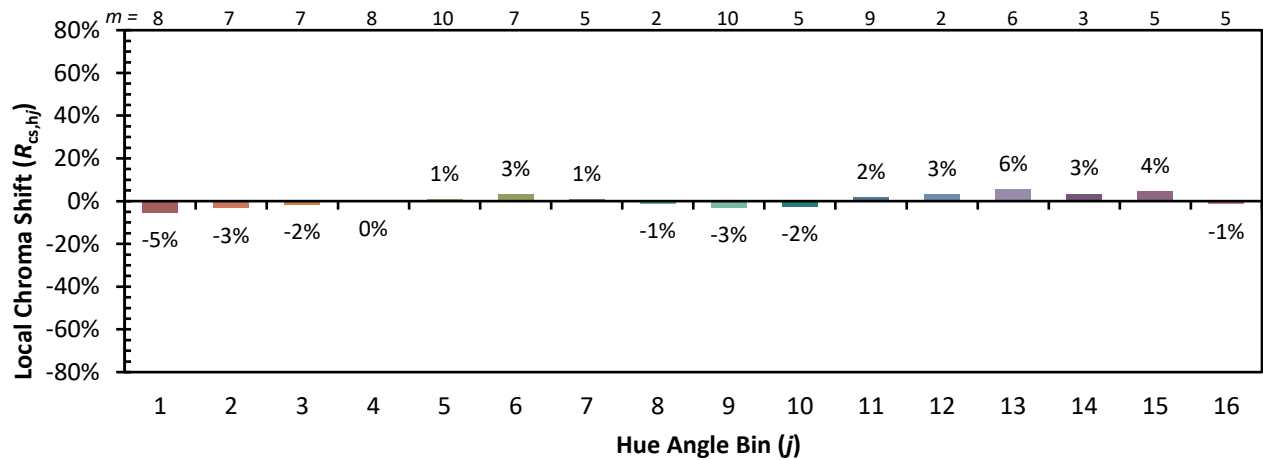

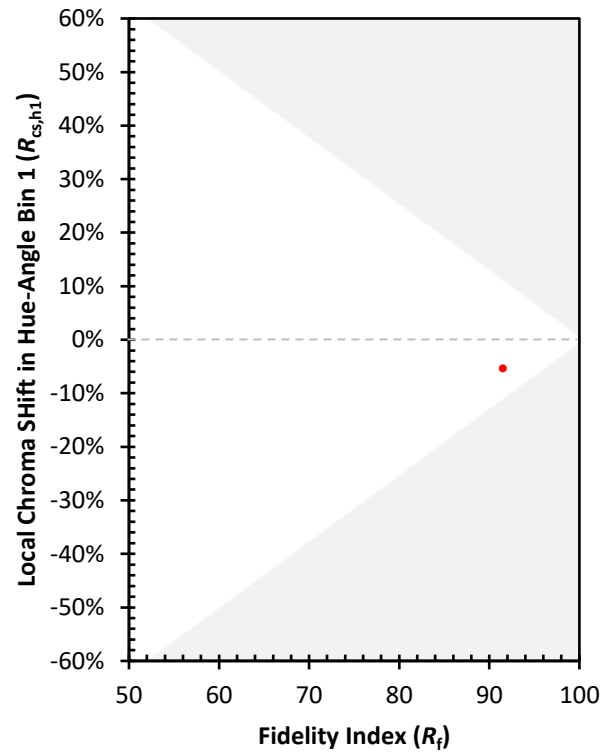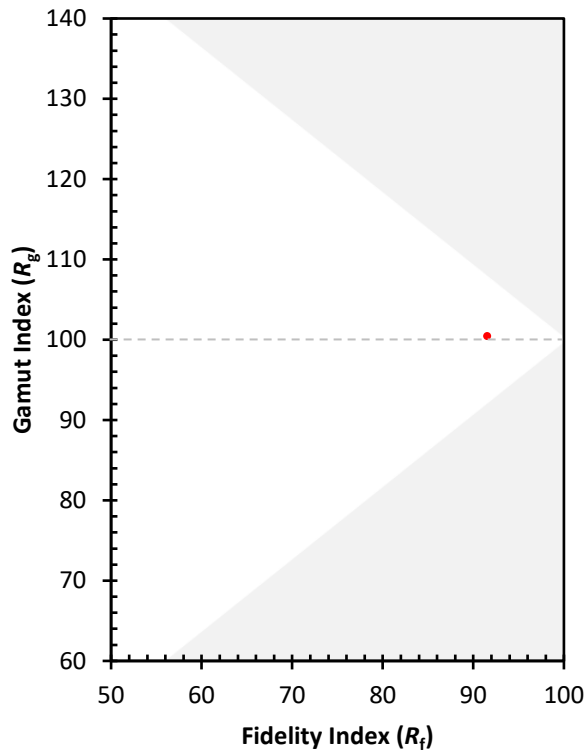**Measure Comparisons**


(END OF REPORT)