

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: IRiS

Report Number: P1259547

Luminaire Tested: P3A09R259050DE010 E3DLP1MW

Issue Date: 1/30/2026

**Test Information**

Test Method: LM-79-2019  
Report Number: P1259547  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G1-2601-647-9)  
Test Lab: INNOVATION CENTER  
Issue Date: 1/30/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: IRiS  
Catalog Number: P3A09R259050DE010 E3DLP1MW  
Description: 3in Adjustable LED luminaire with, R25 optic, 5000K CCT AND, 90CRI , E3DLP1MW TRIM  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 513.0 lumens  
Efficiency: N/A  
Efficacy: 46.2 lumens/watt  
Spacing Criteria (0/90/45): 0.62 / 0.62 / 0.68  
Luminous Opening: Circular (Dia: 0.25' x H: 0')  
CIE Type: Direct

Input Watts (W): 11.1  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1259547

CATALOG NUMBER: P3A09R259050DE010 E3DLP1MW

### Luminous Intensity Polar Plot

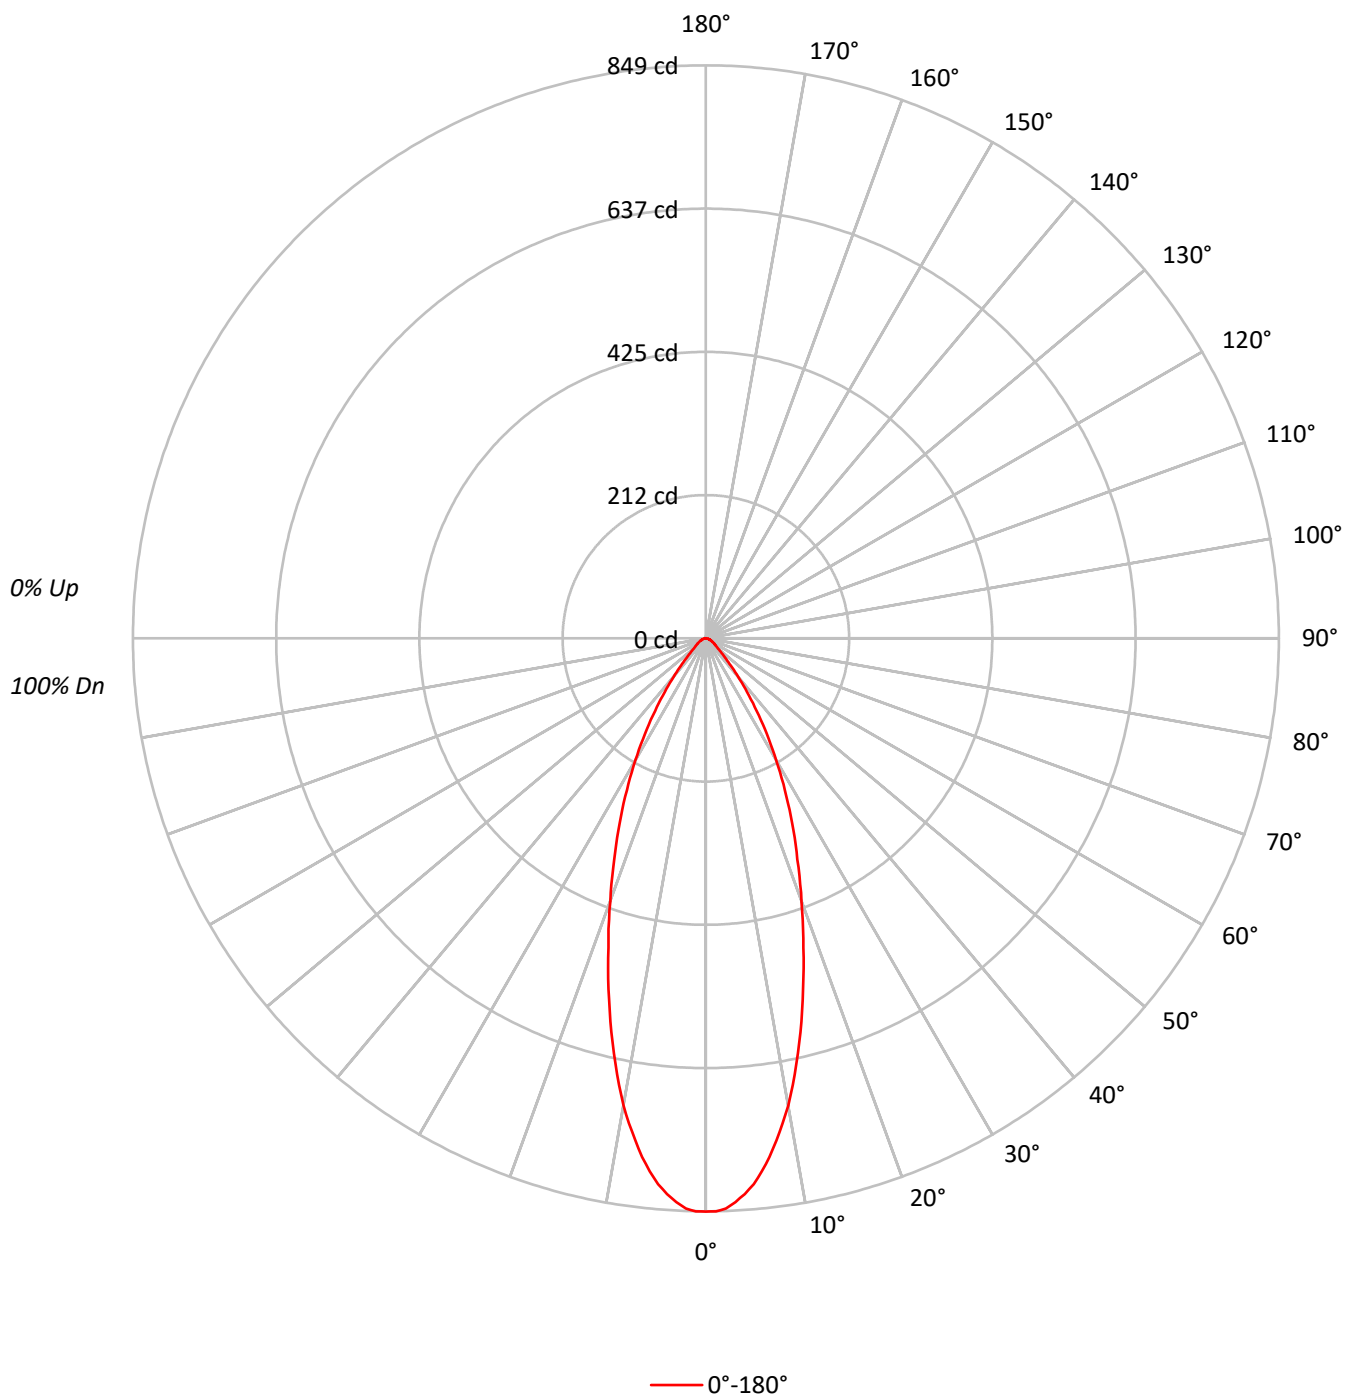

TEST NUMBER: P1259547

CATALOG NUMBER: P3A09R259050DE010 E3DLP1MW

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 |
| 1   | 113 | 110 | 108 | 105 | 111 | 108 | 106 | 104 | 104 | 102 | 101 |  | 100 | 99  | 98  |  | 97  |
| 2   | 107 | 102 | 98  | 95  | 105 | 101 | 97  | 94  | 97  | 94  | 92  |  | 94  | 92  | 90  |  | 92  |
| 3   | 102 | 95  | 90  | 86  | 100 | 94  | 89  | 86  | 91  | 87  | 84  |  | 89  | 86  | 83  |  | 87  |
| 4   | 97  | 89  | 84  | 79  | 95  | 88  | 83  | 79  | 86  | 81  | 78  |  | 84  | 80  | 77  |  | 82  |
| 5   | 92  | 84  | 78  | 74  | 91  | 83  | 77  | 73  | 81  | 76  | 73  |  | 79  | 75  | 72  |  | 78  |
| 6   | 88  | 79  | 73  | 69  | 86  | 78  | 72  | 68  | 77  | 72  | 68  |  | 75  | 71  | 67  |  | 74  |
| 7   | 84  | 74  | 68  | 64  | 82  | 74  | 68  | 64  | 72  | 67  | 64  |  | 71  | 67  | 63  |  | 70  |
| 8   | 80  | 70  | 65  | 60  | 79  | 70  | 64  | 60  | 69  | 64  | 60  |  | 68  | 63  | 60  |  | 67  |
| 9   | 76  | 67  | 61  | 57  | 75  | 66  | 61  | 57  | 65  | 60  | 57  |  | 65  | 60  | 57  |  | 64  |
| 10  | 73  | 64  | 58  | 54  | 72  | 63  | 58  | 54  | 62  | 57  | 54  |  | 62  | 57  | 54  |  | 61  |

**AVERAGE LUMINANCE (cd/sqm):**

|     |        |
|-----|--------|
|     | 0°     |
| 0°  | 186257 |
| 5°  | 178692 |
| 10° | 156532 |
| 15° | 125812 |
| 20° | 96678  |
| 25° | 73141  |
| 30° | 52844  |
| 35° | 35121  |
| 40° | 21297  |
| 45° | 12404  |
| 50° | 7914   |
| 55° | 6423   |
| 60° | 5614   |
| 65° | 4981   |
| 70° | 4103   |
| 75° | 4067   |
| 80° | 3031   |
| 85° | 4026   |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 12404 cd/sqm

TEST NUMBER: P1259547

CATALOG NUMBER: P3A09R259050DE010 E3DLP1MW

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 73.9   | 14.4      |
| 10°-20°   | 153.3  | 29.9      |
| 20°-30°   | 138.6  | 27.0      |
| 30°-40°   | 83.3   | 16.2      |
| 40°-50°   | 33.1   | 6.4       |
| 50°-60°   | 15.3   | 3.0       |
| 60°-70°   | 9.3    | 1.8       |
| 70°-80°   | 5.0    | 1.0       |
| 80°-90°   | 1.4    | 0.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 365.8  | 71.3      |
| 0°-40°    | 449.0  | 87.5      |
| 0°-60°    | 497.4  | 96.9      |
| 0°-90°    | 513.0  | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 513.0  | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | Flux |
|-----|-----|------|
| 0°  | 849 |      |
| 5°  | 812 | 74   |
| 15° | 554 | 153  |
| 25° | 302 | 139  |
| 35° | 131 | 83   |
| 45° | 40  | 33   |
| 55° | 17  | 15   |
| 65° | 10  | 9    |
| 75° | 5   | 5    |
| 85° | 2   | 1    |
| 90° | 0   |      |

TEST NUMBER: P1259547

CATALOG NUMBER: P3A09R259050DE010 E3DLP1MW

**CANDELA DISTRIBUTION (FULL):**

| 0°    |       |
|-------|-------|
| 0°    | 849.4 |
| 1°    | 849.4 |
| 2°    | 845.4 |
| 3°    | 836.6 |
| 4°    | 825.4 |
| 5°    | 811.8 |
| 6°    | 794.2 |
| 7°    | 774.2 |
| 8°    | 751.0 |
| 9°    | 727.8 |
| 10°   | 703.0 |
| 11°   | 674.2 |
| 12°   | 644.6 |
| 13°   | 615.0 |
| 14°   | 585.4 |
| 15°   | 554.2 |
| 17.5° | 480.7 |
| 20°   | 414.3 |
| 22.5° | 354.3 |
| 25°   | 302.3 |
| 27.5° | 253.5 |
| 30°   | 208.7 |
| 32.5° | 168.0 |
| 35°   | 131.2 |
| 37.5° | 100.0 |
| 40°   | 74.4  |
| 42.5° | 54.4  |
| 45°   | 40.0  |
| 47.5° | 30.4  |
| 50°   | 23.2  |
| 52.5° | 19.2  |
| 55°   | 16.8  |
| 57.5° | 14.4  |
| 60°   | 12.8  |
| 62.5° | 10.4  |
| 65°   | 9.6   |
| 67.5° | 8.0   |
| 70°   | 6.4   |
| 72.5° | 5.6   |
| 75°   | 4.8   |
| 77.5° | 4.0   |
| 80°   | 2.4   |
| 82.5° | 1.6   |
| 85°   | 1.6   |
| 87.5° | 0.8   |



TEST NUMBER: P1259547

CATALOG NUMBER: P3A09R259050DE010 E3DLP1MW

CANDELA DISTRIBUTION (continued):



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

IRiS

Report Number: SP1-2504-409-15

Test Date: 05/14/2025

Luminaire Tested: LD3A10R129050D010 E3D1H

Data in this report applies to families of products including LD3A




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-409-15  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 05/18/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: IRiS  
 Catalog Number: **LD3A10R129050D010 E3D1H**  
 Description: 3in Adjustable LED luminaire with, R12 optic, 5000K CCT AND, 90CRI LEDS, E3D1H TRIM

### Spectral Parameters

CCT (K): 5046  
 CIE  $u'$ : 0.2088  
 CIE  $v'$ : 0.4872  
 Duv: 0.0031  
 CIE x: 0.3444  
 CIE y: 0.3571  
 CIE z: 0.2985  
 Peak Wavelength (nm): 451  
 Dominant Wavelength (nm): 569  
 Purity: 10.48811  
 R<sub>f</sub>: 91.5  
 R<sub>g</sub>: 100.4

CRI (Ra): 92.6  
 R1: 93.5  
 R2: 94.3  
 R3: 95.0  
 R4: 94.2  
 R5: 93.6  
 R6: 92.5  
 R7: 93.4  
 R8: 84.3  
 R9: 54.8  
 R10: 86.7  
 R11: 94.1  
 R12: 76.8  
 R13: 93.9  
 R14: 97.2  
 R15: 89.2

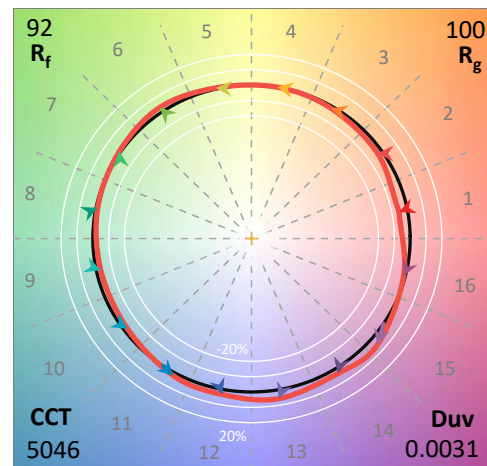

### Test Conditions


Stabilization Time: 48M  
 Operation Time: 1H 48M  
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2504-409-15


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 12/16/2024       | 6/16/2025            |
| Power Meter                    | INXT2011004           | 1/21/2025        | 1/21/2026            |
| AC Power Source                | IN0063                | 10/22/2024       | 10/22/2025           |
| DC Power Source                | IN0208                | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | IN0085                | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | IN0046                | 10/22/2024       | 10/22/2025           |

REPORT NUMBER: SP1-2504-409-15

**CIE 1931 Chromaticity Diagram**

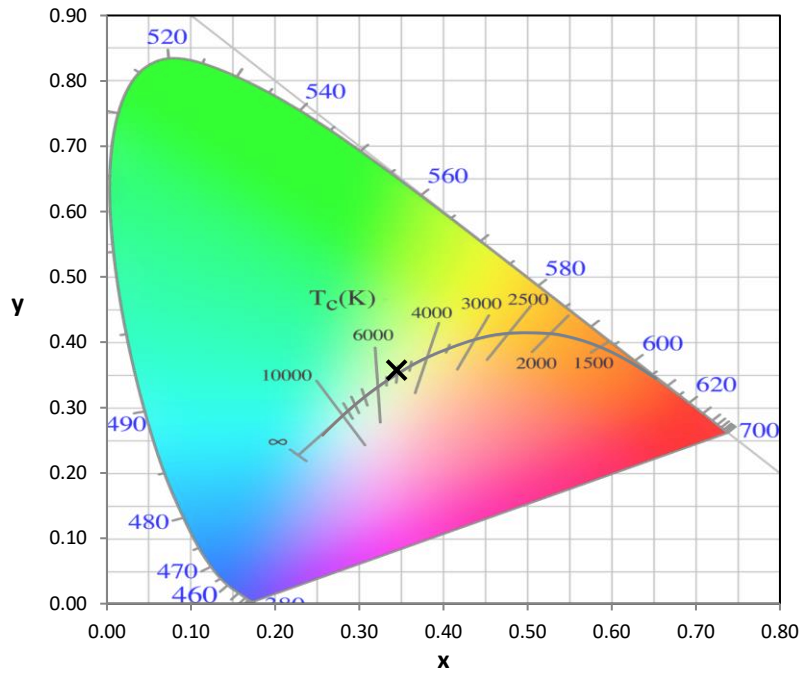


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

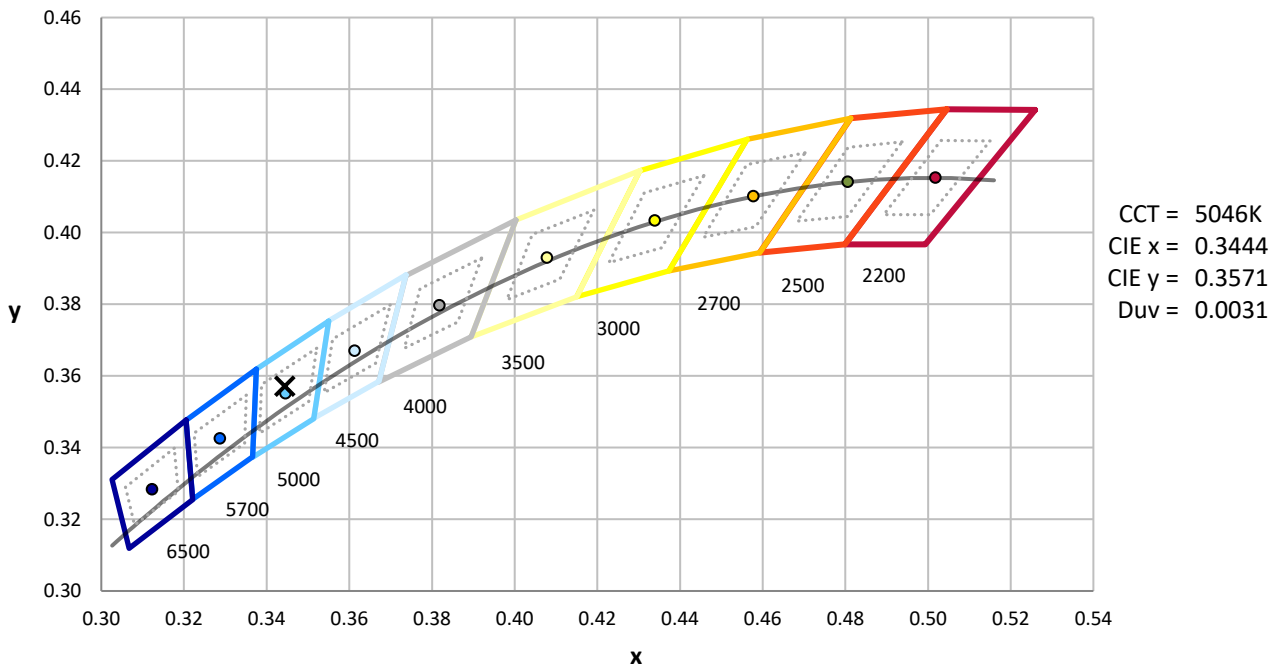

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2504-409-15

### Photopic Flux vs. Wavelength

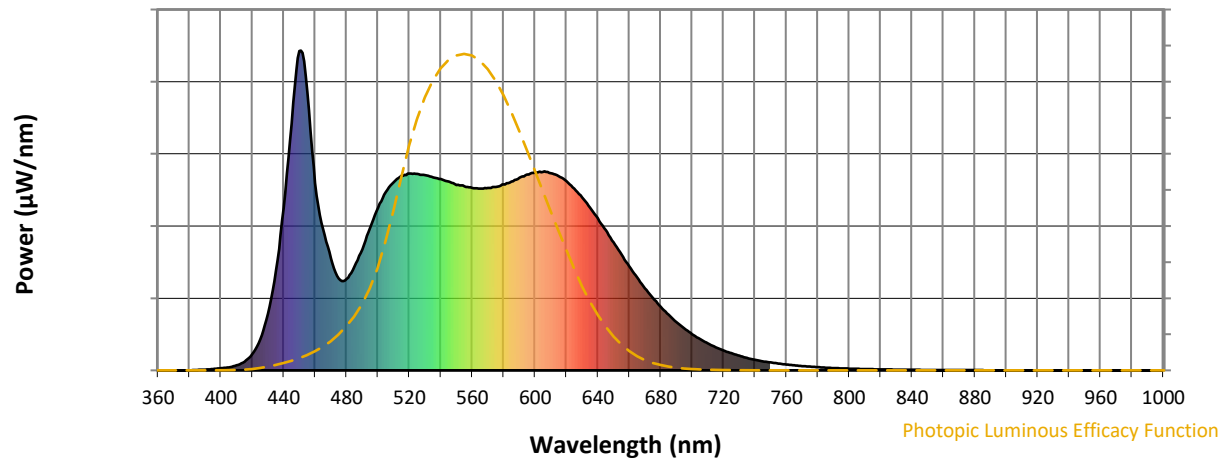


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 379                                    | NR                             | 620               | 592                                    | NR                             | 750               | 25                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 445                                    | NR                             | 625               | 568                                    | NR                             | 755               | 21                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 509                                    | NR                             | 630               | 540                                    | NR                             | 760               | 18                                     | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 557                                    | NR                             | 635               | 509                                    | NR                             | 765               | 16                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 589                                    | NR                             | 640               | 476                                    | NR                             | 770               | 13                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 608                                    | NR                             | 645               | 439                                    | NR                             | 775               | 12                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 616                                    | NR                             | 650               | 400                                    | NR                             | 780               | 10                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 614                                    | NR                             | 655               | 362                                    | NR                             | 785               | 8                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 7                                      | NR                             | 530               | 611                                    | NR                             | 660               | 325                                    | NR                             | 790               | 7                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 604                                    | NR                             | 665               | 290                                    | NR                             | 795               | 6                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 16                                     | NR                             | 540               | 598                                    | NR                             | 670               | 257                                    | NR                             | 800               | 5                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 27                                     | NR                             | 545               | 591                                    | NR                             | 675               | 227                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 51                                     | NR                             | 550               | 580                                    | NR                             | 680               | 199                                    | NR                             | 810               | 4                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 97                                     | NR                             | 555               | 575                                    | NR                             | 685               | 174                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 177                                    | NR                             | 560               | 570                                    | NR                             | 690               | 152                                    | NR                             | 820               | 3                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 312                                    | NR                             | 565               | 569                                    | NR                             | 695               | 131                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 507                                    | NR                             | 570               | 570                                    | NR                             | 700               | 113                                    | NR                             | 830               | 2                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 772                                    | NR                             | 575               | 573                                    | NR                             | 705               | 98                                     | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 998                                    | NR                             | 580               | 581                                    | NR                             | 710               | 84                                     | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 871                                    | NR                             | 585               | 590                                    | NR                             | 715               | 73                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 586                                    | NR                             | 590               | 602                                    | NR                             | 720               | 63                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 443                                    | NR                             | 595               | 612                                    | NR                             | 725               | 54                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 350                                    | NR                             | 600               | 618                                    | NR                             | 730               | 46                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 288                                    | NR                             | 605               | 620                                    | NR                             | 735               | 39                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 286                                    | NR                             | 610               | 616                                    | NR                             | 740               | 33                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 325                                    | NR                             | 615               | 608                                    | NR                             | 745               | 28                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-15

### Scotopic Flux vs. Wavelength

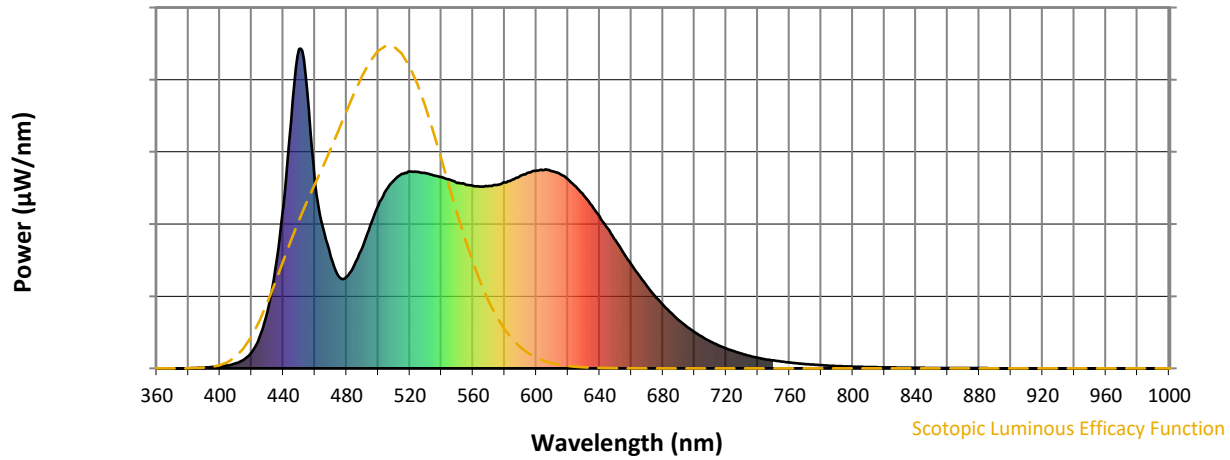


Scotopic Lumens: NR

S/P: 2.07

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 379                                  | NR                             | 620               | 592                                  | NR                             | 750               | 25                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 445                                  | NR                             | 625               | 568                                  | NR                             | 755               | 21                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 509                                  | NR                             | 630               | 540                                  | NR                             | 760               | 18                                   | NR                             | 890               | 0                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 557                                  | NR                             | 635               | 509                                  | NR                             | 765               | 16                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 589                                  | NR                             | 640               | 476                                  | NR                             | 770               | 13                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 608                                  | NR                             | 645               | 439                                  | NR                             | 775               | 12                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 616                                  | NR                             | 650               | 400                                  | NR                             | 780               | 10                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 614                                  | NR                             | 655               | 362                                  | NR                             | 785               | 8                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 7                                    | NR                             | 530               | 611                                  | NR                             | 660               | 325                                  | NR                             | 790               | 7                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 9                                    | NR                             | 535               | 604                                  | NR                             | 665               | 290                                  | NR                             | 795               | 6                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 16                                   | NR                             | 540               | 598                                  | NR                             | 670               | 257                                  | NR                             | 800               | 5                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 27                                   | NR                             | 545               | 591                                  | NR                             | 675               | 227                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 51                                   | NR                             | 550               | 580                                  | NR                             | 680               | 199                                  | NR                             | 810               | 4                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 97                                   | NR                             | 555               | 575                                  | NR                             | 685               | 174                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 177                                  | NR                             | 560               | 570                                  | NR                             | 690               | 152                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 312                                  | NR                             | 565               | 569                                  | NR                             | 695               | 131                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 507                                  | NR                             | 570               | 570                                  | NR                             | 700               | 113                                  | NR                             | 830               | 2                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 772                                  | NR                             | 575               | 573                                  | NR                             | 705               | 98                                   | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 998                                  | NR                             | 580               | 581                                  | NR                             | 710               | 84                                   | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 871                                  | NR                             | 585               | 590                                  | NR                             | 715               | 73                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 586                                  | NR                             | 590               | 602                                  | NR                             | 720               | 63                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 443                                  | NR                             | 595               | 612                                  | NR                             | 725               | 54                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 350                                  | NR                             | 600               | 618                                  | NR                             | 730               | 46                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 288                                  | NR                             | 605               | 620                                  | NR                             | 735               | 39                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 286                                  | NR                             | 610               | 616                                  | NR                             | 740               | 33                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 325                                  | NR                             | 615               | 608                                  | NR                             | 745               | 28                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2504-409-15

### Melanopic Flux vs. Wavelength

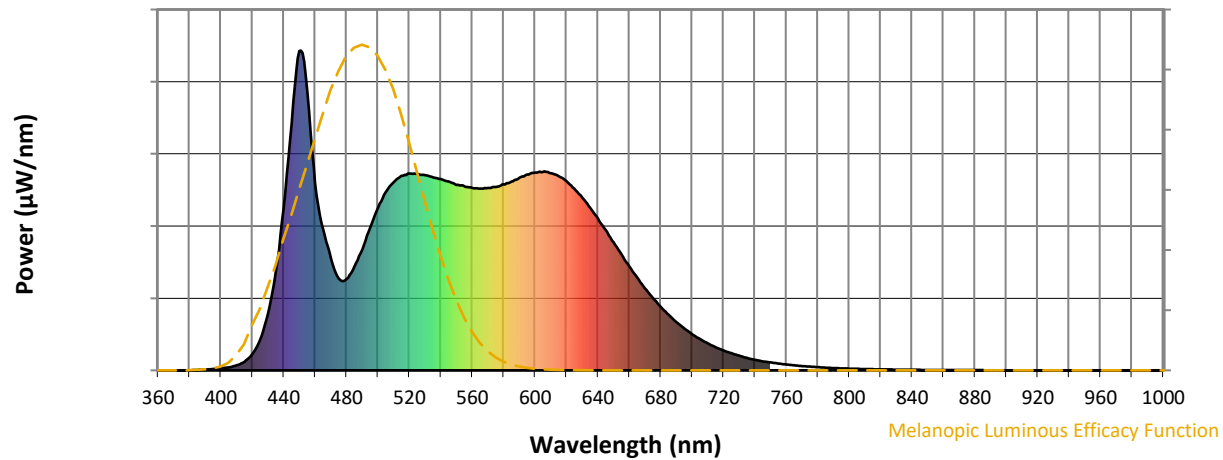

Melanopic Lumens: NR

M/P: 4.43


| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 379                                    | NR                             | 620               | 592                                    | NR                             | 750               | 25                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 445                                    | NR                             | 625               | 568                                    | NR                             | 755               | 21                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 509                                    | NR                             | 630               | 540                                    | NR                             | 760               | 18                                     | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 557                                    | NR                             | 635               | 509                                    | NR                             | 765               | 16                                     | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 589                                    | NR                             | 640               | 476                                    | NR                             | 770               | 13                                     | NR                             | 900               | 0                                      | NR                             |
| 385               | 1                                      | NR                             | 515               | 608                                    | NR                             | 645               | 439                                    | NR                             | 775               | 12                                     | NR                             | 905               | 0                                      | NR                             |
| 390               | 2                                      | NR                             | 520               | 616                                    | NR                             | 650               | 400                                    | NR                             | 780               | 10                                     | NR                             | 910               | 0                                      | NR                             |
| 395               | 4                                      | NR                             | 525               | 614                                    | NR                             | 655               | 362                                    | NR                             | 785               | 8                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 7                                      | NR                             | 530               | 611                                    | NR                             | 660               | 325                                    | NR                             | 790               | 7                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 9                                      | NR                             | 535               | 604                                    | NR                             | 665               | 290                                    | NR                             | 795               | 6                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 16                                     | NR                             | 540               | 598                                    | NR                             | 670               | 257                                    | NR                             | 800               | 5                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 27                                     | NR                             | 545               | 591                                    | NR                             | 675               | 227                                    | NR                             | 805               | 5                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 51                                     | NR                             | 550               | 580                                    | NR                             | 680               | 199                                    | NR                             | 810               | 4                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 97                                     | NR                             | 555               | 575                                    | NR                             | 685               | 174                                    | NR                             | 815               | 4                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 177                                    | NR                             | 560               | 570                                    | NR                             | 690               | 152                                    | NR                             | 820               | 3                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 312                                    | NR                             | 565               | 569                                    | NR                             | 695               | 131                                    | NR                             | 825               | 3                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 507                                    | NR                             | 570               | 570                                    | NR                             | 700               | 113                                    | NR                             | 830               | 2                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 772                                    | NR                             | 575               | 573                                    | NR                             | 705               | 98                                     | NR                             | 835               | 2                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 998                                    | NR                             | 580               | 581                                    | NR                             | 710               | 84                                     | NR                             | 840               | 2                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 871                                    | NR                             | 585               | 590                                    | NR                             | 715               | 73                                     | NR                             | 845               | 2                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 586                                    | NR                             | 590               | 602                                    | NR                             | 720               | 63                                     | NR                             | 850               | 1                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 443                                    | NR                             | 595               | 612                                    | NR                             | 725               | 54                                     | NR                             | 855               | 1                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 350                                    | NR                             | 600               | 618                                    | NR                             | 730               | 46                                     | NR                             | 860               | 1                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 288                                    | NR                             | 605               | 620                                    | NR                             | 735               | 39                                     | NR                             | 865               | 1                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 286                                    | NR                             | 610               | 616                                    | NR                             | 740               | 33                                     | NR                             | 870               | 1                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 325                                    | NR                             | 615               | 608                                    | NR                             | 745               | 28                                     | NR                             | 875               | 1                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-409-15





TM-30-18

### Summary

$R_f = 91.5$   
 $R_g = 100.4$   
 $\text{CIE } R_a = 92.6$   
 $R_9 = 54.8$

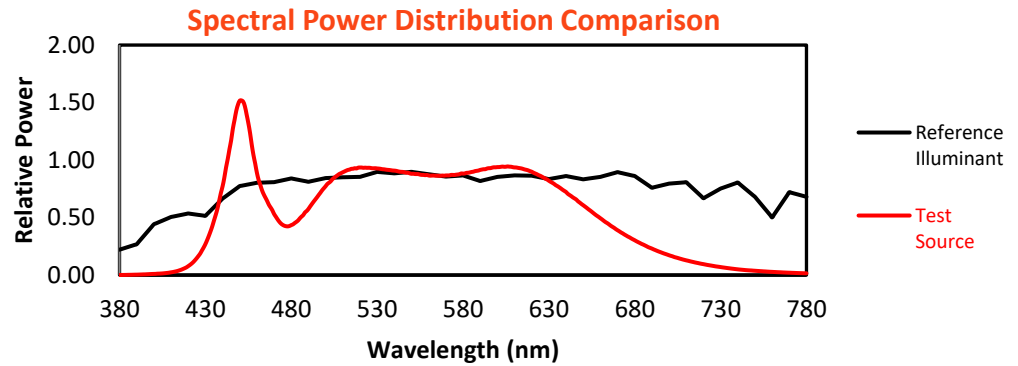


### Color Vector Graphics

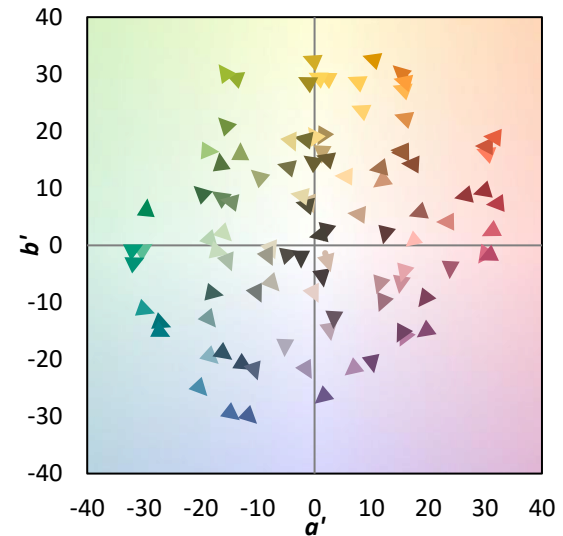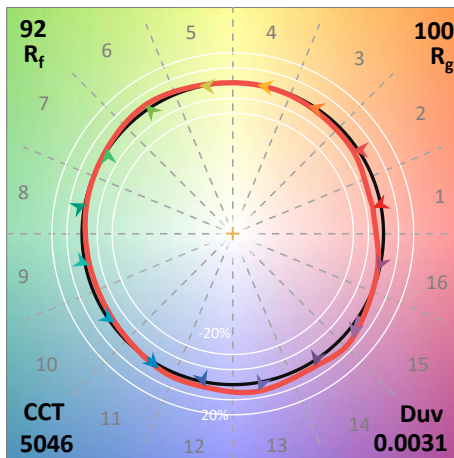
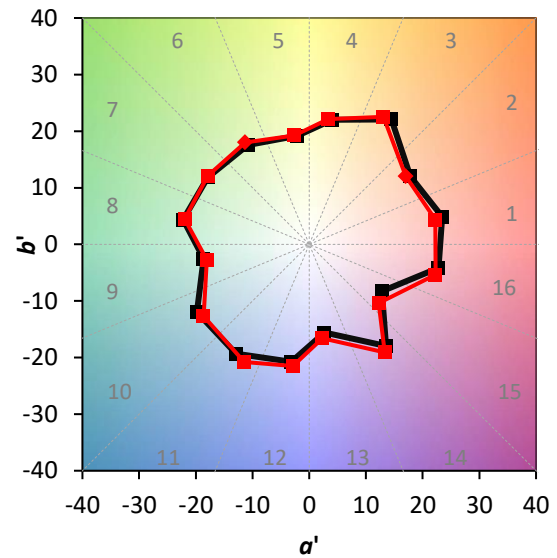
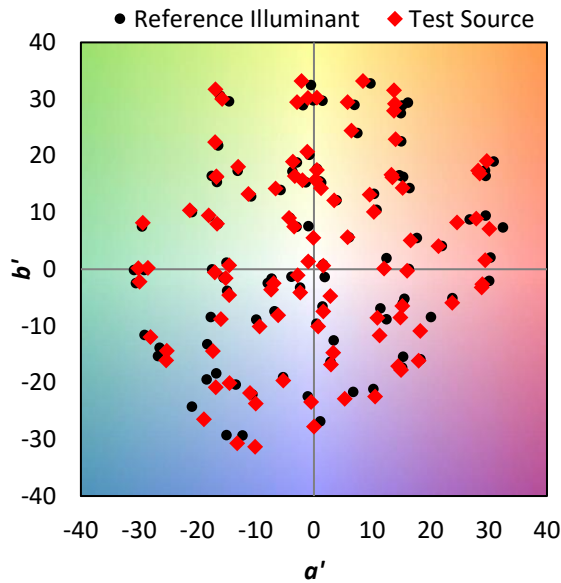


**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 91 | CES51 = 99 | CES76 = 84 |
| CES02 = 60 | CES27 = 94 | CES52 = 96 | CES77 = 88 |
| CES03 = 31 | CES28 = 95 | CES53 = 95 | CES78 = 80 |
| CES04 = 68 | CES29 = 92 | CES54 = 96 | CES79 = 96 |
| CES05 = 47 | CES30 = 99 | CES55 = 95 | CES80 = 92 |
| CES06 = 50 | CES31 = 93 | CES56 = 95 | CES81 = 89 |
| CES07 = 40 | CES32 = 88 | CES57 = 95 | CES82 = 96 |
| CES08 = 40 | CES33 = 95 | CES58 = 95 | CES83 = 97 |
| CES09 = 29 | CES34 = 92 | CES59 = 98 | CES84 = 94 |
| CES10 = 73 | CES35 = 95 | CES60 = 94 | CES85 = 85 |
| CES11 = 56 | CES36 = 85 | CES61 = 94 | CES86 = 87 |
| CES12 = 62 | CES37 = 95 | CES62 = 91 | CES87 = 91 |
| CES13 = 42 | CES38 = 94 | CES63 = 93 | CES88 = 96 |
| CES14 = 74 | CES39 = 97 | CES64 = 93 | CES89 = 87 |
| CES15 = 71 | CES40 = 94 | CES65 = 88 | CES90 = 97 |
| CES16 = 46 | CES41 = 99 | CES66 = 90 | CES91 = 76 |
| CES17 = 48 | CES42 = 91 | CES67 = 89 | CES92 = 79 |
| CES18 = 56 | CES43 = 90 | CES68 = 90 | CES93 = 88 |
| CES19 = 70 | CES44 = 99 | CES69 = 91 | CES94 = 79 |
| CES20 = 65 | CES45 = 94 | CES70 = 86 | CES95 = 83 |
| CES21 = 84 | CES46 = 95 | CES71 = 81 | CES96 = 91 |
| CES22 = 77 | CES47 = 95 | CES72 = 94 | CES97 = 95 |
| CES23 = 91 | CES48 = 95 | CES73 = 80 | CES98 = 94 |
| CES24 = 89 | CES49 = 94 | CES74 = 94 | CES99 = 90 |
| CES25 = 70 | CES50 = 98 | CES75 = 81 |            |

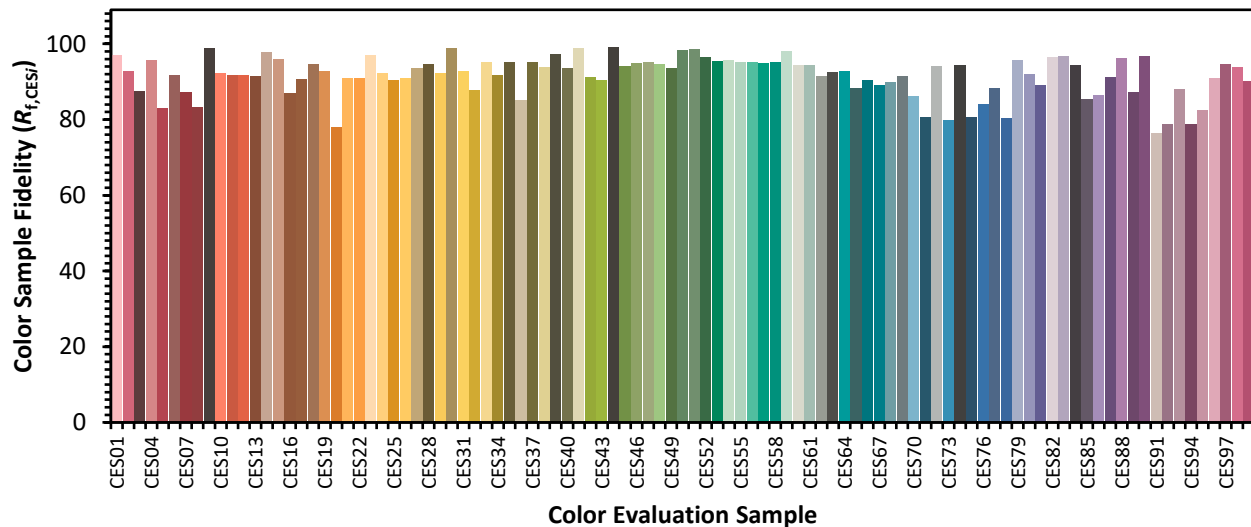

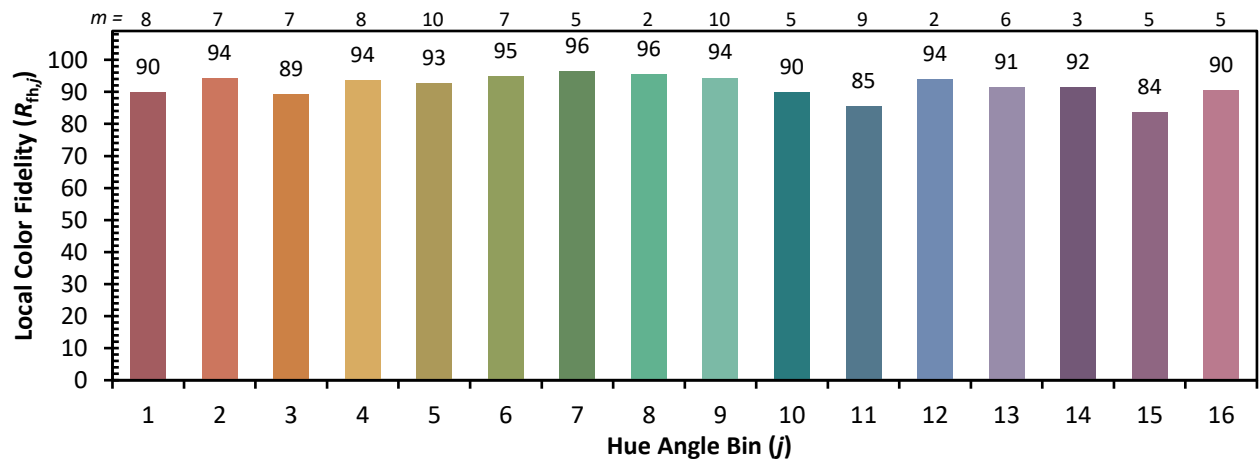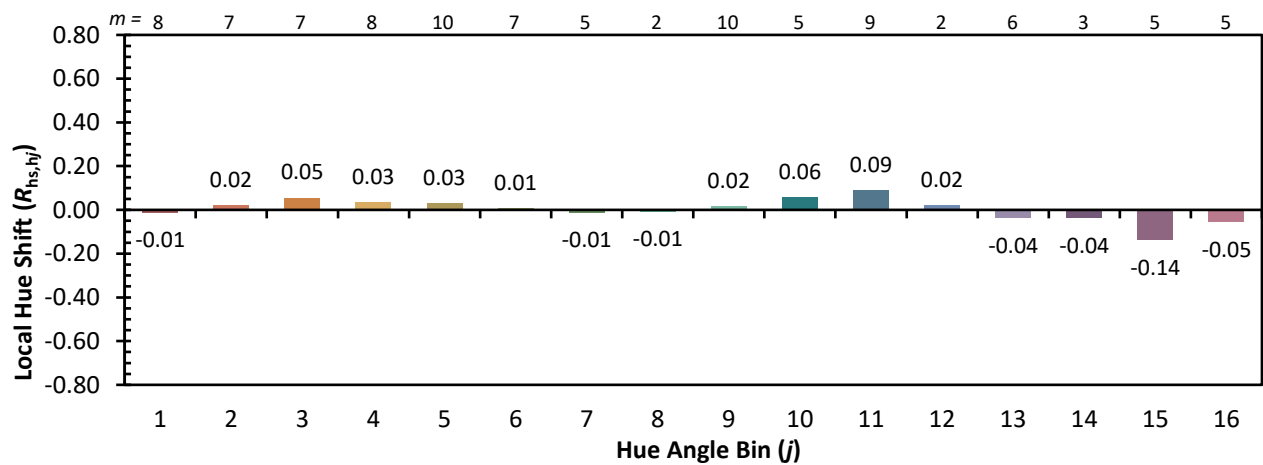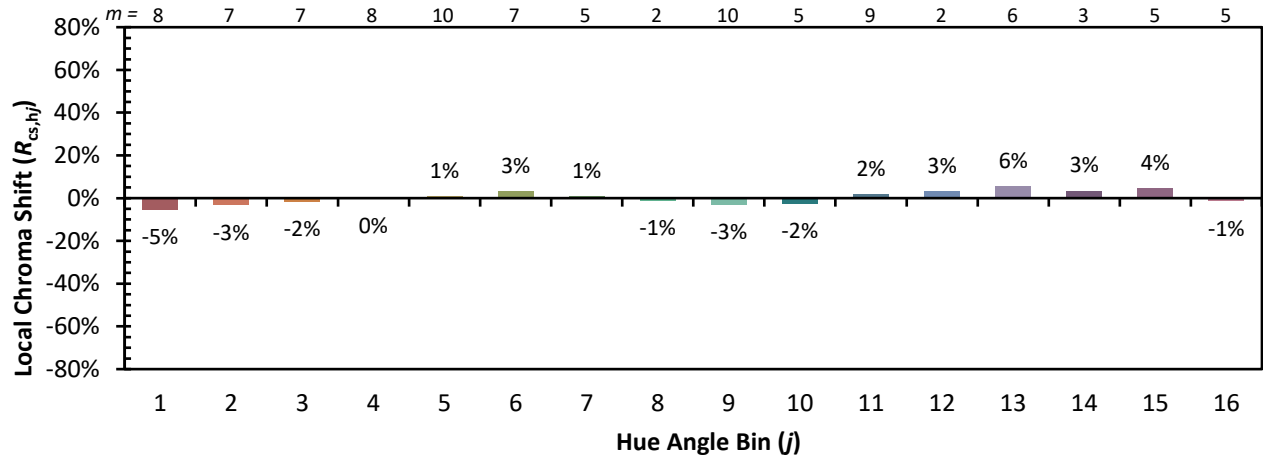

**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**

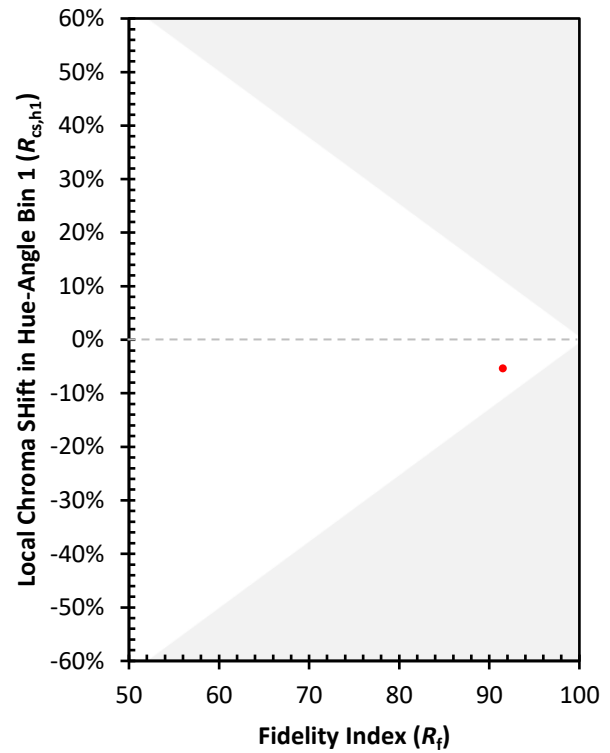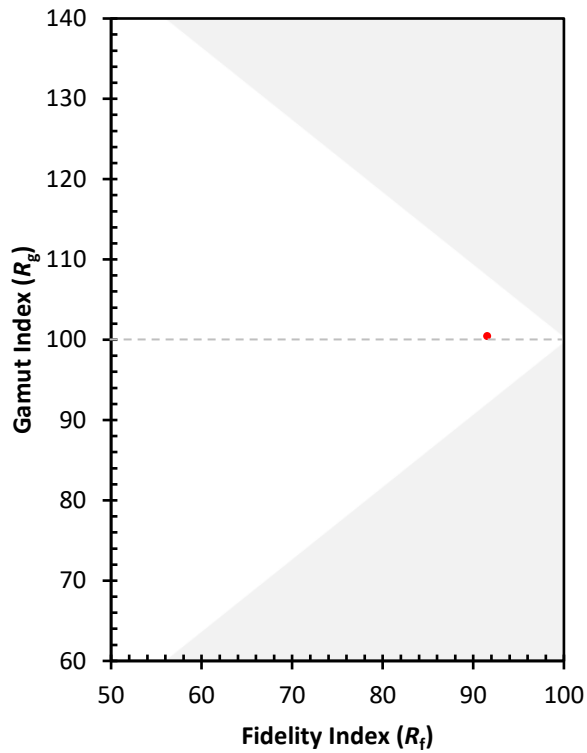

(END OF REPORT)