

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P828733

Luminaire Tested: **OHB-12HE-A-UNV-L940-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P828733
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHB-12HE-A-UNV-L940-CD
Description: 12000 LUMEN OHB HE LED LUMINAIRE WITH 90CRI, 4000K LEDS AND AISLE LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 10259.9 lumens
Efficiency: N/A
Efficacy: 146.6 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.67' x L: 1.93' x H: 0.17')
CIE Type: Direct

Input Watts (W): 70
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P828733

CATALOG NUMBER: OHB-12HE-A-UNV-L940-CD

Luminous Intensity Polar Plot

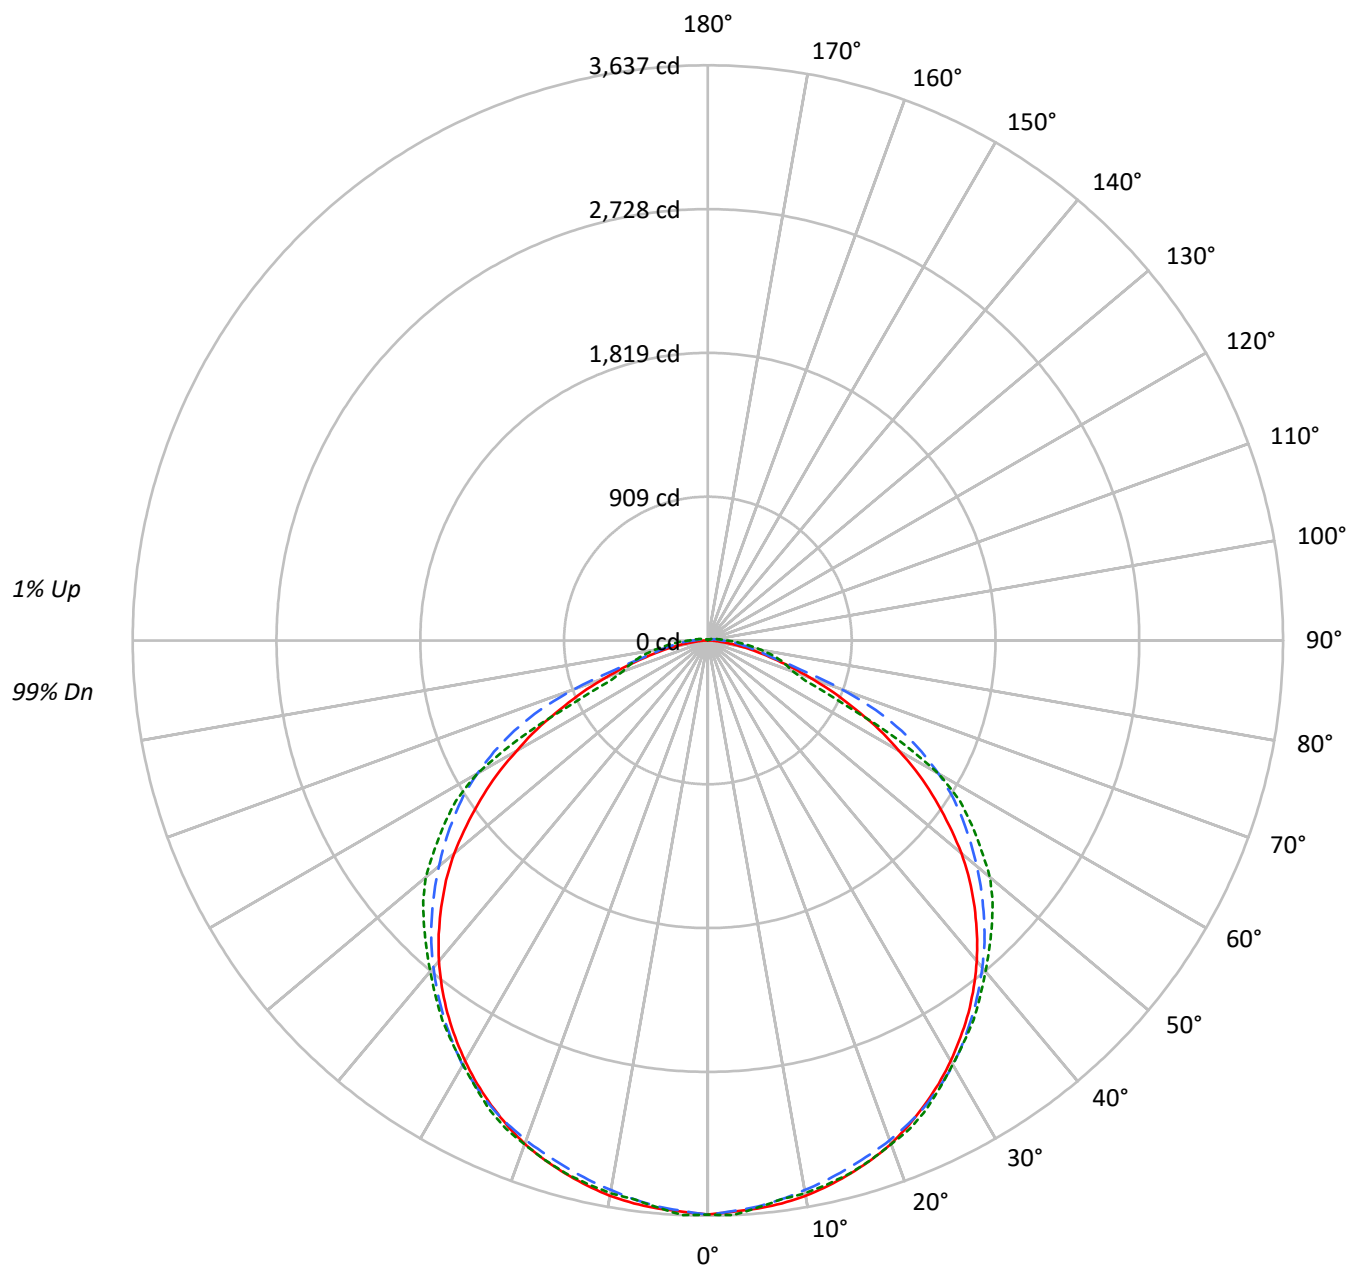



TEST NUMBER: P828733

CATALOG NUMBER: OHB-12HE-A-UNV-L940-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	110	110	110	106	106	106	101	101	101			99
1	109	104	100	96	106	102	98	95	97	94	91	93	91	88	90	87	86			83
2	99	91	84	79	96	89	83	78	85	80	76	82	78	74	79	75	72			70
3	91	80	72	66	88	79	71	65	75	69	64	72	67	63	70	65	61			59
4	83	71	62	56	81	70	62	55	67	60	54	65	59	54	62	57	53			51
5	76	64	55	48	74	62	54	48	60	53	47	58	52	46	56	50	46			44
6	70	57	48	42	68	56	48	42	54	47	41	52	46	41	51	45	40			38
7	65	52	43	37	63	51	43	37	49	42	36	48	41	36	46	40	36			34
8	61	47	39	33	59	46	38	33	45	38	33	44	37	32	42	36	32			30
9	57	43	35	30	55	43	35	29	41	34	29	40	34	29	39	33	29			27
10	53	40	32	27	52	39	32	27	38	31	27	37	31	26	36	30	26			24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	12126	12126	12126
5°	12003	11914	11967
10°	11915	11698	11827
15°	11795	11528	11740
20°	11674	11408	11628
25°	11486	11286	11517
30°	11284	11114	11291
35°	11049	10863	11162
40°	10757	10602	10989
45°	10371	10305	10905
50°	9865	9968	10807
55°	9098	9631	10389
60°	8119	9157	9588
65°	6870	8334	6063
70°	5430	6422	4383
75°	3957	3743	4430
80°	2624	3023	4200
85°	1347	2625	3886



TEST NUMBER: P828733

CATALOG NUMBER: OHB-12HE-A-UNV-L940-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	342.3	3.3
10°-20°	981.5	9.6
20°-30°	1499.0	14.6
30°-40°	1818.8	17.7
40°-50°	1906.3	18.6
50°-60°	1727.4	16.8
60°-70°	1158.2	11.3
70°-80°	520.1	5.1
80°-90°	188.7	1.8
90°-100°	56.8	0.6
100°-110°	26.8	0.3
110°-120°	13.4	0.1
120°-130°	7.4	0.1
130°-140°	5.1	0.0
140°-150°	3.4	0.0
150°-160°	2.5	0.0
160°-170°	1.6	0.0
170°-180°	0.5	0.0
0°-30°	2822.8	27.5
0°-40°	4641.6	45.2
0°-60°	8275.4	80.7
0°-90°	10142.3	98.9
90°-120°	97.0	0.9
90°-150°	112.9	1.1
90°-180°	118.0	1.2
0°-180°	10259.9	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	3630	3630	3630	3630	3630	
5°	3606	3619	3594	3605	3600	343
15°	3489	3476	3451	3482	3486	985
25°	3242	3227	3250	3280	3270	1494
35°	2873	2880	2909	2940	2929	1796
45°	2384	2423	2468	2531	2539	1837
55°	1755	1839	1965	2043	2039	1566
65°	1030	1191	1352	1141	932	1026
75°	405	588	432	442	471	443
85°	70	134	172	207	217	85
90°	0	45	89	111	116	4
95°	0	28	61	74	76	1
105°	2	12	30	36	38	2
115°	4	6	15	19	20	4
125°	4	4	9	11	12	4
135°	5	5	6	8	9	4
145°	5	5	5	6	6	3
155°	5	6	6	6	5	2
165°	6	6	6	6	6	2
175°	6	6	5	5	5	1
180°	5	5	5	5	5	



TEST NUMBER: P828733

CATALOG NUMBER: OHB-12HE-A-UNV-L940-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	3630.0	3630.0	3630.0	3630.0	3630.0
2.5°	3615.3	3630.5	3611.6	3632.1	3637.3
5°	3606.4	3619.0	3593.8	3604.8	3600.1
7.5°	3590.1	3594.3	3564.4	3573.3	3563.9
10°	3566.0	3563.9	3528.7	3546.0	3548.1
12.5°	3530.3	3524.0	3492.5	3518.7	3519.2
15°	3489.3	3475.7	3451.0	3481.5	3485.7
17.5°	3442.1	3424.2	3408.0	3447.3	3441.0
20°	3387.0	3366.0	3362.8	3405.9	3390.1
22.5°	3318.7	3302.5	3309.8	3350.8	3340.8
25°	3241.6	3227.4	3250.0	3279.9	3270.5
27.5°	3160.2	3151.8	3177.6	3200.7	3182.3
30°	3071.0	3066.3	3100.4	3119.3	3096.2
32.5°	2973.9	2975.5	3008.0	3033.7	3012.2
35°	2873.1	2880.0	2909.4	2940.3	2928.8
37.5°	2762.4	2777.6	2807.0	2842.2	2830.1
40°	2645.3	2667.4	2699.9	2742.4	2731.4
42.5°	2518.8	2546.7	2588.7	2635.9	2634.8
45°	2384.5	2423.3	2468.5	2531.4	2539.3
47.5°	2244.9	2288.4	2345.6	2429.6	2441.7
50°	2093.2	2147.8	2219.1	2319.9	2327.3
52.5°	1924.2	1998.7	2093.2	2189.8	2180.8
55°	1754.6	1839.1	1964.6	2043.3	2038.6
57.5°	1585.6	1680.6	1832.8	1889.0	1888.5
60°	1396.7	1516.9	1683.3	1725.8	1683.8
62.5°	1221.9	1351.0	1523.7	1492.7	1348.9
65°	1029.8	1190.9	1352.1	1141.1	931.6
67.5°	859.2	1027.2	1148.4	781.5	669.2
70°	687.6	872.9	895.4	580.0	572.1
72.5°	535.4	732.7	617.8	496.5	521.7
75°	405.2	587.9	432.5	442.5	471.3
77.5°	295.5	451.4	336.4	387.9	411.5
80°	203.1	319.6	274.5	325.9	342.2
82.5°	127.5	211.0	219.9	262.4	279.2
85°	69.8	133.8	171.6	207.3	217.3
87.5°	28.9	80.8	131.2	160.1	168.5
90°	0.5	44.6	88.7	111.3	116.5
92.5°	0.5	34.1	72.4	89.8	93.4
95°	0.5	27.8	60.9	74.0	76.1
97.5°	1.0	22.0	50.9	61.4	63.5
100°	1.6	18.4	42.5	51.4	53.0
102.5°	2.1	14.7	35.7	43.0	44.6
105°	2.1	12.1	29.9	36.2	37.8



TEST NUMBER: P828733

CATALOG NUMBER: OHB-12HE-A-UNV-L940-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	3.7	7.3	17.8	22.6	23.6
115°	4.2	6.3	15.2	19.4	20.5
117.5°	4.2	5.2	13.1	16.3	17.3
120°	4.2	4.7	11.5	14.2	14.7
122.5°	4.2	4.2	10.0	12.6	13.1
125°	3.7	4.2	9.4	11.0	11.5
127.5°	4.2	4.2	8.4	10.0	10.5
130°	4.2	4.7	7.3	9.4	9.4
132.5°	4.7	5.2	6.8	8.9	8.9
135°	4.7	5.2	5.8	8.4	8.9
137.5°	5.2	5.2	5.2	7.9	8.4
140°	5.2	5.2	4.7	6.8	7.3
142.5°	4.7	5.2	4.7	6.3	6.8
145°	4.7	5.2	5.2	5.8	6.3
147.5°	5.2	5.2	5.2	5.2	5.8
150°	5.2	5.2	5.2	5.2	5.2
152.5°	5.2	5.2	5.2	5.2	5.2
155°	5.2	5.8	5.8	5.8	5.2
157.5°	5.2	5.8	5.8	5.8	5.8
160°	5.2	5.8	5.8	5.8	5.8
162.5°	5.8	5.8	5.8	5.8	5.8
165°	5.8	5.8	5.8	5.8	5.8
167.5°	5.8	6.3	5.8	5.8	5.8
170°	5.8	5.8	5.8	5.2	5.2
172.5°	5.8	5.8	5.8	5.2	5.2
175°	5.8	5.8	5.2	4.7	4.7
177.5°	6.3	5.8	5.2	4.7	4.2
180°	5.2	5.2	5.2	5.2	5.2



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	2.6	10.0	25.7	31.0	32.0
110°	3.1	8.4	21.5	26.2	27.3



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-8

Test Date: 08/01/2023

Luminaire Tested: OHB-15SE-N-UNV-L940-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L940-CD.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-8
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L940-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 90CRI, 4000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	3979	CRI (Ra):	91.5		
CIE u':	0.2254	R1:	91.7	R9:	57.0
CIE v':	0.5020	R2:	96.4	R10:	89.6
Duv:	0.0001	R3:	97.6	R11:	89.1
CIE x:	0.3813	R4:	89.2	R12:	69.6
CIE y:	0.3773	R5:	90.3	R13:	93.4
CIE z:	0.2414	R6:	93.0	R14:	98.9
Peak Wavelength (nm):	455	R7:	91.6		
Dominant Wavelength (nm):	579	R8:	81.9		
Purity:	27.8				
Rf:	88.6				
Rg:	96.2				

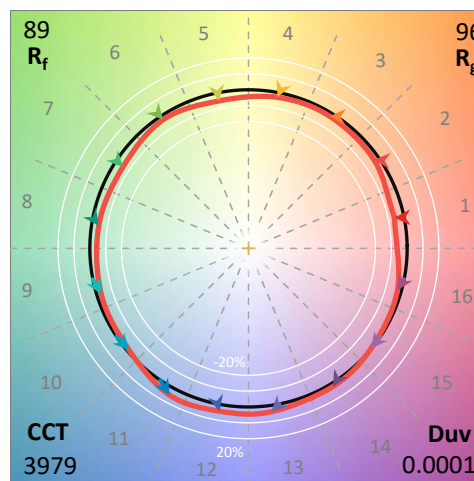

Test Conditions


Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/57%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-8


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-8

CIE 1931 Chromaticity Diagram

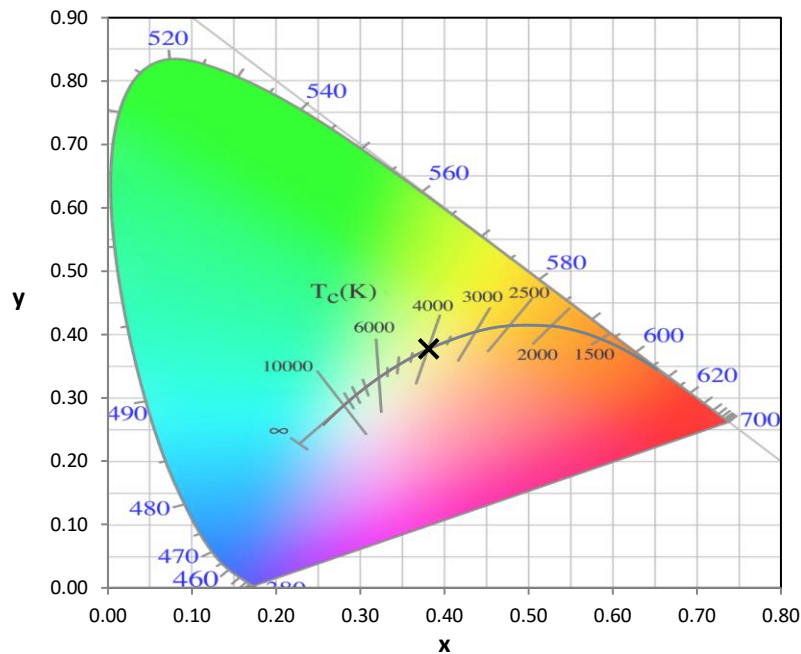


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

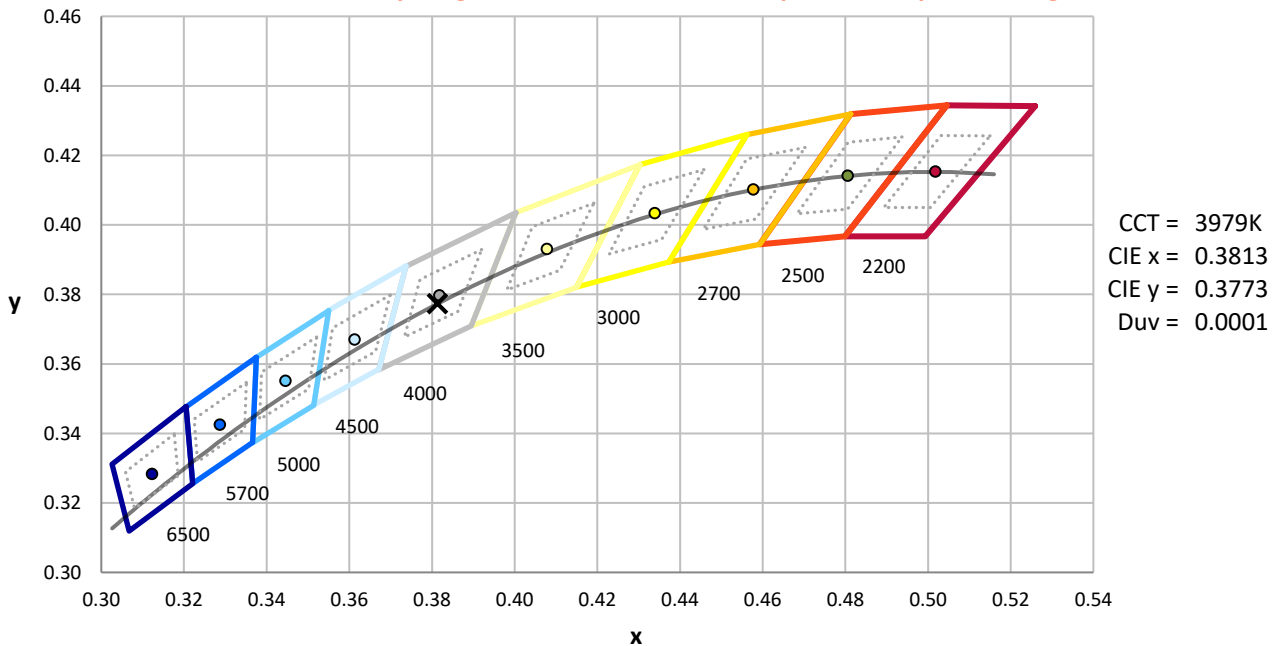

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-8

Photopic Flux vs. Wavelength

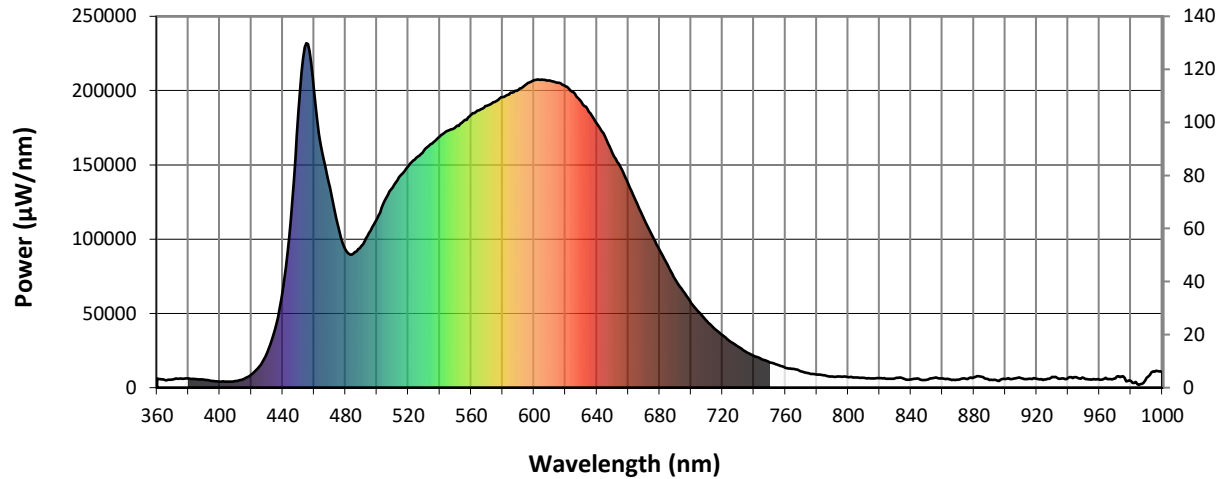


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6299	NR	490	95290	NR	620	202945	NR	750	17048	NR	880	6802	NR
365	5178	NR	495	104168	NR	625	198934	NR	755	15396	NR	885	7389	NR
370	5490	NR	500	113725	NR	630	192455	NR	760	13359	NR	890	5235	NR
375	6104	NR	505	126034	NR	635	185651	NR	765	12573	NR	895	4778	NR
380	6149	NR	510	134848	NR	640	177659	NR	770	10940	NR	900	5847	NR
385	5688	NR	515	142720	NR	645	169230	NR	775	9589	NR	905	5969	NR
390	5262	NR	520	149276	NR	650	157607	NR	780	8802	NR	910	6399	NR
395	4581	NR	525	154675	NR	655	148474	NR	785	8257	NR	915	5912	NR
400	4118	NR	530	159852	NR	660	137175	NR	790	7397	NR	920	6048	NR
405	4084	NR	535	164319	NR	665	125124	NR	795	7591	NR	925	5552	NR
410	4438	NR	540	169099	NR	670	113759	NR	800	7116	NR	930	7244	NR
415	5782	NR	545	173030	NR	675	102656	NR	805	6905	NR	935	6076	NR
420	8737	NR	550	175415	NR	680	92651	NR	810	6711	NR	940	6581	NR
425	14203	NR	555	179385	NR	685	82728	NR	815	6202	NR	945	7094	NR
430	23287	NR	560	183651	NR	690	72755	NR	820	6421	NR	950	6374	NR
435	39198	NR	565	186704	NR	695	64864	NR	825	6067	NR	955	5408	NR
440	65090	NR	570	189735	NR	700	57132	NR	830	6507	NR	960	5406	NR
445	111800	NR	575	192391	NR	705	50899	NR	835	6304	NR	965	5676	NR
450	185327	NR	580	195587	NR	710	44715	NR	840	5605	NR	970	6132	NR
455	231910	NR	585	198690	NR	715	39661	NR	845	5975	NR	975	7732	NR
460	199850	NR	590	200528	NR	720	35220	NR	850	5252	NR	980	4497	NR
465	159032	NR	595	204245	NR	725	31033	NR	855	6570	NR	985	1796	NR
470	134681	NR	600	206961	NR	730	27573	NR	860	6167	NR	990	6719	NR
475	109873	NR	605	207509	NR	735	24077	NR	865	5558	NR	995	10730	NR
480	92595	NR	610	206751	NR	740	21375	NR	870	5280	NR	1000	10317	NR
485	90323	NR	615	205233	NR	745	19152	NR	875	5889	NR			

REPORT NUMBER: SP1-2307-100-8

Scotopic Flux vs. Wavelength

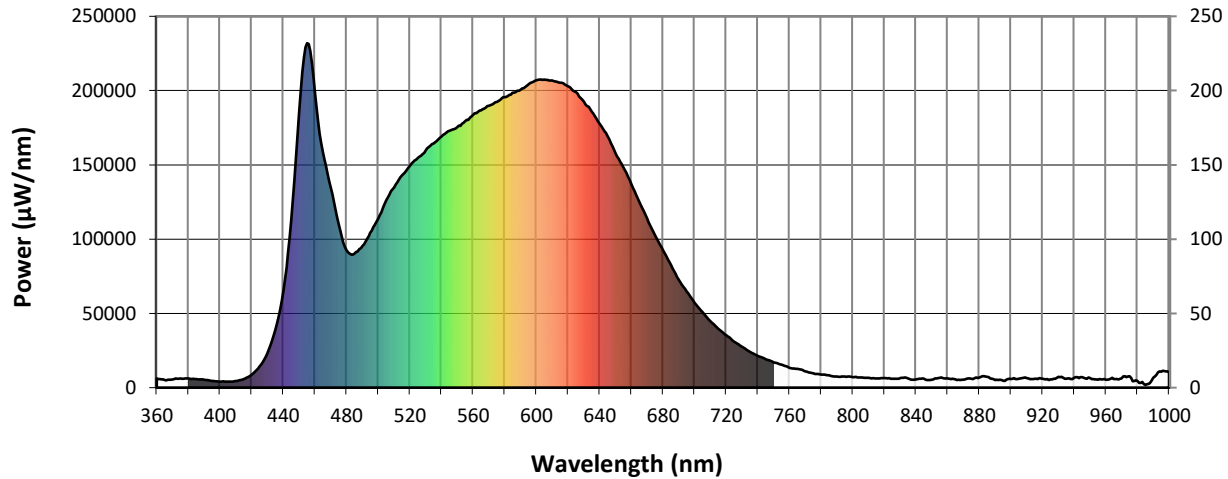


Scotopic Lumens: 22729.8

S/P: 1.79

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6299	NR	490	95290	NR	620	202945	NR	750	17048	NR	880	6802	NR
365	5178	NR	495	104168	NR	625	198934	NR	755	15396	NR	885	7389	NR
370	5490	NR	500	113725	NR	630	192455	NR	760	13359	NR	890	5235	NR
375	6104	NR	505	126034	NR	635	185651	NR	765	12573	NR	895	4778	NR
380	6149	NR	510	134848	NR	640	177659	NR	770	10940	NR	900	5847	NR
385	5688	NR	515	142720	NR	645	169230	NR	775	9589	NR	905	5969	NR
390	5262	NR	520	149276	NR	650	157607	NR	780	8802	NR	910	6399	NR
395	4581	NR	525	154675	NR	655	148474	NR	785	8257	NR	915	5912	NR
400	4118	NR	530	159852	NR	660	137175	NR	790	7397	NR	920	6048	NR
405	4084	NR	535	164319	NR	665	125124	NR	795	7591	NR	925	5552	NR
410	4438	NR	540	169099	NR	670	113759	NR	800	7116	NR	930	7244	NR
415	5782	NR	545	173030	NR	675	102656	NR	805	6905	NR	935	6076	NR
420	8737	NR	550	175415	NR	680	92651	NR	810	6711	NR	940	6581	NR
425	14203	NR	555	179385	NR	685	82728	NR	815	6202	NR	945	7094	NR
430	23287	NR	560	183651	NR	690	72755	NR	820	6421	NR	950	6374	NR
435	39198	NR	565	186704	NR	695	64864	NR	825	6067	NR	955	5408	NR
440	65090	NR	570	189735	NR	700	57132	NR	830	6507	NR	960	5406	NR
445	111800	NR	575	192391	NR	705	50899	NR	835	6304	NR	965	5676	NR
450	185327	NR	580	195587	NR	710	44715	NR	840	5605	NR	970	6132	NR
455	231910	NR	585	198690	NR	715	39661	NR	845	5975	NR	975	7732	NR
460	199850	NR	590	200528	NR	720	35220	NR	850	5252	NR	980	4497	NR
465	159032	NR	595	204245	NR	725	31033	NR	855	6570	NR	985	1796	NR
470	134681	NR	600	206961	NR	730	27573	NR	860	6167	NR	990	6719	NR
475	109873	NR	605	207509	NR	735	24077	NR	865	5558	NR	995	10730	NR
480	92595	NR	610	206751	NR	740	21375	NR	870	5280	NR	1000	10317	NR
485	90323	NR	615	205233	NR	745	19152	NR	875	5889	NR			

REPORT NUMBER: SP1-2307-100-8

Melanopic Flux vs. Wavelength

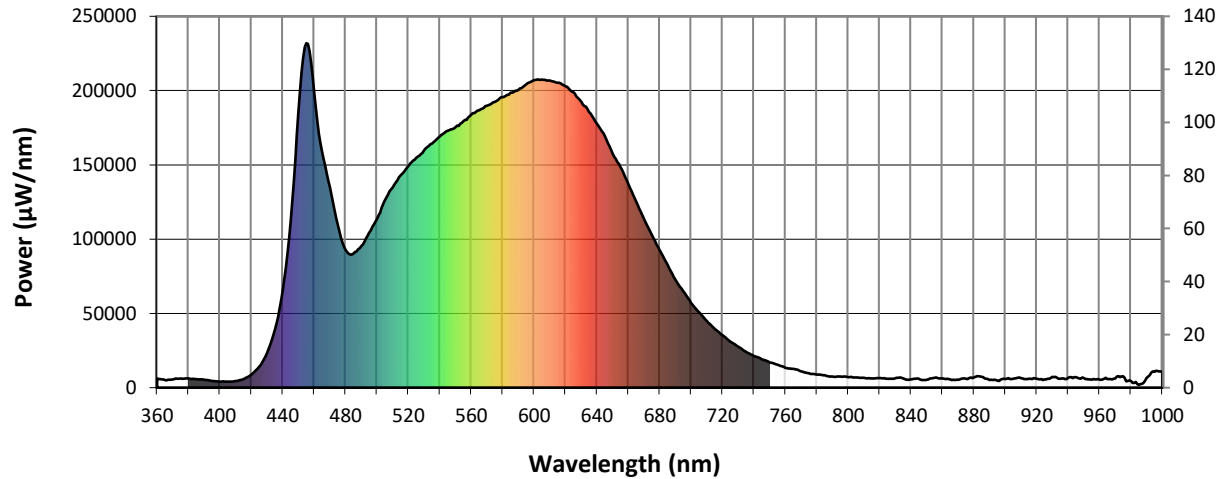

Melanopic Lumens: 9423.4 M/P: 0.74


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6299	NR	490	95290	NR	620	202945	NR	750	17048	NR	880	6802	NR
365	5178	NR	495	104168	NR	625	198934	NR	755	15396	NR	885	7389	NR
370	5490	NR	500	113725	NR	630	192455	NR	760	13359	NR	890	5235	NR
375	6104	NR	505	126034	NR	635	185651	NR	765	12573	NR	895	4778	NR
380	6149	NR	510	134848	NR	640	177659	NR	770	10940	NR	900	5847	NR
385	5688	NR	515	142720	NR	645	169230	NR	775	9589	NR	905	5969	NR
390	5262	NR	520	149276	NR	650	157607	NR	780	8802	NR	910	6399	NR
395	4581	NR	525	154675	NR	655	148474	NR	785	8257	NR	915	5912	NR
400	4118	NR	530	159852	NR	660	137175	NR	790	7397	NR	920	6048	NR
405	4084	NR	535	164319	NR	665	125124	NR	795	7591	NR	925	5552	NR
410	4438	NR	540	169099	NR	670	113759	NR	800	7116	NR	930	7244	NR
415	5782	NR	545	173030	NR	675	102656	NR	805	6905	NR	935	6076	NR
420	8737	NR	550	175415	NR	680	92651	NR	810	6711	NR	940	6581	NR
425	14203	NR	555	179385	NR	685	82728	NR	815	6202	NR	945	7094	NR
430	23287	NR	560	183651	NR	690	72755	NR	820	6421	NR	950	6374	NR
435	39198	NR	565	186704	NR	695	64864	NR	825	6067	NR	955	5408	NR
440	65090	NR	570	189735	NR	700	57132	NR	830	6507	NR	960	5406	NR
445	111800	NR	575	192391	NR	705	50899	NR	835	6304	NR	965	5676	NR
450	185327	NR	580	195587	NR	710	44715	NR	840	5605	NR	970	6132	NR
455	231910	NR	585	198690	NR	715	39661	NR	845	5975	NR	975	7732	NR
460	199850	NR	590	200528	NR	720	35220	NR	850	5252	NR	980	4497	NR
465	159032	NR	595	204245	NR	725	31033	NR	855	6570	NR	985	1796	NR
470	134681	NR	600	206961	NR	730	27573	NR	860	6167	NR	990	6719	NR
475	109873	NR	605	207509	NR	735	24077	NR	865	5558	NR	995	10730	NR
480	92595	NR	610	206751	NR	740	21375	NR	870	5280	NR	1000	10317	NR
485	90323	NR	615	205233	NR	745	19152	NR	875	5889	NR			

REPORT NUMBER: SP1-2307-100-8





TM-30-18

Summary

$R_f = 88.6$
 $R_g = 96.2$
 $CIE R_a = 91.5$
 $R_9 = 57.0$

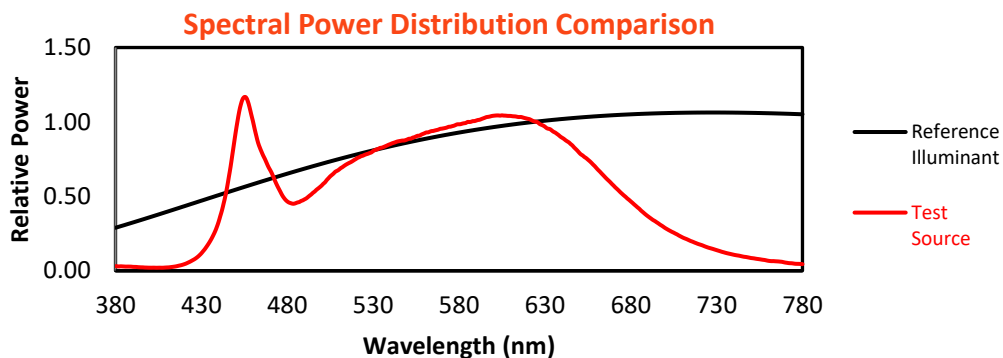

Color Vector Graphics

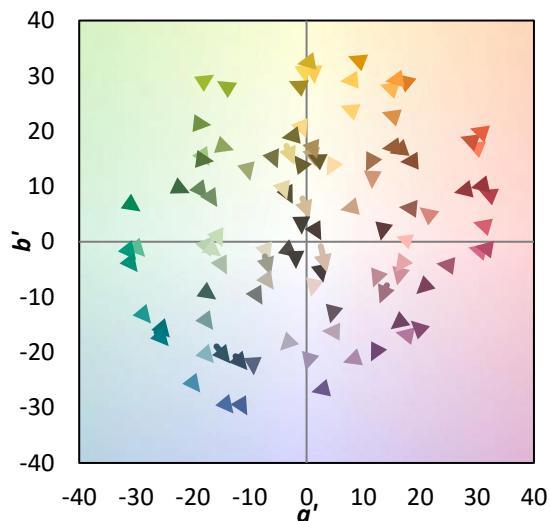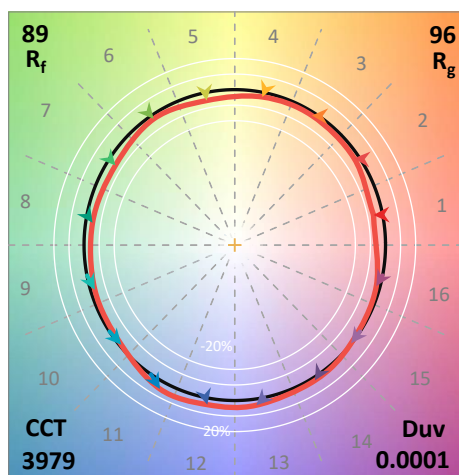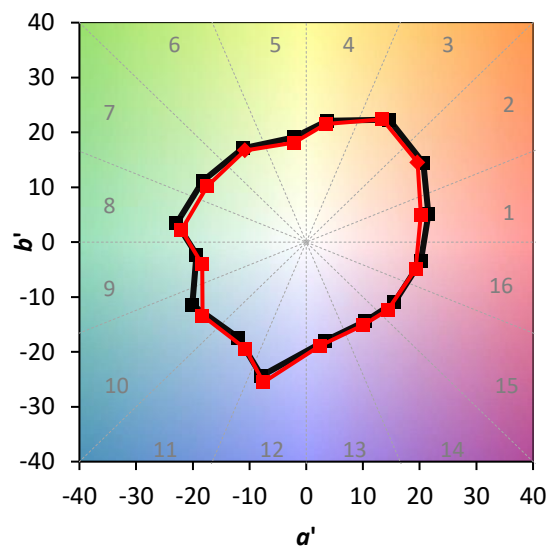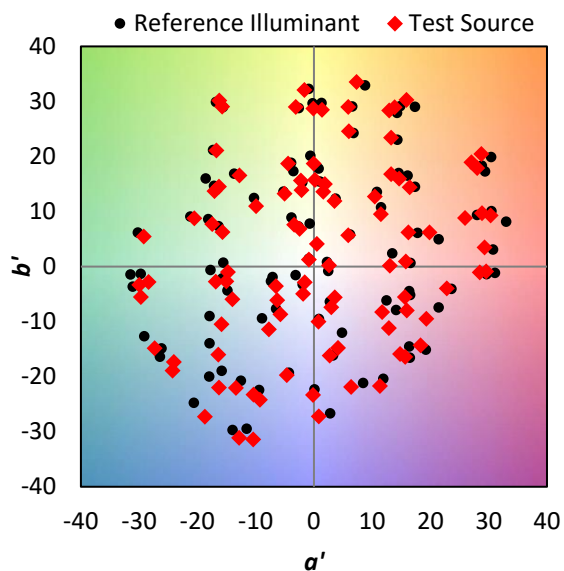


REPORT NUMBER: SP1-2307-100-8

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 95	CES51 = 92	CES76 = 88
CES02 = 62	CES27 = 87	CES52 = 95	CES77 = 88
CES03 = 31	CES28 = 96	CES53 = 92	CES78 = 85
CES04 = 69	CES29 = 92	CES54 = 88	CES79 = 95
CES05 = 49	CES30 = 80	CES55 = 85	CES80 = 93
CES06 = 50	CES31 = 93	CES56 = 87	CES81 = 85
CES07 = 42	CES32 = 94	CES57 = 84	CES82 = 97
CES08 = 41	CES33 = 90	CES58 = 84	CES83 = 96
CES09 = 29	CES34 = 96	CES59 = 94	CES84 = 93
CES10 = 74	CES35 = 97	CES60 = 88	CES85 = 81
CES11 = 57	CES36 = 74	CES61 = 88	CES86 = 85
CES12 = 63	CES37 = 96	CES62 = 76	CES87 = 90
CES13 = 43	CES38 = 75	CES63 = 86	CES88 = 94
CES14 = 74	CES39 = 97	CES64 = 81	CES89 = 86
CES15 = 71	CES40 = 97	CES65 = 83	CES90 = 91
CES16 = 47	CES41 = 91	CES66 = 78	CES91 = 67
CES17 = 49	CES42 = 98	CES67 = 78	CES92 = 76
CES18 = 56	CES43 = 96	CES68 = 83	CES93 = 85
CES19 = 71	CES44 = 99	CES69 = 84	CES94 = 79
CES20 = 66	CES45 = 97	CES70 = 83	CES95 = 81
CES21 = 85	CES46 = 94	CES71 = 74	CES96 = 91
CES22 = 78	CES47 = 90	CES72 = 92	CES97 = 94
CES23 = 91	CES48 = 82	CES73 = 79	CES98 = 92
CES24 = 90	CES49 = 94	CES74 = 89	CES99 = 89
CES25 = 71	CES50 = 93	CES75 = 78	

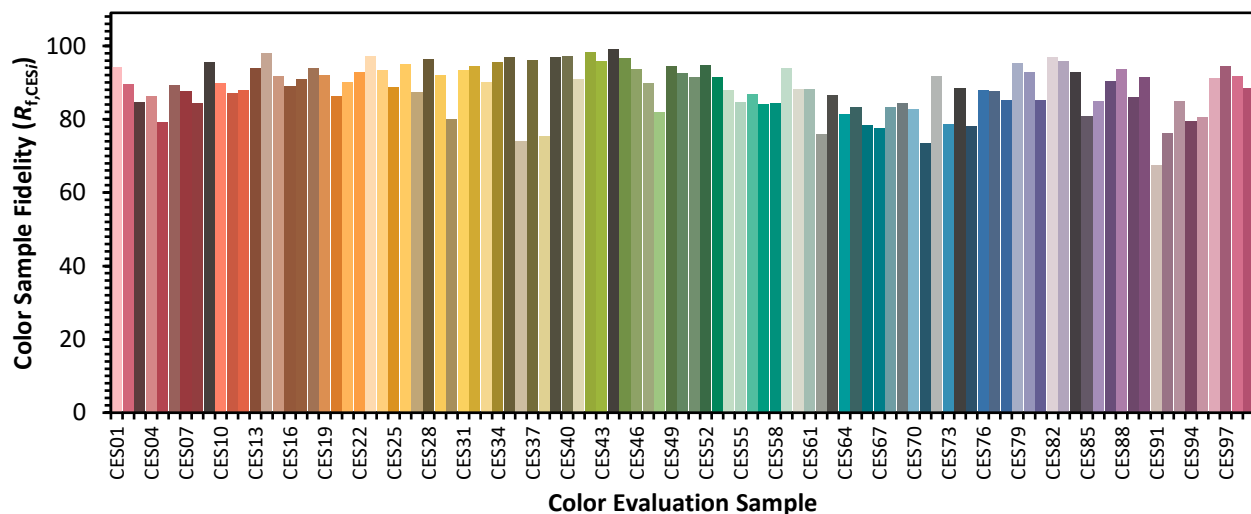

REPORT NUMBER: SP1-2307-100-8

TM-30-18



Color Rendition by Hue-Angle Bin

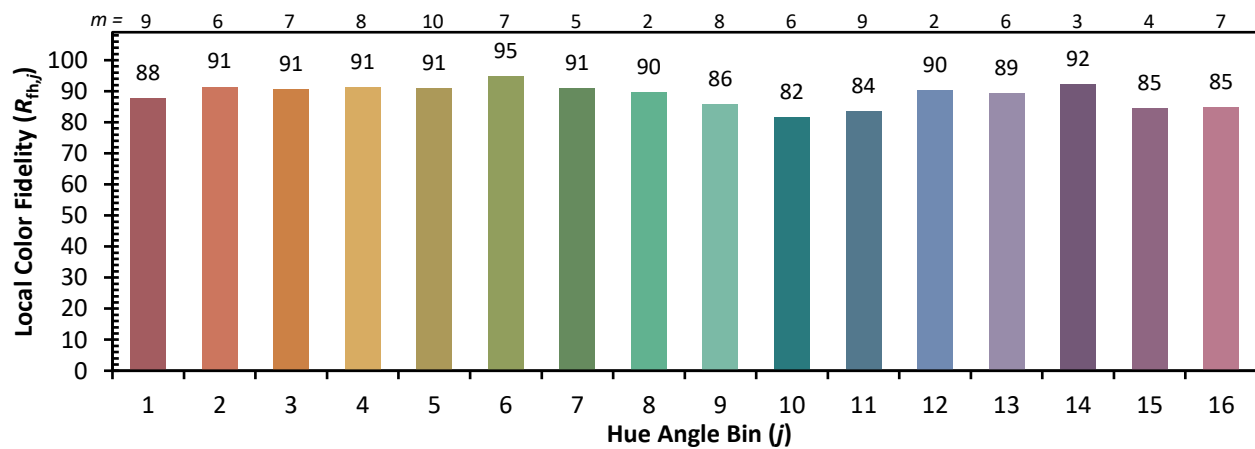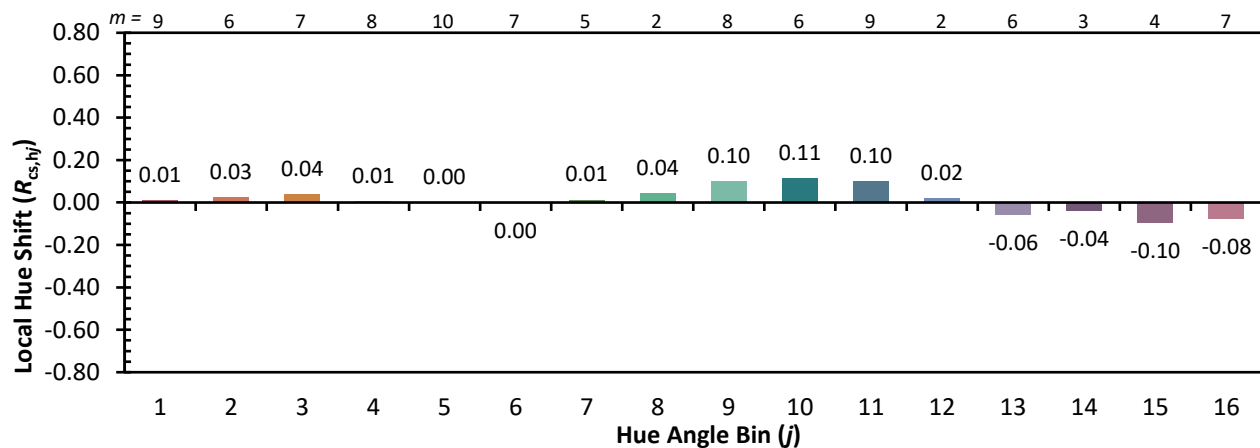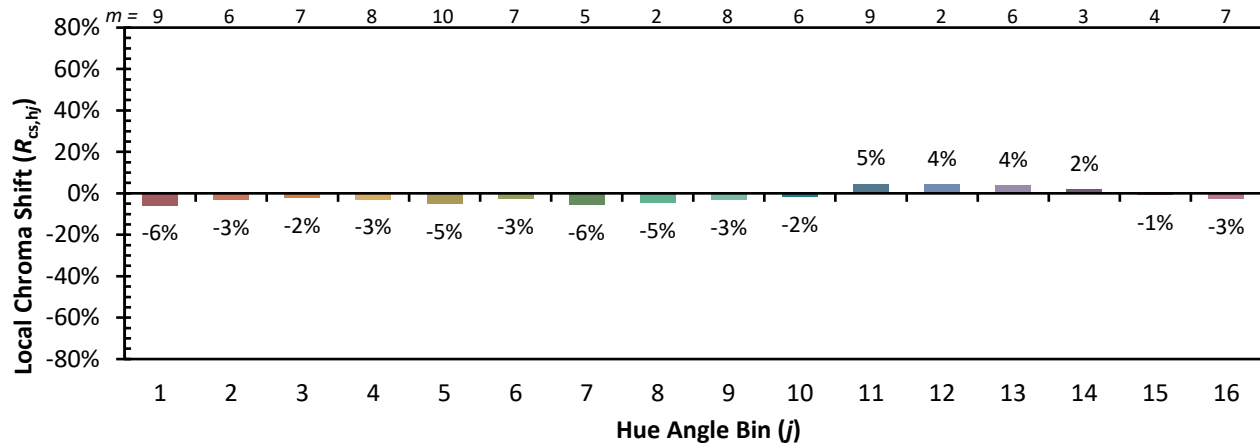

REPORT NUMBER: SP1-2307-100-8

TM-30-18

Measure Comparisons

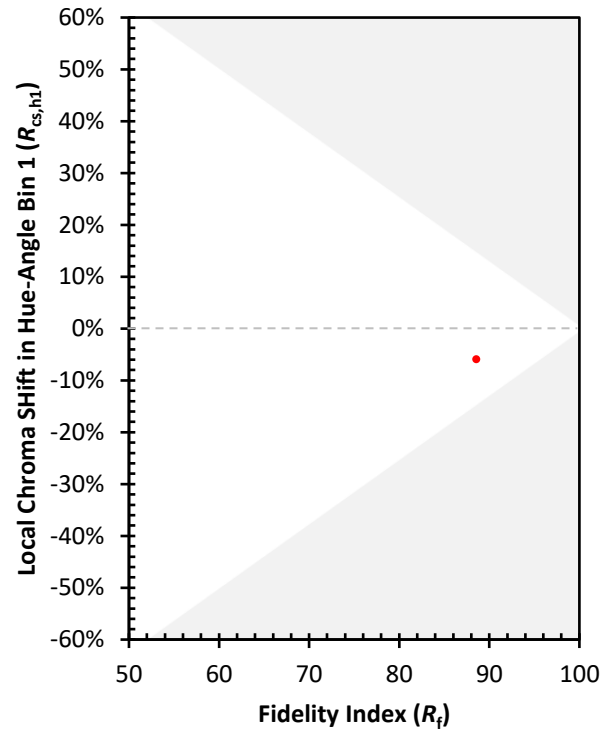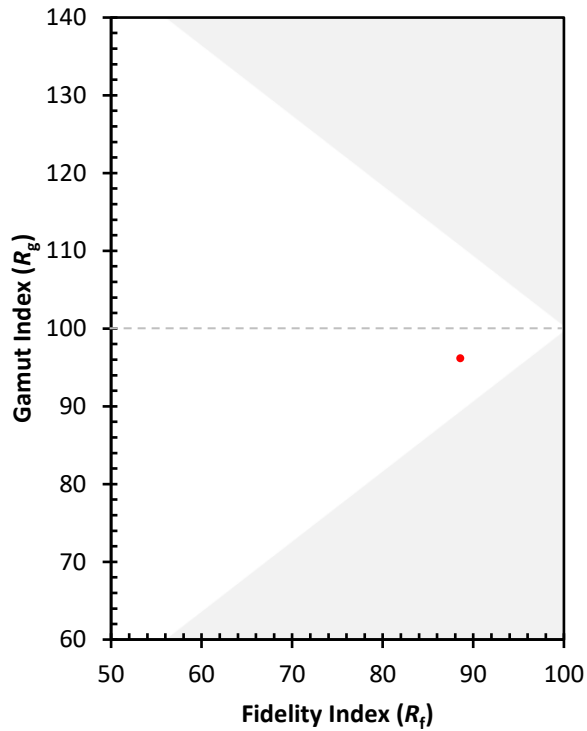

(END OF REPORT)