

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P826944

Luminaire Tested: **OHB-15SE-NL-UNV-L840-CD-UPL24**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P826944
REPORT IS A COMBINATION OF REPORTS P826189 AND G3-2310-221-6
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHB-15SE-NL-UNV-L840-CD-UPL24
Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 80CRI, 4000K LEDS AND NO LENS AND 2400 LUMEN UPLIGHT MODULE
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 18035.3 lumens
Efficiency: N/A
Efficacy: 157.5 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.28 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.93' x L: 0.88' x H: 0.1')
CIE Type: Semi-Direct

Input Watts (W): 114.5
Input Voltage (V): NR
Input Current (A_{in}): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P826944

CATALOG NUMBER: OHB-15SE-NL-UNV-L840-CD-UPL24

Luminous Intensity Polar Plot

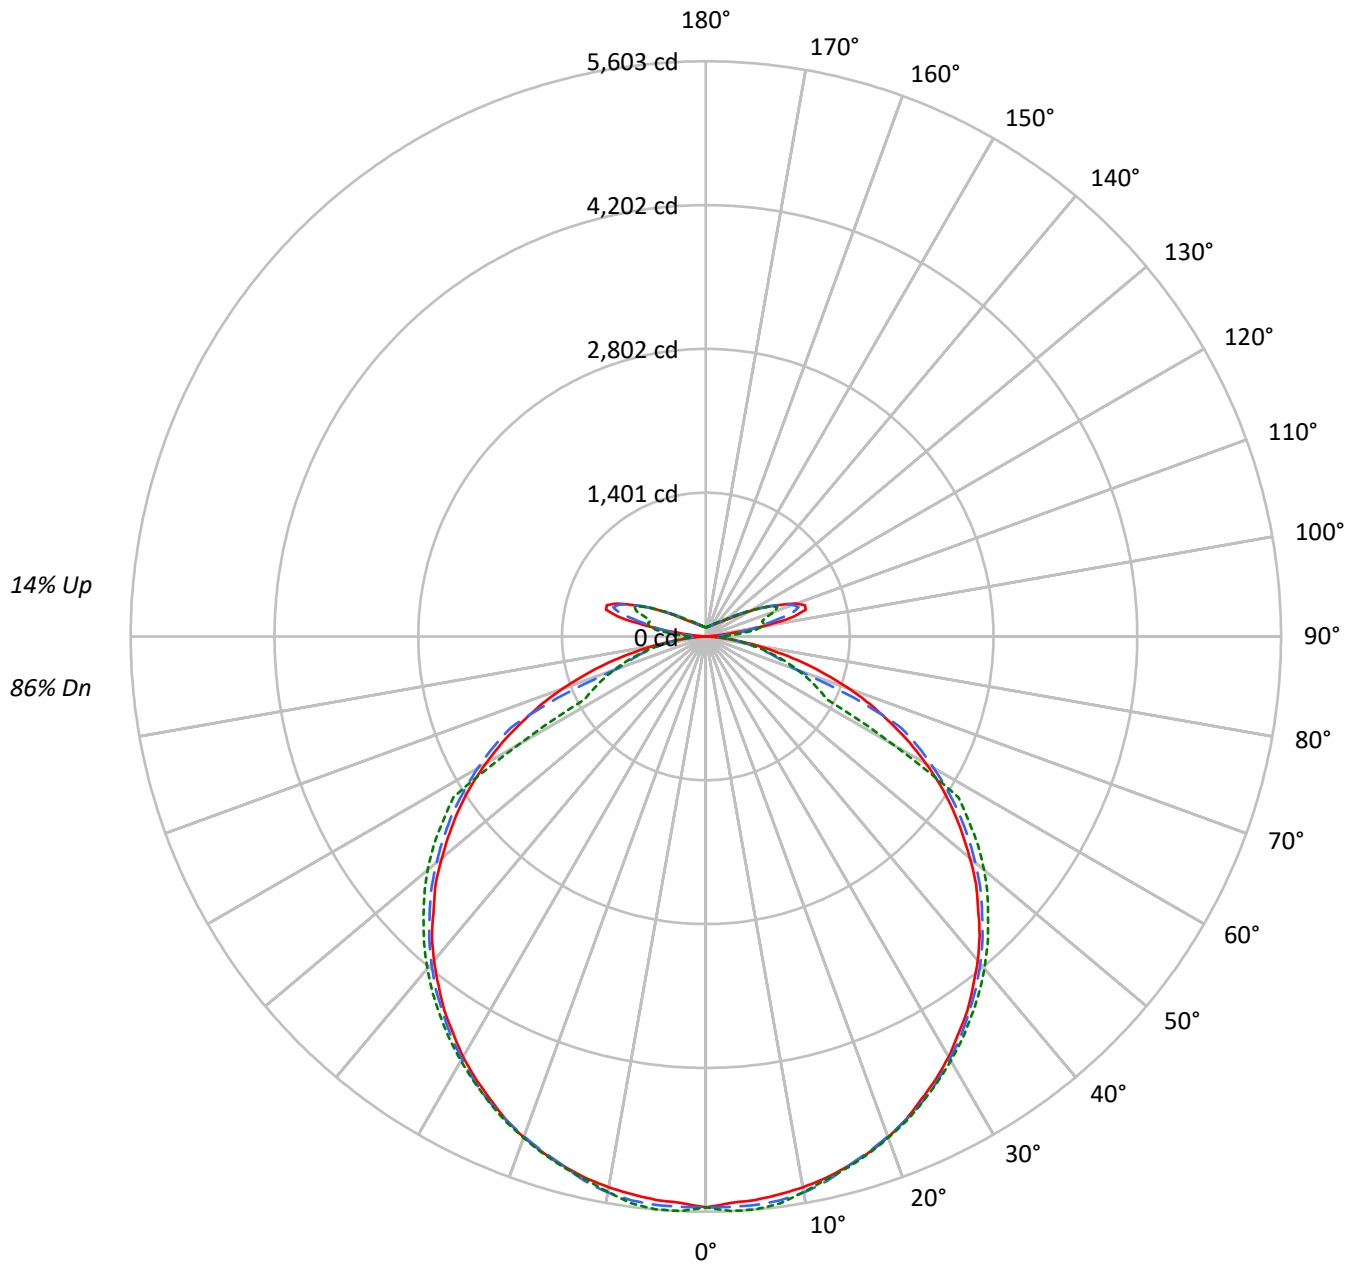



TEST NUMBER: P826944

CATALOG NUMBER: OHB-15SE-NL-UNV-L840-CD-UPL24

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	116	116	116	116	111	111	111	111	103	103	103	96	96	96	89	89	89	86		
1	106	102	98	94	102	98	94	91	91	88	86	85	83	81	79	78	76	73		
2	97	89	82	77	93	86	80	75	80	75	71	75	71	68	70	67	64	61		
3	88	78	70	64	85	76	68	63	71	65	60	66	61	57	62	58	54	52		
4	81	69	61	54	77	67	59	53	63	56	51	59	53	49	55	51	47	44		
5	74	62	53	47	71	60	52	46	56	49	44	53	47	42	50	45	41	38		
6	68	56	47	41	66	54	46	40	51	44	39	48	42	37	45	40	36	33		
7	63	50	42	36	61	49	41	35	46	39	34	43	37	33	41	36	32	30		
8	59	46	38	32	57	45	37	31	42	35	30	40	34	29	38	32	28	26		
9	55	42	34	29	53	41	33	28	39	32	27	37	31	26	35	29	26	24		
10	51	39	31	26	50	38	30	25	36	29	25	34	28	24	32	27	23	21		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	35389	35389	35389
5°	34844	35150	35617
10°	34507	34816	35172
15°	34151	34117	34785
20°	33745	33657	34531
25°	33142	33265	34287
30°	32596	32709	34046
35°	31963	32074	33812
40°	31228	31450	33600
45°	30271	30642	33266
50°	29239	29739	32985
55°	28013	28631	32250
60°	26290	27102	24745
65°	23932	25189	16334
70°	20974	12656	15419
75°	16851	11061	14097
80°	11216	8760	11916
85°	4046	6298	9488



TEST NUMBER: P826944

CATALOG NUMBER: OHB-15SE-NL-UNV-L840-CD-UPL24

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	528.4	2.9
10°-20°	1512.9	8.4
20°-30°	2302.0	12.8
30°-40°	2798.9	15.5
40°-50°	2942.9	16.3
50°-60°	2687.2	14.9
60°-70°	1722.6	9.6
70°-80°	813.8	4.5
80°-90°	231.8	1.3
90°-100°	291.6	1.6
100°-110°	821.3	4.6
110°-120°	695.0	3.9
120°-130°	331.2	1.8
130°-140°	165.7	0.9
140°-150°	96.1	0.5
150°-160°	56.0	0.3
160°-170°	29.0	0.2
170°-180°	8.8	0.0
0°-30°	4343.3	24.1
0°-40°	7142.2	39.6
0°-60°	12772.3	70.8
0°-90°	15540.5	86.2
90°-120°	1807.9	10.0
90°-150°	2400.9	13.3
90°-180°	2495.0	13.8
0°-180°	18035.3	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	5562	5562	5562	5562	5562	
5°	5510	5531	5560	5590	5602	524
15°	5343	5383	5342	5350	5354	1508
25°	4972	4980	4998	5005	5002	2294
35°	4444	4418	4469	4523	4511	2777
45°	3748	3742	3805	3895	3888	2897
55°	2937	2915	3014	3114	3122	2620
65°	1979	1979	2094	1201	1205	1962
75°	978	996	647	681	684	1031
85°	128	162	202	219	207	189
90°	5	89	137	168	174	9
95°	56	139	236	315	345	166
105°	1008	1003	860	617	567	957
115°	697	706	709	704	692	701
125°	338	356	363	362	359	317
135°	200	204	211	213	215	158
145°	145	149	152	153	154	92
155°	116	118	120	121	121	54
165°	100	101	102	102	102	29
175°	90	91	91	92	92	9
180°	90	90	90	90	90	



TEST NUMBER: P826944

CATALOG NUMBER: OHB-15SE-NL-UNV-L840-CD-UPL24

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	5561.7	5561.7	5561.7	5561.7	5561.7
2.5°	5522.6	5541.2	5561.7	5588.0	5602.6
5°	5509.9	5531.4	5559.7	5590.0	5601.6
7.5°	5482.6	5512.8	5540.2	5561.7	5568.5
10°	5448.4	5484.6	5500.2	5498.2	5493.4
12.5°	5402.5	5440.7	5435.8	5413.3	5417.2
15°	5343.0	5383.0	5342.1	5349.9	5353.8
17.5°	5272.8	5311.8	5264.0	5279.6	5280.6
20°	5190.8	5220.1	5183.0	5195.7	5195.7
22.5°	5092.3	5112.7	5097.1	5105.9	5107.9
25°	4972.2	4980.0	4997.5	5005.4	5001.5
27.5°	4857.1	4847.3	4881.5	4900.0	4890.2
30°	4729.2	4713.6	4753.6	4783.9	4772.2
32.5°	4582.8	4573.1	4619.0	4655.0	4648.2
35°	4444.2	4417.9	4468.6	4523.3	4510.6
37.5°	4280.3	4264.7	4322.2	4379.9	4373.1
40°	4120.2	4093.9	4159.3	4227.6	4220.8
42.5°	3948.5	3917.2	3988.5	4070.5	4062.7
45°	3748.4	3741.6	3805.0	3894.8	3888.0
47.5°	3570.9	3536.7	3625.4	3712.3	3720.2
50°	3356.1	3343.5	3424.5	3529.9	3537.6
52.5°	3146.3	3137.5	3222.4	3328.8	3342.4
55°	2937.4	2915.0	3013.6	3114.1	3121.9
57.5°	2714.0	2690.6	2791.1	2900.4	2917.0
60°	2474.8	2452.4	2562.7	2664.2	2118.7
62.5°	2235.8	2220.2	2335.4	1654.2	1333.1
65°	1979.1	1979.1	2094.2	1201.3	1205.2
67.5°	1739.1	1723.5	1561.5	1079.3	1079.3
70°	1481.4	1487.3	899.7	945.7	946.6
72.5°	1222.8	1244.3	776.9	813.9	815.8
75°	977.8	996.4	647.0	681.2	684.1
77.5°	718.3	552.4	520.1	546.6	547.5
80°	504.5	348.4	398.2	423.5	420.6
82.5°	294.7	243.9	291.8	310.4	309.3
85°	127.8	162.0	202.0	218.6	206.8
87.5°	40.9	100.5	125.8	135.7	134.6
90°	5.0	88.7	136.8	168.3	173.5
92.5°	17.0	87.9	150.1	199.6	213.6
95°	55.9	139.3	236.5	314.9	344.9
97.5°	271.0	311.5	358.9	447.3	482.3
100°	554.0	602.5	503.3	548.8	558.8
102.5°	857.9	861.6	636.5	585.2	578.2
105°	1007.9	1002.7	859.6	616.6	566.7



TEST NUMBER: P826944

CATALOG NUMBER: OHB-15SE-NL-UNV-L840-CD-UPL24

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	813.9	827.9	814.7	788.9	749.9
115°	696.9	705.8	708.7	703.8	691.9
117.5°	592.0	593.0	597.0	596.0	597.0
120°	490.0	501.0	510.0	505.0	499.0
122.5°	411.0	423.0	429.0	427.0	421.0
125°	338.0	356.0	363.0	362.0	359.0
127.5°	286.0	299.0	309.0	310.0	309.0
130°	249.0	257.0	267.0	268.0	269.0
132.5°	221.0	228.0	235.0	239.0	238.0
135°	200.0	204.0	211.0	213.0	215.0
137.5°	183.0	186.0	192.0	195.0	195.0
140°	168.0	172.0	177.0	179.0	180.0
142.5°	155.0	159.0	163.0	165.0	165.0
145°	145.0	149.0	152.0	153.0	154.0
147.5°	136.0	140.0	142.0	144.0	144.0
150°	129.0	131.0	134.0	135.0	136.0
152.5°	122.0	124.0	127.0	128.0	128.0
155°	116.0	118.0	120.0	121.0	121.0
157.5°	111.0	113.0	115.0	116.0	116.0
160°	107.0	108.0	110.0	111.0	111.0
162.5°	103.0	104.0	105.0	106.0	106.0
165°	100.0	101.0	102.0	102.0	102.0
167.5°	97.0	97.0	98.0	99.0	99.0
170°	94.0	95.0	95.0	96.0	96.0
172.5°	92.0	93.0	93.0	93.0	94.0
175°	90.0	91.0	91.0	92.0	92.0
177.5°	90.0	90.0	90.0	90.0	90.0
180°	90.0	90.0	90.0	90.0	90.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	1011.9	1020.7	946.6	737.8	609.9
110°	934.9	946.8	904.7	823.9	718.9



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-1

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L840

Data in this report applies to families of products including OHB-15SE-N-UNV-L840.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L840**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 80CRI 4000K

Spectral Parameters

CCT (K):	4018	CRI (Ra):	84.0		
CIE u':	0.2242	R1:	82.5	R9:	11.5
CIE v':	0.5025	R2:	91.6	R10:	79.8
Duv:	0.0010	R3:	96.1	R11:	80.5
CIE x:	0.3803	R4:	81.4	R12:	64.0
CIE y:	0.3788	R5:	82.4	R13:	85.1
CIE z:	0.2410	R6:	88.0	R14:	98.4
Peak Wavelength (nm):	454	R7:	85.5		
Dominant Wavelength (nm):	578	R8:	64.7		
Purity:	27.9				
Rf:	84.5				
Rg:	93.7				



Test Conditions

Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-1

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-1

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-1

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

Scotopic Flux vs. Wavelength



Scotopic Lumens: 25258.1

S/P: 1.73

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

Melanopic Flux vs. Wavelength



Melanopic Lumens: 10357.9 M/P: 0.71

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

TM-30-18

Summary

$R_f = 84.5$
 $R_g = 93.7$
 $CIE R_a = 84.0$
 $R_9 = 11.5$



Color Vector Graphics



REPORT NUMBER: SP1-2304-001-1

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 85	CES26 = 88	CES51 = 91	CES76 = 81
CES02 = 61	CES27 = 90	CES52 = 93	CES77 = 85
CES03 = 31	CES28 = 94	CES53 = 89	CES78 = 80
CES04 = 69	CES29 = 93	CES54 = 88	CES79 = 93
CES05 = 48	CES30 = 87	CES55 = 85	CES80 = 91
CES06 = 50	CES31 = 95	CES56 = 84	CES81 = 78
CES07 = 41	CES32 = 88	CES57 = 82	CES82 = 96
CES08 = 40	CES33 = 96	CES58 = 82	CES83 = 96
CES09 = 29	CES34 = 92	CES59 = 91	CES84 = 91
CES10 = 74	CES35 = 95	CES60 = 88	CES85 = 77
CES11 = 57	CES36 = 77	CES61 = 86	CES86 = 74
CES12 = 63	CES37 = 95	CES62 = 78	CES87 = 84
CES13 = 42	CES38 = 81	CES63 = 85	CES88 = 88
CES14 = 74	CES39 = 98	CES64 = 77	CES89 = 78
CES15 = 71	CES40 = 97	CES65 = 77	CES90 = 89
CES16 = 47	CES41 = 94	CES66 = 74	CES91 = 68
CES17 = 49	CES42 = 97	CES67 = 73	CES92 = 64
CES18 = 56	CES43 = 93	CES68 = 79	CES93 = 78
CES19 = 71	CES44 = 99	CES69 = 82	CES94 = 65
CES20 = 65	CES45 = 94	CES70 = 77	CES95 = 73
CES21 = 86	CES46 = 91	CES71 = 69	CES96 = 84
CES22 = 78	CES47 = 93	CES72 = 90	CES97 = 90
CES23 = 91	CES48 = 82	CES73 = 72	CES98 = 86
CES24 = 90	CES49 = 92	CES74 = 90	CES99 = 77
CES25 = 71	CES50 = 92	CES75 = 74	



REPORT NUMBER: SP1-2304-001-1

TM-30-18

Color Rendition by Hue-Angle Bin

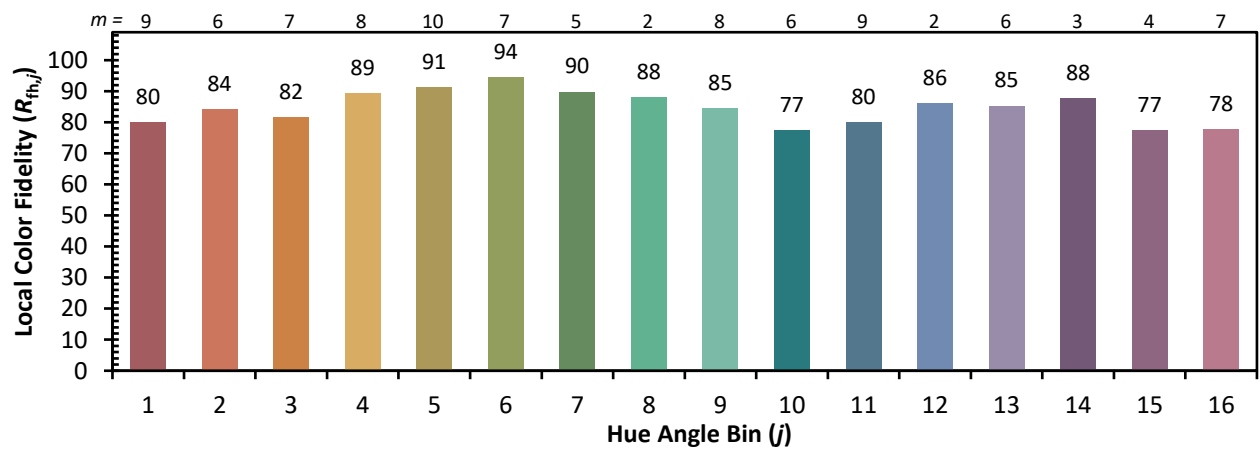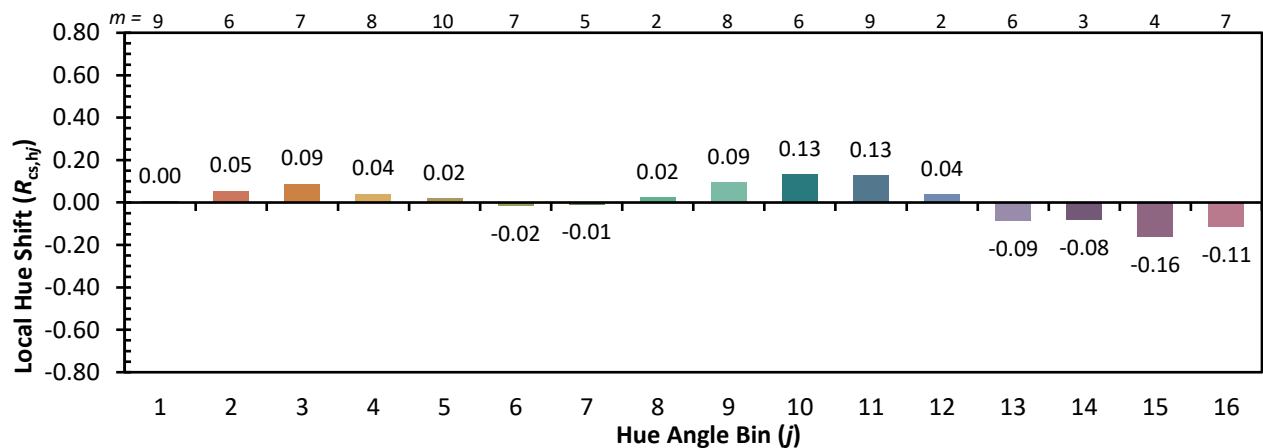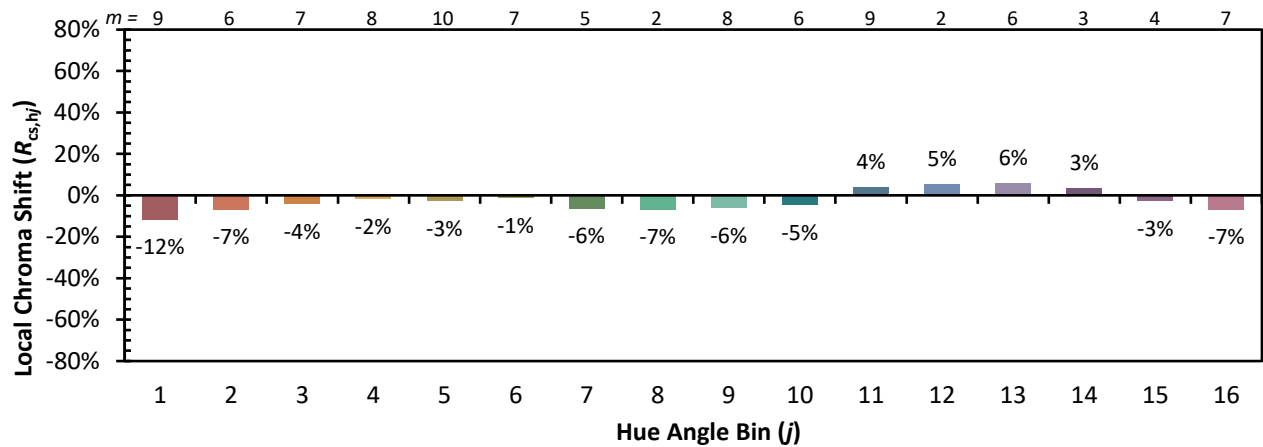

REPORT NUMBER: SP1-2304-001-1

TM-30-18

Measure Comparisons



(END OF REPORT)