

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P830747

Luminaire Tested: **OHBL-72SE-A-UNV-L930-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P830747
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-72SE-A-UNV-L930-CD
Description: 72000 LUMEN OHBL SE LED LUMINAIRE WITH 90CRI, 3000K LEDS AND AISLE LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 57732.0 lumens
Efficiency: N/A
Efficacy: 139.6 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.8' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 413.7
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P830747

CATALOG NUMBER: OHBL-72SE-A-UNV-L930-CD

Luminous Intensity Polar Plot

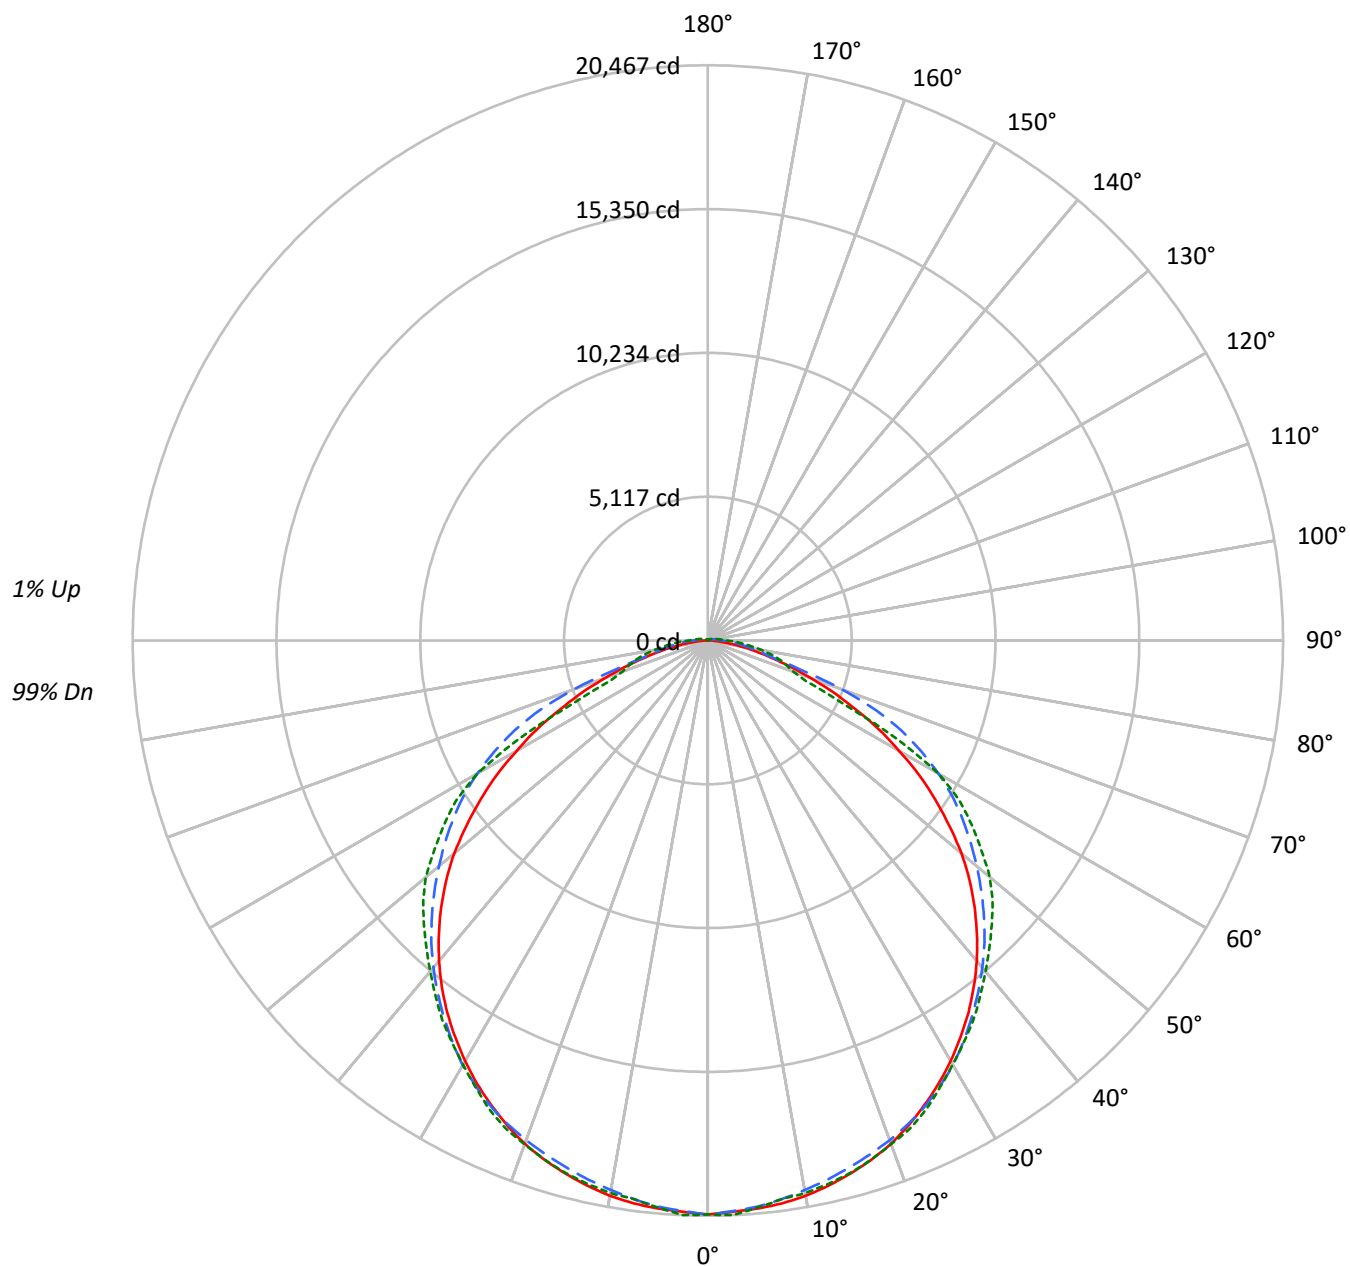



TEST NUMBER: P830747

CATALOG NUMBER: OHBL-72SE-A-UNV-L930-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20					20					20					20					20
RC	80					70					50					30					10
RW	70	50	30	10		70	50	30	10		50	30	10		50	30	10		50	30	10
RCR																					
0	119	119	119	119		116	116	116	116		110	110	110		106	106	106		101	101	101
1	109	104	100	96		106	102	98	95		97	94	91		93	91	88		90	87	86
2	99	91	84	79		96	89	83	78		85	80	76		82	78	74		79	75	72
3	91	80	72	66		88	79	71	65		75	69	64		72	67	63		70	65	61
4	83	71	62	56		81	70	62	55		67	60	54		65	59	54		62	57	53
5	76	64	55	48		74	62	54	48		60	53	47		58	52	46		56	50	46
6	70	57	48	42		68	56	48	42		54	47	41		52	46	41		51	45	40
7	65	52	43	37		63	51	43	37		49	42	36		48	41	36		46	40	36
8	61	47	39	33		59	46	38	33		45	38	33		44	37	32		42	36	32
9	57	43	35	30		55	43	35	29		41	34	29		40	34	29		39	33	29
10	53	40	32	27		52	39	32	27		38	31	27		37	31	26		36	30	26

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	32303	32303	32303
5°	32091	31833	31900
10°	31974	31351	31546
15°	31771	30991	31335
20°	31568	30764	31057
25°	31187	30535	30783
30°	30773	30174	30200
35°	30277	29602	29879
40°	29634	29011	29442
45°	28741	28327	29248
50°	27532	27549	29016
55°	25610	26783	27933
60°	23094	25662	25825
65°	19811	23581	16367
70°	15957	18409	11866
75°	11963	10928	12043
80°	8328	9086	11498
85°	4739	8326	10778



TEST NUMBER: P830747

CATALOG NUMBER: OHBL-72SE-A-UNV-L930-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1926.0	3.3
10°-20°	5522.7	9.6
20°-30°	8434.9	14.6
30°-40°	10234.4	17.7
40°-50°	10726.7	18.6
50°-60°	9720.0	16.8
60°-70°	6516.9	11.3
70°-80°	2926.4	5.1
80°-90°	1061.9	1.8
90°-100°	319.6	0.6
100°-110°	150.8	0.3
110°-120°	75.6	0.1
120°-130°	41.7	0.1
130°-140°	28.7	0.0
140°-150°	19.3	0.0
150°-160°	14.3	0.0
160°-170°	9.2	0.0
170°-180°	2.9	0.0
0°-30°	15883.6	27.5
0°-40°	26118.0	45.2
0°-60°	46564.7	80.7
0°-90°	57069.8	98.9
90°-120°	546.0	0.9
90°-150°	635.7	1.1
90°-180°	662.0	1.1
0°-180°	57732.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	20426	20426	20426	20426	20426	
5°	20293	20364	20222	20284	20257	###
15°	19634	19557	19418	19590	19613	5544
25°	18240	18160	18287	18456	18403	8408
35°	16167	16205	16371	16545	16480	10105
45°	13417	13636	13890	14244	14288	10336
55°	9873	10349	11054	11498	11471	8813
65°	5794	6701	7608	6421	5242	5774
75°	2280	3308	2434	2490	2652	2492
85°	393	753	966	1167	1223	479
90°	3	251	499	626	656	23
95°	3	156	343	416	428	4
105°	12	68	168	204	213	14
115°	24	35	86	109	115	22
125°	21	24	53	62	65	21
135°	27	30	32	47	50	21
145°	27	30	30	32	35	18
155°	30	32	32	32	30	14
165°	32	32	32	32	32	9
175°	32	32	30	27	27	3
180°	30	30	30	30	30	



TEST NUMBER: P830747

CATALOG NUMBER: OHBL-72SE-A-UNV-L930-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	20425.6	20425.6	20425.6	20425.6	20425.6
2.5°	20342.9	20428.6	20322.3	20437.4	20467.0
5°	20292.7	20363.6	20221.8	20283.9	20257.3
7.5°	20201.2	20224.8	20056.5	20106.7	20053.5
10°	20065.3	20053.5	19855.6	19953.1	19964.9
12.5°	19864.5	19829.0	19651.8	19799.5	19802.5
15°	19634.1	19557.3	19418.5	19589.8	19613.4
17.5°	19368.3	19267.9	19176.3	19397.9	19362.4
20°	19058.2	18940.1	18922.4	19164.5	19075.9
22.5°	18674.3	18582.7	18624.1	18854.4	18798.3
25°	18240.1	18160.4	18287.4	18455.7	18402.6
27.5°	17782.3	17735.1	17879.8	18009.8	17906.4
30°	17280.3	17253.7	17445.7	17552.0	17422.0
32.5°	16733.9	16742.8	16925.9	17070.6	16949.5
35°	16166.8	16205.2	16370.6	16544.9	16479.9
37.5°	15543.7	15629.3	15794.7	15992.6	15924.7
40°	14885.1	15009.1	15192.2	15431.5	15369.4
42.5°	14173.3	14329.8	14566.1	14831.9	14826.0
45°	13417.2	13635.8	13889.8	14244.2	14288.5
47.5°	12631.6	12876.8	13198.7	13671.2	13739.2
50°	11778.1	12085.3	12486.9	13054.0	13095.3
52.5°	10827.1	11246.5	11778.1	12321.5	12271.3
55°	9873.2	10348.7	11054.5	11497.5	11471.0
57.5°	8922.2	9456.7	10313.2	10629.2	10626.3
60°	7859.0	8535.3	9471.5	9710.7	9474.5
62.5°	6875.5	7602.0	8573.7	8399.4	7590.2
65°	5794.5	6701.2	7607.9	6420.7	5242.3
67.5°	4834.7	5779.8	6462.0	4397.6	3765.6
70°	3868.9	4911.5	5038.5	3263.5	3219.2
72.5°	3012.5	4122.9	3476.1	2793.9	2935.7
75°	2280.0	3307.8	2433.6	2489.7	2652.1
77.5°	1662.8	2539.9	1893.1	2182.6	2315.5
80°	1143.0	1798.6	1544.6	1834.1	1925.6
82.5°	717.7	1187.3	1237.5	1476.7	1571.2
85°	392.8	753.1	965.8	1166.6	1222.7
87.5°	162.4	454.8	738.3	900.8	948.0
90°	3.0	251.0	499.1	626.1	655.7
92.5°	3.0	192.0	407.6	505.0	525.7
95°	3.0	156.5	342.6	416.4	428.2
97.5°	5.9	124.0	286.5	345.5	357.4
100°	8.9	103.4	239.2	289.4	298.3
102.5°	11.8	82.7	200.8	242.2	251.0
105°	11.8	67.9	168.3	203.8	212.6



TEST NUMBER: P830747

CATALOG NUMBER: OHBL-72SE-A-UNV-L930-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	20.7	41.3	100.4	127.0	132.9
115°	23.6	35.4	85.6	109.3	115.2
117.5°	23.6	29.5	73.8	91.6	97.5
120°	23.6	26.6	65.0	79.7	82.7
122.5°	23.6	23.6	56.1	70.9	73.8
125°	20.7	23.6	53.2	62.0	65.0
127.5°	23.6	23.6	47.3	56.1	59.1
130°	23.6	26.6	41.3	53.2	53.2
132.5°	26.6	29.5	38.4	50.2	50.2
135°	26.6	29.5	32.5	47.3	50.2
137.5°	29.5	29.5	29.5	44.3	47.3
140°	29.5	29.5	26.6	38.4	41.3
142.5°	26.6	29.5	26.6	35.4	38.4
145°	26.6	29.5	29.5	32.5	35.4
147.5°	29.5	29.5	29.5	29.5	32.5
150°	29.5	29.5	29.5	29.5	29.5
152.5°	29.5	29.5	29.5	29.5	29.5
155°	29.5	32.5	32.5	32.5	29.5
157.5°	29.5	32.5	32.5	32.5	32.5
160°	29.5	32.5	32.5	32.5	32.5
162.5°	32.5	32.5	32.5	32.5	32.5
165°	32.5	32.5	32.5	32.5	32.5
167.5°	32.5	35.4	32.5	32.5	32.5
170°	32.5	32.5	32.5	29.5	29.5
172.5°	32.5	32.5	32.5	29.5	29.5
175°	32.5	32.5	29.5	26.6	26.6
177.5°	35.4	32.5	29.5	26.6	23.6
180°	29.5	29.5	29.5	29.5	29.5



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	14.8	56.1	144.7	174.2	180.2
110°	17.7	47.3	121.1	147.7	153.6



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930


Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				

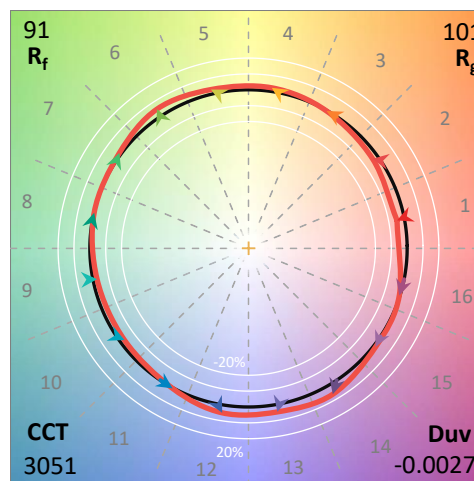

Test Conditions


Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram

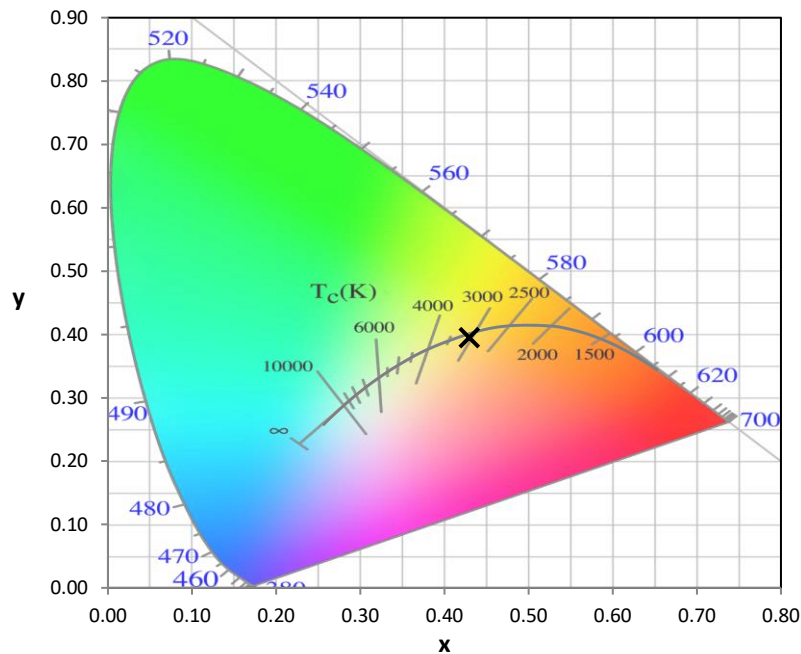


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

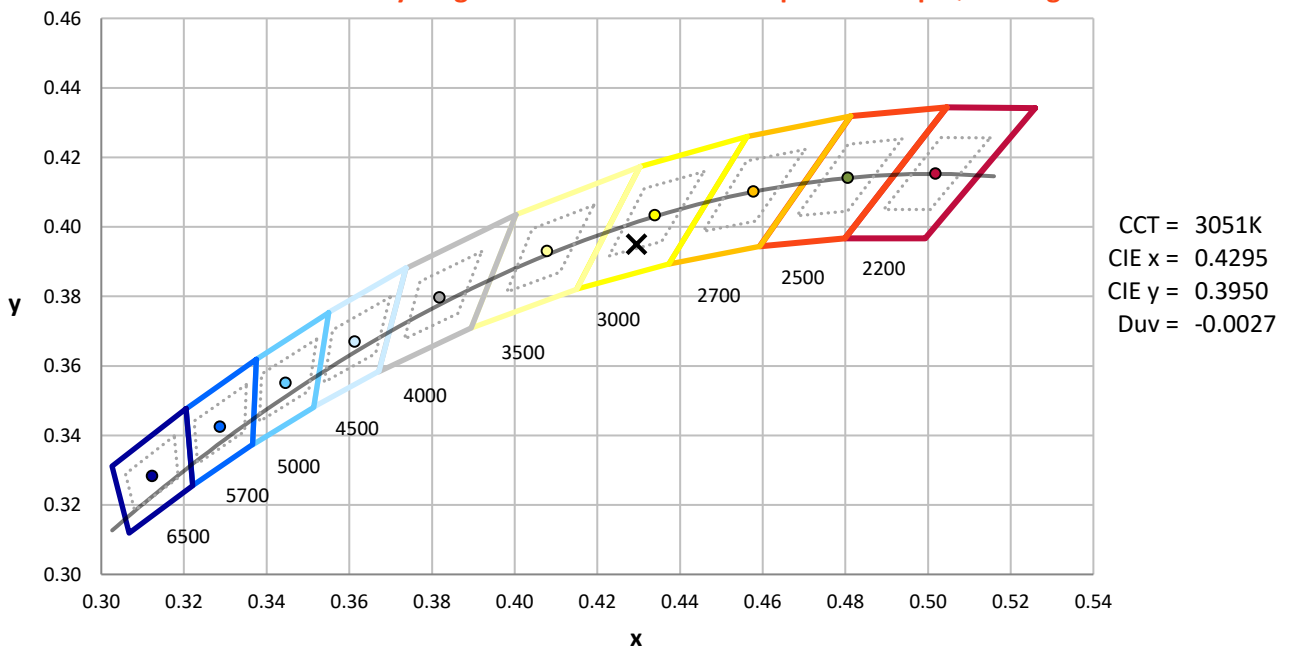

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength

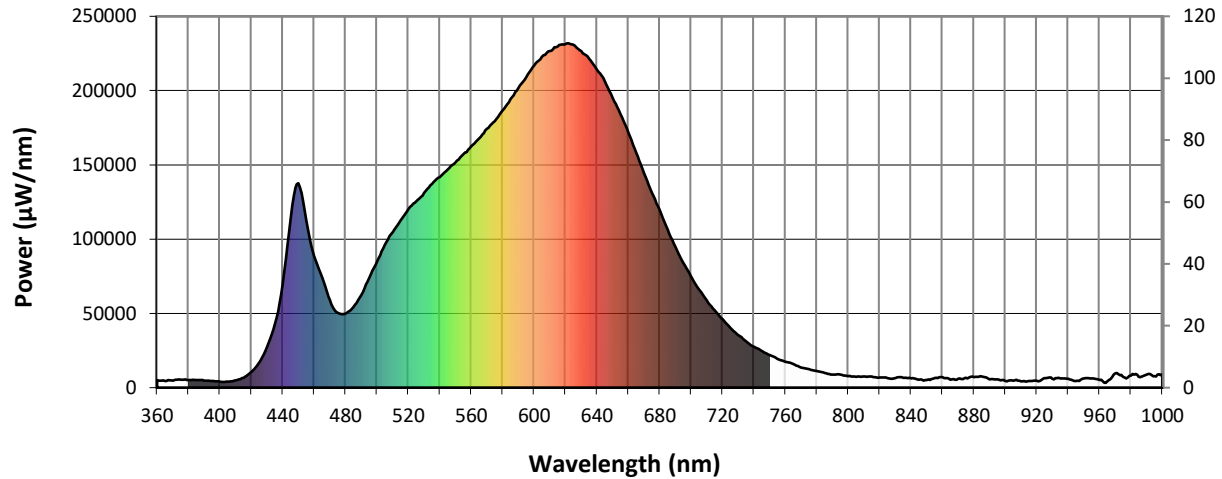


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength

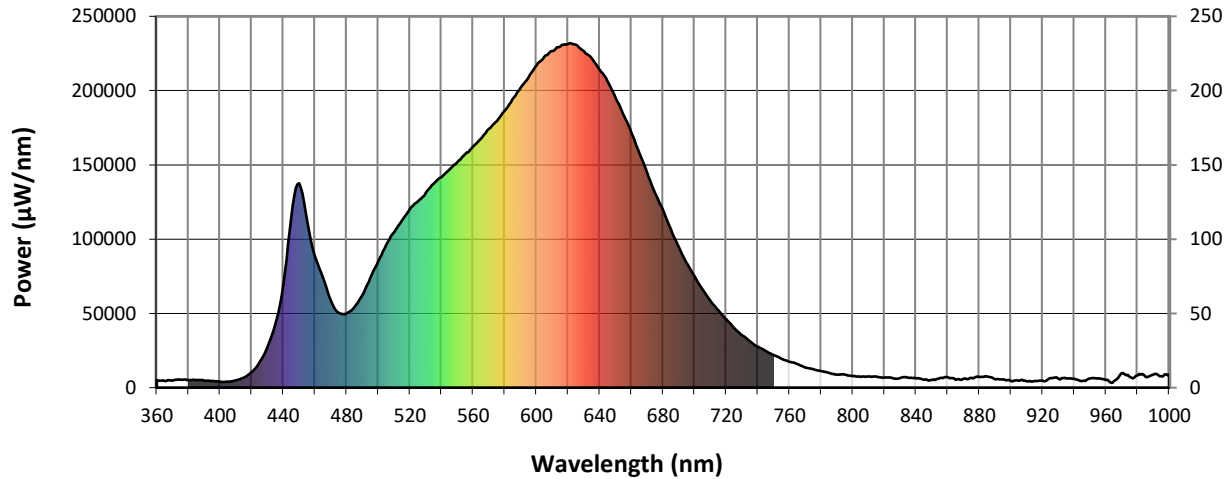


Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength

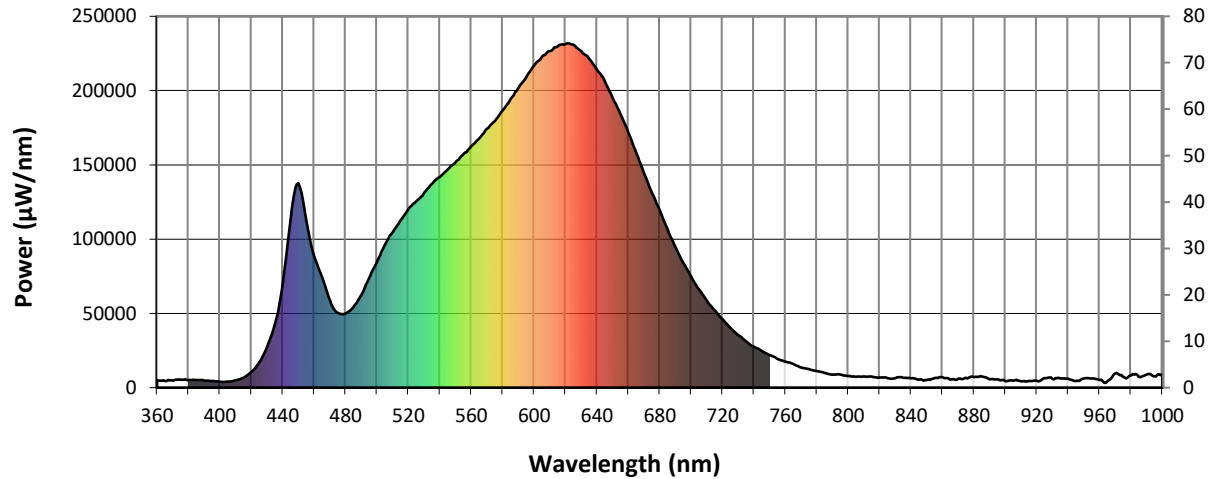

Melanopic Lumens: 6505.3 M/P: 0.55


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2





TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$

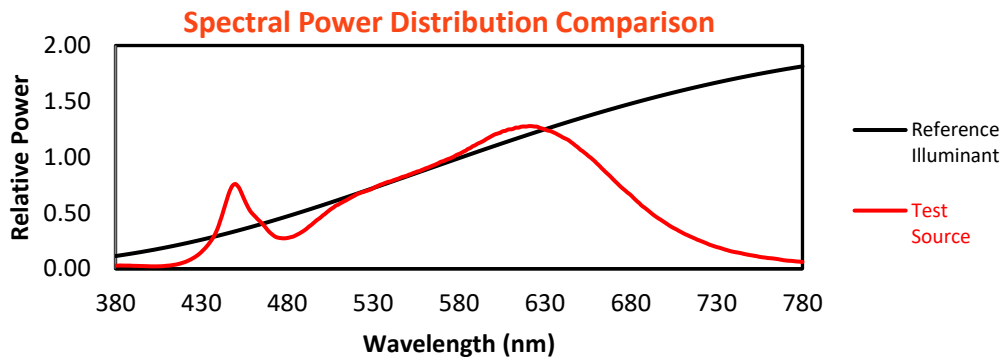

Color Vector Graphics

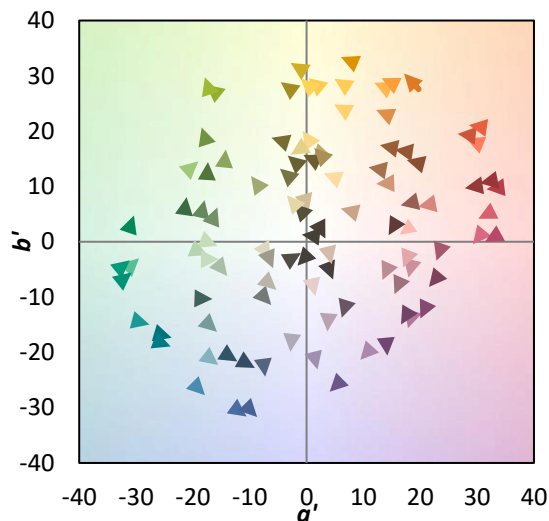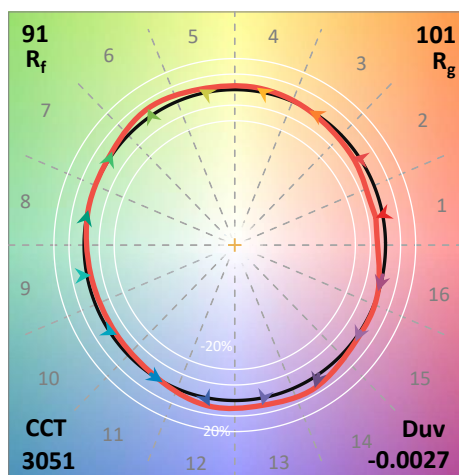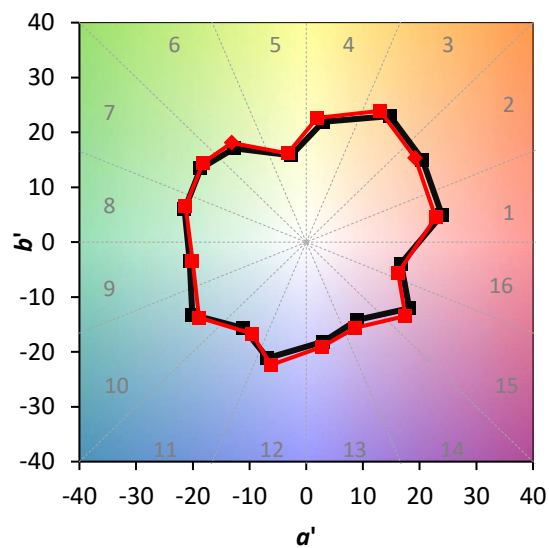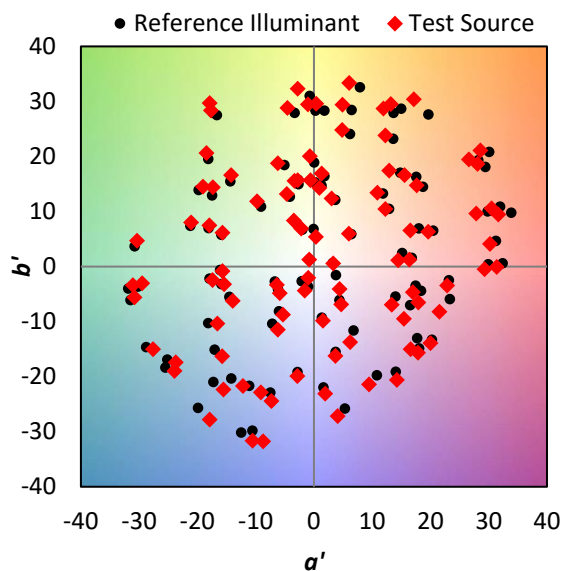


REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	

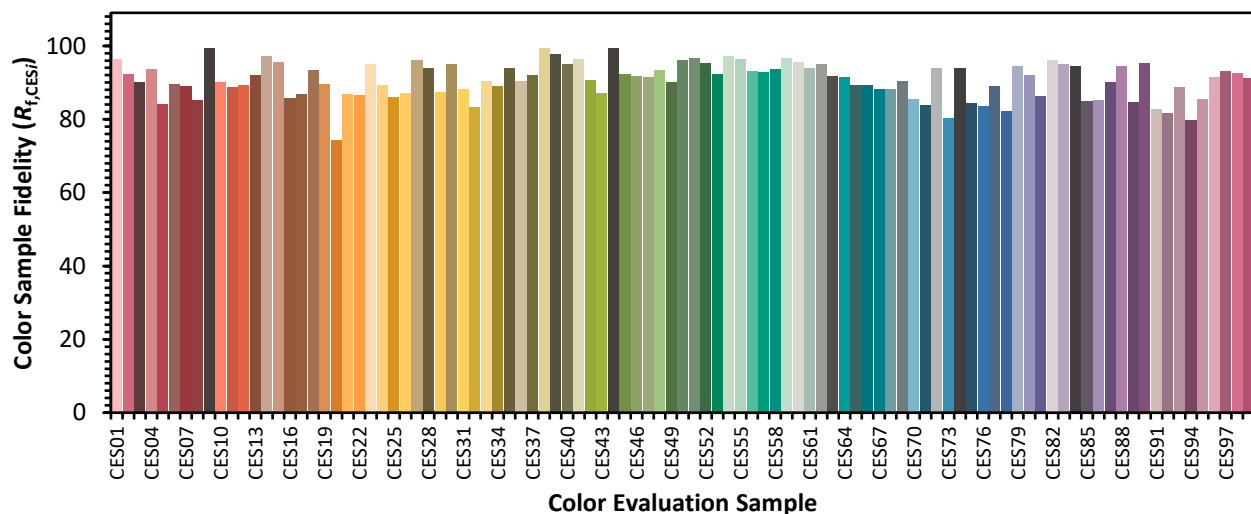

REPORT NUMBER: SP1-2304-001-2

TM-30-18



Color Rendition by Hue-Angle Bin

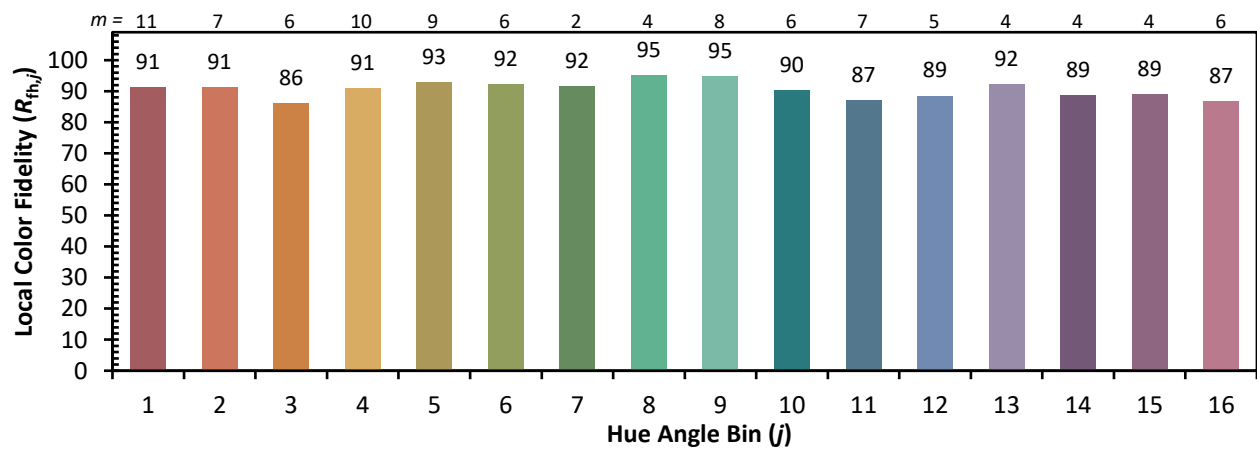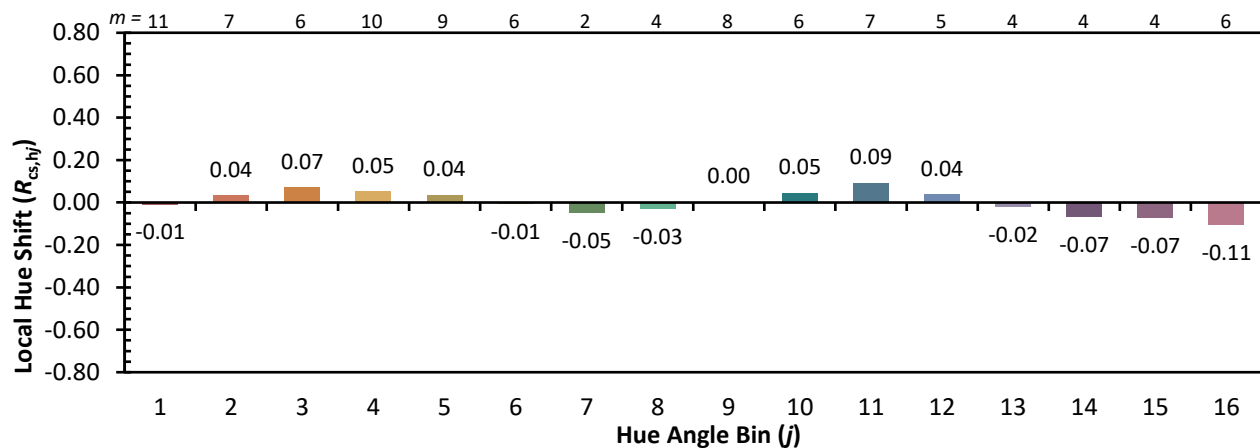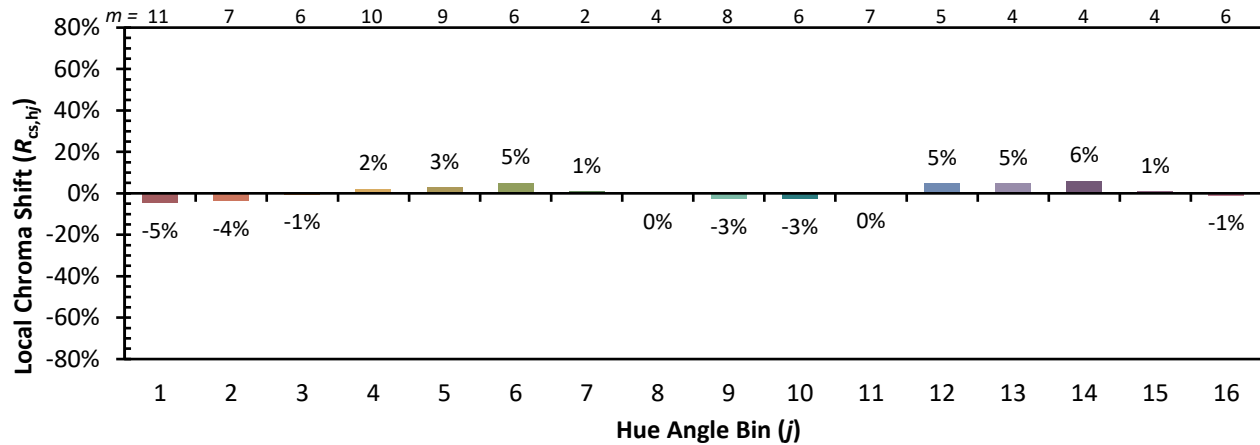

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons

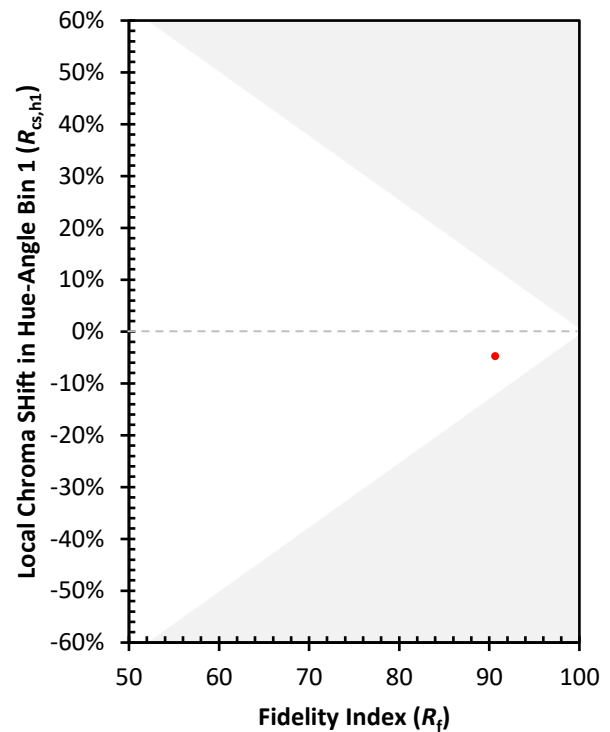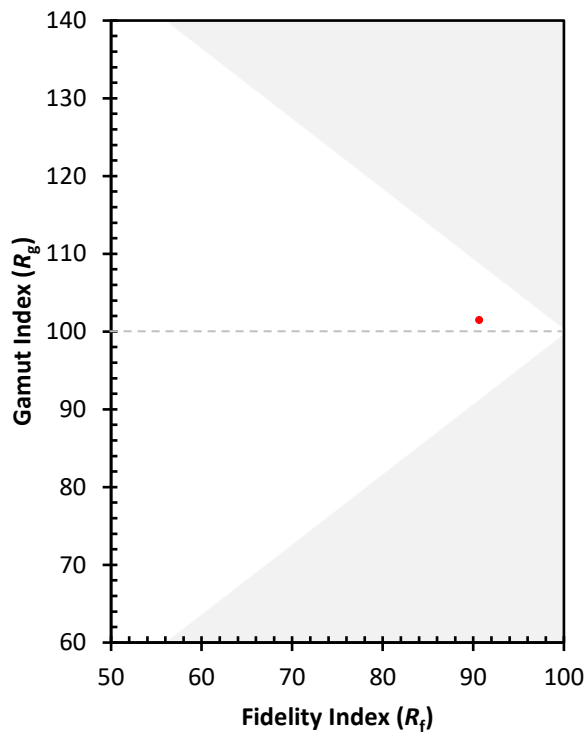

(END OF REPORT)