

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P828557

Luminaire Tested: **OHBL-12SE-MCL-UNV-L950-CD-UPL12**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P828557
REPORT IS A COMBINATION OF REPORTS P826054 AND G3-2310-221-12
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-12SE-MCL-UNV-L950-CD-UPL12
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 11554.3 lumens
Efficiency: N/A
Efficacy: 147.4 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 0.88' x H: 0.17')
CIE Type: Semi-Direct

Input Watts (W): 78.4
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P828557

CATALOG NUMBER: OHBL-12SE-MCL-UNV-L950-CD-UPL12

Luminous Intensity Polar Plot

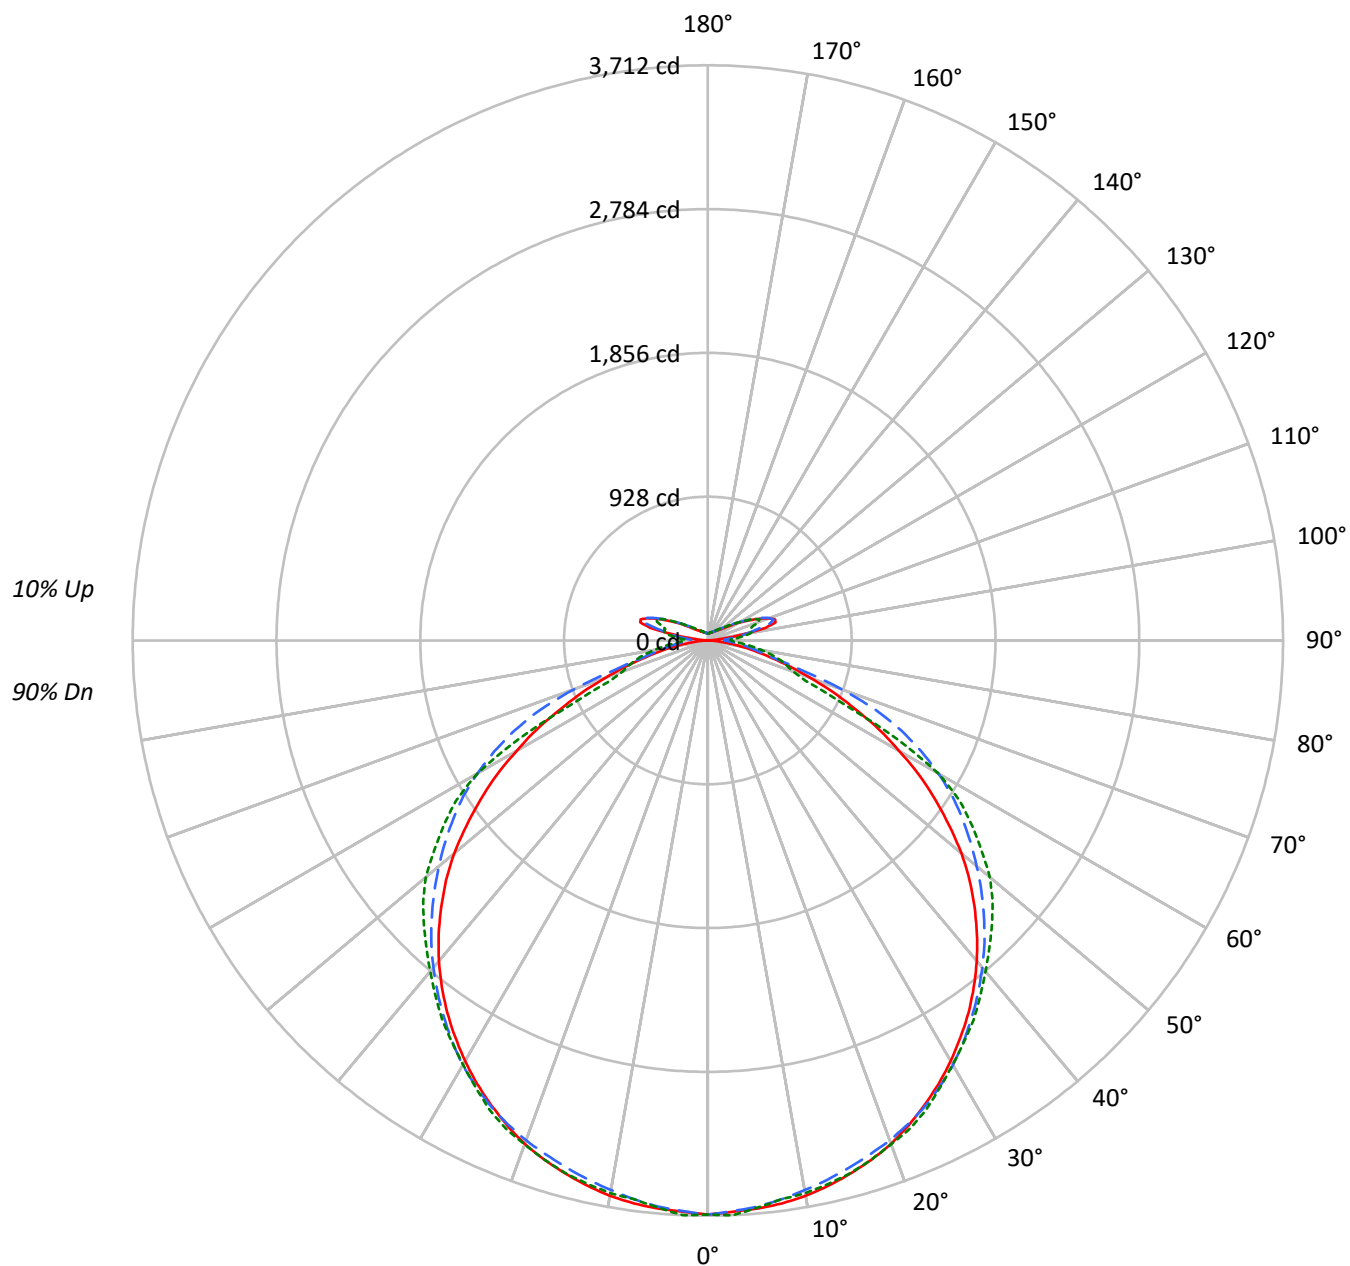



TEST NUMBER: P828557

CATALOG NUMBER: OHBL-12SE-MCL-UNV-L950-CD-UPL12

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	117	117	117	117	113	113	113	113	105	105	105	99	99	99	93	93	93
1	107	102	98	94	103	99	95	92	93	90	87	87	85	83	82	80	78
2	97	89	83	77	94	87	81	76	81	76	72	77	73	69	72	69	66
3	89	79	71	64	85	76	69	63	72	66	61	68	63	58	64	60	56
4	81	70	61	55	78	68	60	54	64	57	52	60	55	50	57	52	48
5	75	62	53	47	72	60	52	46	57	50	45	54	48	43	51	46	42
6	69	56	47	41	66	54	46	40	52	44	39	49	43	38	46	41	37
7	64	51	42	36	61	49	41	36	47	40	35	45	38	34	42	37	33
8	59	46	38	32	57	45	37	32	43	36	31	41	35	30	39	33	29
9	55	42	34	29	53	41	34	28	39	32	28	38	31	27	36	30	26
10	52	39	31	26	50	38	31	26	36	30	25	35	29	25	33	28	24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	12053	12053	12053
5°	11823	11807	11954
10°	11632	11559	11871
15°	11412	11358	11842
20°	11192	11206	11790
25°	10907	11052	11741
30°	10608	10848	11577
35°	10275	10566	11516
40°	9886	10273	11417
45°	9405	9942	11421
50°	8812	9571	11421
55°	7985	9195	11103
60°	6974	8683	10388
65°	5744	7836	6687
70°	4381	5971	4954
75°	3038	3427	5193
80°	1867	2704	5235
85°	836	2258	5505



TEST NUMBER: P828557

CATALOG NUMBER: OHBL-12SE-MCL-UNV-L950-CD-UPL12

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	349.3	3.0
10°-20°	1001.7	8.7
20°-30°	1530.0	13.2
30°-40°	1856.4	16.1
40°-50°	1945.6	16.8
50°-60°	1763.0	15.3
60°-70°	1182.0	10.2
70°-80°	530.8	4.6
80°-90°	195.4	1.7
90°-100°	161.4	1.4
100°-110°	387.3	3.4
110°-120°	322.8	2.8
120°-130°	155.7	1.3
130°-140°	79.3	0.7
140°-150°	46.6	0.4
150°-160°	27.8	0.2
160°-170°	14.7	0.1
170°-180°	4.5	0.0
0°-30°	2881.0	24.9
0°-40°	4737.4	41.0
0°-60°	8446.0	73.1
0°-90°	10354.2	89.6
90°-120°	871.5	7.5
90°-150°	1153.1	10.0
90°-180°	1200.0	10.4
0°-180°	11554.3	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	3705	3705	3705	3705	3705	
5°	3681	3694	3668	3679	3674	350
15°	3561	3547	3522	3553	3558	1006
25°	3308	3294	3317	3348	3338	1525
35°	2932	2939	2969	3001	2989	1833
45°	2434	2473	2519	2584	2592	1875
55°	1791	1877	2005	2085	2081	1599
65°	1051	1216	1380	1165	951	1047
75°	414	600	441	452	481	452
85°	71	137	175	212	222	87
90°	3	61	111	140	149	6
95°	22	79	137	176	194	72
105°	452	457	410	306	286	428
115°	317	319	329	331	327	317
125°	157	163	172	172	174	146
135°	94	97	101	104	105	74
145°	70	72	73	75	76	45
155°	58	59	60	61	60	27
165°	51	51	52	52	52	14
175°	47	47	46	46	46	5
180°	45	45	45	45	45	



TEST NUMBER: P828557

CATALOG NUMBER: OHBL-12SE-MCL-UNV-L950-CD-UPL12

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	3704.9	3704.9	3704.9	3704.9	3704.9
2.5°	3689.8	3705.4	3686.1	3707.0	3712.4
5°	3680.8	3693.6	3667.9	3679.1	3674.4
7.5°	3664.2	3668.4	3637.9	3647.0	3637.3
10°	3639.5	3637.3	3601.5	3619.1	3621.3
12.5°	3603.1	3596.6	3564.5	3591.3	3591.8
15°	3561.3	3547.3	3522.2	3553.2	3557.5
17.5°	3513.1	3494.9	3478.3	3518.5	3512.0
20°	3456.8	3435.4	3432.2	3476.1	3460.0
22.5°	3387.2	3370.6	3378.1	3419.9	3409.7
25°	3308.4	3294.0	3317.0	3347.5	3337.9
27.5°	3225.4	3216.9	3243.1	3266.7	3247.9
30°	3134.3	3129.6	3164.3	3183.6	3160.1
32.5°	3035.2	3036.9	3070.1	3096.4	3074.4
35°	2932.4	2939.3	2969.3	3001.0	2989.2
37.5°	2819.3	2834.9	2864.9	2900.8	2888.5
40°	2699.9	2722.4	2755.6	2799.0	2787.8
42.5°	2570.8	2599.2	2642.1	2690.2	2689.2
45°	2433.7	2473.3	2519.4	2583.6	2591.7
47.5°	2291.2	2335.6	2394.0	2479.7	2492.1
50°	2136.3	2192.0	2264.9	2367.8	2375.2
52.5°	1963.8	2039.9	2136.3	2234.9	2225.8
55°	1790.8	1877.0	2005.1	2085.4	2080.7
57.5°	1618.3	1715.3	1870.6	1928.0	1927.4
60°	1425.5	1548.1	1717.9	1761.3	1718.5
62.5°	1247.1	1378.9	1555.1	1523.5	1376.8
65°	1051.1	1215.5	1380.0	1164.6	950.8
67.5°	876.9	1048.4	1172.1	797.6	683.0
70°	701.7	890.8	913.9	591.9	583.9
72.5°	546.4	747.8	630.5	506.8	532.4
75°	413.6	600.0	441.4	451.6	481.1
77.5°	301.6	460.7	343.3	395.9	419.9
80°	207.3	326.2	280.1	332.6	349.3
82.5°	130.2	215.4	224.5	267.9	285.0
85°	71.2	136.6	175.2	211.6	221.8
87.5°	29.5	82.5	133.9	163.4	172.0
90°	3.1	61.2	111.4	140.5	149.4
92.5°	8.3	54.8	106.9	138.6	146.7
95°	22.3	78.9	136.9	176.4	194.1
97.5°	118.4	150.3	196.3	233.1	244.0
100°	241.5	277.0	258.1	276.8	282.7
102.5°	383.9	391.5	311.2	292.6	289.9
105°	451.7	456.6	409.6	305.6	285.5



TEST NUMBER: P828557

CATALOG NUMBER: OHBL-12SE-MCL-UNV-L950-CD-UPL12

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	367.2	373.5	381.6	372.6	358.8
115°	317.3	319.4	329.4	331.1	326.9
117.5°	266.8	271.4	282.0	282.7	282.0
120°	224.2	230.0	238.7	237.9	238.5
122.5°	189.5	193.8	202.3	202.4	203.8
125°	156.8	163.4	172.2	172.1	173.5
127.5°	132.1	137.3	147.7	148.4	148.9
130°	115.5	119.5	126.6	129.6	129.6
132.5°	103.9	107.1	112.2	115.2	116.1
135°	93.5	96.7	100.7	104.2	104.8
137.5°	87.1	88.9	91.5	94.9	96.4
140°	80.2	82.8	83.9	86.9	87.5
142.5°	74.3	76.7	77.8	80.3	81.7
145°	70.0	72.3	73.2	74.6	76.0
147.5°	66.3	68.0	69.7	69.7	71.1
150°	63.6	64.5	65.4	66.3	66.3
152.5°	60.2	61.0	61.9	62.8	62.8
155°	57.6	58.9	59.8	60.7	60.2
157.5°	54.9	57.2	57.2	58.1	58.1
160°	53.2	54.6	55.5	55.5	55.5
162.5°	52.0	52.9	52.9	53.7	53.7
165°	51.1	51.1	52.0	52.0	52.0
167.5°	49.4	49.9	50.3	50.3	50.3
170°	48.5	48.5	48.5	48.9	48.9
172.5°	47.6	47.6	47.6	47.1	47.1
175°	46.8	46.8	46.3	45.6	45.6
177.5°	46.4	46.8	46.3	45.6	45.1
180°	45.4	45.4	45.4	45.4	45.4



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	454.8	464.0	444.5	356.0	301.3
110°	417.1	428.5	422.8	391.9	348.6



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-9

Test Date: 08/01/2023

Luminaire Tested: OHB-15SE-N-UNV-L950-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L950-CD.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-9
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L950-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 90CRI, 5000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	5013	CRI (Ra):	92.0		
CIE u':	0.2111	R1:	92.6	R9:	62.7
CIE v':	0.4847	R2:	96.7	R10:	90.0
Duv:	0.0002	R3:	96.5	R11:	89.8
CIE x:	0.3447	R4:	90.1	R12:	69.9
CIE y:	0.3517	R5:	91.1	R13:	94.5
CIE z:	0.3036	R6:	92.0	R14:	98.3
Peak Wavelength (nm):	455	R7:	92.4		
Dominant Wavelength (nm):	572	R8:	84.9		
Purity:	9.1				
Rf:	88.9				
Rg:	97.2				



Test Conditions

Stabilization Time: 26M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/57%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-9

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-9

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-9

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

Scotopic Flux vs. Wavelength



Scotopic Lumens: 26039.5

S/P: 2.08

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

Melanopic Flux vs. Wavelength



Melanopic Lumens: 11248.3 M/P: 0.9

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

TM-30-18

Summary

$R_f = 88.9$
 $R_g = 97.2$
 $CIE R_a = 92.0$
 $R_9 = 62.7$



Color Vector Graphics



REPORT NUMBER: SP1-2307-100-9

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 85	CES26 = 93	CES51 = 92	CES76 = 85
CES02 = 61	CES27 = 89	CES52 = 95	CES77 = 86
CES03 = 31	CES28 = 95	CES53 = 92	CES78 = 84
CES04 = 69	CES29 = 94	CES54 = 89	CES79 = 95
CES05 = 48	CES30 = 83	CES55 = 86	CES80 = 93
CES06 = 50	CES31 = 96	CES56 = 88	CES81 = 89
CES07 = 41	CES32 = 93	CES57 = 85	CES82 = 97
CES08 = 40	CES33 = 92	CES58 = 85	CES83 = 97
CES09 = 29	CES34 = 93	CES59 = 94	CES84 = 92
CES10 = 73	CES35 = 96	CES60 = 89	CES85 = 83
CES11 = 56	CES36 = 76	CES61 = 88	CES86 = 88
CES12 = 62	CES37 = 95	CES62 = 78	CES87 = 91
CES13 = 42	CES38 = 78	CES63 = 87	CES88 = 95
CES14 = 74	CES39 = 97	CES64 = 81	CES89 = 88
CES15 = 71	CES40 = 97	CES65 = 84	CES90 = 93
CES16 = 46	CES41 = 92	CES66 = 78	CES91 = 70
CES17 = 49	CES42 = 96	CES67 = 77	CES92 = 78
CES18 = 56	CES43 = 95	CES68 = 82	CES93 = 86
CES19 = 70	CES44 = 99	CES69 = 84	CES94 = 81
CES20 = 65	CES45 = 97	CES70 = 81	CES95 = 81
CES21 = 85	CES46 = 95	CES71 = 73	CES96 = 92
CES22 = 77	CES47 = 91	CES72 = 91	CES97 = 94
CES23 = 91	CES48 = 85	CES73 = 77	CES98 = 92
CES24 = 90	CES49 = 95	CES74 = 89	CES99 = 90
CES25 = 70	CES50 = 93	CES75 = 77	



REPORT NUMBER: SP1-2307-100-9

TM-30-18

Color Rendition by Hue-Angle Bin

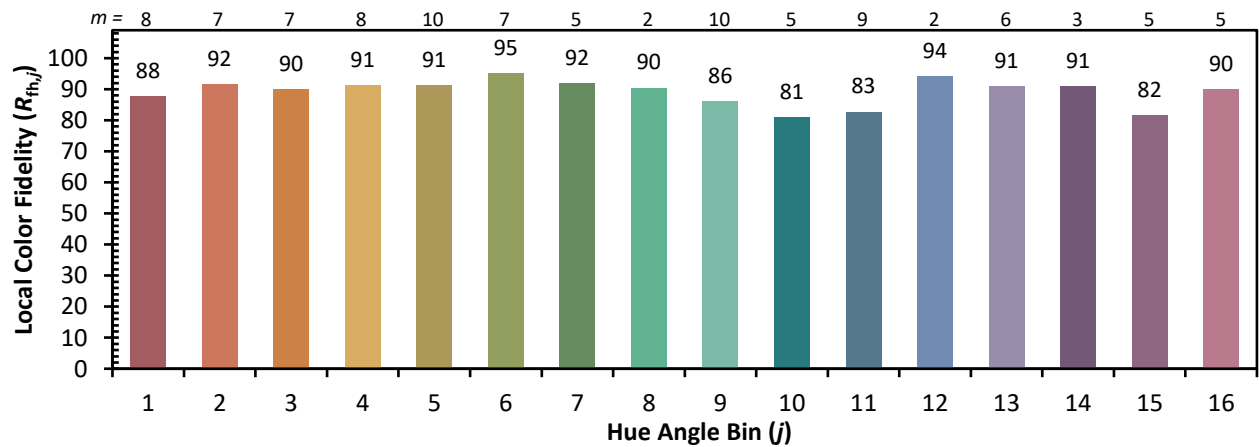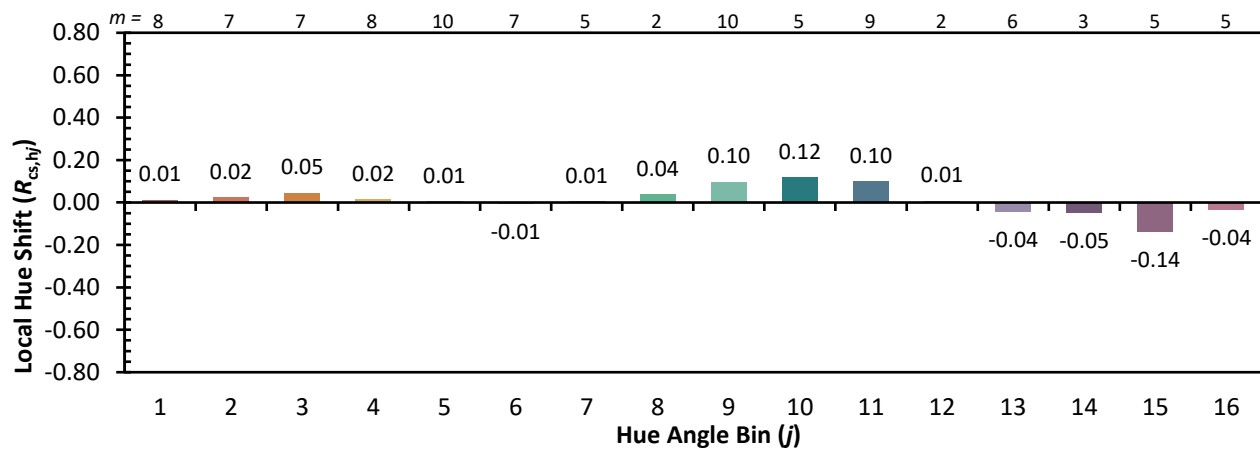

REPORT NUMBER: SP1-2307-100-9

TM-30-18

Measure Comparisons



(END OF REPORT)