

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P827681

Luminaire Tested: **OHBL-15SE-MCL-UNV-L930-CD-UPL15**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P827681
REPORT IS A COMBINATION OF REPORTS P826114 AND G3-2310-221-10
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-15SE-MCL-UNV-L930-CD-UPL15
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 13250.4 lumens
Efficiency: N/A
Efficacy: 136.2 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 0.88' x H: 0.17')
CIE Type: Semi-Direct

Input Watts (W): 97.3
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P827681

CATALOG NUMBER: OHBL-15SE-MCL-UNV-L930-CD-UPL15

Luminous Intensity Polar Plot

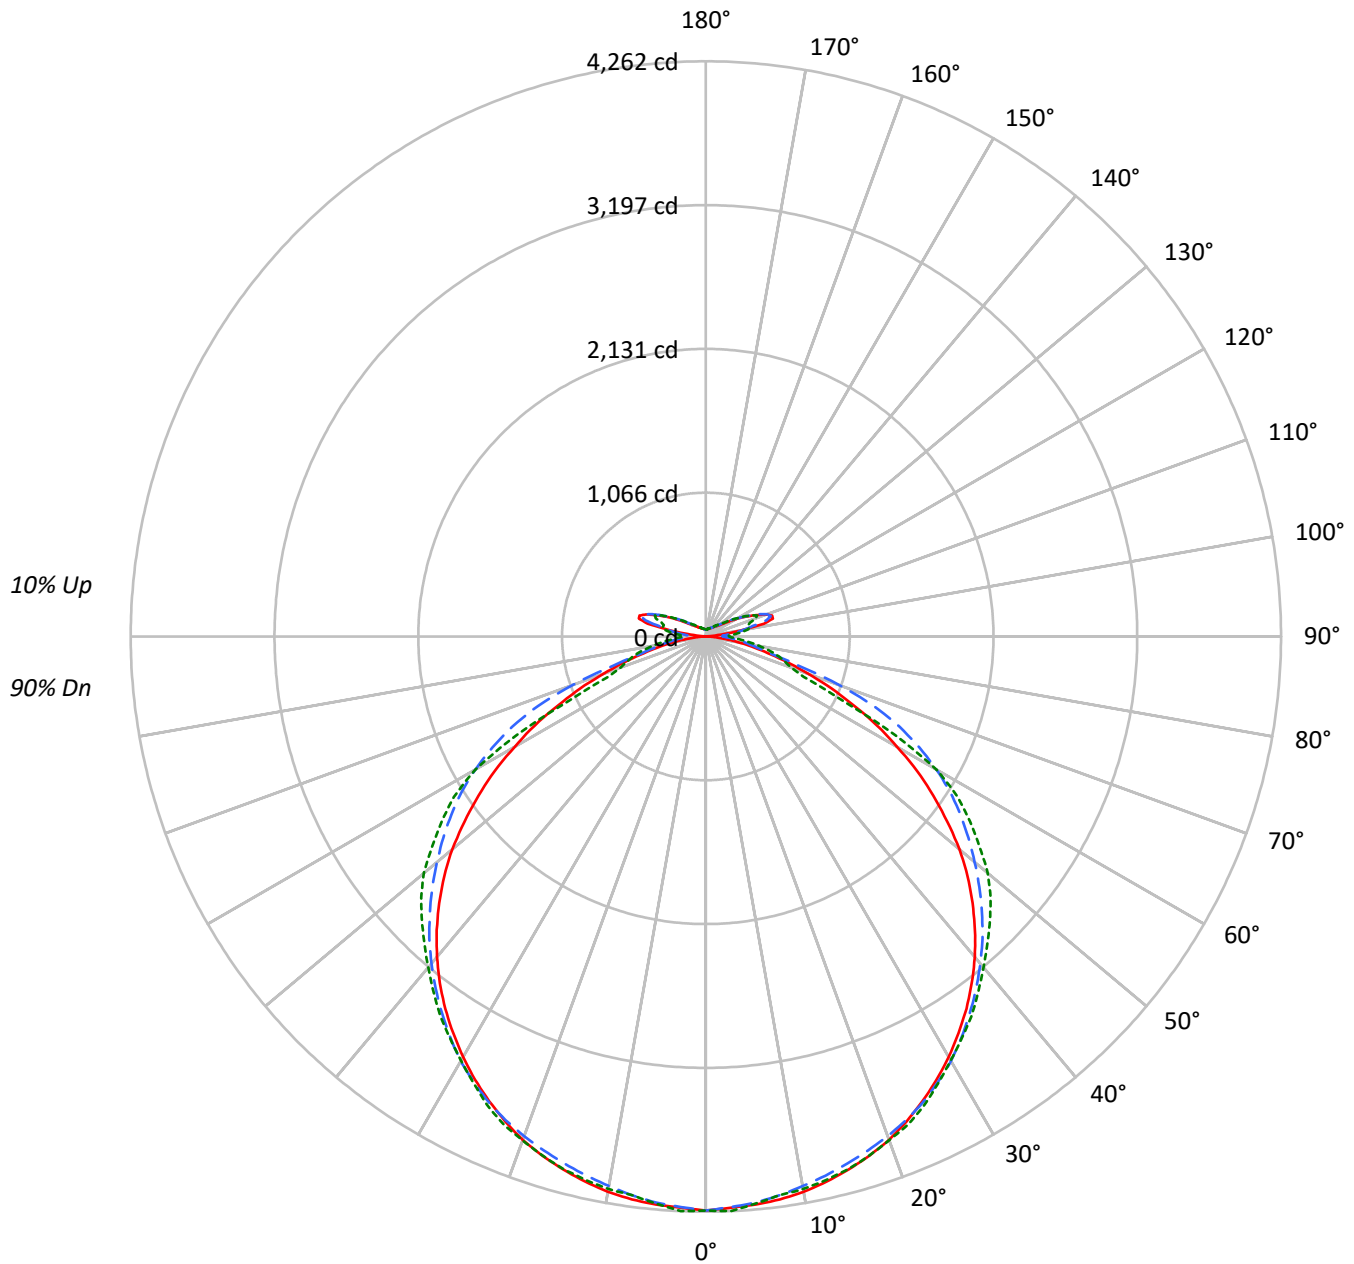



TEST NUMBER: P827681

CATALOG NUMBER: OHBL-15SE-MCL-UNV-L930-CD-UPL15

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	117	117	117	117	113	113	113	113	105	105	105	99	99	99	93	93	93	90		
1	107	102	98	94	103	99	95	92	93	90	87	87	85	83	82	80	78	76		
2	97	89	83	77	94	87	81	76	81	77	72	77	73	69	72	69	66	63		
3	89	79	71	64	85	76	69	63	72	66	61	68	63	58	64	60	56	54		
4	81	70	61	55	78	68	60	54	64	57	52	60	55	50	57	52	48	46		
5	75	62	53	47	72	60	52	46	57	50	45	54	48	43	51	46	42	40		
6	69	56	47	41	66	54	46	40	52	44	39	49	43	38	46	41	37	35		
7	64	51	42	36	62	49	41	36	47	40	35	45	38	34	42	37	33	31		
8	59	46	38	32	57	45	37	32	43	36	31	41	35	30	39	33	29	27		
9	55	42	34	29	53	41	34	28	39	33	28	38	31	27	36	30	26	24		
10	52	39	31	26	50	38	31	26	36	30	25	35	29	25	33	28	24	22		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	13838	13838	13838
5°	13574	13556	13723
10°	13355	13271	13629
15°	13102	13040	13596
20°	12849	12866	13536
25°	12522	12689	13479
30°	12179	12455	13291
35°	11797	12130	13222
40°	11350	11794	13108
45°	10798	11415	13112
50°	10117	10988	13113
55°	9167	10557	12747
60°	8007	9969	11927
65°	6595	8996	7678
70°	5031	6856	5688
75°	3488	3934	5961
80°	2144	3105	6010
85°	961	2592	6319



TEST NUMBER: P827681

CATALOG NUMBER: OHBL-15SE-MCL-UNV-L930-CD-UPL15

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	401.1	3.0
10°-20°	1150.1	8.7
20°-30°	1756.5	13.3
30°-40°	2131.3	16.1
40°-50°	2233.8	16.9
50°-60°	2024.1	15.3
60°-70°	1357.1	10.2
70°-80°	609.4	4.6
80°-90°	224.2	1.7
90°-100°	184.3	1.4
100°-110°	439.3	3.3
110°-120°	366.2	2.8
120°-130°	176.9	1.3
130°-140°	90.1	0.7
140°-150°	52.8	0.4
150°-160°	31.5	0.2
160°-170°	16.7	0.1
170°-180°	5.1	0.0
0°-30°	3307.7	25.0
0°-40°	5438.9	41.0
0°-60°	9696.8	73.2
0°-90°	11887.6	89.7
90°-120°	989.8	7.5
90°-150°	1309.6	9.9
90°-180°	1363.0	10.3
0°-180°	13250.4	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	4254	4254	4254	4254	4254	
5°	4226	4241	4211	4224	4218	402
15°	4089	4073	4044	4080	4084	1154
25°	3798	3782	3808	3843	3832	1751
35°	3367	3375	3409	3445	3432	2104
45°	2794	2840	2892	2966	2976	2152
55°	2056	2155	2302	2394	2389	1835
65°	1207	1396	1584	1337	1092	1202
75°	475	689	507	518	552	519
85°	82	157	201	243	255	100
90°	3	70	127	161	171	7
95°	23	91	158	202	222	82
105°	514	518	465	346	323	487
115°	357	360	374	377	371	360
125°	175	185	196	196	196	165
135°	106	110	114	118	120	85
145°	79	81	83	85	86	51
155°	65	67	68	68	68	31
165°	58	58	58	58	58	16
175°	53	53	52	52	52	5
180°	52	52	52	52	52	



TEST NUMBER: P827681

CATALOG NUMBER: OHBL-15SE-MCL-UNV-L930-CD-UPL15

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	4253.5	4253.5	4253.5	4253.5	4253.5
2.5°	4236.3	4254.1	4231.9	4256.0	4262.1
5°	4225.8	4240.6	4211.1	4224.0	4218.4
7.5°	4206.8	4211.7	4176.7	4187.1	4176.0
10°	4178.5	4176.0	4134.8	4155.1	4157.6
12.5°	4136.6	4129.3	4092.3	4123.1	4123.7
15°	4088.7	4072.7	4043.8	4079.5	4084.3
17.5°	4033.3	4012.4	3993.3	4039.5	4032.1
20°	3968.8	3944.2	3940.5	3990.9	3972.5
22.5°	3888.8	3869.7	3878.4	3926.3	3914.6
25°	3798.4	3781.8	3808.2	3843.3	3832.2
27.5°	3703.1	3693.2	3723.3	3750.4	3728.9
30°	3598.5	3593.0	3633.0	3655.1	3628.0
32.5°	3484.7	3486.6	3524.7	3554.8	3529.7
35°	3366.6	3374.6	3409.1	3445.4	3431.9
37.5°	3236.9	3254.7	3289.2	3330.3	3316.2
40°	3099.7	3125.6	3163.7	3213.5	3200.6
42.5°	2951.5	2984.1	3033.3	3088.6	3087.4
45°	2794.1	2839.6	2892.5	2966.3	2975.5
47.5°	2630.5	2681.5	2748.6	2847.0	2861.1
50°	2452.7	2516.7	2600.3	2718.4	2727.0
52.5°	2254.7	2342.0	2452.7	2565.9	2555.5
55°	2056.0	2155.0	2302.1	2394.3	2388.8
57.5°	1858.0	1969.3	2147.7	2213.5	2212.9
60°	1636.6	1777.4	1972.4	2022.2	1973.0
62.5°	1431.8	1583.0	1785.4	1749.2	1580.6
65°	1206.7	1395.5	1584.3	1337.1	1091.7
67.5°	1006.8	1203.6	1345.7	915.8	784.2
70°	805.7	1022.8	1049.2	679.6	670.4
72.5°	627.3	858.6	723.9	581.8	611.3
75°	474.8	688.9	506.7	518.5	552.3
77.5°	346.3	528.9	394.2	454.5	482.2
80°	238.1	374.6	321.6	381.9	401.0
82.5°	149.5	247.3	257.7	307.5	327.2
85°	81.8	156.8	201.1	242.9	254.6
87.5°	33.8	94.7	153.7	187.6	197.4
90°	3.1	70.1	127.4	161.1	171.3
92.5°	8.7	62.6	122.1	156.9	169.3
95°	23.3	90.8	157.9	201.5	222.5
97.5°	135.4	177.0	224.6	261.9	279.0
100°	274.3	315.7	291.5	314.1	321.6
102.5°	440.5	440.8	354.6	331.7	328.7
105°	514.1	518.5	465.1	346.4	323.2



TEST NUMBER: P827681

CATALOG NUMBER: OHBL-15SE-MCL-UNV-L930-CD-UPL15

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	415.7	425.7	430.8	421.7	408.4
115°	357.4	359.8	373.5	376.8	370.8
117.5°	307.2	306.8	319.3	321.4	321.0
120°	257.1	260.9	269.7	271.2	271.0
122.5°	213.5	219.9	230.8	231.4	231.2
125°	174.8	185.2	196.2	196.4	196.2
127.5°	150.4	156.1	167.5	169.3	168.3
130°	131.0	135.6	143.6	146.9	146.9
132.5°	117.9	121.7	127.6	130.9	131.7
135°	106.5	110.4	113.5	118.2	119.6
137.5°	99.1	100.7	104.0	107.8	109.3
140°	91.0	93.4	95.2	98.5	100.0
142.5°	84.7	87.0	87.9	91.4	92.1
145°	79.1	81.3	82.9	85.2	85.8
147.5°	75.7	77.3	78.9	78.9	80.3
150°	71.6	73.2	74.0	74.9	74.9
152.5°	68.4	69.2	70.8	70.8	71.6
155°	65.2	66.6	68.2	68.2	68.4
157.5°	62.7	64.2	65.0	65.8	65.8
160°	60.3	61.8	62.6	62.6	63.4
162.5°	59.3	60.1	60.1	60.9	60.9
165°	57.7	57.7	58.5	58.5	58.5
167.5°	56.1	56.7	56.9	56.9	57.7
170°	54.5	55.3	55.3	54.6	55.5
172.5°	53.7	53.7	54.5	53.8	53.8
175°	52.9	52.9	52.2	52.4	52.4
177.5°	52.6	52.9	52.2	51.6	51.0
180°	52.2	52.2	52.2	52.2	52.2



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	514.7	524.2	504.6	401.7	343.9
110°	475.8	486.0	480.3	444.6	395.8



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930

Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				



Test Conditions


Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram

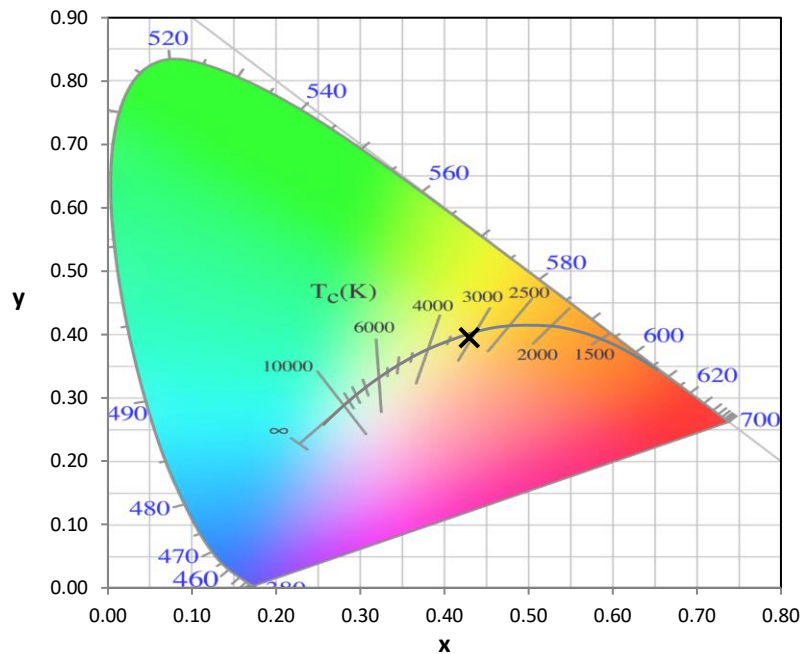

CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

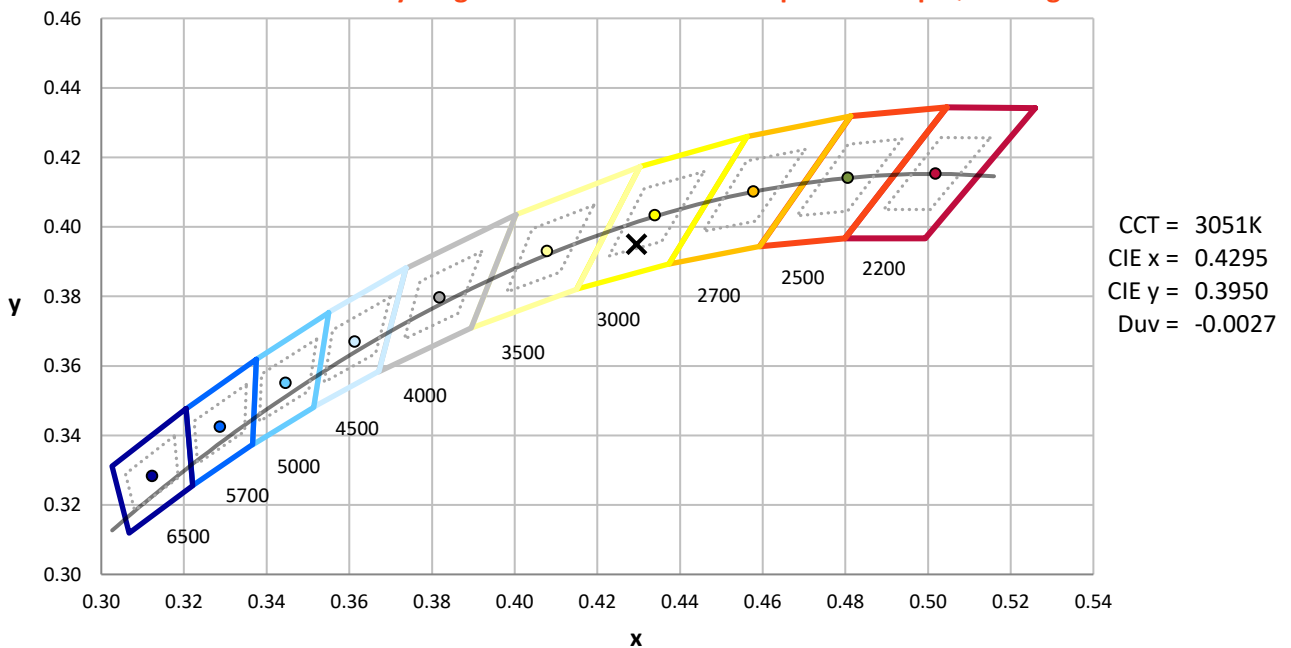

Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 6505.3 M/P: 0.55


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2


TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$

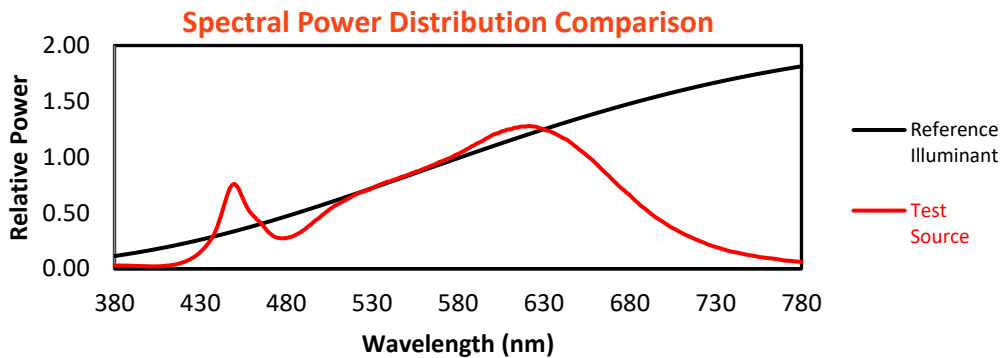

Color Vector Graphics

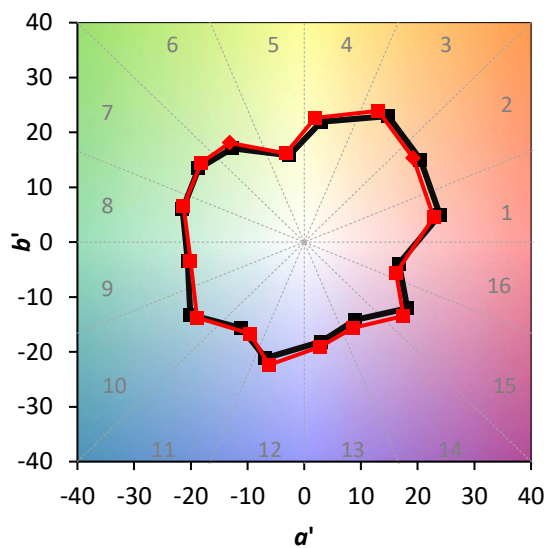

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	



REPORT NUMBER: SP1-2304-001-2

TM-30-18



Color Rendition by Hue-Angle Bin

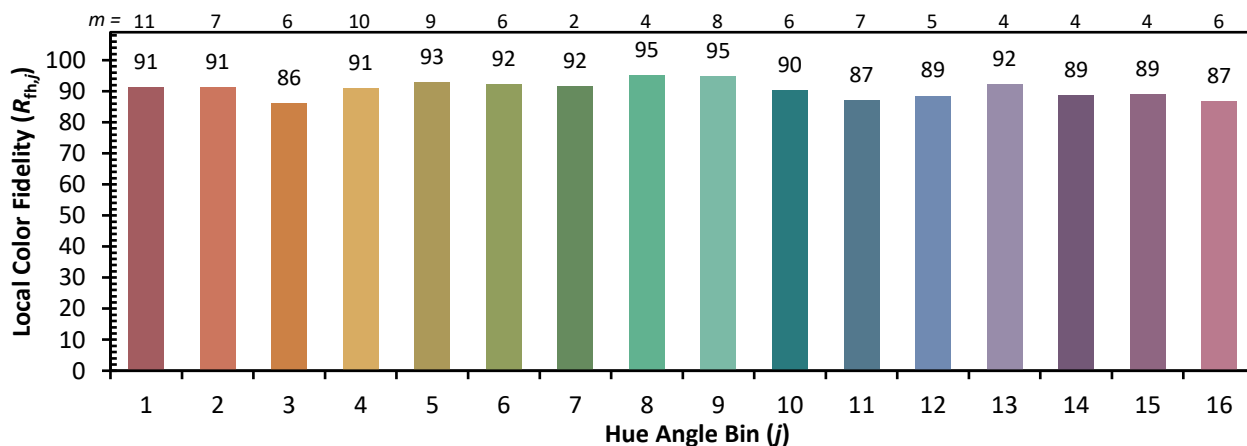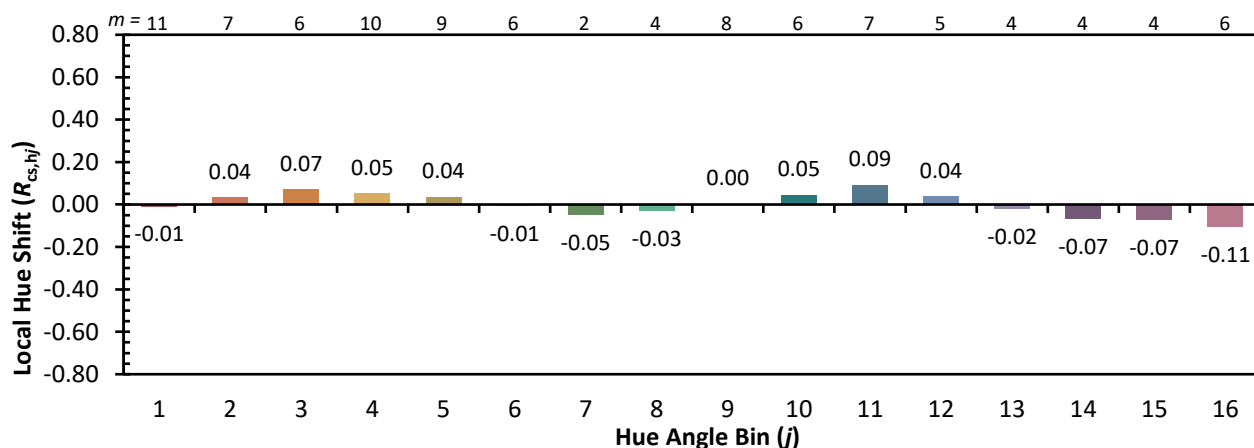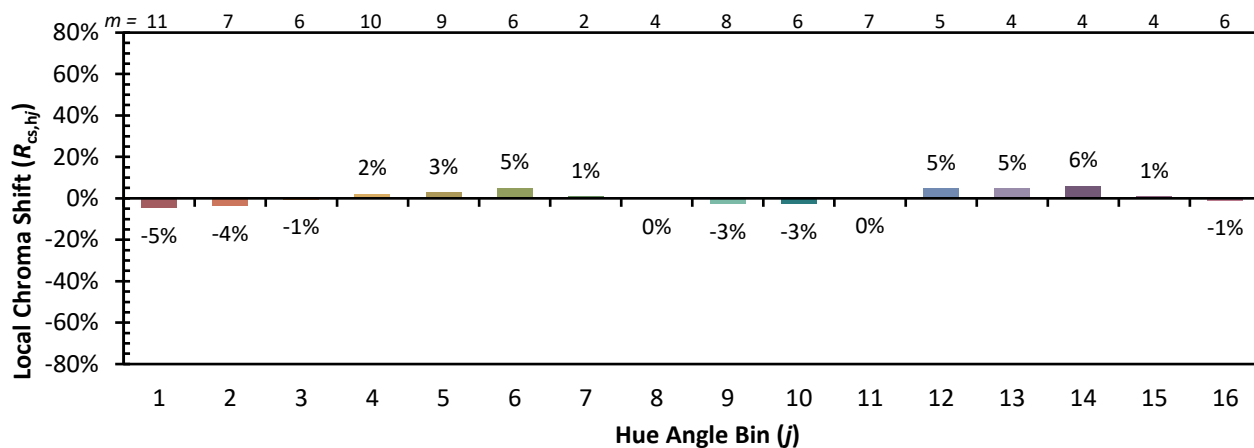

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons

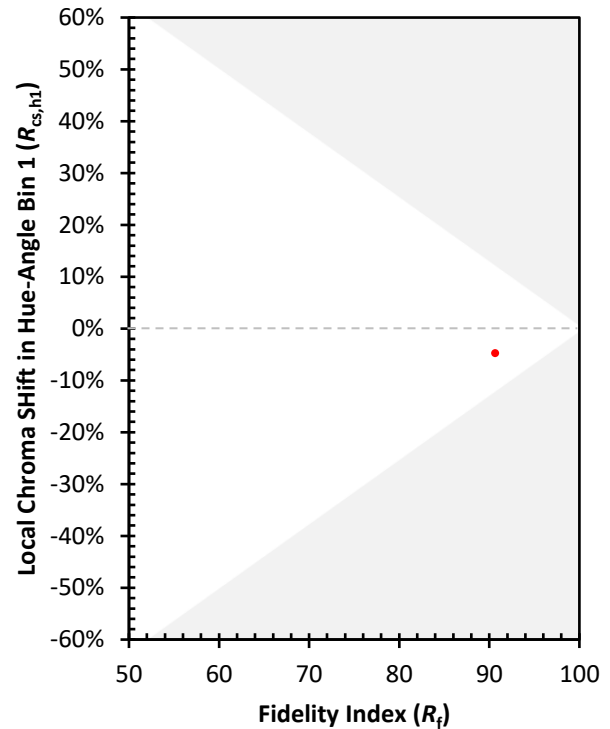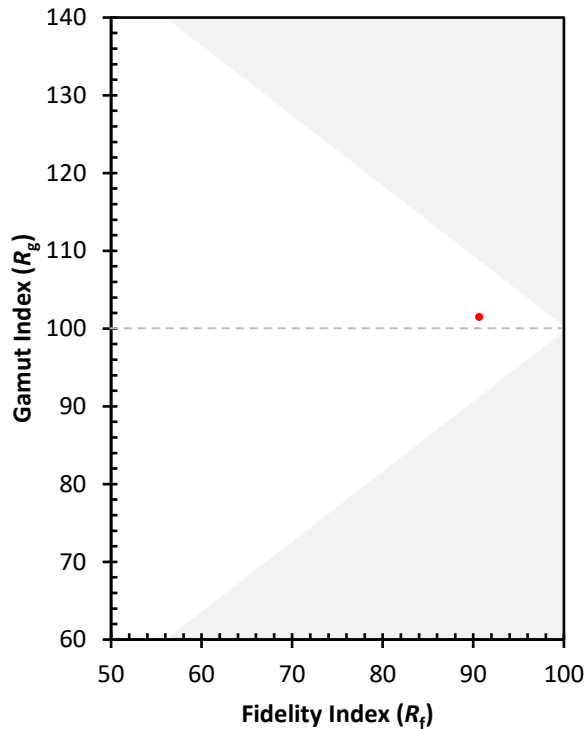

(END OF REPORT)