

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P829887

Luminaire Tested: **OHBL-18HE-MCL-UNV-L730-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P829887
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-18HE-MCL-UNV-L730-CD
Description: 18000 LUMEN OHBL HE LED LUMINAIRE WITH 70CRI, 3000K LEDS AND MEDIUM CLEAR LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 17843.9 lumens
Efficiency: N/A
Efficacy: 173.2 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.67' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 103
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P829887

CATALOG NUMBER: OHBL-18HE-MCL-UNV-L730-CD

Luminous Intensity Polar Plot

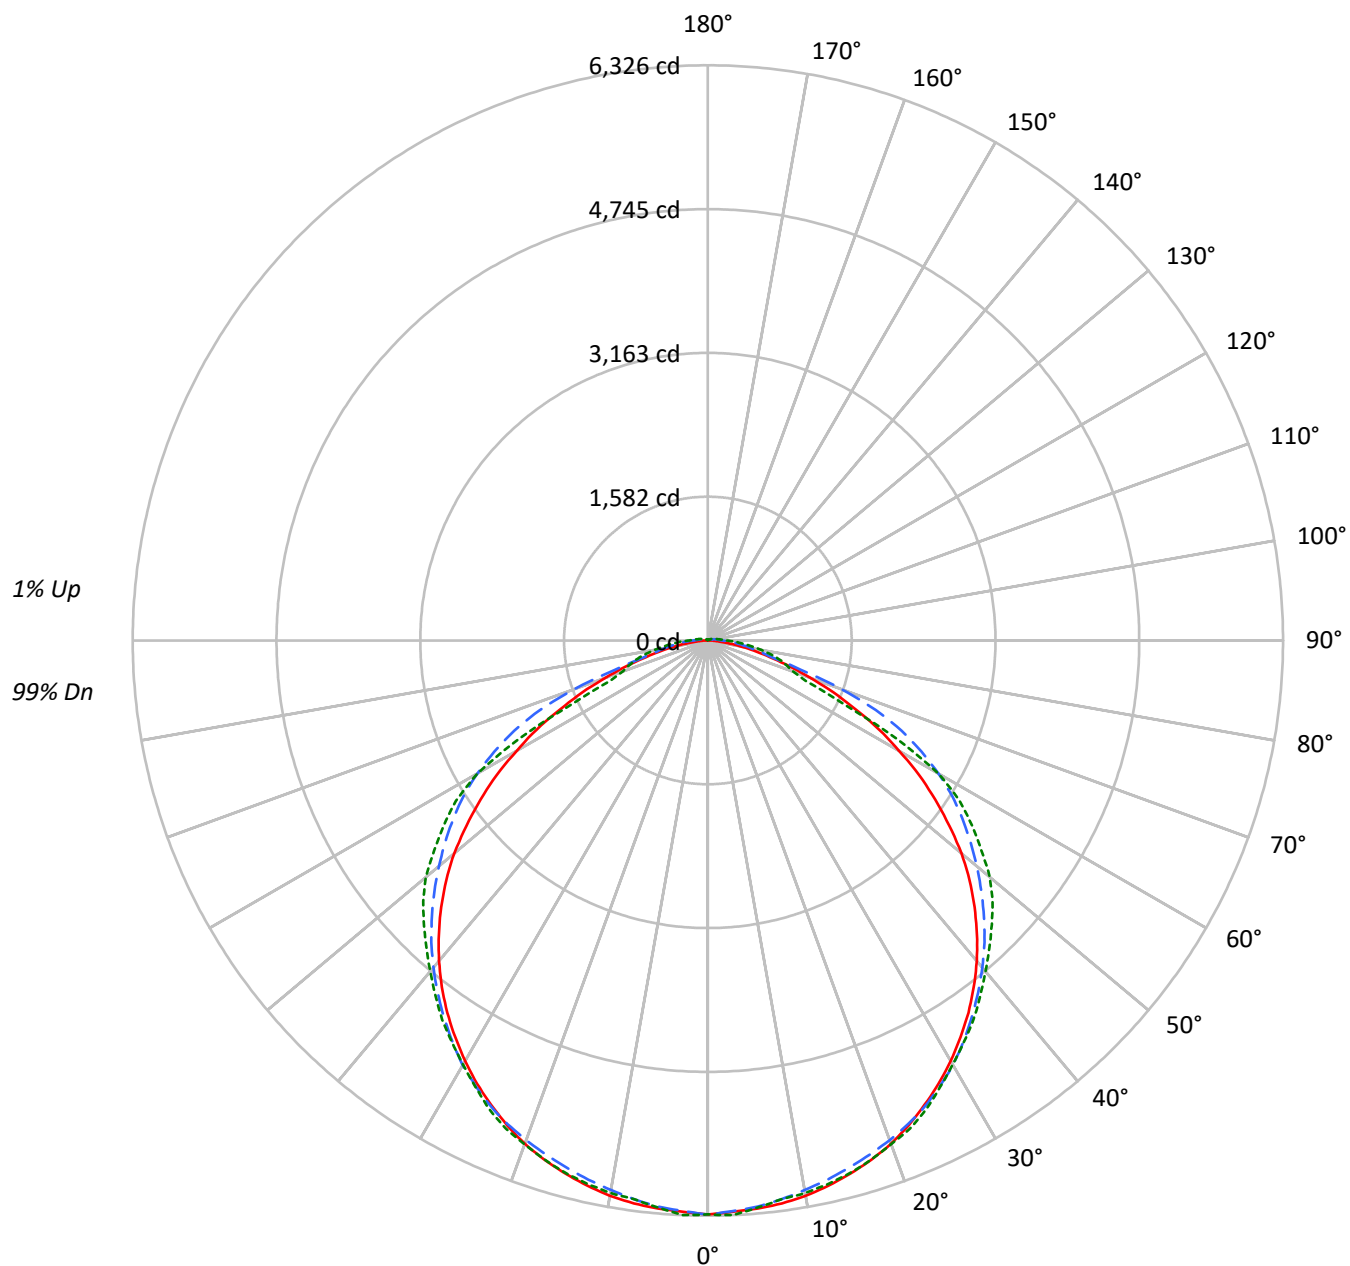



TEST NUMBER: P829887

CATALOG NUMBER: OHBL-18HE-MCL-UNV-L730-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	110	110	110	106	106	106	101	101	101			99
1	109	104	100	96	106	102	98	95	97	94	91	93	91	88	90	87	86			83
2	99	91	84	79	96	89	83	78	85	80	76	82	78	74	79	75	72			70
3	91	80	72	66	88	79	71	65	75	69	64	72	67	63	70	65	61			59
4	83	71	62	56	81	70	62	55	67	60	54	65	59	54	62	57	53			51
5	76	64	55	48	74	62	54	48	60	53	47	58	52	46	56	50	46			44
6	70	57	48	42	68	56	48	42	54	47	41	52	46	41	51	45	40			38
7	65	52	43	37	63	51	43	37	49	42	36	48	41	36	46	40	36			34
8	61	47	39	33	59	46	38	33	45	38	33	44	37	32	42	36	32			30
9	57	43	35	30	55	43	35	29	41	34	29	40	34	29	39	33	29			27
10	53	40	32	27	52	39	32	27	38	31	27	37	31	26	36	30	26			24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	10783	10783	10783
5°	10712	10621	10642
10°	10673	10456	10517
15°	10605	10331	10440
20°	10538	10250	10340
25°	10411	10169	10242
30°	10272	10044	10040
35°	10107	9848	9926
40°	9892	9645	9772
45°	9594	9411	9697
50°	9190	9145	9609
55°	8549	8882	9238
60°	7709	8500	8526
65°	6613	7799	5392
70°	5326	6076	3898
75°	3993	3596	3939
80°	2780	2976	3735
85°	1582	2702	3455



TEST NUMBER: P829887

CATALOG NUMBER: OHBL-18HE-MCL-UNV-L730-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	595.3	3.3
10°-20°	1707.0	9.6
20°-30°	2607.1	14.6
30°-40°	3163.3	17.7
40°-50°	3315.4	18.6
50°-60°	3004.3	16.8
60°-70°	2014.3	11.3
70°-80°	904.5	5.1
80°-90°	328.2	1.8
90°-100°	98.8	0.6
100°-110°	46.6	0.3
110°-120°	23.4	0.1
120°-130°	12.9	0.1
130°-140°	8.9	0.0
140°-150°	5.9	0.0
150°-160°	4.4	0.0
160°-170°	2.8	0.0
170°-180°	0.9	0.0
0°-30°	4909.3	27.5
0°-40°	8072.6	45.2
0°-60°	14392.4	80.7
0°-90°	17639.3	98.9
90°-120°	168.8	0.9
90°-150°	196.5	1.1
90°-180°	205.0	1.1
0°-180°	17843.9	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	6313	6313	6313	6313	6313	
5°	6272	6294	6250	6269	6261	597
15°	6069	6045	6002	6055	6062	1713
25°	5638	5613	5652	5704	5688	2599
35°	4997	5009	5060	5114	5094	3123
45°	4147	4215	4293	4403	4416	3195
55°	3052	3199	3417	3554	3546	2724
65°	1791	2071	2352	1984	1620	1785
75°	705	1022	752	770	820	770
85°	121	233	298	361	378	148
90°	1	78	154	194	203	7
95°	1	48	106	129	132	1
105°	4	21	52	63	66	4
115°	7	11	26	34	36	7
125°	6	7	16	19	20	6
135°	8	9	10	15	16	7
145°	8	9	9	10	11	5
155°	9	10	10	10	9	4
165°	10	10	10	10	10	3
175°	10	10	9	8	8	1
180°	9	9	9	9	9	



TEST NUMBER: P829887

CATALOG NUMBER: OHBL-18HE-MCL-UNV-L730-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	6313.2	6313.2	6313.2	6313.2	6313.2
2.5°	6287.7	6314.1	6281.3	6316.9	6326.0
5°	6272.1	6294.1	6250.2	6269.4	6261.2
7.5°	6243.8	6251.1	6199.1	6214.6	6198.2
10°	6201.9	6198.2	6137.0	6167.2	6170.8
12.5°	6139.8	6128.8	6074.1	6119.7	6120.6
15°	6068.6	6044.8	6001.9	6054.9	6062.2
17.5°	5986.4	5955.4	5927.1	5995.6	5984.6
20°	5890.6	5854.1	5848.6	5923.4	5896.1
22.5°	5771.9	5743.6	5756.4	5827.6	5810.2
25°	5637.7	5613.1	5652.3	5704.4	5687.9
27.5°	5496.2	5481.6	5526.4	5566.5	5534.6
30°	5341.0	5332.8	5392.2	5425.0	5384.9
32.5°	5172.2	5174.9	5231.5	5276.2	5238.8
35°	4996.9	5008.8	5059.9	5113.7	5093.7
37.5°	4804.3	4830.8	4881.9	4943.0	4922.0
40°	4600.7	4639.1	4695.7	4769.6	4750.4
42.5°	4380.7	4429.1	4502.1	4584.3	4582.5
45°	4147.0	4214.6	4293.1	4402.6	4416.3
47.5°	3904.2	3980.0	4079.5	4225.6	4246.5
50°	3640.4	3735.4	3859.5	4034.8	4047.5
52.5°	3346.5	3476.1	3640.4	3808.4	3792.9
55°	3051.6	3198.6	3416.8	3553.7	3545.5
57.5°	2757.7	2922.9	3187.6	3285.3	3284.4
60°	2429.1	2638.1	2927.5	3001.4	2928.4
62.5°	2125.1	2349.7	2650.0	2596.1	2346.0
65°	1791.0	2071.2	2351.5	1984.5	1620.3
67.5°	1494.3	1786.4	1997.3	1359.2	1163.9
70°	1195.8	1518.1	1557.3	1008.7	995.0
72.5°	931.1	1274.3	1074.4	863.5	907.4
75°	704.7	1022.4	752.2	769.5	819.7
77.5°	513.9	785.0	585.1	674.6	715.7
80°	353.3	555.9	477.4	566.9	595.2
82.5°	221.8	367.0	382.5	456.4	485.6
85°	121.4	232.8	298.5	360.6	377.9
87.5°	50.2	140.6	228.2	278.4	293.0
90°	0.9	77.6	154.3	193.5	202.7
92.5°	0.9	59.3	126.0	156.1	162.5
95°	0.9	48.4	105.9	128.7	132.4
97.5°	1.8	38.3	88.5	106.8	110.5
100°	2.7	31.9	73.9	89.5	92.2
102.5°	3.7	25.6	62.1	74.9	77.6
105°	3.7	21.0	52.0	63.0	65.7



TEST NUMBER: P829887

CATALOG NUMBER: OHBL-18HE-MCL-UNV-L730-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	6.4	12.8	31.0	39.3	41.1
115°	7.3	11.0	26.5	33.8	35.6
117.5°	7.3	9.1	22.8	28.3	30.1
120°	7.3	8.2	20.1	24.6	25.6
122.5°	7.3	7.3	17.3	21.9	22.8
125°	6.4	7.3	16.4	19.2	20.1
127.5°	7.3	7.3	14.6	17.3	18.3
130°	7.3	8.2	12.8	16.4	16.4
132.5°	8.2	9.1	11.9	15.5	15.5
135°	8.2	9.1	10.0	14.6	15.5
137.5°	9.1	9.1	9.1	13.7	14.6
140°	9.1	9.1	8.2	11.9	12.8
142.5°	8.2	9.1	8.2	11.0	11.9
145°	8.2	9.1	9.1	10.0	11.0
147.5°	9.1	9.1	9.1	9.1	10.0
150°	9.1	9.1	9.1	9.1	9.1
152.5°	9.1	9.1	9.1	9.1	9.1
155°	9.1	10.0	10.0	10.0	9.1
157.5°	9.1	10.0	10.0	10.0	10.0
160°	9.1	10.0	10.0	10.0	10.0
162.5°	10.0	10.0	10.0	10.0	10.0
165°	10.0	10.0	10.0	10.0	10.0
167.5°	10.0	11.0	10.0	10.0	10.0
170°	10.0	10.0	10.0	9.1	9.1
172.5°	10.0	10.0	10.0	9.1	9.1
175°	10.0	10.0	9.1	8.2	8.2
177.5°	11.0	10.0	9.1	8.2	7.3
180°	9.1	9.1	9.1	9.1	9.1



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	4.6	17.3	44.7	53.9	55.7
110°	5.5	14.6	37.4	45.6	47.5



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-1

Test Date: 07/27/2023

Luminaire Tested: OHB-15SE-N-UNV-L730-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L730-CD.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L730-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 70CRI, 3000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	3069	CRI (Ra):	71.3		
CIE u':	0.2485	R1:	67.4	R9:	-35.7
CIE v':	0.5185	R2:	83.0	R10:	60.6
Duv:	-0.0010	R3:	94.0	R11:	58.9
CIE x:	0.4306	R4:	65.2	R12:	49.5
CIE y:	0.3993	R5:	66.6	R13:	70.5
CIE z:	0.1702	R6:	76.0	R14:	97.0
Peak Wavelength (nm):	596	R7:	76.4		
Dominant Wavelength (nm):	582	R8:	41.9		
Purity:	49.5				
Rf:	74.9				
Rg:	92.7				



Test Conditions

Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/57%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-1

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-1

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-1

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6099	NR	490	40168	NR	620	253019	NR	750	11053	NR	880	4764	NR
365	5425	NR	495	46535	NR	625	234501	NR	755	10436	NR	885	4069	NR
370	5467	NR	500	57902	NR	630	214134	NR	760	9340	NR	890	5470	NR
375	5866	NR	505	75040	NR	635	194074	NR	765	9223	NR	895	5625	NR
380	5693	NR	510	92426	NR	640	175837	NR	770	7875	NR	900	5662	NR
385	5528	NR	515	109218	NR	645	158182	NR	775	6995	NR	905	4976	NR
390	5323	NR	520	124301	NR	650	139770	NR	780	6291	NR	910	3243	NR
395	4691	NR	525	136616	NR	655	124825	NR	785	5894	NR	915	4005	NR
400	4292	NR	530	148525	NR	660	109765	NR	790	5176	NR	920	4854	NR
405	4106	NR	535	158686	NR	665	95251	NR	795	5191	NR	925	3999	NR
410	4555	NR	540	170513	NR	670	82640	NR	800	4961	NR	930	4856	NR
415	6579	NR	545	182793	NR	675	71832	NR	805	5762	NR	935	5652	NR
420	11281	NR	550	196628	NR	680	62184	NR	810	5247	NR	940	7244	NR
425	19782	NR	555	213600	NR	685	53604	NR	815	5570	NR	945	6266	NR
430	32934	NR	560	232241	NR	690	46370	NR	820	5470	NR	950	6258	NR
435	52004	NR	565	250545	NR	695	40048	NR	825	5780	NR	955	6166	NR
440	77987	NR	570	269608	NR	700	35148	NR	830	4151	NR	960	4813	NR
445	117241	NR	575	286007	NR	705	30717	NR	835	5899	NR	965	6539	NR
450	171397	NR	580	300402	NR	710	27137	NR	840	5774	NR	970	2930	NR
455	188676	NR	585	310093	NR	715	24655	NR	845	4055	NR	975	3170	NR
460	142860	NR	590	313605	NR	720	21845	NR	850	4767	NR	980	3959	NR
465	100906	NR	595	314960	NR	725	19116	NR	855	4780	NR	985	6920	NR
470	78130	NR	600	311387	NR	730	16889	NR	860	5148	NR	990	2710	NR
475	57660	NR	605	301618	NR	735	14825	NR	865	6865	NR	995	5566	NR
480	43089	NR	610	288042	NR	740	13154	NR	870	5392	NR	1000	0	NR
485	38569	NR	615	270953	NR	745	11725	NR	875	6166	NR			

REPORT NUMBER: SP1-2307-100-1

Scotopic Flux vs. Wavelength



Scotopic Lumens: 18956.8

S/P: 1.25

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6099	NR	490	40168	NR	620	253019	NR	750	11053	NR	880	4764	NR
365	5425	NR	495	46535	NR	625	234501	NR	755	10436	NR	885	4069	NR
370	5467	NR	500	57902	NR	630	214134	NR	760	9340	NR	890	5470	NR
375	5866	NR	505	75040	NR	635	194074	NR	765	9223	NR	895	5625	NR
380	5693	NR	510	92426	NR	640	175837	NR	770	7875	NR	900	5662	NR
385	5528	NR	515	109218	NR	645	158182	NR	775	6995	NR	905	4976	NR
390	5323	NR	520	124301	NR	650	139770	NR	780	6291	NR	910	3243	NR
395	4691	NR	525	136616	NR	655	124825	NR	785	5894	NR	915	4005	NR
400	4292	NR	530	148525	NR	660	109765	NR	790	5176	NR	920	4854	NR
405	4106	NR	535	158686	NR	665	95251	NR	795	5191	NR	925	3999	NR
410	4555	NR	540	170513	NR	670	82640	NR	800	4961	NR	930	4856	NR
415	6579	NR	545	182793	NR	675	71832	NR	805	5762	NR	935	5652	NR
420	11281	NR	550	196628	NR	680	62184	NR	810	5247	NR	940	7244	NR
425	19782	NR	555	213600	NR	685	53604	NR	815	5570	NR	945	6266	NR
430	32934	NR	560	232241	NR	690	46370	NR	820	5470	NR	950	6258	NR
435	52004	NR	565	250545	NR	695	40048	NR	825	5780	NR	955	6166	NR
440	77987	NR	570	269608	NR	700	35148	NR	830	4151	NR	960	4813	NR
445	117241	NR	575	286007	NR	705	30717	NR	835	5899	NR	965	6539	NR
450	171397	NR	580	300402	NR	710	27137	NR	840	5774	NR	970	2930	NR
455	188676	NR	585	310093	NR	715	24655	NR	845	4055	NR	975	3170	NR
460	142860	NR	590	313605	NR	720	21845	NR	850	4767	NR	980	3959	NR
465	100906	NR	595	314960	NR	725	19116	NR	855	4780	NR	985	6920	NR
470	78130	NR	600	311387	NR	730	16889	NR	860	5148	NR	990	2710	NR
475	57660	NR	605	301618	NR	735	14825	NR	865	6865	NR	995	5566	NR
480	43089	NR	610	288042	NR	740	13154	NR	870	5392	NR	1000	0	NR
485	38569	NR	615	270953	NR	745	11725	NR	875	6166	NR			

REPORT NUMBER: SP1-2307-100-1

Melanopic Flux vs. Wavelength



Melanopic Lumens: 7042.8

M/P: 0.47


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6099	NR	490	40168	NR	620	253019	NR	750	11053	NR	880	4764	NR
365	5425	NR	495	46535	NR	625	234501	NR	755	10436	NR	885	4069	NR
370	5467	NR	500	57902	NR	630	214134	NR	760	9340	NR	890	5470	NR
375	5866	NR	505	75040	NR	635	194074	NR	765	9223	NR	895	5625	NR
380	5693	NR	510	92426	NR	640	175837	NR	770	7875	NR	900	5662	NR
385	5528	NR	515	109218	NR	645	158182	NR	775	6995	NR	905	4976	NR
390	5323	NR	520	124301	NR	650	139770	NR	780	6291	NR	910	3243	NR
395	4691	NR	525	136616	NR	655	124825	NR	785	5894	NR	915	4005	NR
400	4292	NR	530	148525	NR	660	109765	NR	790	5176	NR	920	4854	NR
405	4106	NR	535	158686	NR	665	95251	NR	795	5191	NR	925	3999	NR
410	4555	NR	540	170513	NR	670	82640	NR	800	4961	NR	930	4856	NR
415	6579	NR	545	182793	NR	675	71832	NR	805	5762	NR	935	5652	NR
420	11281	NR	550	196628	NR	680	62184	NR	810	5247	NR	940	7244	NR
425	19782	NR	555	213600	NR	685	53604	NR	815	5570	NR	945	6266	NR
430	32934	NR	560	232241	NR	690	46370	NR	820	5470	NR	950	6258	NR
435	52004	NR	565	250545	NR	695	40048	NR	825	5780	NR	955	6166	NR
440	77987	NR	570	269608	NR	700	35148	NR	830	4151	NR	960	4813	NR
445	117241	NR	575	286007	NR	705	30717	NR	835	5899	NR	965	6539	NR
450	171397	NR	580	300402	NR	710	27137	NR	840	5774	NR	970	2930	NR
455	188676	NR	585	310093	NR	715	24655	NR	845	4055	NR	975	3170	NR
460	142860	NR	590	313605	NR	720	21845	NR	850	4767	NR	980	3959	NR
465	100906	NR	595	314960	NR	725	19116	NR	855	4780	NR	985	6920	NR
470	78130	NR	600	311387	NR	730	16889	NR	860	5148	NR	990	2710	NR
475	57660	NR	605	301618	NR	735	14825	NR	865	6865	NR	995	5566	NR
480	43089	NR	610	288042	NR	740	13154	NR	870	5392	NR	1000	0	NR
485	38569	NR	615	270953	NR	745	11725	NR	875	6166	NR			

REPORT NUMBER: SP1-2307-100-1


TM-30-18

Summary

$R_f = 74.9$
 $R_g = 92.7$
 $CIE R_a = 71.3$
 $R_g = -35.7$

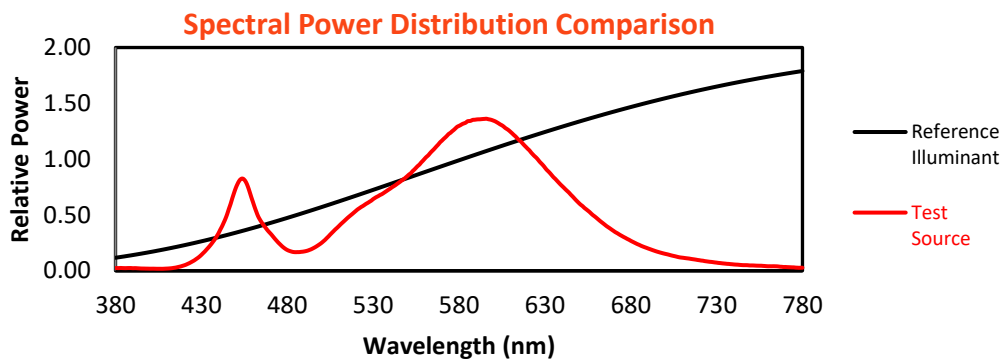

Color Vector Graphics

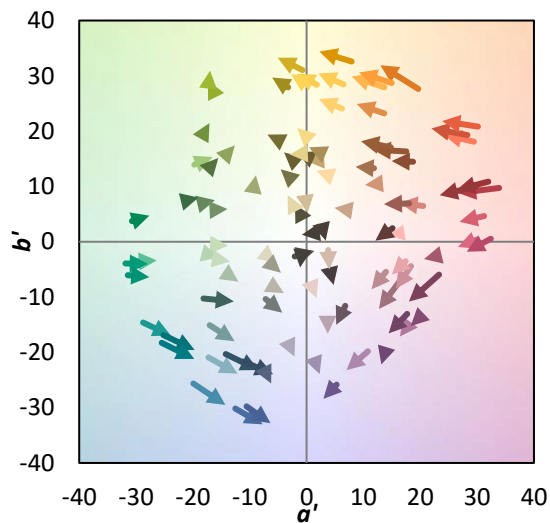

REPORT NUMBER: SP1-2307-100-1

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 67	CES51 = 85	CES76 = 60
CES02 = 62	CES27 = 90	CES52 = 83	CES77 = 76
CES03 = 31	CES28 = 85	CES53 = 77	CES78 = 64
CES04 = 71	CES29 = 73	CES54 = 85	CES79 = 86
CES05 = 49	CES30 = 90	CES55 = 82	CES80 = 85
CES06 = 51	CES31 = 76	CES56 = 74	CES81 = 72
CES07 = 41	CES32 = 67	CES57 = 73	CES82 = 93
CES08 = 40	CES33 = 84	CES58 = 73	CES83 = 92
CES09 = 29	CES34 = 77	CES59 = 83	CES84 = 87
CES10 = 76	CES35 = 88	CES60 = 88	CES85 = 74
CES11 = 59	CES36 = 89	CES61 = 79	CES86 = 64
CES12 = 65	CES37 = 85	CES62 = 85	CES87 = 77
CES13 = 43	CES38 = 98	CES63 = 76	CES88 = 80
CES14 = 74	CES39 = 98	CES64 = 62	CES89 = 67
CES15 = 71	CES40 = 94	CES65 = 64	CES90 = 81
CES16 = 47	CES41 = 97	CES66 = 57	CES91 = 76
CES17 = 50	CES42 = 88	CES67 = 55	CES92 = 55
CES18 = 56	CES43 = 80	CES68 = 64	CES93 = 72
CES19 = 73	CES44 = 99	CES69 = 73	CES94 = 49
CES20 = 66	CES45 = 86	CES70 = 60	CES95 = 66
CES21 = 87	CES46 = 83	CES71 = 56	CES96 = 76
CES22 = 79	CES47 = 91	CES72 = 84	CES97 = 81
CES23 = 92	CES48 = 76	CES73 = 53	CES98 = 76
CES24 = 91	CES49 = 80	CES74 = 93	CES99 = 64
CES25 = 73	CES50 = 85	CES75 = 61	



REPORT NUMBER: SP1-2307-100-1

TM-30-18

Color Rendition by Hue-Angle Bin

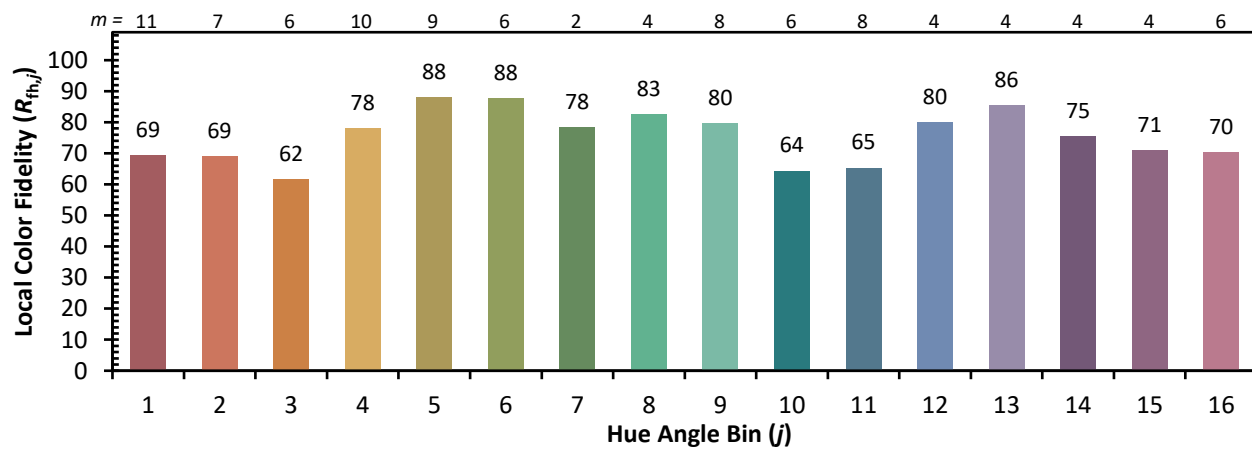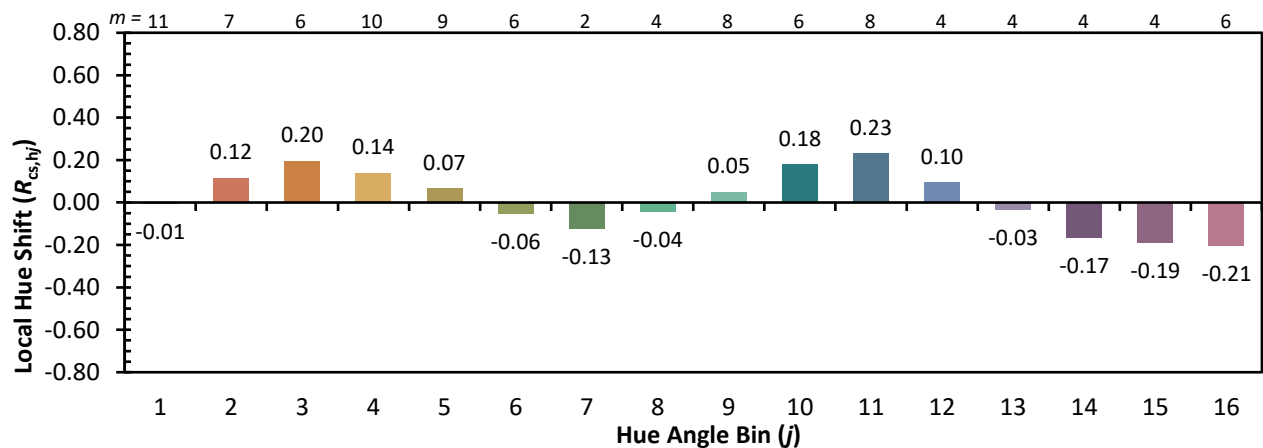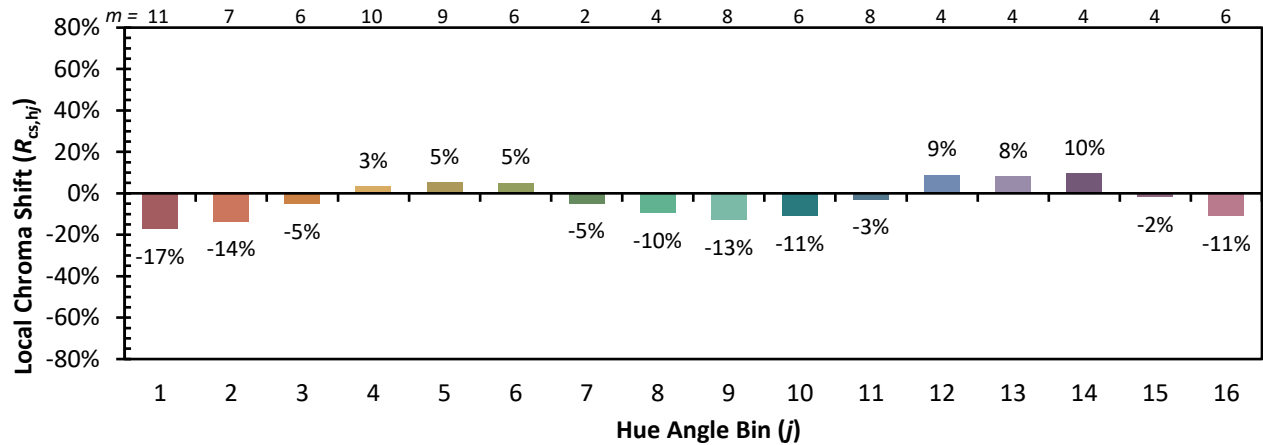

REPORT NUMBER: SP1-2307-100-1

TM-30-18

Measure Comparisons



(END OF REPORT)