

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P830393

Luminaire Tested: **OHBL-36SE-MCL-UNV-L740-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P830393
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-36SE-MCL-UNV-L740-CD
Description: 36000 LUMEN OHBL SE LED LUMINAIRE WITH 70CRI, 4000K LEDS AND MEDIUM CLEAR LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 35902.0 lumens
Efficiency: N/A
Efficacy: 170.2 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.8' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 211
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P830393

CATALOG NUMBER: OHBL-36SE-MCL-UNV-L740-CD

Luminous Intensity Polar Plot

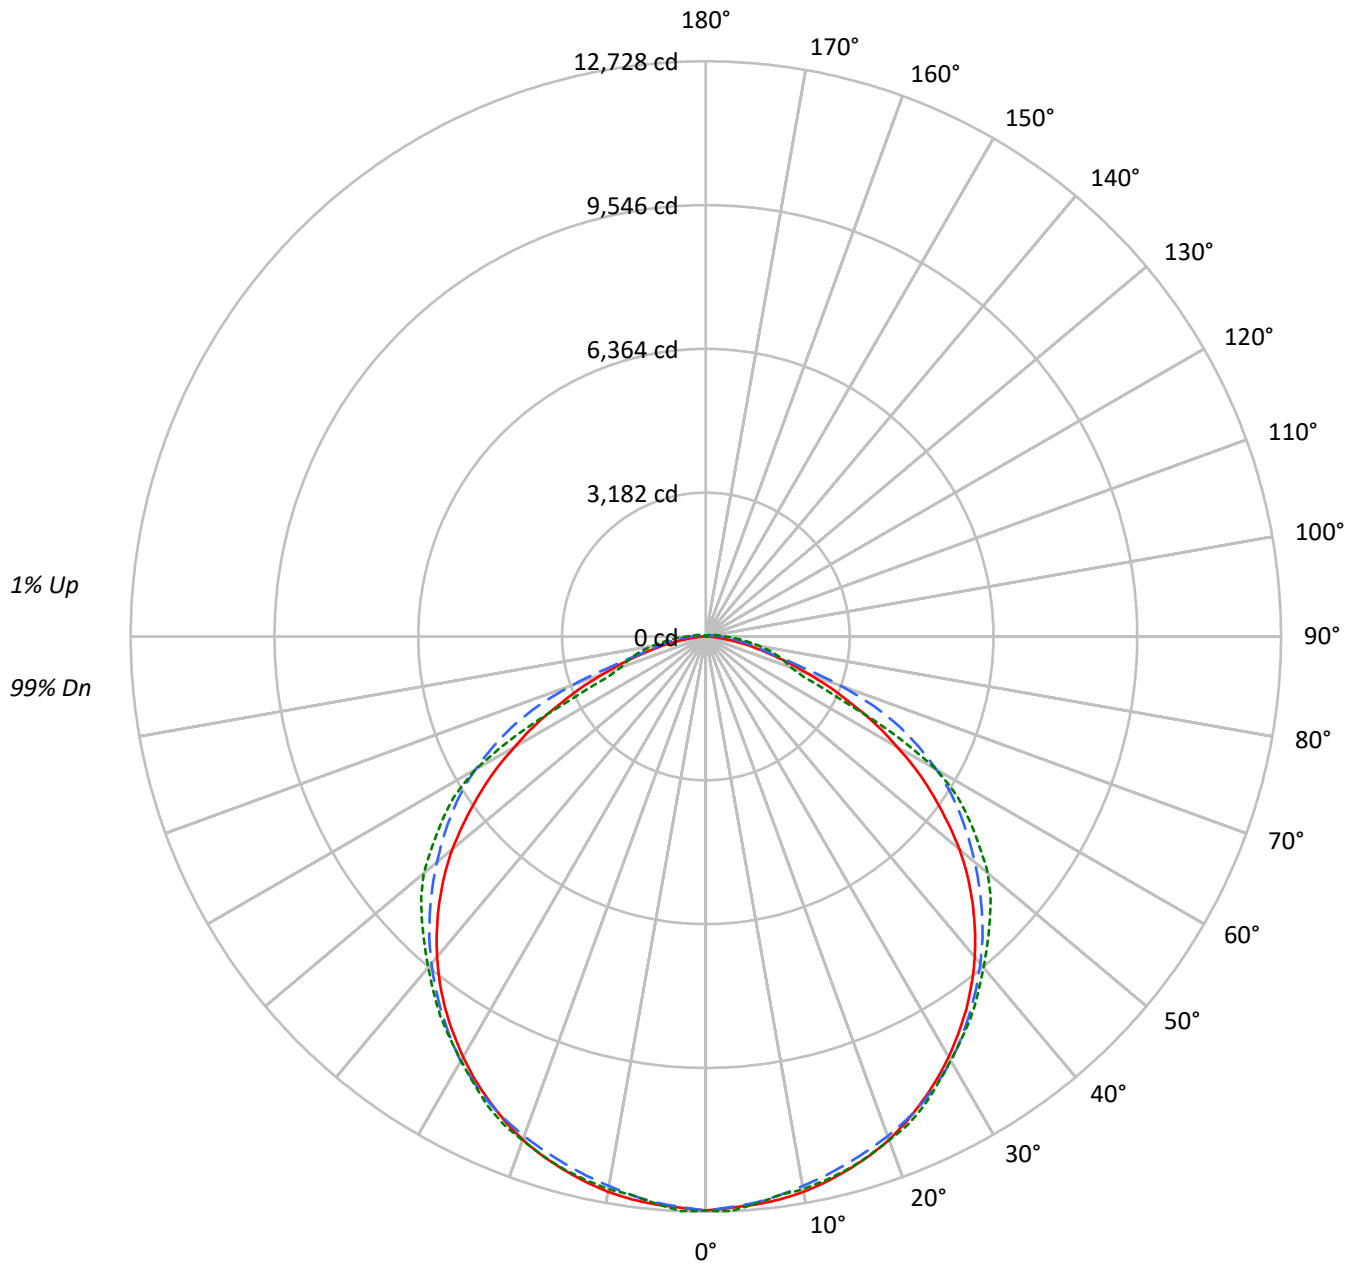



TEST NUMBER: P830393

CATALOG NUMBER: OHBL-36SE-MCL-UNV-L740-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20					20					20					20					20
RC	80					70					50					30					10
RW	70	50	30	10		70	50	30	10		50	30	10		50	30	10		50	30	10
RCR																					
0	119	119	119	119		116	116	116	116		110	110	110		106	106	106		101	101	101
1	109	104	100	96		106	102	98	95		97	94	91		93	91	88		90	87	86
2	99	91	84	79		96	89	83	78		85	80	76		82	78	74		79	75	72
3	91	80	72	66		88	79	71	65		75	69	64		72	67	63		70	65	61
4	83	71	62	56		81	70	62	55		67	60	54		65	59	54		62	57	53
5	76	64	55	48		74	62	54	48		60	53	47		58	52	46		56	50	46
6	70	57	48	42		68	56	48	42		54	47	41		52	46	41		51	45	40
7	65	52	43	37		63	51	43	37		49	42	36		48	41	36		46	40	36
8	61	47	39	33		59	46	38	33		45	38	33		44	37	32		42	36	32
9	57	43	35	30		55	43	35	29		41	34	29		40	34	29		39	33	29
10	53	40	32	27		52	39	32	27		38	31	27		37	31	26		36	30	26

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	20088	20088	20088
5°	19957	19796	19838
10°	19884	19497	19618
15°	19757	19272	19486
20°	19631	19131	19314
25°	19394	18989	19143
30°	19137	18765	18781
35°	18829	18409	18581
40°	18428	18041	18309
45°	17873	17616	18189
50°	17121	17132	18044
55°	15926	16655	17371
60°	14362	15958	16060
65°	12320	14665	10178
70°	9923	11448	7379
75°	7440	6796	7489
80°	5179	5651	7150
85°	2948	5178	6703



TEST NUMBER: P830393

CATALOG NUMBER: OHBL-36SE-MCL-UNV-L740-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1197.7	3.3
10°-20°	3434.4	9.6
20°-30°	5245.5	14.6
30°-40°	6364.5	17.7
40°-50°	6670.6	18.6
50°-60°	6044.6	16.8
60°-70°	4052.7	11.3
70°-80°	1819.8	5.1
80°-90°	660.4	1.8
90°-100°	198.8	0.6
100°-110°	93.8	0.3
110°-120°	47.0	0.1
120°-130°	25.9	0.1
130°-140°	17.8	0.0
140°-150°	12.0	0.0
150°-160°	8.9	0.0
160°-170°	5.7	0.0
170°-180°	1.8	0.0
0°-30°	9877.6	27.5
0°-40°	16242.1	45.2
0°-60°	28957.3	80.7
0°-90°	35490.2	98.9
90°-120°	339.6	0.9
90°-150°	395.3	1.1
90°-180°	412.0	1.1
0°-180°	35902.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	12702	12702	12702	12702	12702	
5°	12620	12664	12575	12614	12598	###
15°	12210	12162	12076	12182	12197	3447
25°	11343	11294	11372	11477	11444	5229
35°	10054	10078	10180	10289	10248	6284
45°	8344	8480	8638	8858	8886	6428
55°	6140	6436	6874	7150	7134	5481
65°	3604	4167	4731	3993	3260	3590
75°	1418	2057	1513	1548	1649	1550
85°	244	468	601	726	760	298
90°	2	156	310	389	408	15
95°	2	97	213	259	266	2
105°	7	42	105	127	132	8
115°	15	22	53	68	72	14
125°	13	15	33	39	40	13
135°	16	18	20	29	31	13
145°	16	18	18	20	22	11
155°	18	20	20	20	18	9
165°	20	20	20	20	20	6
175°	20	20	18	16	16	2
180°	18	18	18	18	18	



TEST NUMBER: P830393

CATALOG NUMBER: OHBL-36SE-MCL-UNV-L740-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	12702.2	12702.2	12702.2	12702.2	12702.2
2.5°	12650.7	12704.0	12637.9	12709.5	12727.9
5°	12619.5	12663.6	12575.4	12614.0	12597.5
7.5°	12562.6	12577.3	12472.6	12503.8	12470.7
10°	12478.1	12470.7	12347.7	12408.3	12415.6
12.5°	12353.2	12331.2	12221.0	12312.8	12314.6
15°	12209.9	12162.2	12075.9	12182.4	12197.1
17.5°	12044.6	11982.2	11925.3	12063.0	12041.0
20°	11851.8	11778.3	11767.3	11917.9	11862.8
22.5°	11613.0	11556.1	11581.8	11725.1	11690.2
25°	11343.0	11293.5	11372.4	11477.1	11444.1
27.5°	11058.4	11029.0	11119.0	11199.8	11135.5
30°	10746.1	10729.6	10849.0	10915.1	10834.3
32.5°	10406.4	10411.9	10525.7	10615.7	10540.4
35°	10053.7	10077.6	10180.5	10288.8	10248.4
37.5°	9666.2	9719.5	9822.3	9945.4	9903.1
40°	9256.6	9333.8	9447.6	9596.4	9557.8
42.5°	8814.0	8911.3	9058.3	9223.6	9219.9
45°	8343.8	8479.7	8637.7	8858.1	8885.6
47.5°	7855.3	8007.7	8207.9	8501.8	8544.0
50°	7324.5	7515.5	7765.3	8117.9	8143.6
52.5°	6733.1	6993.9	7324.5	7662.4	7631.2
55°	6139.9	6435.6	6874.5	7150.0	7133.5
57.5°	5548.5	5880.9	6413.5	6610.0	6608.2
60°	4887.3	5307.9	5890.1	6038.9	5891.9
62.5°	4275.7	4727.5	5331.7	5223.4	4720.1
65°	3603.5	4167.3	4731.2	3992.8	3260.0
67.5°	3006.6	3594.3	4018.6	2734.7	2341.7
70°	2406.0	3054.3	3133.3	2029.5	2001.9
72.5°	1873.4	2563.9	2161.7	1737.5	1825.6
75°	1417.9	2057.0	1513.4	1548.3	1649.3
77.5°	1034.0	1579.5	1177.3	1357.3	1439.9
80°	710.8	1118.5	960.6	1140.5	1197.5
82.5°	446.3	738.3	769.5	918.3	977.1
85°	244.3	468.3	600.6	725.5	760.4
87.5°	101.0	282.8	459.2	560.2	589.6
90°	1.8	156.1	310.4	389.4	407.7
92.5°	1.8	119.4	253.5	314.1	326.9
95°	1.8	97.3	213.0	259.0	266.3
97.5°	3.7	77.1	178.2	214.9	222.2
100°	5.5	64.3	148.8	180.0	185.5
102.5°	7.3	51.4	124.9	150.6	156.1
105°	7.3	42.2	104.7	126.7	132.2



TEST NUMBER: P830393

CATALOG NUMBER: OHBL-36SE-MCL-UNV-L740-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	12.9	25.7	62.4	79.0	82.6
115°	14.7	22.0	53.3	68.0	71.6
117.5°	14.7	18.4	45.9	56.9	60.6
120°	14.7	16.5	40.4	49.6	51.4
122.5°	14.7	14.7	34.9	44.1	45.9
125°	12.9	14.7	33.1	38.6	40.4
127.5°	14.7	14.7	29.4	34.9	36.7
130°	14.7	16.5	25.7	33.1	33.1
132.5°	16.5	18.4	23.9	31.2	31.2
135°	16.5	18.4	20.2	29.4	31.2
137.5°	18.4	18.4	18.4	27.5	29.4
140°	18.4	18.4	16.5	23.9	25.7
142.5°	16.5	18.4	16.5	22.0	23.9
145°	16.5	18.4	18.4	20.2	22.0
147.5°	18.4	18.4	18.4	18.4	20.2
150°	18.4	18.4	18.4	18.4	18.4
152.5°	18.4	18.4	18.4	18.4	18.4
155°	18.4	20.2	20.2	20.2	18.4
157.5°	18.4	20.2	20.2	20.2	20.2
160°	18.4	20.2	20.2	20.2	20.2
162.5°	20.2	20.2	20.2	20.2	20.2
165°	20.2	20.2	20.2	20.2	20.2
167.5°	20.2	22.0	20.2	20.2	20.2
170°	20.2	20.2	20.2	18.4	18.4
172.5°	20.2	20.2	20.2	18.4	18.4
175°	20.2	20.2	18.4	16.5	16.5
177.5°	22.0	20.2	18.4	16.5	14.7
180°	18.4	18.4	18.4	18.4	18.4



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	9.2	34.9	90.0	108.4	112.0
110°	11.0	29.4	75.3	91.8	95.5



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-3

Test Date: 08/03/2023

Luminaire Tested: OHB-15SE-N-UNV-L740-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L740-CD.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-3
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L740-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 70CRI, 4000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	4013	CRI (Ra):	71.9		
CIE u':	0.2243	R1:	67.7	R9:	-37.4
CIE v':	0.5023	R2:	81.2	R10:	55.0
Duv:	0.0009	R3:	90.6	R11:	61.2
CIE x:	0.3803	R4:	67.3	R12:	42.7
CIE y:	0.3785	R5:	67.5	R13:	70.6
CIE z:	0.2412	R6:	72.5	R14:	94.8
Peak Wavelength (nm):	454	R7:	80.1		
Dominant Wavelength (nm):	578	R8:	48.1		
Purity:	27.9				
Rf:	74.7				
Rg:	90.6				

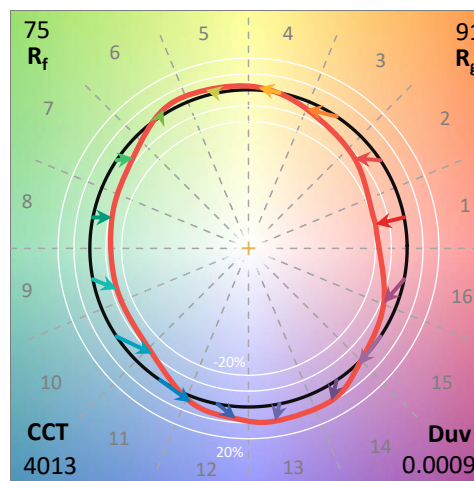

Test Conditions


Stabilization Time: 24M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/58%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-3


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-3

CIE 1931 Chromaticity Diagram

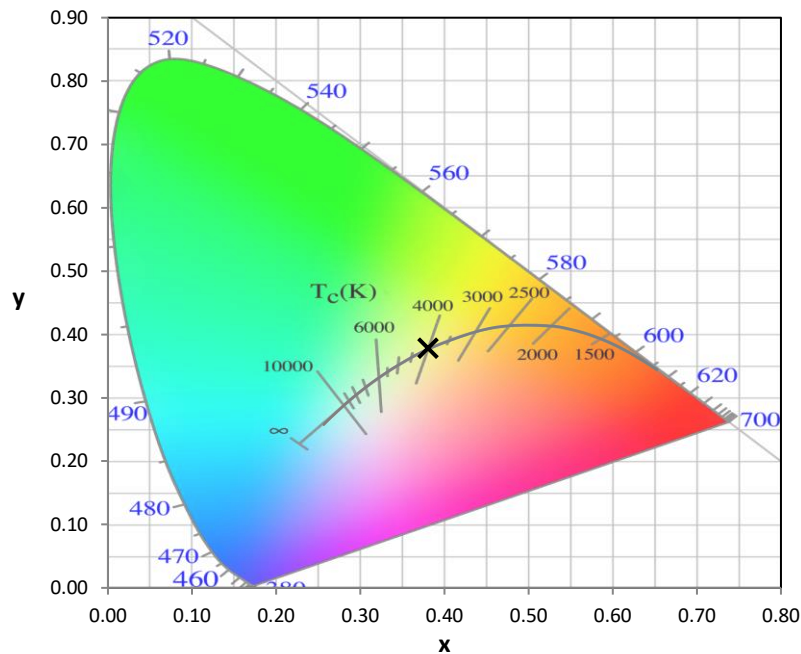


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

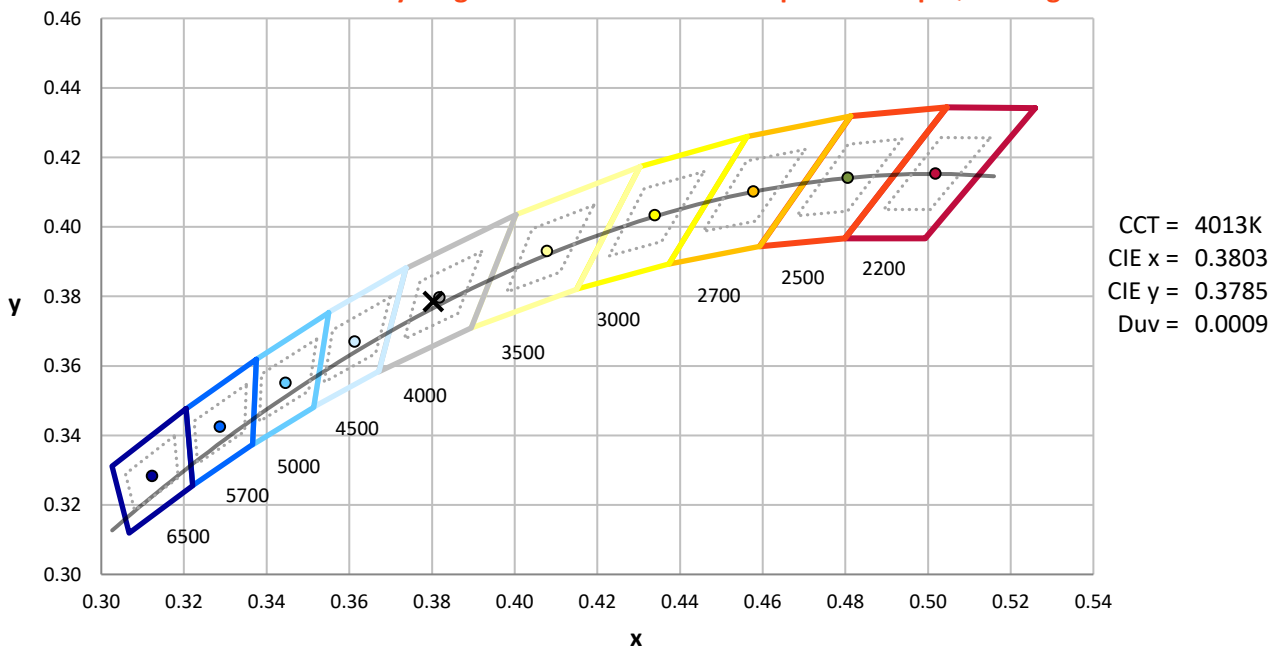

Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-3

Photopic Flux vs. Wavelength

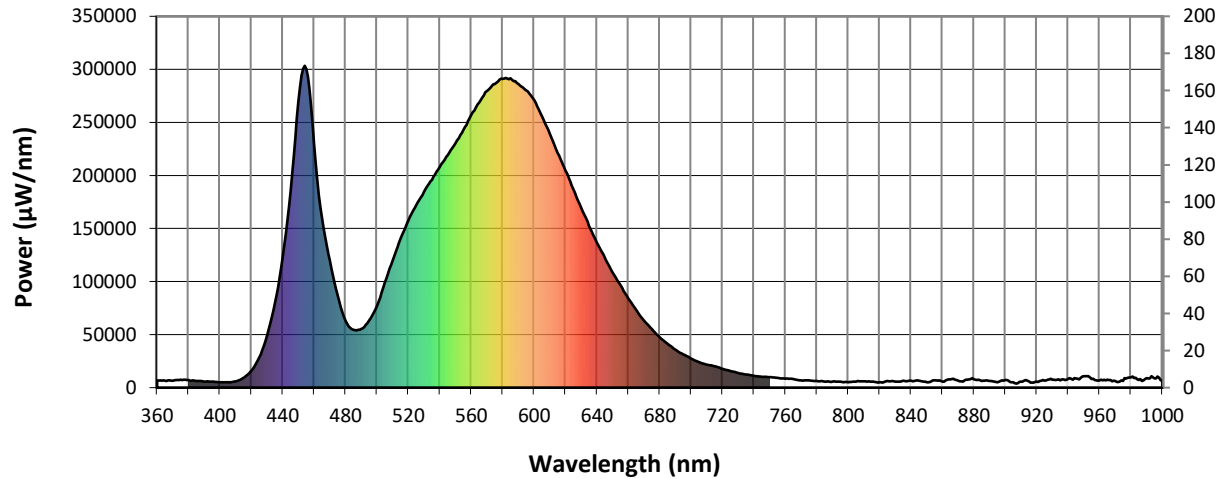


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3

Scotopic Flux vs. Wavelength

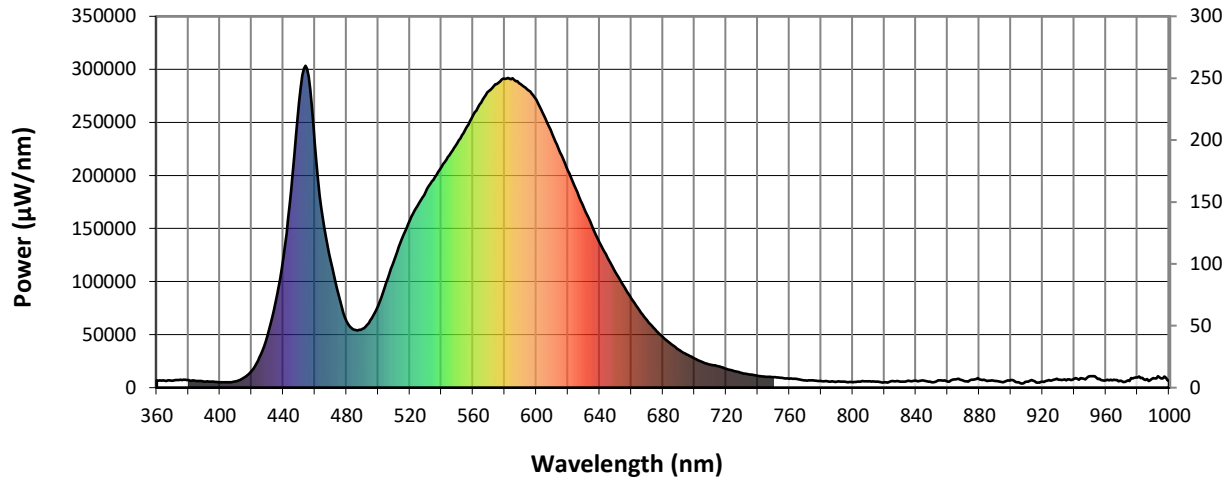


Scotopic Lumens: 24452.5

S/P: 1.56

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3

Melanopic Flux vs. Wavelength

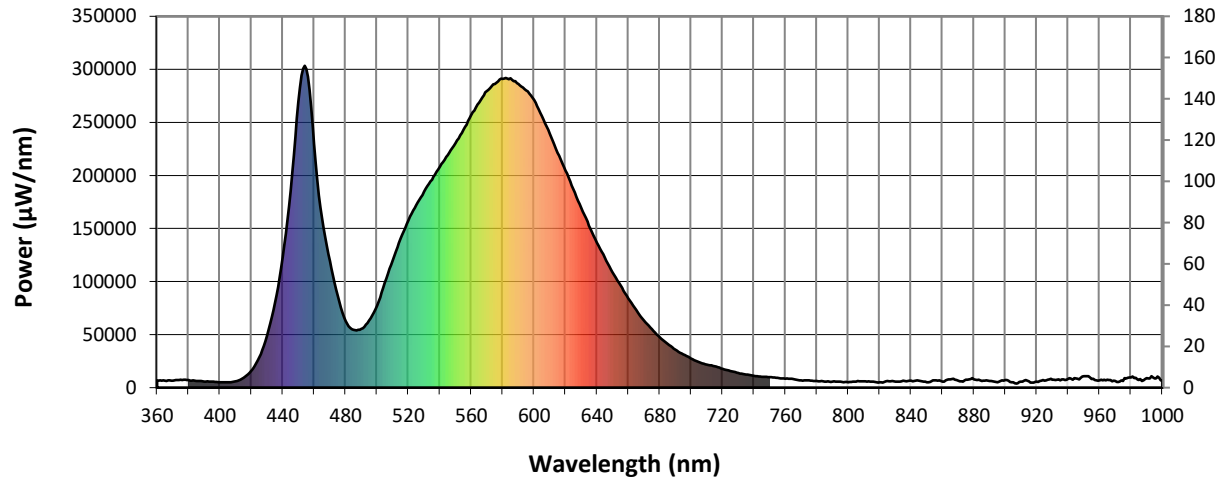

Melanopic Lumens: 9678.5

M/P: 0.62


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3





TM-30-18

Summary

$R_f = 74.7$
 $R_g = 90.6$
 CIE $R_a = 71.9$
 $R_g = -37.4$

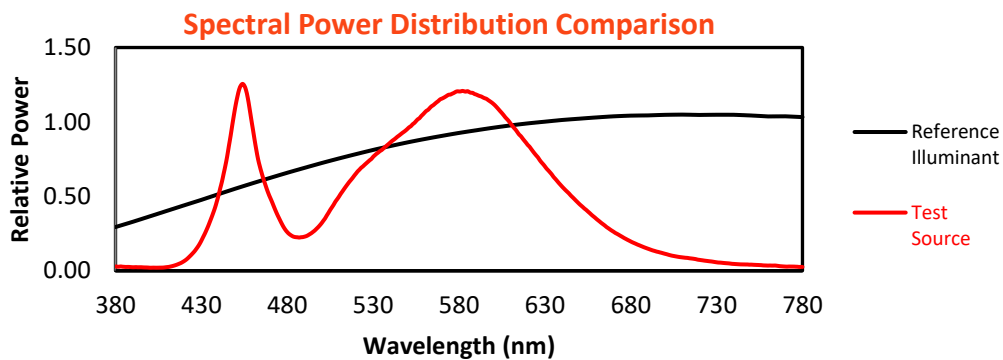

Color Vector Graphics

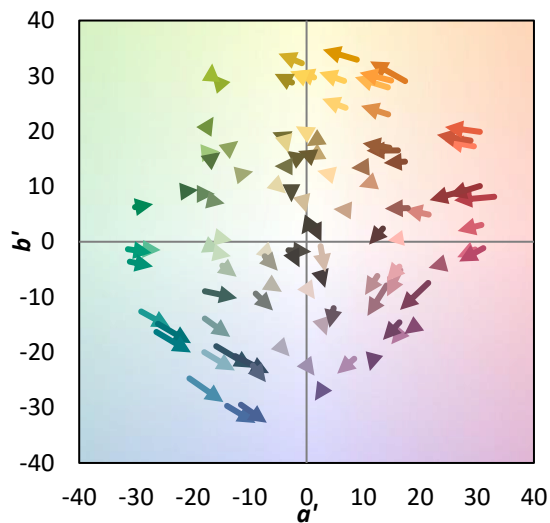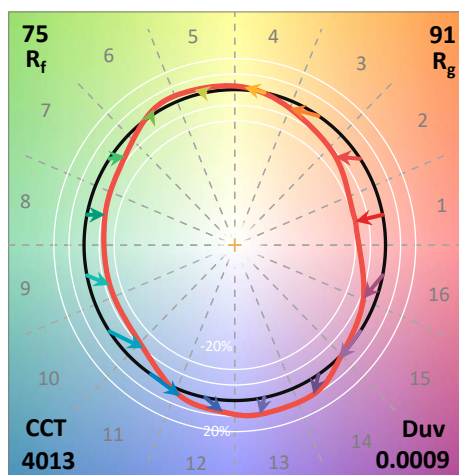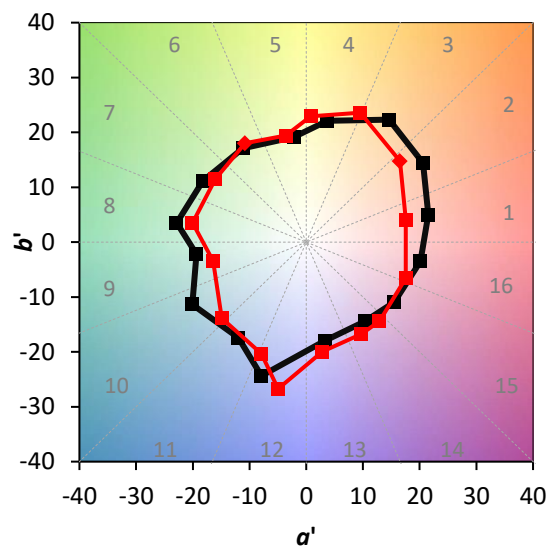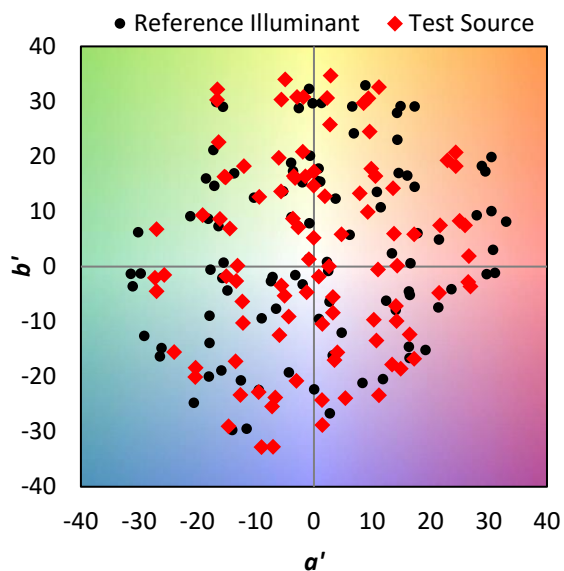


REPORT NUMBER: SP1-2307-100-3

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 85	CES26 = 68	CES51 = 85	CES76 = 58
CES02 = 61	CES27 = 90	CES52 = 85	CES77 = 72
CES03 = 30	CES28 = 84	CES53 = 77	CES78 = 61
CES04 = 70	CES29 = 77	CES54 = 83	CES79 = 85
CES05 = 47	CES30 = 93	CES55 = 80	CES80 = 83
CES06 = 50	CES31 = 80	CES56 = 73	CES81 = 78
CES07 = 39	CES32 = 70	CES57 = 71	CES82 = 93
CES08 = 39	CES33 = 90	CES58 = 71	CES83 = 94
CES09 = 29	CES34 = 76	CES59 = 84	CES84 = 85
CES10 = 74	CES35 = 87	CES60 = 85	CES85 = 75
CES11 = 57	CES36 = 82	CES61 = 78	CES86 = 70
CES12 = 63	CES37 = 83	CES62 = 76	CES87 = 77
CES13 = 42	CES38 = 91	CES63 = 73	CES88 = 81
CES14 = 74	CES39 = 98	CES64 = 59	CES89 = 70
CES15 = 71	CES40 = 95	CES65 = 61	CES90 = 82
CES16 = 46	CES41 = 97	CES66 = 53	CES91 = 68
CES17 = 49	CES42 = 87	CES67 = 50	CES92 = 55
CES18 = 56	CES43 = 84	CES68 = 62	CES93 = 72
CES19 = 72	CES44 = 99	CES69 = 70	CES94 = 51
CES20 = 64	CES45 = 89	CES70 = 57	CES95 = 63
CES21 = 86	CES46 = 86	CES71 = 49	CES96 = 76
CES22 = 78	CES47 = 92	CES72 = 83	CES97 = 84
CES23 = 92	CES48 = 78	CES73 = 50	CES98 = 76
CES24 = 91	CES49 = 83	CES74 = 89	CES99 = 63
CES25 = 72	CES50 = 86	CES75 = 55	

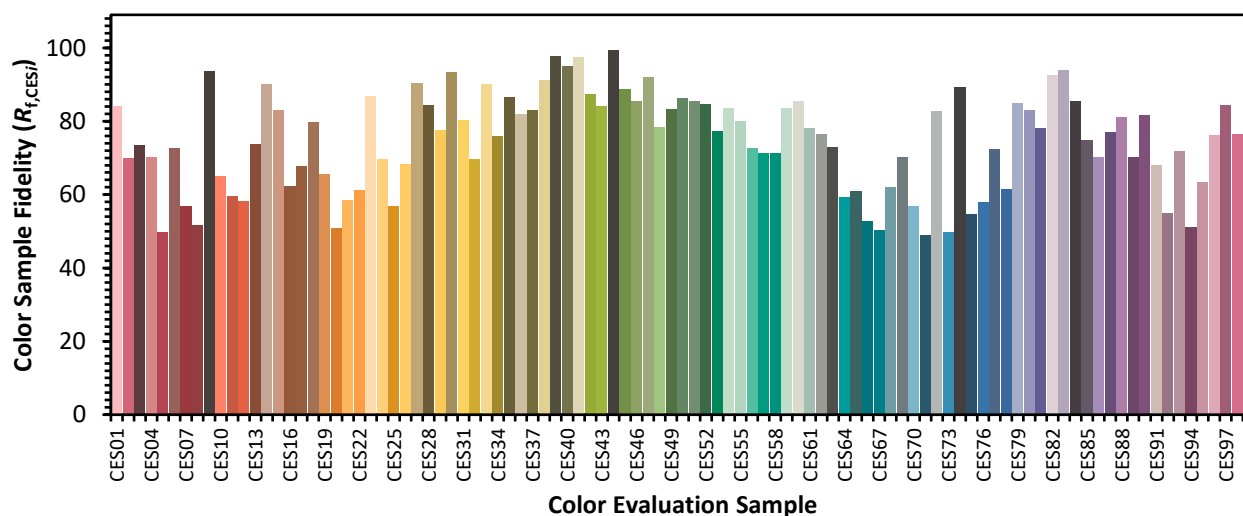

REPORT NUMBER: SP1-2307-100-3

TM-30-18



Color Rendition by Hue-Angle Bin

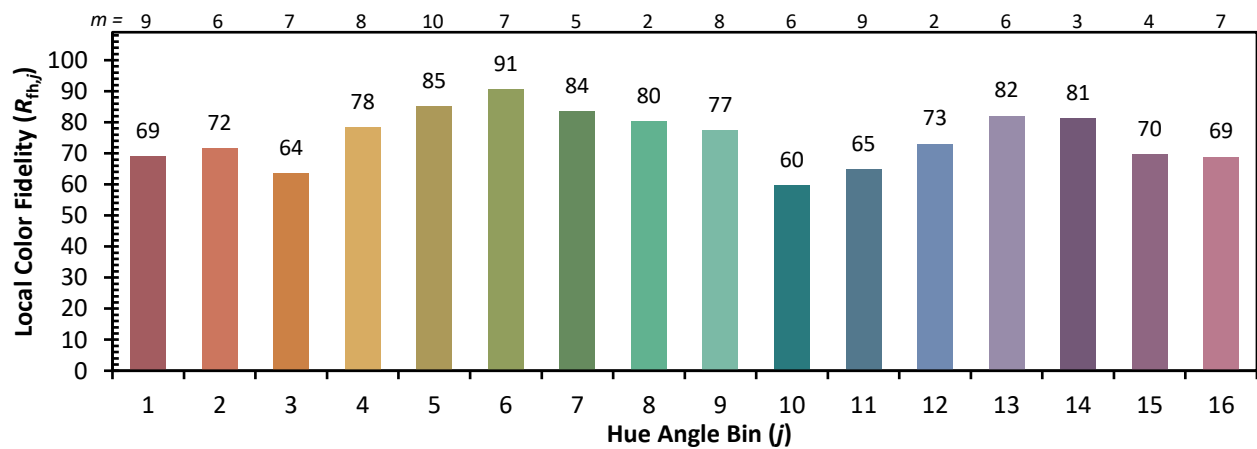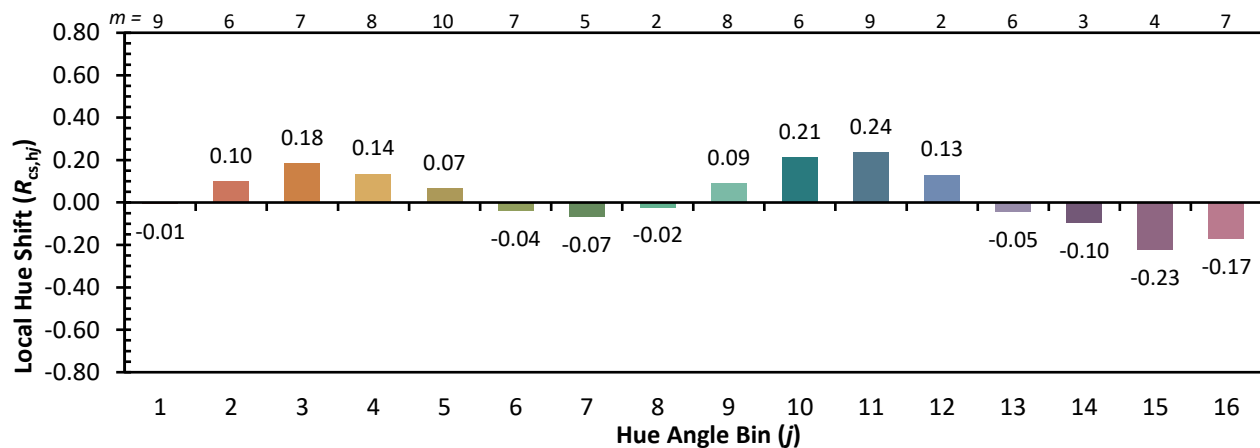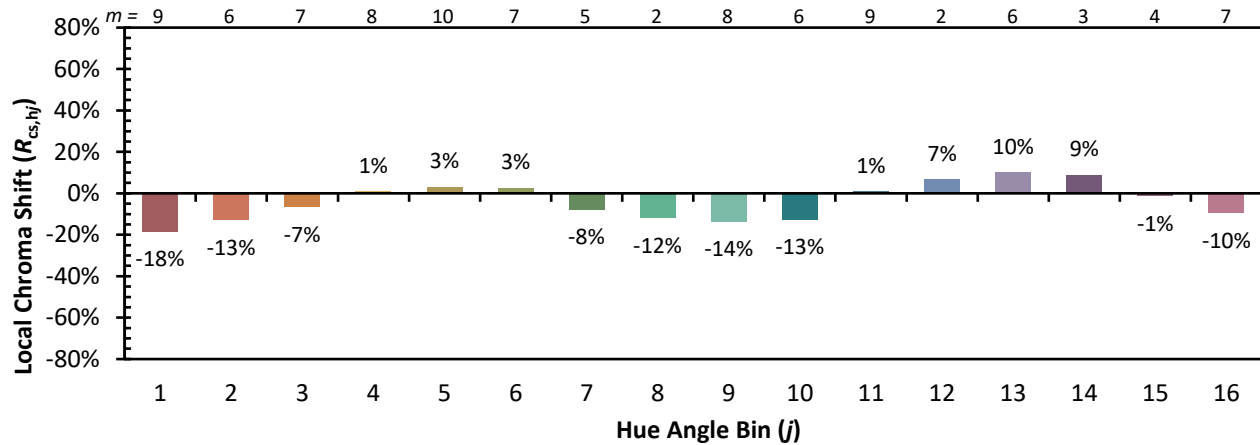

REPORT NUMBER: SP1-2307-100-3

TM-30-18

Measure Comparisons

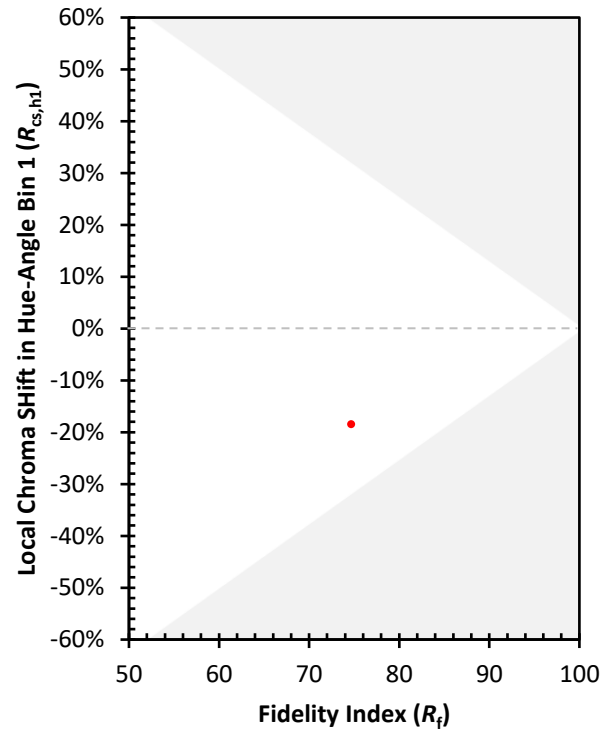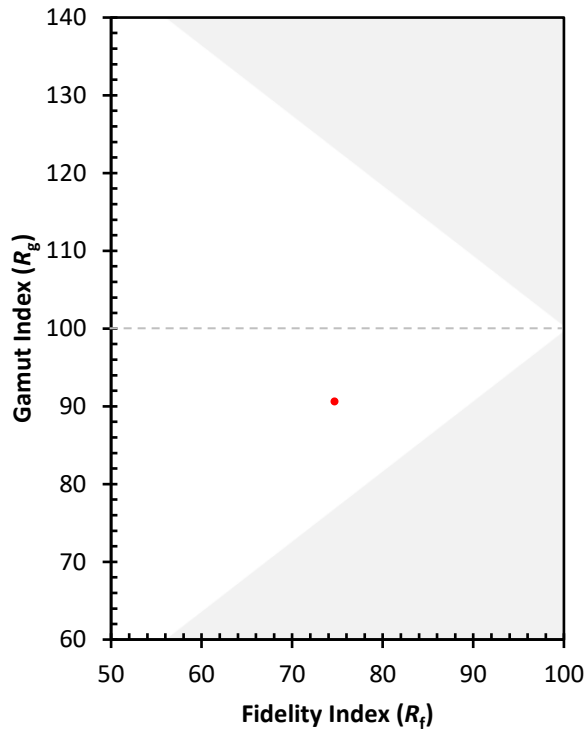

(END OF REPORT)