

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P830680

Luminaire Tested: **OHBL-60SE-MCL-UNV-L735-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P830680
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2103-200-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-60SE-MCL-UNV-L735-CD
Description: 60000 LUMEN OHBL SE LED LUMINAIRE WITH 70CRI, 3500K LEDS AND MEDIUM CLEAR LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 60277.0 lumens
Efficiency: N/A
Efficacy: 166.5 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.27 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 1.67' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 362
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P830680

CATALOG NUMBER: OHBL-60SE-MCL-UNV-L735-CD

Luminous Intensity Polar Plot

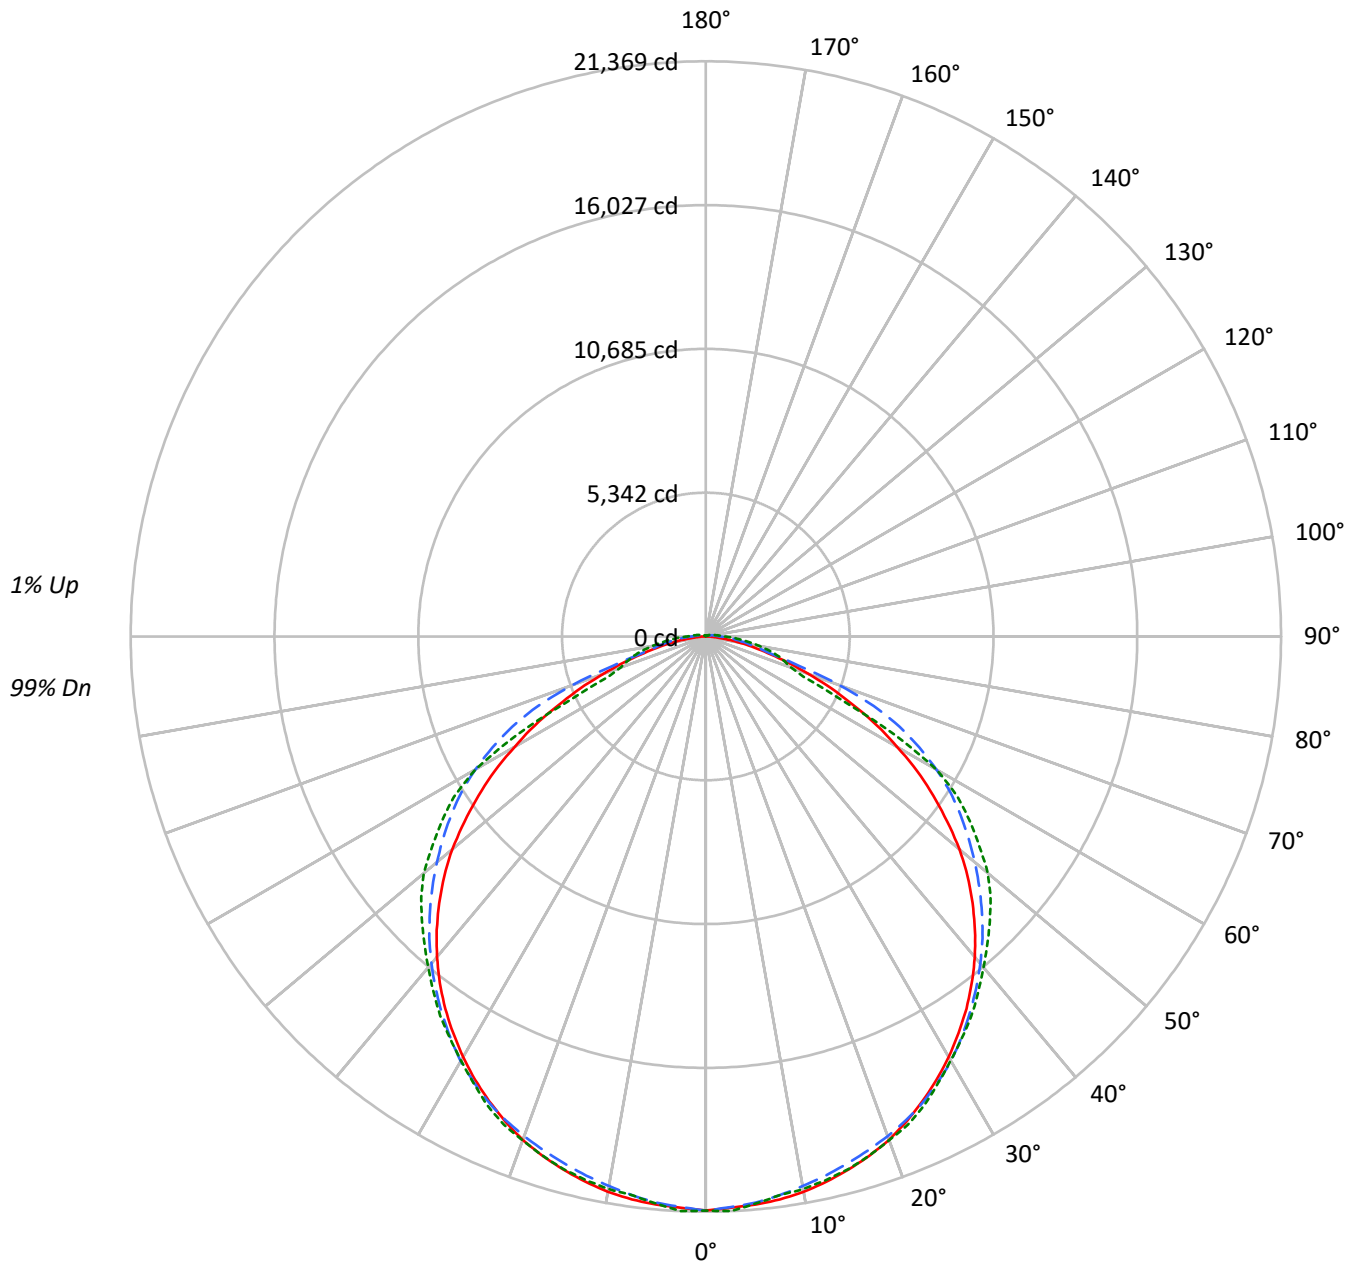



TEST NUMBER: P830680

CATALOG NUMBER: OHBL-60SE-MCL-UNV-L735-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	119	119	119	119	116	116	116	116	110	110	110	106	106	106	101	101	101
1	109	104	100	96	106	102	98	95	97	94	91	93	91	88	90	87	86
2	99	91	84	79	96	89	83	78	85	80	76	82	78	74	79	75	72
3	91	80	72	66	88	79	71	65	75	69	64	72	67	63	70	65	61
4	83	71	62	56	81	70	62	55	67	60	54	65	59	54	62	57	53
5	76	64	55	48	74	62	54	48	60	53	47	58	52	46	56	50	46
6	70	57	48	42	68	56	48	42	54	47	41	52	46	41	51	45	40
7	65	52	43	37	63	51	43	37	49	42	36	48	41	36	46	40	36
8	61	47	39	33	59	46	38	33	45	38	33	44	37	32	42	36	32
9	57	43	35	30	55	43	35	29	41	34	29	40	34	29	39	33	29
10	53	40	32	27	52	39	32	27	38	31	27	37	31	26	36	30	26

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	36425	36425	36425
5°	36186	35879	35948
10°	36054	35320	35526
15°	35825	34898	35265
20°	35596	34625	34929
25°	35167	34351	34596
30°	34700	33927	33916
35°	34141	33265	33528
40°	33415	32580	33008
45°	32409	31790	32758
50°	31045	30891	32461
55°	28878	30003	31206
60°	26041	28713	28802
65°	22339	26345	18214
70°	17993	20524	13167
75°	13490	12148	13307
80°	9390	10053	12618
85°	5344	9128	11673



TEST NUMBER: P830680

CATALOG NUMBER: OHBL-60SE-MCL-UNV-L735-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	2010.9	3.3
10°-20°	5766.2	9.6
20°-30°	8806.8	14.6
30°-40°	10685.6	17.7
40°-50°	11199.5	18.6
50°-60°	10148.5	16.8
60°-70°	6804.1	11.3
70°-80°	3055.4	5.1
80°-90°	1108.7	1.8
90°-100°	333.7	0.6
100°-110°	157.5	0.3
110°-120°	78.9	0.1
120°-130°	43.6	0.1
130°-140°	29.9	0.0
140°-150°	20.1	0.0
150°-160°	14.9	0.0
160°-170°	9.6	0.0
170°-180°	3.1	0.0
0°-30°	16583.8	27.5
0°-40°	27269.4	45.2
0°-60°	48617.4	80.7
0°-90°	59585.6	98.9
90°-120°	570.1	0.9
90°-150°	663.7	1.1
90°-180°	691.0	1.1
0°-180°	60277.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	21326	21326	21326	21326	21326	
5°	21187	21261	21113	21178	21150	###
15°	20500	20420	20275	20453	20478	5788
25°	19044	18961	19094	19269	19214	8778
35°	16880	16920	17092	17274	17206	10550
45°	14009	14237	14502	14872	14918	10792
55°	10308	10805	11542	12004	11977	9202
65°	6050	6997	7943	6704	5473	6028
75°	2380	3454	2541	2600	2769	2602
85°	410	786	1008	1218	1277	500
90°	3	262	521	654	685	25
95°	3	163	358	435	447	4
105°	12	71	176	213	222	14
115°	25	37	89	114	120	23
125°	22	25	56	65	68	21
135°	28	31	34	49	52	22
145°	28	31	31	34	37	18
155°	31	34	34	34	31	14
165°	34	34	34	34	34	9
175°	34	34	31	28	28	3
180°	31	31	31	31	31	



TEST NUMBER: P830680

CATALOG NUMBER: OHBL-60SE-MCL-UNV-L735-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	21326.1	21326.1	21326.1	21326.1	21326.1
2.5°	21239.7	21329.1	21218.1	21338.4	21369.2
5°	21187.3	21261.3	21113.3	21178.0	21150.3
7.5°	21091.7	21116.4	20940.6	20993.0	20937.5
10°	20949.9	20937.5	20730.9	20832.7	20845.0
12.5°	20740.2	20703.2	20518.2	20672.3	20675.4
15°	20499.7	20419.5	20274.6	20453.4	20478.1
17.5°	20222.1	20117.3	20021.7	20253.0	20216.0
20°	19898.4	19775.0	19756.5	20009.4	19916.9
22.5°	19497.5	19401.9	19445.1	19685.6	19627.0
25°	19044.2	18960.9	19093.5	19269.3	19213.8
27.5°	18566.2	18516.9	18668.0	18803.7	18695.8
30°	18042.0	18014.3	18214.7	18325.7	18190.1
32.5°	17471.6	17480.8	17672.0	17823.1	17696.7
35°	16879.5	16919.6	17092.3	17274.2	17206.4
37.5°	16228.9	16318.3	16491.0	16697.6	16626.7
40°	15541.3	15670.8	15861.9	16111.7	16047.0
42.5°	14798.1	14961.5	15208.2	15485.7	15479.6
45°	14008.7	14236.9	14502.1	14872.1	14918.4
47.5°	13188.5	13444.4	13780.5	14273.9	14344.8
50°	12297.3	12618.0	13037.4	13629.4	13672.6
52.5°	11304.4	11742.3	12297.3	12864.7	12812.3
55°	10308.4	10804.9	11541.8	12004.4	11976.6
57.5°	9315.5	9873.6	10767.9	11097.8	11094.7
60°	8205.4	8911.6	9889.0	10138.8	9892.1
62.5°	7178.6	7937.1	8951.6	8769.7	7924.8
65°	6050.0	6996.6	7943.3	6703.7	5473.4
67.5°	5047.8	6034.6	6746.9	4591.5	3931.6
70°	4039.5	5128.0	5260.6	3407.4	3361.1
72.5°	3145.3	4304.7	3629.4	2917.1	3065.1
75°	2380.5	3453.6	2540.9	2599.5	2769.1
77.5°	1736.1	2651.9	1976.6	2278.8	2417.5
80°	1193.3	1877.9	1612.7	1914.9	2010.5
82.5°	749.3	1239.6	1292.0	1541.8	1640.5
85°	410.1	786.3	1008.3	1218.0	1276.6
87.5°	169.6	474.9	770.9	940.5	989.8
90°	3.1	262.1	521.1	653.7	684.6
92.5°	3.1	200.4	425.5	527.3	548.9
95°	3.1	163.4	357.7	434.8	447.1
97.5°	6.2	129.5	299.1	360.8	373.1
100°	9.3	107.9	249.8	302.2	311.4
102.5°	12.3	86.3	209.7	252.9	262.1
105°	12.3	70.9	175.8	212.8	222.0



TEST NUMBER: P830680

CATALOG NUMBER: OHBL-60SE-MCL-UNV-L735-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	21.6	43.2	104.8	132.6	138.8
115°	24.7	37.0	89.4	114.1	120.3
117.5°	24.7	30.8	77.1	95.6	101.8
120°	24.7	27.8	67.8	83.3	86.3
122.5°	24.7	24.7	58.6	74.0	77.1
125°	21.6	24.7	55.5	64.8	67.8
127.5°	24.7	24.7	49.3	58.6	61.7
130°	24.7	27.8	43.2	55.5	55.5
132.5°	27.8	30.8	40.1	52.4	52.4
135°	27.8	30.8	33.9	49.3	52.4
137.5°	30.8	30.8	30.8	46.3	49.3
140°	30.8	30.8	27.8	40.1	43.2
142.5°	27.8	30.8	27.8	37.0	40.1
145°	27.8	30.8	30.8	33.9	37.0
147.5°	30.8	30.8	30.8	30.8	33.9
150°	30.8	30.8	30.8	30.8	30.8
152.5°	30.8	30.8	30.8	30.8	30.8
155°	30.8	33.9	33.9	33.9	30.8
157.5°	30.8	33.9	33.9	33.9	33.9
160°	30.8	33.9	33.9	33.9	33.9
162.5°	33.9	33.9	33.9	33.9	33.9
165°	33.9	33.9	33.9	33.9	33.9
167.5°	33.9	37.0	33.9	33.9	33.9
170°	33.9	33.9	33.9	30.8	30.8
172.5°	33.9	33.9	33.9	30.8	30.8
175°	33.9	33.9	30.8	27.8	27.8
177.5°	37.0	33.9	30.8	27.8	24.7
180°	30.8	30.8	30.8	30.8	30.8



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	15.4	58.6	151.1	181.9	188.1
110°	18.5	49.3	126.4	154.2	160.3



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-2

Test Date: 08/03/2023

Luminaire Tested: OHB-15SE-N-UNV-L735-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L735-CD.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L735-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 70CRI, 3500K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	3489	CRI (Ra):	73.0		
CIE u':	0.2362	R1:	69.4	R9:	-30.0
CIE v':	0.5107	R2:	82.9	R10:	59.3
Duv:	-0.0006	R3:	92.6	R11:	62.7
CIE x:	0.4052	R4:	68.4	R12:	47.6
CIE y:	0.3895	R5:	68.8	R13:	72.2
CIE z:	0.2053	R6:	75.3	R14:	95.9
Peak Wavelength (nm):	588	R7:	79.3		
Dominant Wavelength (nm):	581	R8:	47.6		
Purity:	38.7				
Rf:	75.9				
Rg:	92.2				

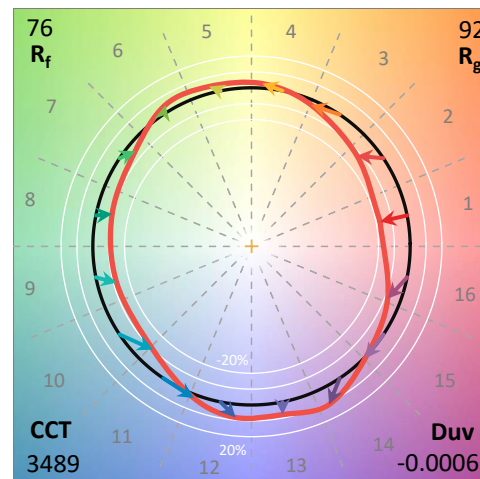



Test Conditions

Stabilization Time: 28M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/58%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023


REPORT NUMBER: SP1-2307-100-2

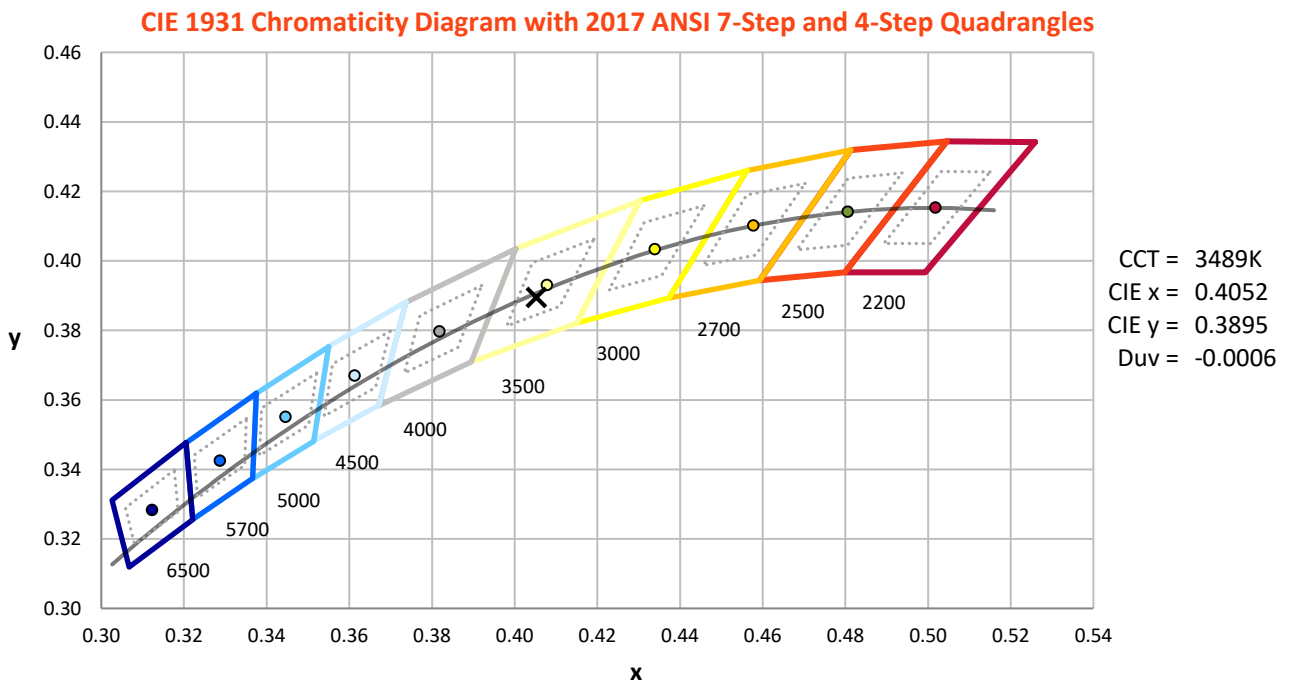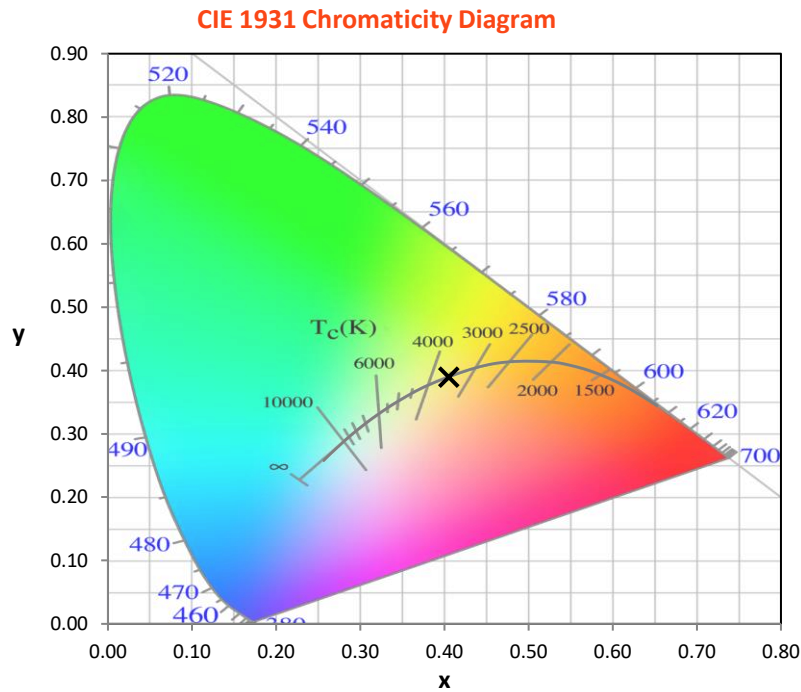

Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-2

Photopic Flux vs. Wavelength

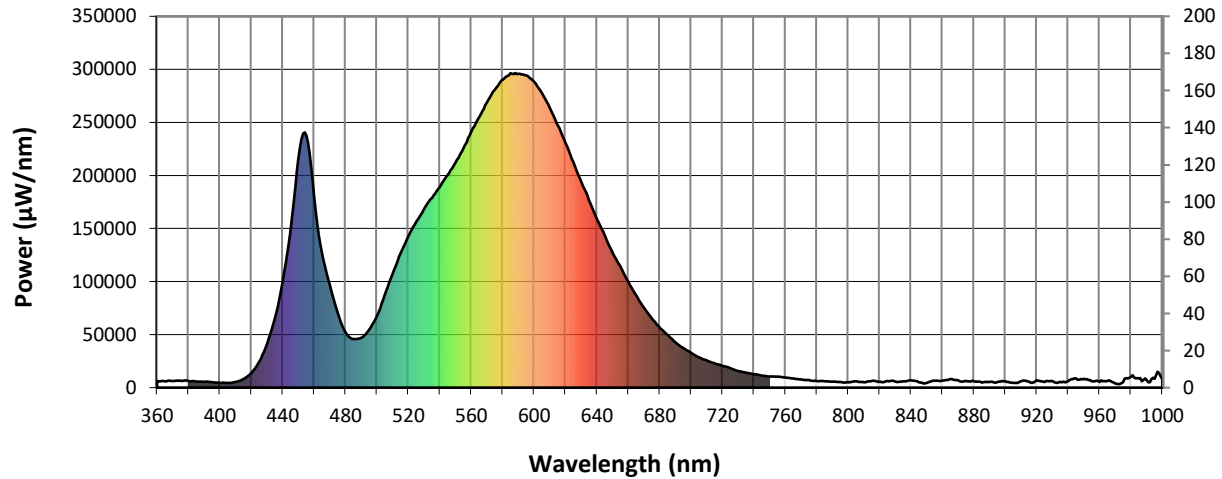


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6366	NR	490	47130	NR	620	230435	NR	750	10555	NR	880	5822	NR
365	5925	NR	495	54424	NR	625	212935	NR	755	10386	NR	885	4770	NR
370	6268	NR	500	67766	NR	630	194319	NR	760	9571	NR	890	5279	NR
375	6497	NR	505	87548	NR	635	176714	NR	765	8796	NR	895	5445	NR
380	6318	NR	510	107612	NR	640	159022	NR	770	7688	NR	900	5934	NR
385	5716	NR	515	126336	NR	645	143212	NR	775	7039	NR	905	4594	NR
390	5462	NR	520	142943	NR	650	127214	NR	780	6282	NR	910	5910	NR
395	5187	NR	525	156046	NR	655	113910	NR	785	5849	NR	915	5732	NR
400	4568	NR	530	168399	NR	660	99647	NR	790	5698	NR	920	6817	NR
405	4481	NR	535	178779	NR	665	86667	NR	795	5315	NR	925	5494	NR
410	5393	NR	540	189196	NR	670	75195	NR	800	5004	NR	930	6404	NR
415	8052	NR	545	200610	NR	675	65133	NR	805	5848	NR	935	5273	NR
420	13696	NR	550	212065	NR	680	56714	NR	810	5027	NR	940	6245	NR
425	24563	NR	555	225598	NR	685	49746	NR	815	6212	NR	945	8810	NR
430	41084	NR	560	241077	NR	690	42689	NR	820	5650	NR	950	8264	NR
435	65723	NR	565	254881	NR	695	37295	NR	825	6411	NR	955	5892	NR
440	99807	NR	570	268758	NR	700	32779	NR	830	5679	NR	960	5507	NR
445	149359	NR	575	280646	NR	705	28556	NR	835	5857	NR	965	6242	NR
450	215870	NR	580	290065	NR	710	25496	NR	840	6910	NR	970	3723	NR
455	237735	NR	585	296284	NR	715	22794	NR	845	5135	NR	975	4991	NR
460	180903	NR	590	295851	NR	720	20477	NR	850	4417	NR	980	10241	NR
465	126687	NR	595	294360	NR	725	18231	NR	855	6494	NR	985	8801	NR
470	96291	NR	600	288175	NR	730	15637	NR	860	6521	NR	990	7127	NR
475	70550	NR	605	277740	NR	735	14130	NR	865	8026	NR	995	8514	NR
480	51790	NR	610	263525	NR	740	12715	NR	870	6772	NR	1000	7777	NR
485	45800	NR	615	247580	NR	745	11403	NR	875	6383	NR			

REPORT NUMBER: SP1-2307-100-2

Scotopic Flux vs. Wavelength

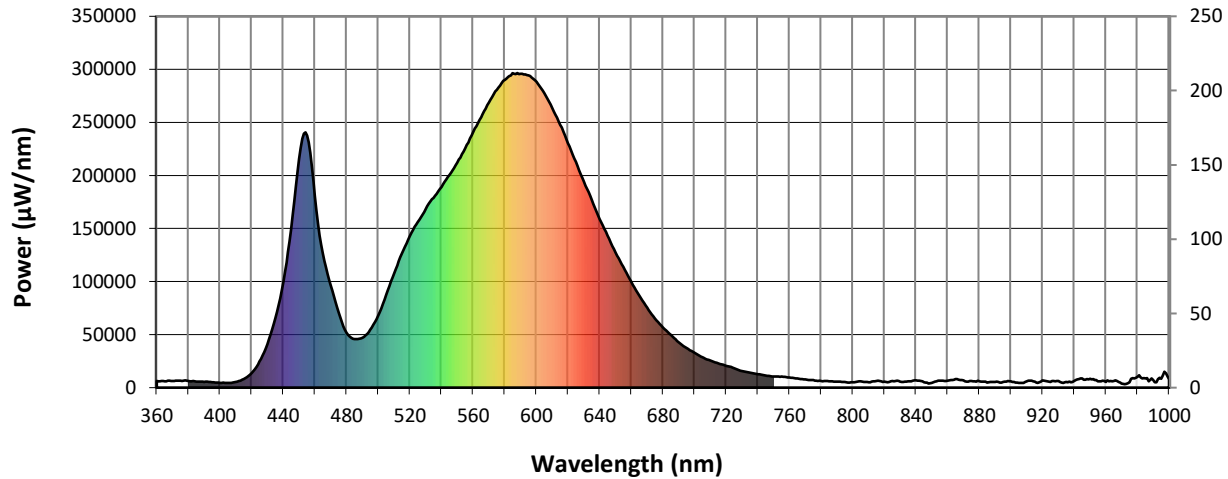


Scotopic Lumens: 21575.7

S/P: 1.41

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6366	NR	490	47130	NR	620	230435	NR	750	10555	NR	880	5822	NR
365	5925	NR	495	54424	NR	625	212935	NR	755	10386	NR	885	4770	NR
370	6268	NR	500	67766	NR	630	194319	NR	760	9571	NR	890	5279	NR
375	6497	NR	505	87548	NR	635	176714	NR	765	8796	NR	895	5445	NR
380	6318	NR	510	107612	NR	640	159022	NR	770	7688	NR	900	5934	NR
385	5716	NR	515	126336	NR	645	143212	NR	775	7039	NR	905	4594	NR
390	5462	NR	520	142943	NR	650	127214	NR	780	6282	NR	910	5910	NR
395	5187	NR	525	156046	NR	655	113910	NR	785	5849	NR	915	5732	NR
400	4568	NR	530	168399	NR	660	99647	NR	790	5698	NR	920	6817	NR
405	4481	NR	535	178779	NR	665	86667	NR	795	5315	NR	925	5494	NR
410	5393	NR	540	189196	NR	670	75195	NR	800	5004	NR	930	6404	NR
415	8052	NR	545	200610	NR	675	65133	NR	805	5848	NR	935	5273	NR
420	13696	NR	550	212065	NR	680	56714	NR	810	5027	NR	940	6245	NR
425	24563	NR	555	225598	NR	685	49746	NR	815	6212	NR	945	8810	NR
430	41084	NR	560	241077	NR	690	42689	NR	820	5650	NR	950	8264	NR
435	65723	NR	565	254881	NR	695	37295	NR	825	6411	NR	955	5892	NR
440	99807	NR	570	268758	NR	700	32779	NR	830	5679	NR	960	5507	NR
445	149359	NR	575	280646	NR	705	28556	NR	835	5857	NR	965	6242	NR
450	215870	NR	580	290065	NR	710	25496	NR	840	6910	NR	970	3723	NR
455	237735	NR	585	296284	NR	715	22794	NR	845	5135	NR	975	4991	NR
460	180903	NR	590	295851	NR	720	20477	NR	850	4417	NR	980	10241	NR
465	126687	NR	595	294360	NR	725	18231	NR	855	6494	NR	985	8801	NR
470	96291	NR	600	288175	NR	730	15637	NR	860	6521	NR	990	7127	NR
475	70550	NR	605	277740	NR	735	14130	NR	865	8026	NR	995	8514	NR
480	51790	NR	610	263525	NR	740	12715	NR	870	6772	NR	1000	7777	NR
485	45800	NR	615	247580	NR	745	11403	NR	875	6383	NR			

REPORT NUMBER: SP1-2307-100-2

Melanopic Flux vs. Wavelength

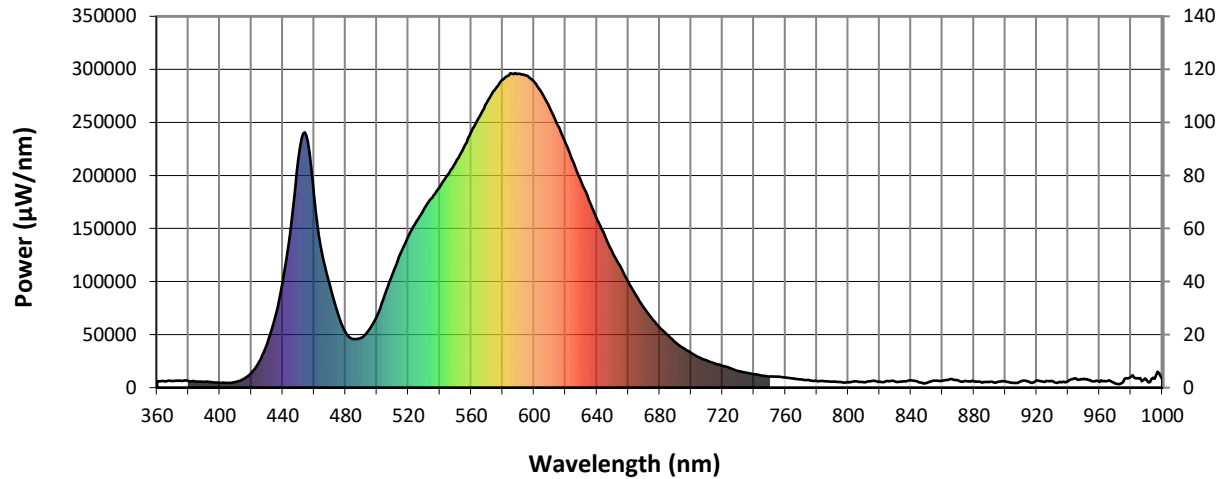

Melanopic Lumens: 8294.3 M/P: 0.54


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6366	NR	490	47130	NR	620	230435	NR	750	10555	NR	880	5822	NR
365	5925	NR	495	54424	NR	625	212935	NR	755	10386	NR	885	4770	NR
370	6268	NR	500	67766	NR	630	194319	NR	760	9571	NR	890	5279	NR
375	6497	NR	505	87548	NR	635	176714	NR	765	8796	NR	895	5445	NR
380	6318	NR	510	107612	NR	640	159022	NR	770	7688	NR	900	5934	NR
385	5716	NR	515	126336	NR	645	143212	NR	775	7039	NR	905	4594	NR
390	5462	NR	520	142943	NR	650	127214	NR	780	6282	NR	910	5910	NR
395	5187	NR	525	156046	NR	655	113910	NR	785	5849	NR	915	5732	NR
400	4568	NR	530	168399	NR	660	99647	NR	790	5698	NR	920	6817	NR
405	4481	NR	535	178779	NR	665	86667	NR	795	5315	NR	925	5494	NR
410	5393	NR	540	189196	NR	670	75195	NR	800	5004	NR	930	6404	NR
415	8052	NR	545	200610	NR	675	65133	NR	805	5848	NR	935	5273	NR
420	13696	NR	550	212065	NR	680	56714	NR	810	5027	NR	940	6245	NR
425	24563	NR	555	225598	NR	685	49746	NR	815	6212	NR	945	8810	NR
430	41084	NR	560	241077	NR	690	42689	NR	820	5650	NR	950	8264	NR
435	65723	NR	565	254881	NR	695	37295	NR	825	6411	NR	955	5892	NR
440	99807	NR	570	268758	NR	700	32779	NR	830	5679	NR	960	5507	NR
445	149359	NR	575	280646	NR	705	28556	NR	835	5857	NR	965	6242	NR
450	215870	NR	580	290065	NR	710	25496	NR	840	6910	NR	970	3723	NR
455	237735	NR	585	296284	NR	715	22794	NR	845	5135	NR	975	4991	NR
460	180903	NR	590	295851	NR	720	20477	NR	850	4417	NR	980	10241	NR
465	126687	NR	595	294360	NR	725	18231	NR	855	6494	NR	985	8801	NR
470	96291	NR	600	288175	NR	730	15637	NR	860	6521	NR	990	7127	NR
475	70550	NR	605	277740	NR	735	14130	NR	865	8026	NR	995	8514	NR
480	51790	NR	610	263525	NR	740	12715	NR	870	6772	NR	1000	7777	NR
485	45800	NR	615	247580	NR	745	11403	NR	875	6383	NR			

REPORT NUMBER: SP1-2307-100-2





TM-30-18

Summary

$R_f = 75.9$
 $R_g = 92.2$
 CIE $R_a = 73.0$
 $R_g = -30.0$

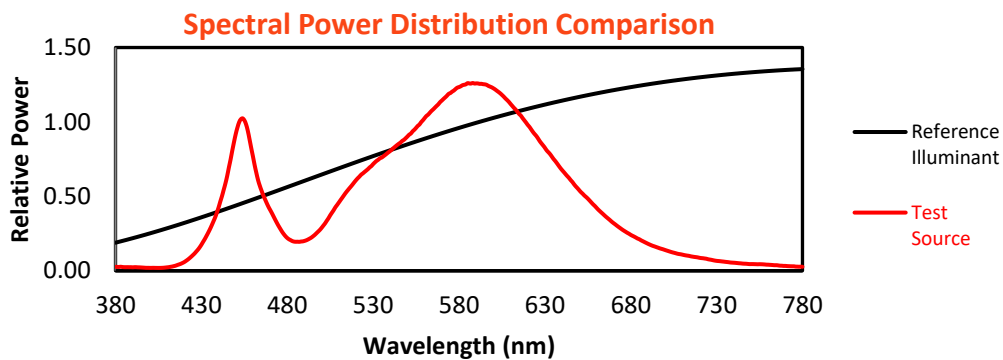

Color Vector Graphics

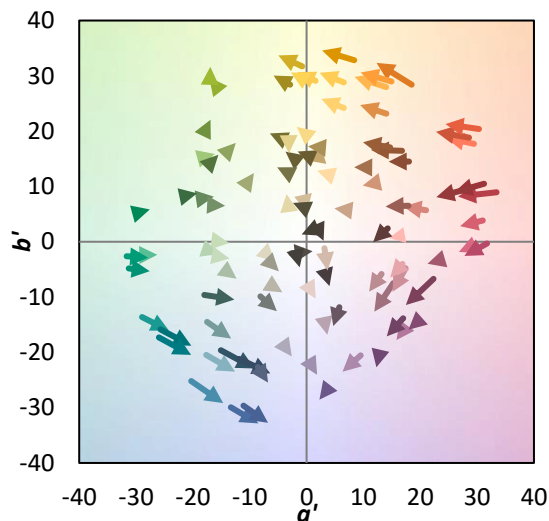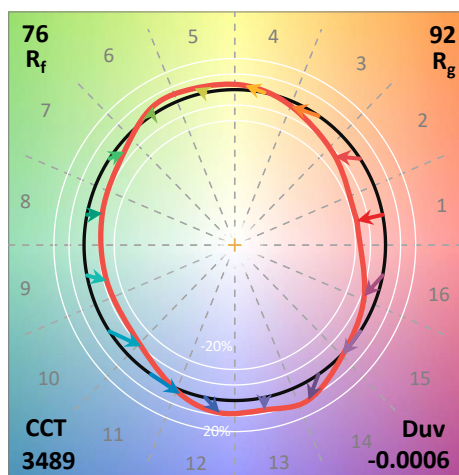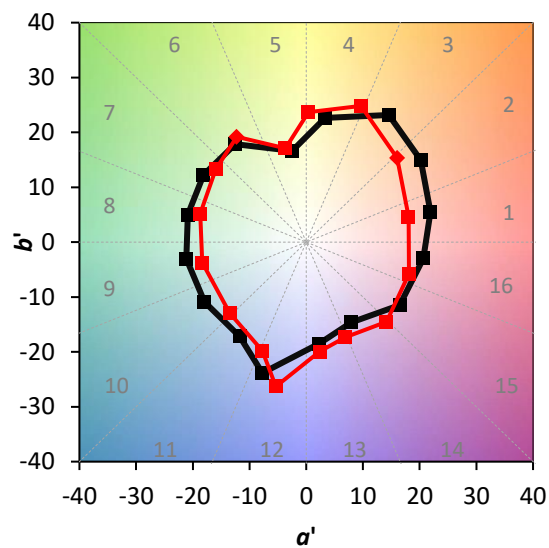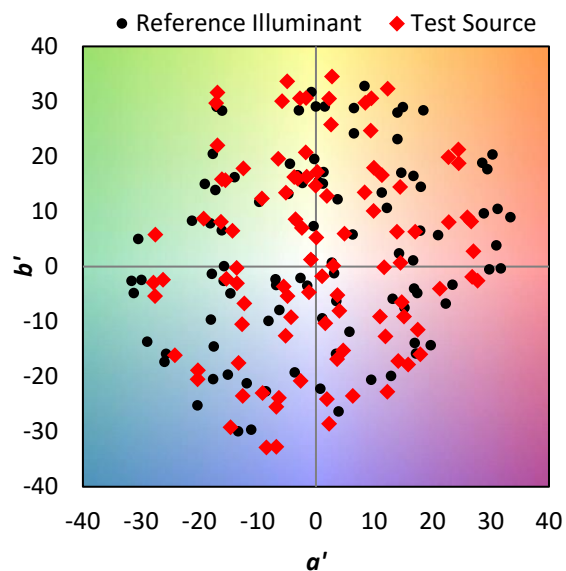


REPORT NUMBER: SP1-2307-100-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 69	CES51 = 87	CES76 = 60
CES02 = 62	CES27 = 91	CES52 = 85	CES77 = 75
CES03 = 31	CES28 = 85	CES53 = 79	CES78 = 63
CES04 = 70	CES29 = 76	CES54 = 85	CES79 = 86
CES05 = 48	CES30 = 93	CES55 = 82	CES80 = 84
CES06 = 51	CES31 = 78	CES56 = 75	CES81 = 77
CES07 = 40	CES32 = 69	CES57 = 74	CES82 = 93
CES08 = 39	CES33 = 87	CES58 = 74	CES83 = 93
CES09 = 29	CES34 = 77	CES59 = 85	CES84 = 87
CES10 = 75	CES35 = 87	CES60 = 87	CES85 = 75
CES11 = 58	CES36 = 86	CES61 = 80	CES86 = 68
CES12 = 64	CES37 = 84	CES62 = 81	CES87 = 78
CES13 = 42	CES38 = 96	CES63 = 75	CES88 = 82
CES14 = 74	CES39 = 98	CES64 = 63	CES89 = 70
CES15 = 71	CES40 = 95	CES65 = 64	CES90 = 83
CES16 = 47	CES41 = 98	CES66 = 57	CES91 = 73
CES17 = 50	CES42 = 87	CES67 = 55	CES92 = 57
CES18 = 56	CES43 = 82	CES68 = 64	CES93 = 73
CES19 = 72	CES44 = 99	CES69 = 73	CES94 = 52
CES20 = 65	CES45 = 88	CES70 = 60	CES95 = 66
CES21 = 87	CES46 = 85	CES71 = 54	CES96 = 78
CES22 = 79	CES47 = 92	CES72 = 84	CES97 = 84
CES23 = 92	CES48 = 79	CES73 = 53	CES98 = 78
CES24 = 91	CES49 = 83	CES74 = 92	CES99 = 66
CES25 = 72	CES50 = 87	CES75 = 59	

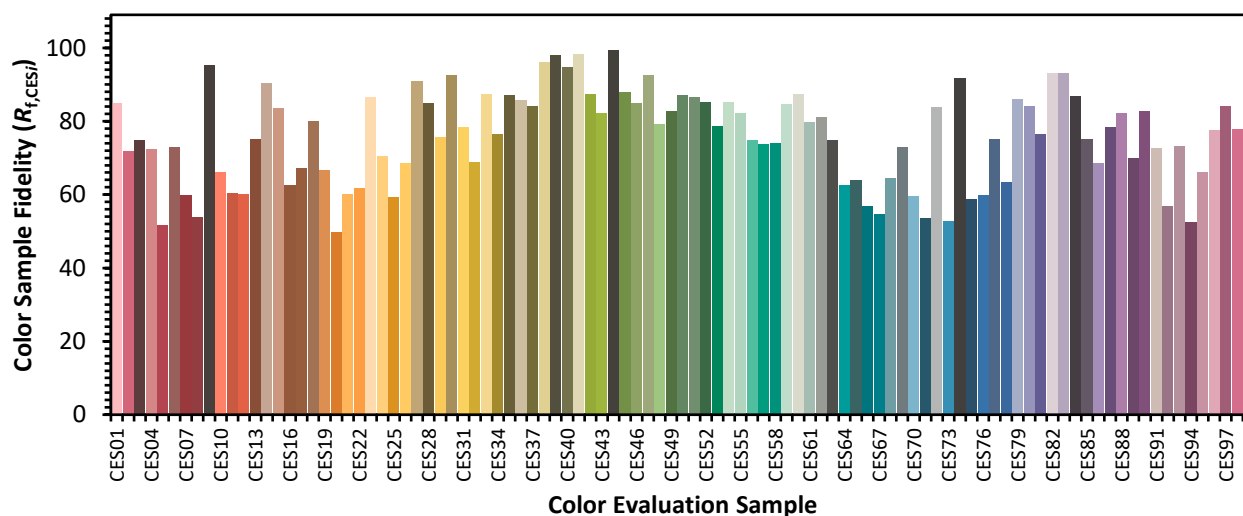

REPORT NUMBER: SP1-2307-100-2

TM-30-18



Color Rendition by Hue-Angle Bin

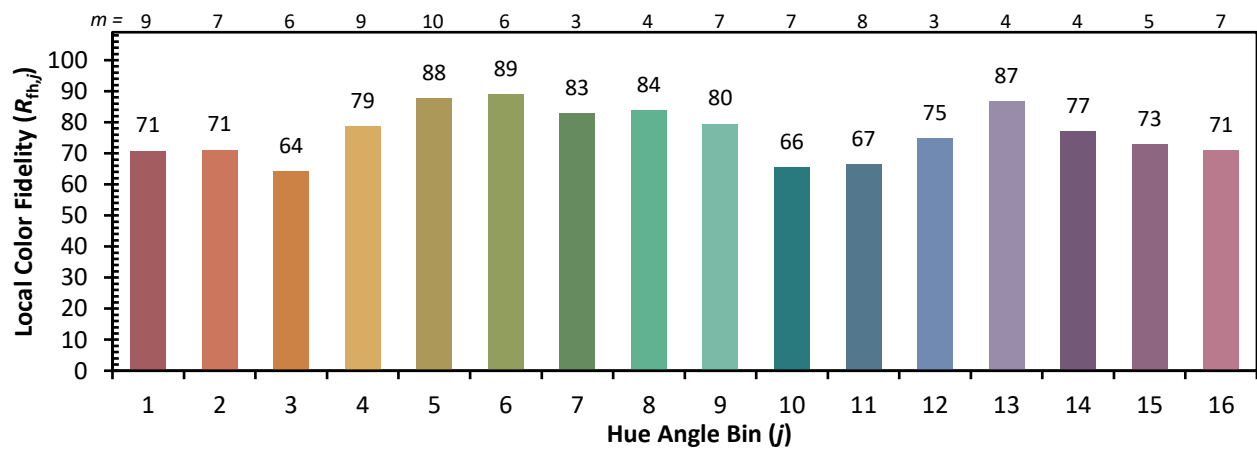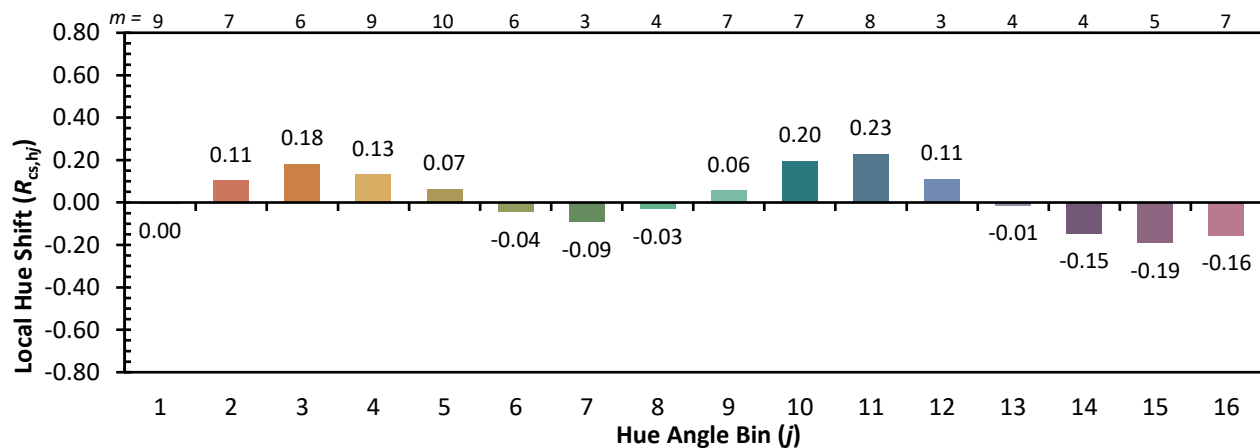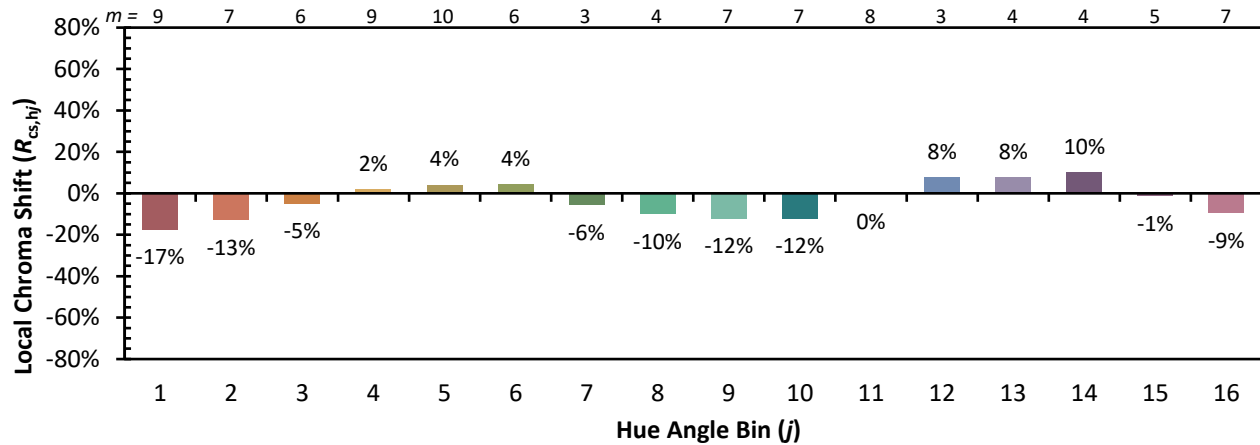

REPORT NUMBER: SP1-2307-100-2

TM-30-18

Measure Comparisons

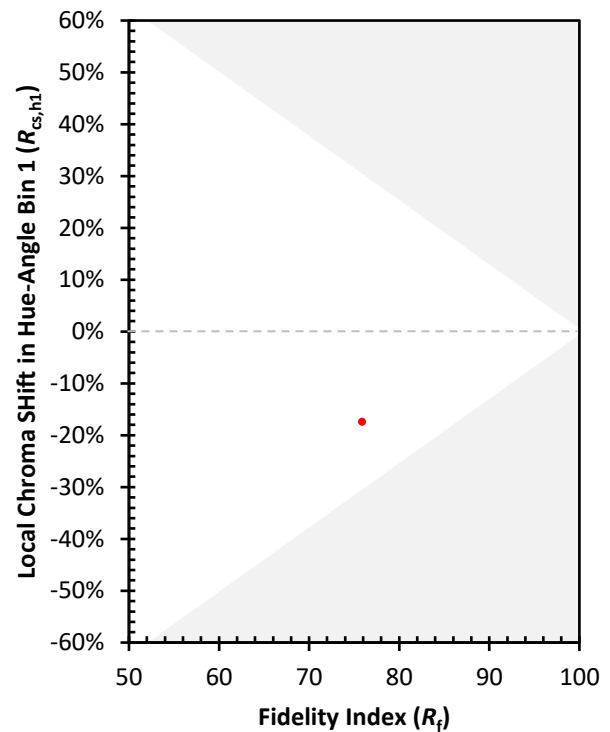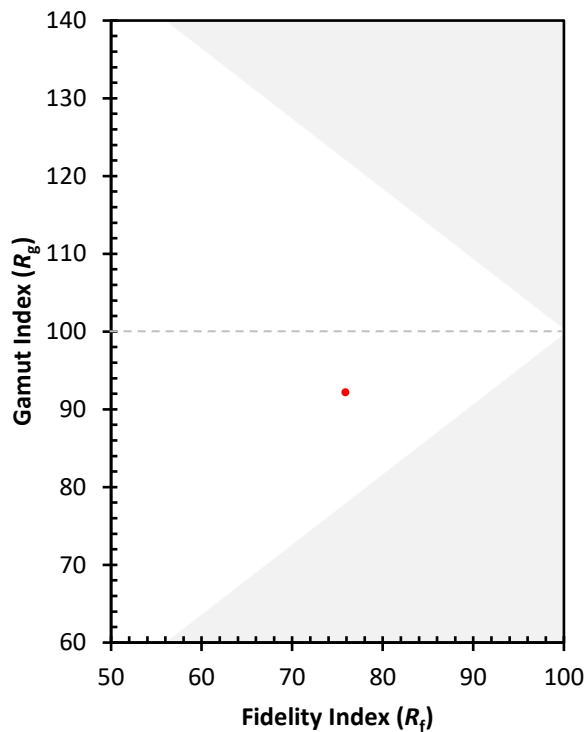

(END OF REPORT)