

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P829685

Luminaire Tested: **OHBL-100SE-MFL-UNV-L740-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P829685
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2106-285-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-100SE-MFL-UNV-L740-CD
Description: 100000 LUMEN OHBL SE LED LUMINAIRE WITH 70CRI, 4000K LEDS AND MEDIUM FROSTED LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 97039.0 lumens
Efficiency: N/A
Efficacy: 164.4 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.29 / 1.38
Luminous Opening: Rectangular w/ Sides (W: 1.8' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 590.1
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P829685

CATALOG NUMBER: OHBL-100SE-MFL-UNV-L740-CD

Luminous Intensity Polar Plot

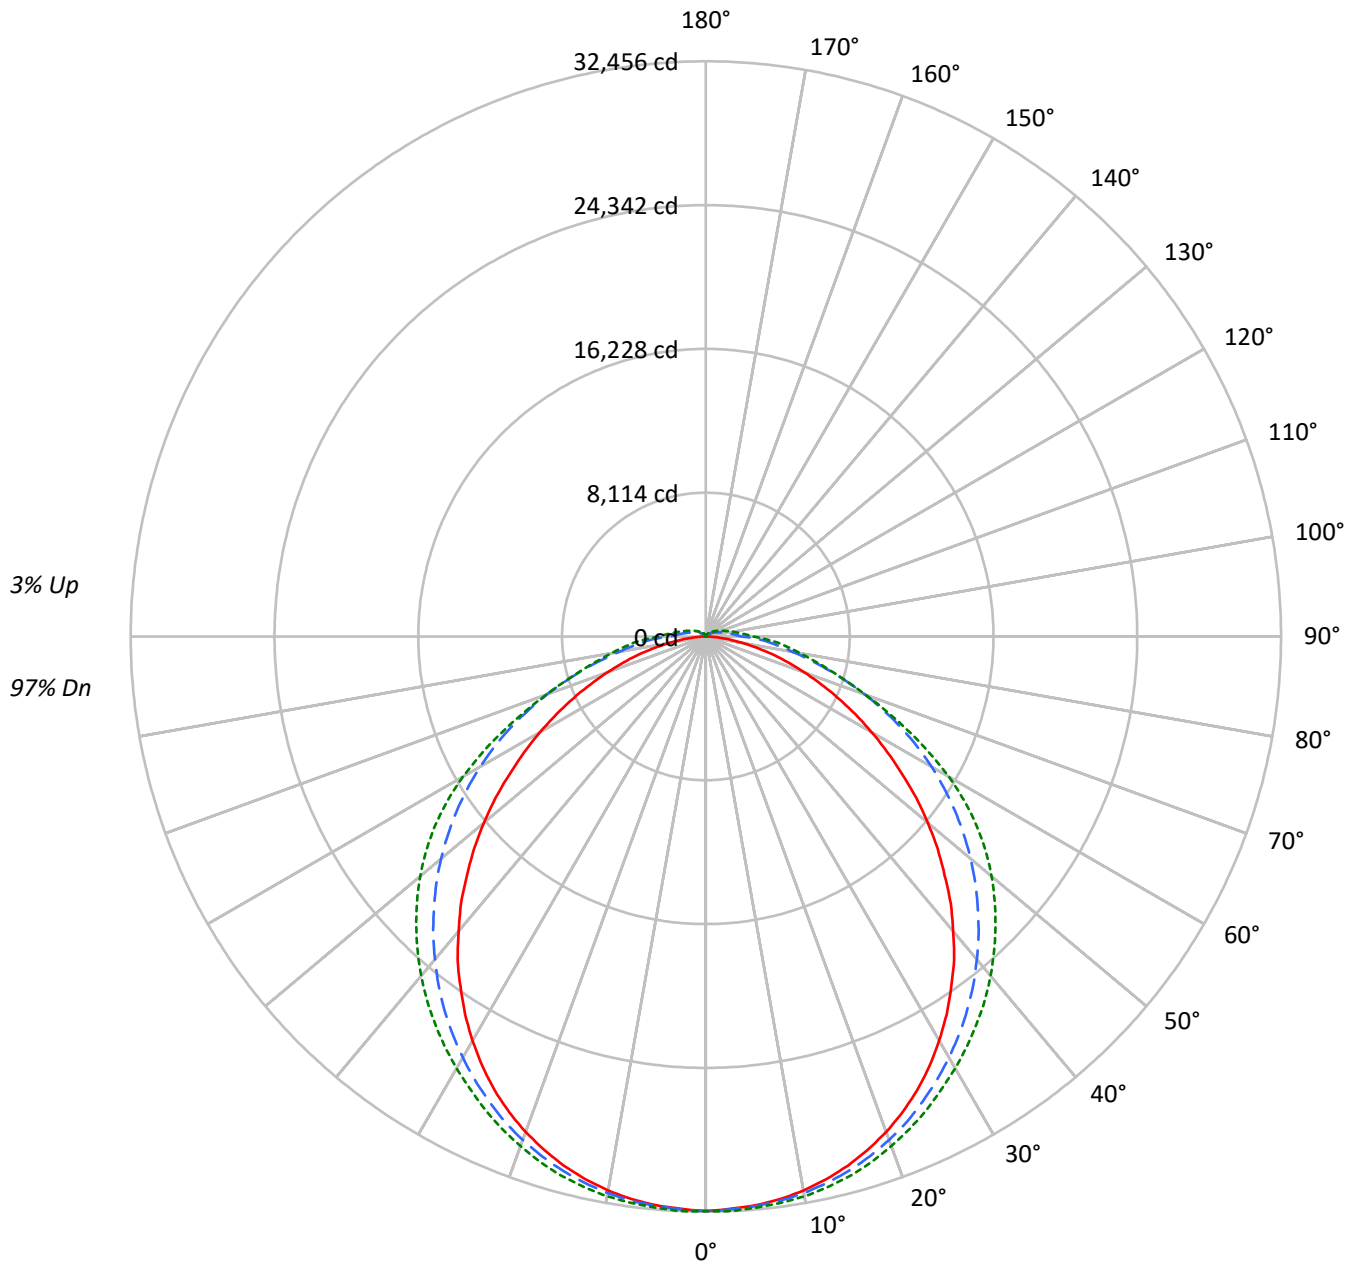



TEST NUMBER: P829685

CATALOG NUMBER: OHBL-100SE-MFL-UNV-L740-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	118	118	118	118	115	115	115	115	109	109	109	104	104	104	99	99	99	99	99	97
1	107	102	98	94	104	100	96	92	95	91	88	90	88	85	86	84	82	82	82	80
2	98	89	82	76	95	87	80	75	83	77	73	79	74	71	75	72	68	68	68	66
3	89	78	70	63	86	76	69	62	73	66	61	70	64	59	67	62	58	58	58	56
4	81	69	60	53	79	68	59	53	65	57	52	62	56	51	59	54	50	50	50	47
5	75	62	53	46	72	60	52	46	58	50	45	56	49	44	53	48	43	43	43	41
6	69	56	47	40	67	54	46	40	52	45	39	50	44	39	48	43	38	38	38	36
7	64	50	42	35	62	49	41	35	48	40	35	46	39	34	44	38	34	34	34	32
8	60	46	37	31	58	45	37	31	43	36	31	42	35	31	41	35	30	30	30	28
9	56	42	34	28	54	41	34	28	40	33	28	39	32	28	37	32	27	27	27	25
10	52	39	31	26	51	38	31	26	37	30	25	36	29	25	35	29	25	25	25	23

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	51277	51277	51277
5°	50949	50792	50947
10°	50592	50344	50680
15°	50027	49808	50330
20°	49277	49153	49817
25°	48275	48335	49298
30°	46888	47447	48777
35°	45208	46505	48327
40°	43191	45414	47883
45°	40813	44229	47317
50°	38211	43032	46630
55°	35012	41566	45469
60°	31736	39839	43151
65°	28161	37632	39342
70°	24284	34820	35217
75°	20361	31571	32430
80°	15436	29222	32173
85°	9766	30374	35953



TEST NUMBER: P829685

CATALOG NUMBER: OHBL-100SE-MFL-UNV-L740-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	3072.3	3.2
10°-20°	8814.1	9.1
20°-30°	13329.7	13.7
30°-40°	16002.5	16.5
40°-50°	16528.0	17.0
50°-60°	14870.0	15.3
60°-70°	11201.3	11.5
70°-80°	6763.7	7.0
80°-90°	3308.0	3.4
90°-100°	1392.4	1.4
100°-110°	794.8	0.8
110°-120°	466.6	0.5
120°-130°	263.9	0.3
130°-140°	138.9	0.1
140°-150°	67.6	0.1
150°-160°	25.1	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	25216.1	26.0
0°-40°	41218.6	42.5
0°-60°	72616.6	74.8
0°-90°	93889.7	96.8
90°-120°	2653.8	2.7
90°-150°	3124.2	3.2
90°-180°	3149.0	3.2
0°-180°	97039.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	32424	32424	32424	32424	32424	
5°	32218	32305	32265	32392	32352	###
15°	30916	31067	31210	31472	31503	8716
25°	28234	28543	28948	29400	29472	12987
35°	24139	24703	25718	26496	26655	15091
45°	19053	20013	21687	22870	23116	14709
55°	13498	14895	17156	18450	18672	12102
65°	8237	9919	12141	12744	12601	8183
75°	3880	5571	7031	7213	7142	4140
85°	809	2135	3523	4007	4079	935
90°	0	833	2016	2539	2642	51
95°	40	563	1508	1920	1992	33
105°	56	325	873	1143	1190	56
115°	64	182	540	722	754	65
125°	64	87	325	468	492	57
135°	56	71	167	286	317	44
145°	79	71	79	143	167	47
155°	79	87	79	71	79	24
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P829685

CATALOG NUMBER: OHBL-100SE-MFL-UNV-L740-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	32423.8	32423.8	32423.8	32423.8	32423.8
2.5°	32328.6	32407.9	32360.3	32463.5	32455.6
5°	32217.5	32304.8	32265.1	32392.1	32352.4
7.5°	32027.1	32122.3	32114.3	32257.2	32241.3
10°	31749.3	31852.5	31884.2	32074.7	32074.7
12.5°	31368.4	31503.3	31582.7	31812.8	31820.7
15°	30916.1	31066.9	31209.7	31471.6	31503.3
17.5°	30368.6	30559.0	30757.4	31058.9	31098.6
20°	29749.6	29963.9	30233.7	30551.1	30598.7
22.5°	29035.4	29289.4	29638.5	30011.5	30067.0
25°	28234.0	28543.4	28948.1	29400.5	29471.9
27.5°	27321.4	27678.5	28226.0	28733.9	28797.4
30°	26329.5	26750.0	27432.5	28035.6	28138.7
32.5°	25282.0	25766.1	26607.2	27281.7	27424.6
35°	24139.3	24702.7	25718.5	26496.1	26654.8
37.5°	23012.5	23631.5	24782.1	25670.8	25861.3
40°	21695.2	22465.0	23782.2	24766.2	24996.3
42.5°	20457.3	21290.5	22782.4	23853.6	24075.8
45°	19052.8	20012.9	21687.3	22869.7	23115.7
47.5°	17735.5	18775.0	20631.9	21853.9	22107.9
50°	16346.8	17489.5	19505.1	20782.7	21044.5
52.5°	14958.1	16188.1	18338.6	19663.8	19909.8
55°	13498.0	14894.6	17156.2	18449.7	18671.9
57.5°	12141.1	13617.1	15942.1	17172.1	17307.0
60°	10800.0	12331.5	14704.2	15783.4	15831.0
62.5°	9490.7	11101.5	13434.5	14291.6	14228.1
65°	8236.9	9919.2	12141.1	12744.2	12601.3
67.5°	7030.7	8768.6	10815.9	11204.7	11014.3
70°	5888.0	7649.7	9530.3	9728.7	9554.2
72.5°	4880.2	6586.3	8229.0	8395.6	8268.6
75°	3880.4	5570.6	7030.7	7213.2	7141.8
77.5°	2944.0	4586.6	5927.7	6165.8	6181.6
80°	2118.7	3689.9	4967.5	5340.5	5388.1
82.5°	1396.6	2864.7	4166.1	4642.2	4713.6
85°	809.4	2134.6	3523.3	4007.3	4078.8
87.5°	349.2	1539.5	2832.9	3269.4	3356.7
90°	0.0	833.2	2015.6	2539.3	2642.5
92.5°	23.8	690.4	1729.9	2206.0	2293.3
95°	39.7	563.4	1507.7	1920.4	1991.8
97.5°	47.6	476.1	1309.3	1674.4	1745.8
100°	47.6	412.6	1134.8	1468.0	1531.5
102.5°	47.6	365.0	991.9	1285.5	1341.1
105°	55.5	325.3	872.9	1142.7	1190.3



TEST NUMBER: P829685

CATALOG NUMBER: OHBL-100SE-MFL-UNV-L740-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	63.5	214.3	603.1	809.4	841.1
115°	63.5	182.5	539.6	722.1	753.9
117.5°	71.4	158.7	476.1	650.7	674.5
120°	71.4	134.9	420.6	579.3	611.0
122.5°	71.4	111.1	373.0	523.7	547.5
125°	63.5	87.3	325.3	468.2	492.0
127.5°	55.5	71.4	277.7	420.6	444.4
130°	55.5	63.5	238.1	373.0	396.8
132.5°	55.5	71.4	198.4	325.3	357.1
135°	55.5	71.4	166.6	285.7	317.4
137.5°	55.5	71.4	134.9	246.0	277.7
140°	63.5	71.4	111.1	206.3	238.1
142.5°	71.4	71.4	87.3	174.6	198.4
145°	79.4	71.4	79.4	142.8	166.6
147.5°	79.4	79.4	79.4	111.1	134.9
150°	79.4	87.3	79.4	87.3	111.1
152.5°	79.4	87.3	79.4	71.4	87.3
155°	79.4	87.3	79.4	71.4	79.4
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	55.5	285.7	769.7	1015.7	1055.4
110°	55.5	253.9	682.4	904.6	944.3



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-3

Test Date: 08/03/2023

Luminaire Tested: OHB-15SE-N-UNV-L740-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L740-CD.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-3
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L740-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 70CRI, 4000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	4013	CRI (Ra):	71.9		
CIE u':	0.2243	R1:	67.7	R9:	-37.4
CIE v':	0.5023	R2:	81.2	R10:	55.0
Duv:	0.0009	R3:	90.6	R11:	61.2
CIE x:	0.3803	R4:	67.3	R12:	42.7
CIE y:	0.3785	R5:	67.5	R13:	70.6
CIE z:	0.2412	R6:	72.5	R14:	94.8
Peak Wavelength (nm):	454	R7:	80.1		
Dominant Wavelength (nm):	578	R8:	48.1		
Purity:	27.9				
Rf:	74.7				
Rg:	90.6				



Test Conditions


Stabilization Time: 24M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/58%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-3

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-3

CIE 1931 Chromaticity Diagram

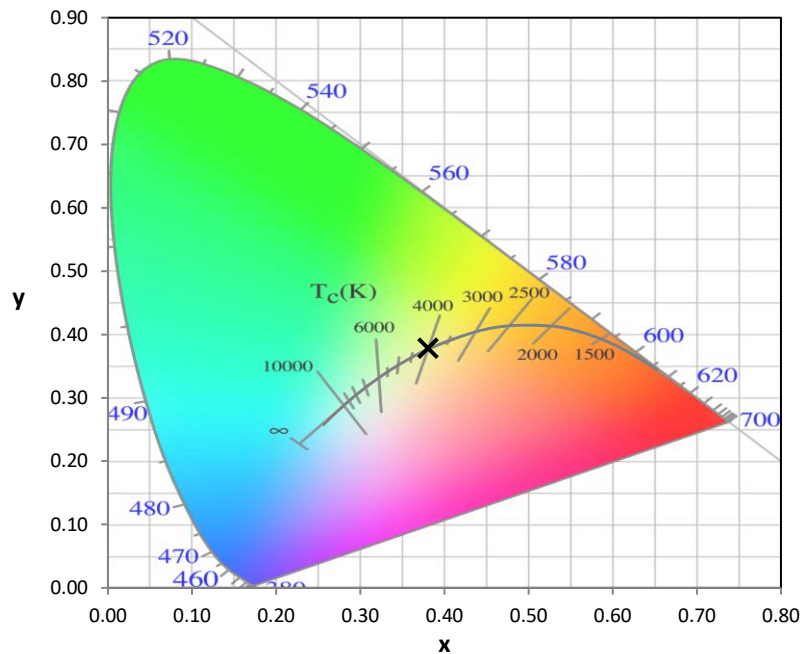

CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-3

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3

Scotopic Flux vs. Wavelength



Scotopic Lumens: 24452.5

S/P: 1.56

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3

Melanopic Flux vs. Wavelength



Melanopic Lumens: 9678.5

M/P: 0.62


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6930	NR	490	55345	NR	620	204359	NR	750	9973	NR	880	7740	NR
365	6548	NR	495	63140	NR	625	187136	NR	755	9262	NR	885	6139	NR
370	6520	NR	500	77260	NR	630	169554	NR	760	8423	NR	890	6392	NR
375	7463	NR	505	98785	NR	635	152565	NR	765	8205	NR	895	5061	NR
380	7033	NR	510	119863	NR	640	136700	NR	770	6817	NR	900	7326	NR
385	6403	NR	515	140055	NR	645	122449	NR	775	6792	NR	905	5039	NR
390	5734	NR	520	157790	NR	650	108580	NR	780	6216	NR	910	5717	NR
395	5717	NR	525	171938	NR	655	96370	NR	785	5732	NR	915	5977	NR
400	4977	NR	530	184920	NR	660	84194	NR	790	5647	NR	920	5766	NR
405	5006	NR	535	196020	NR	665	73166	NR	795	5584	NR	925	6611	NR
410	5959	NR	540	208194	NR	670	63358	NR	800	5174	NR	930	7338	NR
415	9179	NR	545	219324	NR	675	55149	NR	805	5757	NR	935	6930	NR
420	15787	NR	550	230377	NR	680	47533	NR	810	6012	NR	940	8242	NR
425	28518	NR	555	242973	NR	685	41350	NR	815	5577	NR	945	8766	NR
430	48907	NR	560	256802	NR	690	35841	NR	820	5086	NR	950	10931	NR
435	79961	NR	565	268752	NR	695	31197	NR	825	6404	NR	955	8190	NR
440	122565	NR	570	279406	NR	700	27528	NR	830	5767	NR	960	6809	NR
445	185397	NR	575	286045	NR	705	24001	NR	835	6610	NR	965	7570	NR
450	269609	NR	580	291082	NR	710	21755	NR	840	6428	NR	970	6365	NR
455	300483	NR	585	291620	NR	715	20058	NR	845	6469	NR	975	6203	NR
460	229777	NR	590	286117	NR	720	17690	NR	850	5020	NR	980	9515	NR
465	159722	NR	595	280083	NR	725	15738	NR	855	6786	NR	985	7323	NR
470	119038	NR	600	270967	NR	730	13744	NR	860	5776	NR	990	9023	NR
475	86663	NR	605	255964	NR	735	12435	NR	865	7909	NR	995	8813	NR
480	62772	NR	610	239107	NR	740	11118	NR	870	6451	NR	1000	6436	NR
485	54561	NR	615	221194	NR	745	10318	NR	875	7611	NR			

REPORT NUMBER: SP1-2307-100-3

TM-30-18

Summary

$R_f = 74.7$
 $R_g = 90.6$
 CIE $R_a = 71.9$
 $R_g = -37.4$

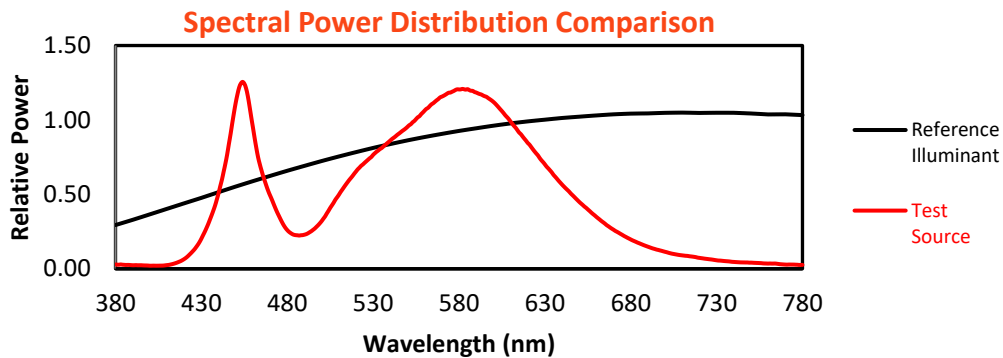

Color Vector Graphics



REPORT NUMBER: SP1-2307-100-3

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 85	CES26 = 68	CES51 = 85	CES76 = 58
CES02 = 61	CES27 = 90	CES52 = 85	CES77 = 72
CES03 = 30	CES28 = 84	CES53 = 77	CES78 = 61
CES04 = 70	CES29 = 77	CES54 = 83	CES79 = 85
CES05 = 47	CES30 = 93	CES55 = 80	CES80 = 83
CES06 = 50	CES31 = 80	CES56 = 73	CES81 = 78
CES07 = 39	CES32 = 70	CES57 = 71	CES82 = 93
CES08 = 39	CES33 = 90	CES58 = 71	CES83 = 94
CES09 = 29	CES34 = 76	CES59 = 84	CES84 = 85
CES10 = 74	CES35 = 87	CES60 = 85	CES85 = 75
CES11 = 57	CES36 = 82	CES61 = 78	CES86 = 70
CES12 = 63	CES37 = 83	CES62 = 76	CES87 = 77
CES13 = 42	CES38 = 91	CES63 = 73	CES88 = 81
CES14 = 74	CES39 = 98	CES64 = 59	CES89 = 70
CES15 = 71	CES40 = 95	CES65 = 61	CES90 = 82
CES16 = 46	CES41 = 97	CES66 = 53	CES91 = 68
CES17 = 49	CES42 = 87	CES67 = 50	CES92 = 55
CES18 = 56	CES43 = 84	CES68 = 62	CES93 = 72
CES19 = 72	CES44 = 99	CES69 = 70	CES94 = 51
CES20 = 64	CES45 = 89	CES70 = 57	CES95 = 63
CES21 = 86	CES46 = 86	CES71 = 49	CES96 = 76
CES22 = 78	CES47 = 92	CES72 = 83	CES97 = 84
CES23 = 92	CES48 = 78	CES73 = 50	CES98 = 76
CES24 = 91	CES49 = 83	CES74 = 89	CES99 = 63
CES25 = 72	CES50 = 86	CES75 = 55	



REPORT NUMBER: SP1-2307-100-3

TM-30-18

Color Rendition by Hue-Angle Bin

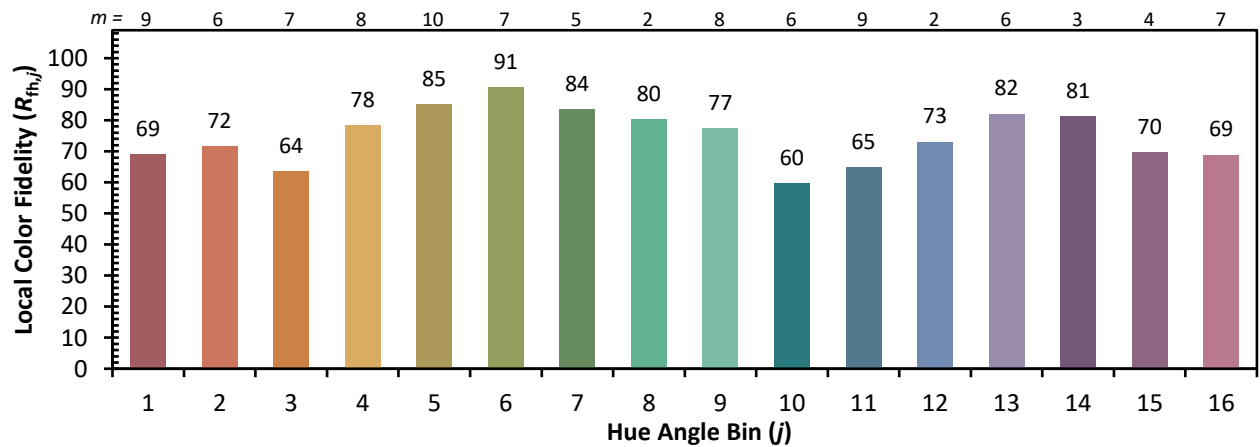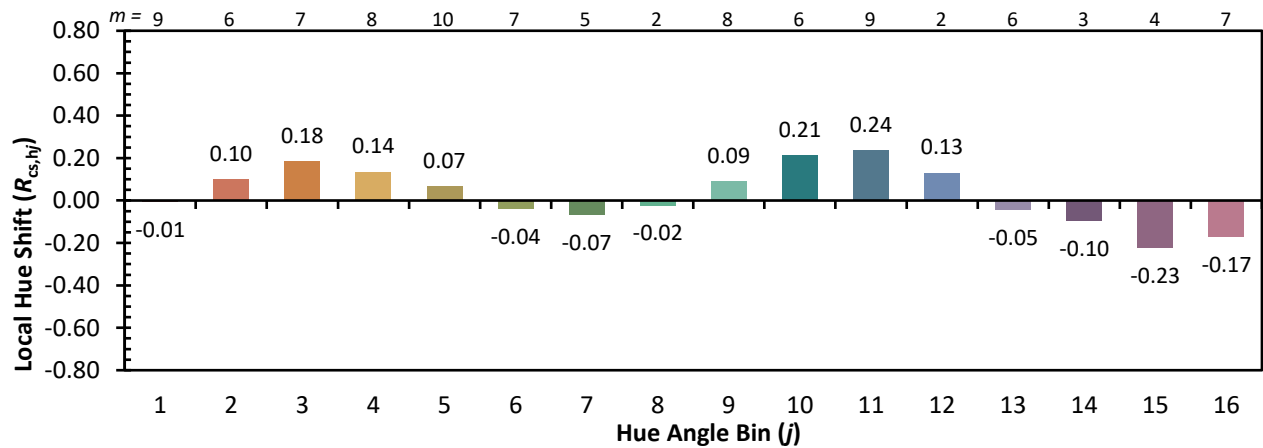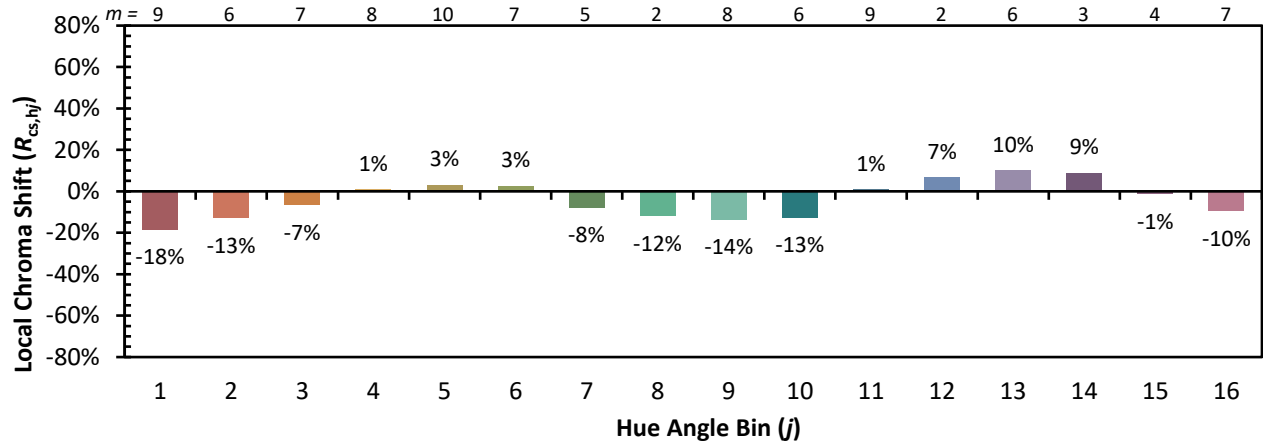

REPORT NUMBER: SP1-2307-100-3

TM-30-18

Measure Comparisons



(END OF REPORT)