

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P828680

Luminaire Tested: **OHBL-30SE-MFL-UNV-L950-CD-UPL30**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P828680
REPORT IS A COMBINATION OF REPORTS P826283 AND G3-2310-221-4
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-30SE-MFL-UNV-L950-CD-UPL30
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 27680.5 lumens
Efficiency: N/A
Efficacy: 140.4 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.29 / 1.38
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 1.67' x H: 0.17')
CIE Type: Semi-Direct

Input Watts (W): 197.2
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P828680

CATALOG NUMBER: OHBL-30SE-MFL-UNV-L950-CD-UPL30

Luminous Intensity Polar Plot

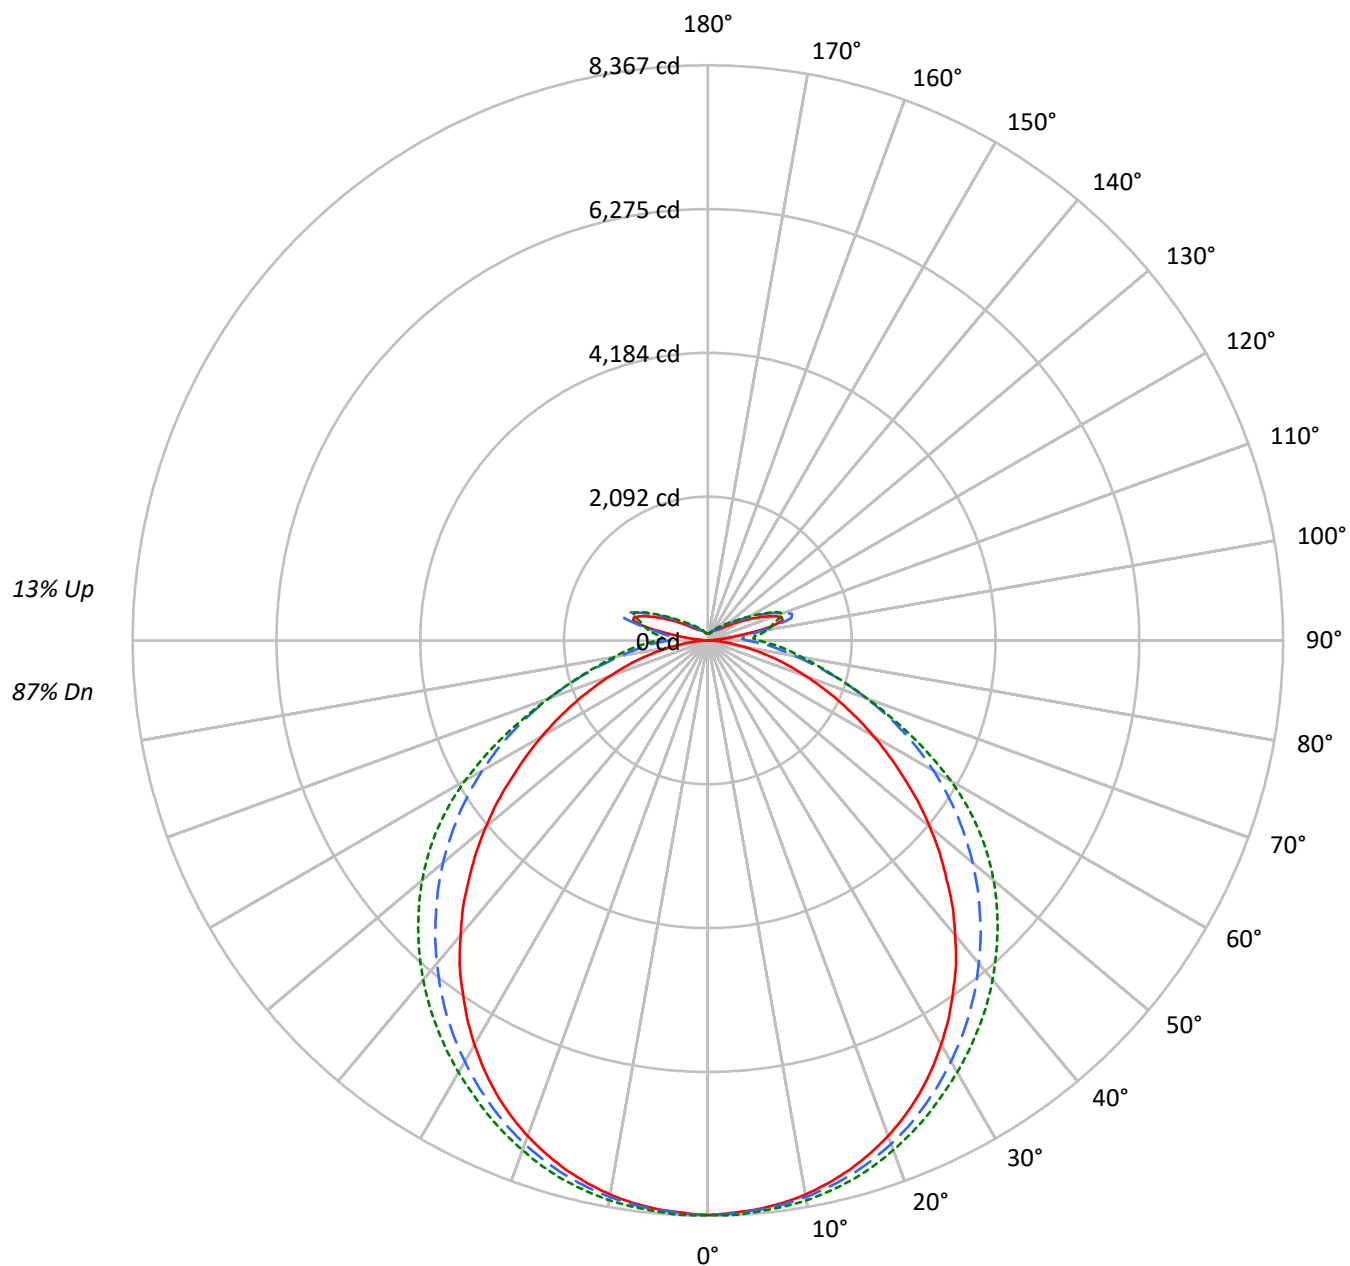



TEST NUMBER: P828680

CATALOG NUMBER: OHBL-30SE-MFL-UNV-L950-CD-UPL30

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	116	116	116	116	112	112	112	112	104	104	104	97	97	97	91	91	91	87		
1	105	100	96	92	101	97	93	89	90	87	84	84	82	79	79	77	75	72		
2	96	87	80	75	92	84	78	73	79	74	69	74	70	66	69	66	63	60		
3	87	77	68	62	84	74	67	61	69	63	58	65	60	55	61	57	53	50		
4	80	68	59	52	76	66	58	51	62	55	49	58	52	47	54	49	45	43		
5	73	61	52	45	70	59	50	44	55	48	43	52	46	41	49	44	39	37		
6	68	54	46	39	65	53	45	39	50	43	37	47	41	36	44	39	35	32		
7	63	49	41	35	60	48	40	34	45	38	33	43	36	32	40	35	31	29		
8	58	45	36	31	56	44	36	30	41	34	29	39	33	28	37	32	28	25		
9	54	41	33	28	52	40	32	27	38	31	26	36	30	26	34	29	25	23		
10	51	38	30	25	49	37	30	25	35	28	24	33	27	23	32	26	23	21		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	14277	14277	14277
5°	14117	14135	14245
10°	13950	14005	14231
15°	13726	13849	14194
20°	13451	13661	14112
25°	13106	13427	14031
30°	12656	13173	13952
35°	12127	12904	13899
40°	11505	12593	13856
45°	10786	12256	13787
50°	10006	11915	13697
55°	9067	11498	13485
60°	8107	11007	12953
65°	7066	10382	11995
70°	5947	9586	10971
75°	4807	8666	10434
80°	3428	7983	10930
85°	1908	8223	13702



TEST NUMBER: P828680

CATALOG NUMBER: OHBL-30SE-MFL-UNV-L950-CD-UPL30

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	792.1	2.9
10°-20°	2272.3	8.2
20°-30°	3436.5	12.4
30°-40°	4125.6	14.9
40°-50°	4261.0	15.4
50°-60°	3833.6	13.8
60°-70°	2887.8	10.4
70°-80°	1743.7	6.3
80°-90°	858.5	3.1
90°-100°	564.8	2.0
100°-110°	1135.4	4.1
110°-120°	886.4	3.2
120°-130°	429.5	1.6
130°-140°	218.1	0.8
140°-150°	124.0	0.4
150°-160°	68.9	0.2
160°-170°	32.4	0.1
170°-180°	9.9	0.0
0°-30°	6500.9	23.5
0°-40°	10626.5	38.4
0°-60°	18721.1	67.6
0°-90°	24211.1	87.5
90°-120°	2586.5	9.3
90°-150°	3358.1	12.1
90°-180°	3469.0	12.5
0°-180°	27680.5	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	8359	8359	8359	8359	8359	
5°	8306	8328	8318	8351	8341	789
15°	7970	8009	8046	8114	8122	2247
25°	7279	7359	7463	7580	7598	3348
35°	6223	6369	6630	6831	6872	3890
45°	4912	5160	5591	5896	5959	3792
55°	3480	3840	4423	4756	4814	3120
65°	2124	2557	3130	3286	3249	2110
75°	1000	1436	1812	1860	1841	1067
85°	209	550	908	1033	1052	241
90°	6	250	567	708	734	17
95°	60	245	510	649	679	188
105°	1125	1203	1258	1070	989	1063
115°	783	814	905	956	948	785
125°	394	411	483	509	510	367
135°	236	244	274	309	317	186
145°	182	183	189	207	213	115
155°	150	155	154	154	156	67
165°	111	112	113	115	115	32
175°	101	102	102	103	103	10
180°	100	100	100	100	100	



TEST NUMBER: P828680

CATALOG NUMBER: OHBL-30SE-MFL-UNV-L950-CD-UPL30

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	8359.1	8359.1	8359.1	8359.1	8359.1
2.5°	8334.6	8355.0	8342.8	8369.4	8367.3
5°	8305.9	8328.4	8318.1	8350.9	8340.7
7.5°	8256.9	8281.4	8279.3	8316.1	8312.1
10°	8185.2	8211.8	8220.0	8269.1	8269.1
12.5°	8087.1	8121.8	8142.3	8201.6	8203.6
15°	7970.4	8009.2	8046.1	8113.7	8121.8
17.5°	7829.3	7878.4	7929.5	8007.2	8017.5
20°	7669.7	7724.9	7794.5	7876.3	7888.6
22.5°	7485.6	7551.0	7641.0	7737.2	7751.5
25°	7278.9	7358.7	7463.1	7579.6	7598.1
27.5°	7043.6	7135.7	7276.9	7407.8	7424.2
30°	6787.9	6896.3	7072.3	7227.8	7254.4
32.5°	6517.9	6642.7	6859.6	7033.5	7070.2
35°	6223.3	6368.6	6630.4	6830.9	6871.8
37.5°	5932.8	6092.4	6389.0	6618.1	6667.2
40°	5593.2	5791.6	6131.2	6384.9	6444.2
42.5°	5274.0	5488.9	5873.4	6149.7	6207.0
45°	4911.9	5159.5	5591.1	5896.0	5959.4
47.5°	4572.3	4840.4	5319.1	5634.1	5699.6
50°	4214.4	4508.9	5028.5	5358.0	5425.4
52.5°	3856.3	4173.4	4727.9	5069.5	5132.9
55°	3479.9	3840.0	4423.0	4756.5	4813.8
57.5°	3130.1	3510.6	4110.0	4427.1	4461.9
60°	2784.3	3179.1	3790.9	4069.1	4081.3
62.5°	2446.8	2862.0	3463.5	3684.4	3668.1
65°	2123.5	2557.2	3130.1	3285.5	3248.7
67.5°	1812.5	2260.6	2788.4	2888.6	2839.5
70°	1518.0	1972.2	2457.0	2508.2	2463.1
72.5°	1258.2	1698.0	2121.4	2164.5	2131.7
75°	1000.4	1436.1	1812.5	1859.7	1841.2
77.5°	759.0	1182.4	1528.2	1589.6	1593.7
80°	546.2	951.3	1280.7	1376.9	1389.1
82.5°	360.0	738.5	1074.0	1196.8	1215.2
85°	208.7	550.4	908.3	1033.2	1051.5
87.5°	90.0	396.9	730.3	842.8	865.4
90°	6.1	250.5	566.6	707.7	734.2
92.5°	24.4	222.3	503.4	639.1	663.4
95°	59.8	245.3	510.5	649.0	678.7
97.5°	314.8	423.6	598.4	735.1	787.5
100°	609.6	737.6	762.9	856.7	877.4
102.5°	954.7	1053.9	1005.2	952.2	940.5
105°	1124.6	1202.9	1257.9	1070.1	989.3



TEST NUMBER: P828680

CATALOG NUMBER: OHBL-30SE-MFL-UNV-L950-CD-UPL30

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	906.7	952.5	1053.6	1095.5	1082.8
115°	783.2	813.9	905.1	955.6	948.1
117.5°	665.3	692.2	775.7	813.7	812.9
120°	562.7	586.9	658.8	694.5	695.7
122.5°	473.2	496.4	568.3	597.6	595.9
125°	393.7	411.2	483.0	509.3	510.3
127.5°	334.3	346.2	407.2	443.2	445.0
130°	290.0	298.9	352.6	389.2	394.4
132.5°	259.5	269.7	308.5	343.9	351.2
135°	236.1	244.5	274.2	309.3	317.4
137.5°	215.2	225.4	246.1	278.1	286.4
140°	202.4	208.8	223.4	249.7	258.7
142.5°	191.5	194.9	203.4	227.6	234.6
145°	182.1	182.8	189.1	207.3	213.4
147.5°	171.7	175.2	178.7	188.6	194.8
150°	163.9	168.6	170.0	172.9	179.9
152.5°	156.9	160.8	161.3	161.0	165.1
155°	150.0	154.7	154.3	154.1	156.1
157.5°	124.3	126.1	127.8	128.7	129.5
160°	120.0	120.9	122.6	123.5	124.3
162.5°	114.8	116.5	117.4	118.2	119.1
165°	111.3	112.2	113.0	114.8	114.8
167.5°	107.8	108.7	109.6	110.4	110.4
170°	105.2	106.1	106.9	106.9	106.9
172.5°	102.6	103.5	104.3	104.3	104.3
175°	100.9	101.7	101.7	102.6	102.6
177.5°	100.0	100.9	100.9	100.9	101.7
180°	100.0	100.0	100.0	100.0	100.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	1123.8	1198.7	1282.6	1211.3	1099.8
110°	1031.6	1101.0	1189.7	1202.6	1152.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-9

Test Date: 08/01/2023

Luminaire Tested: OHB-15SE-N-UNV-L950-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L950-CD.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-9
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L950-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 90CRI, 5000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	5013	CRI (Ra):	92.0		
CIE u':	0.2111	R1:	92.6	R9:	62.7
CIE v':	0.4847	R2:	96.7	R10:	90.0
Duv:	0.0002	R3:	96.5	R11:	89.8
CIE x:	0.3447	R4:	90.1	R12:	69.9
CIE y:	0.3517	R5:	91.1	R13:	94.5
CIE z:	0.3036	R6:	92.0	R14:	98.3
Peak Wavelength (nm):	455	R7:	92.4		
Dominant Wavelength (nm):	572	R8:	84.9		
Purity:	9.1				
Rf:	88.9				
Rg:	97.2				



Test Conditions

Stabilization Time: 26M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/57%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-9

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-9

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-9

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

Scotopic Flux vs. Wavelength



Scotopic Lumens: 26039.5

S/P: 2.08

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

Melanopic Flux vs. Wavelength



Melanopic Lumens: 11248.3 M/P: 0.9

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6694	NR	490	112019	NR	620	173132	NR	750	14981	NR	880	5536	NR
365	5354	NR	495	119136	NR	625	169860	NR	755	13480	NR	885	6938	NR
370	5722	NR	500	127627	NR	630	163982	NR	760	11900	NR	890	5411	NR
375	6251	NR	505	139687	NR	635	158304	NR	765	10671	NR	895	4784	NR
380	6177	NR	510	148127	NR	640	151433	NR	770	9643	NR	900	5872	NR
385	5889	NR	515	155327	NR	645	144044	NR	775	8310	NR	905	5214	NR
390	5252	NR	520	161724	NR	650	134971	NR	780	7378	NR	910	5425	NR
395	5012	NR	525	166350	NR	655	126523	NR	785	7348	NR	915	5372	NR
400	4505	NR	530	170827	NR	660	117624	NR	790	6731	NR	920	5263	NR
405	4163	NR	535	174287	NR	665	107737	NR	795	6603	NR	925	5581	NR
410	4931	NR	540	177402	NR	670	97796	NR	800	6333	NR	930	7934	NR
415	6887	NR	545	179468	NR	675	88146	NR	805	5919	NR	935	6835	NR
420	10750	NR	550	180621	NR	680	80008	NR	810	5757	NR	940	4871	NR
425	18574	NR	555	182239	NR	685	71588	NR	815	6226	NR	945	6554	NR
430	31943	NR	560	184077	NR	690	63388	NR	820	5694	NR	950	6239	NR
435	54504	NR	565	184113	NR	695	56106	NR	825	5621	NR	955	4562	NR
440	91570	NR	570	183843	NR	700	49976	NR	830	5832	NR	960	3863	NR
445	155007	NR	575	183242	NR	705	44326	NR	835	5478	NR	965	4898	NR
450	253466	NR	580	182759	NR	710	39116	NR	840	5675	NR	970	7576	NR
455	316705	NR	585	182781	NR	715	34755	NR	845	4960	NR	975	6056	NR
460	273954	NR	590	181075	NR	720	30900	NR	850	5274	NR	980	3439	NR
465	214019	NR	595	181315	NR	725	27349	NR	855	5470	NR	985	3623	NR
470	175153	NR	600	181289	NR	730	23954	NR	860	6539	NR	990	4301	NR
475	140894	NR	605	180053	NR	735	21526	NR	865	6378	NR	995	7368	NR
480	115223	NR	610	177907	NR	740	18965	NR	870	5702	NR	1000	10668	NR
485	108577	NR	615	175575	NR	745	17153	NR	875	4933	NR			

REPORT NUMBER: SP1-2307-100-9

TM-30-18

Summary

$R_f = 88.9$
 $R_g = 97.2$
 $CIE R_a = 92.0$
 $R_9 = 62.7$



Color Vector Graphics



REPORT NUMBER: SP1-2307-100-9

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 85	CES26 = 93	CES51 = 92	CES76 = 85
CES02 = 61	CES27 = 89	CES52 = 95	CES77 = 86
CES03 = 31	CES28 = 95	CES53 = 92	CES78 = 84
CES04 = 69	CES29 = 94	CES54 = 89	CES79 = 95
CES05 = 48	CES30 = 83	CES55 = 86	CES80 = 93
CES06 = 50	CES31 = 96	CES56 = 88	CES81 = 89
CES07 = 41	CES32 = 93	CES57 = 85	CES82 = 97
CES08 = 40	CES33 = 92	CES58 = 85	CES83 = 97
CES09 = 29	CES34 = 93	CES59 = 94	CES84 = 92
CES10 = 73	CES35 = 96	CES60 = 89	CES85 = 83
CES11 = 56	CES36 = 76	CES61 = 88	CES86 = 88
CES12 = 62	CES37 = 95	CES62 = 78	CES87 = 91
CES13 = 42	CES38 = 78	CES63 = 87	CES88 = 95
CES14 = 74	CES39 = 97	CES64 = 81	CES89 = 88
CES15 = 71	CES40 = 97	CES65 = 84	CES90 = 93
CES16 = 46	CES41 = 92	CES66 = 78	CES91 = 70
CES17 = 49	CES42 = 96	CES67 = 77	CES92 = 78
CES18 = 56	CES43 = 95	CES68 = 82	CES93 = 86
CES19 = 70	CES44 = 99	CES69 = 84	CES94 = 81
CES20 = 65	CES45 = 97	CES70 = 81	CES95 = 81
CES21 = 85	CES46 = 95	CES71 = 73	CES96 = 92
CES22 = 77	CES47 = 91	CES72 = 91	CES97 = 94
CES23 = 91	CES48 = 85	CES73 = 77	CES98 = 92
CES24 = 90	CES49 = 95	CES74 = 89	CES99 = 90
CES25 = 70	CES50 = 93	CES75 = 77	



REPORT NUMBER: SP1-2307-100-9

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2307-100-9

TM-30-18

Measure Comparisons



(END OF REPORT)