

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P830767

Luminaire Tested: **OHBL-72SE-MFL-UNV-L830-CD**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P830767
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2106-285-1)
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-72SE-MFL-UNV-L830-CD
Description: 72000 LUMEN OHBL SE LED LUMINAIRE WITH 80CRI, 3000K LEDS AND MEDIUM FROSTED LENS
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 64416.0 lumens
Efficiency: N/A
Efficacy: 155.7 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.29 / 1.38
Luminous Opening: Rectangular w/ Sides (W: 1.8' x L: 3.78' x H: 0.17')
CIE Type: Direct

Input Watts (W): 413.7
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P830767

CATALOG NUMBER: OHBL-72SE-MFL-UNV-L830-CD

Luminous Intensity Polar Plot

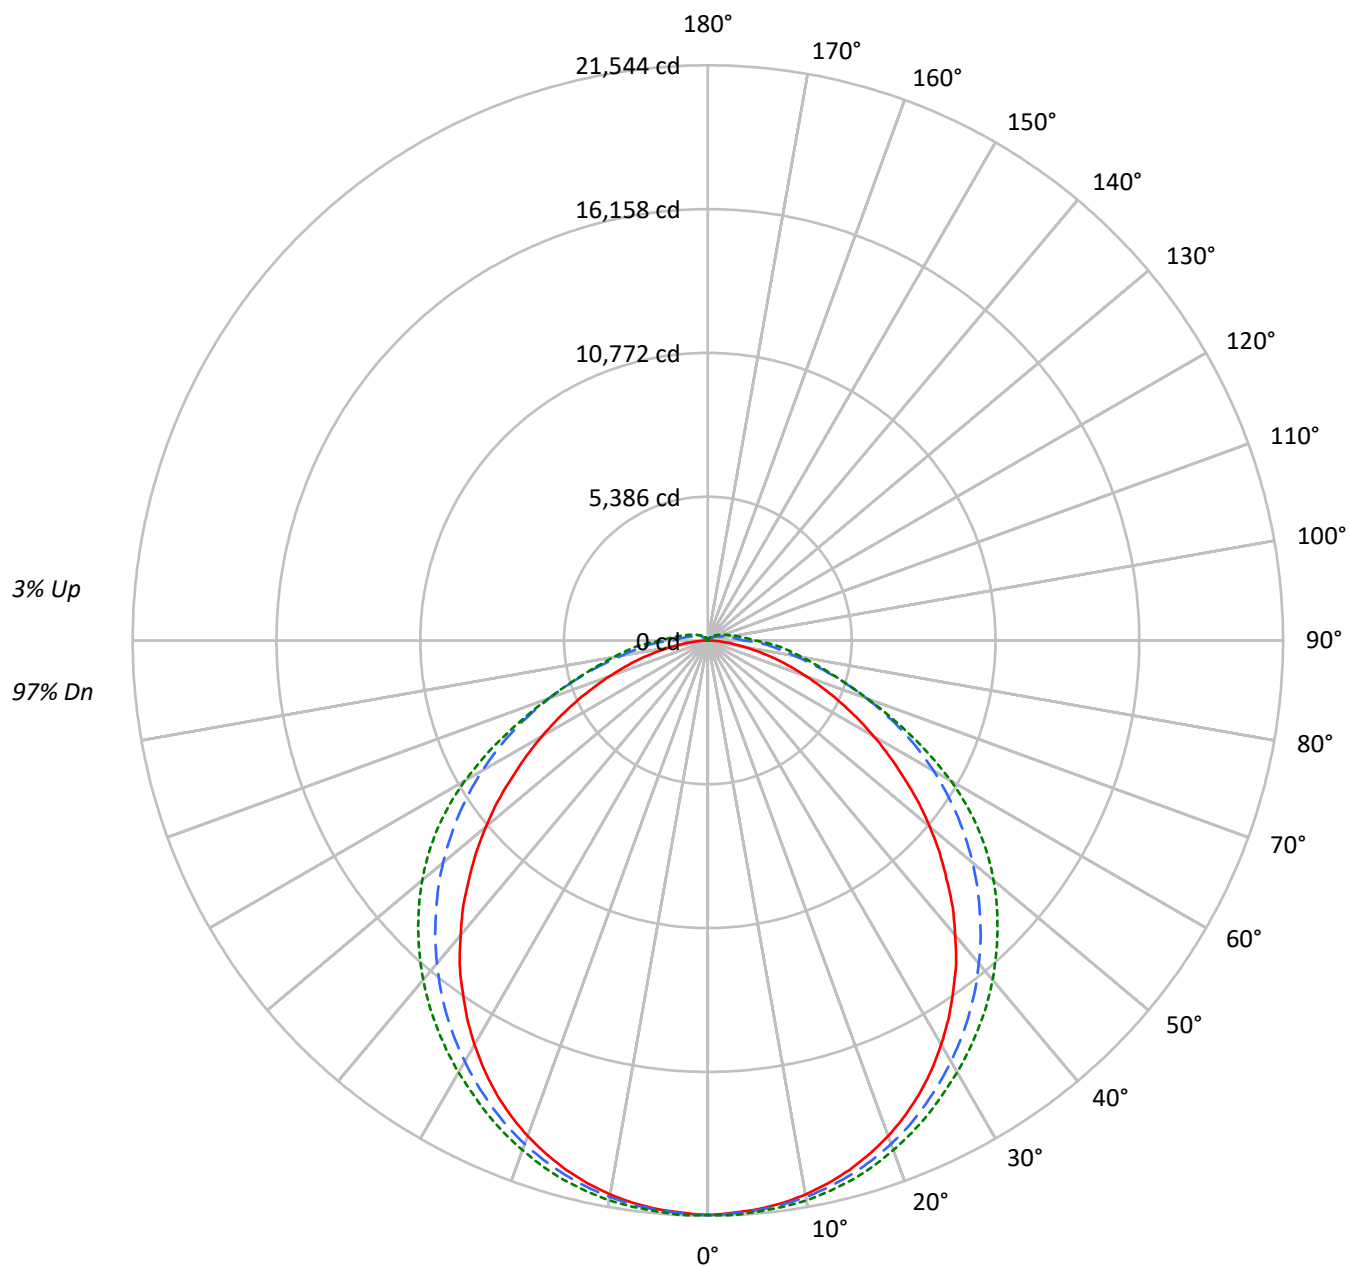



TEST NUMBER: P830767

CATALOG NUMBER: OHBL-72SE-MFL-UNV-L830-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	118	118	118	118	115	115	115	115	109	109	109	104	104	104	99	99	99	99	99	97
1	107	102	98	94	104	100	96	92	95	91	88	90	88	85	86	84	82	82	82	80
2	98	89	82	76	95	87	80	75	83	77	73	79	74	71	75	72	68	68	68	66
3	89	78	70	63	86	76	69	62	73	66	61	70	64	59	67	62	58	58	58	56
4	81	69	60	53	79	68	59	53	65	57	52	62	56	51	59	54	50	50	50	47
5	75	62	53	46	72	60	52	46	58	50	45	56	49	44	53	48	43	43	43	41
6	69	56	47	40	67	54	46	40	52	45	39	50	44	39	48	43	38	38	38	36
7	64	50	42	35	62	49	41	35	48	40	35	46	39	34	44	38	34	34	34	32
8	60	46	37	31	58	45	37	31	43	36	31	42	35	31	41	35	30	30	30	28
9	56	42	34	28	54	41	34	28	40	33	28	39	32	28	37	32	27	27	27	25
10	52	39	31	26	51	38	31	26	37	30	25	36	29	25	35	29	25	25	25	23

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	34039	34039	34039
5°	33821	33716	33819
10°	33584	33419	33642
15°	33209	33064	33410
20°	32711	32629	33070
25°	32046	32085	32725
30°	31125	31496	32379
35°	30010	30871	32080
40°	28671	30147	31786
45°	27092	29360	31410
50°	25365	28565	30954
55°	23242	27592	30183
60°	21067	26446	28644
65°	18694	24981	26116
70°	16120	23114	23378
75°	13516	20957	21527
80°	10247	19398	21357
85°	6483	20162	23866



TEST NUMBER: P830767

CATALOG NUMBER: OHBL-72SE-MFL-UNV-L830-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	2039.5	3.2
10°-20°	5850.9	9.1
20°-30°	8848.5	13.7
30°-40°	10622.7	16.5
40°-50°	10971.5	17.0
50°-60°	9870.9	15.3
60°-70°	7435.6	11.5
70°-80°	4489.9	7.0
80°-90°	2195.9	3.4
90°-100°	924.3	1.4
100°-110°	527.6	0.8
110°-120°	309.7	0.5
120°-130°	175.2	0.3
130°-140°	92.2	0.1
140°-150°	44.8	0.1
150°-160°	16.7	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	16738.9	26.0
0°-40°	27361.6	42.5
0°-60°	48204.0	74.8
0°-90°	62325.4	96.8
90°-120°	1761.7	2.7
90°-150°	2073.9	3.2
90°-180°	2091.0	3.2
0°-180°	64416.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	21523	21523	21523	21523	21523	
5°	21386	21444	21418	21502	21476	###
15°	20523	20623	20718	20891	20912	5786
25°	18742	18948	19216	19516	19564	8621
35°	16024	16398	17072	17588	17694	10017
45°	12648	13285	14396	15181	15344	9764
55°	8960	9887	11389	12247	12395	8034
65°	5468	6584	8059	8460	8365	5432
75°	2576	3698	4667	4788	4741	2748
85°	537	1417	2339	2660	2708	621
90°	0	553	1338	1686	1754	34
95°	26	374	1001	1275	1322	22
105°	37	216	579	758	790	37
115°	42	121	358	479	500	43
125°	42	58	216	311	327	38
135°	37	47	111	190	211	29
145°	53	47	53	95	111	31
155°	53	58	53	47	53	16
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P830767

CATALOG NUMBER: OHBL-72SE-MFL-UNV-L830-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	21523.4	21523.4	21523.4	21523.4	21523.4
2.5°	21460.2	21512.9	21481.3	21549.8	21544.5
5°	21386.5	21444.4	21418.1	21502.4	21476.0
7.5°	21260.1	21323.3	21318.0	21412.8	21402.3
10°	21075.7	21144.2	21165.2	21291.7	21291.7
12.5°	20822.8	20912.4	20965.1	21117.8	21123.1
15°	20522.6	20622.7	20717.5	20891.3	20912.4
17.5°	20159.1	20285.5	20417.2	20617.4	20643.7
20°	19748.3	19890.5	20069.6	20280.3	20311.9
22.5°	19274.2	19442.7	19674.5	19922.1	19959.0
25°	18742.1	18947.6	19216.2	19516.5	19563.9
27.5°	18136.4	18373.4	18736.9	19074.0	19116.1
30°	17477.9	17757.1	18210.1	18610.4	18678.9
32.5°	16782.6	17103.9	17662.3	18110.0	18204.8
35°	16024.1	16398.1	17072.3	17588.5	17693.9
37.5°	15276.1	15686.9	16450.7	17040.7	17167.1
40°	14401.6	14912.6	15787.0	16440.2	16593.0
42.5°	13579.9	14133.0	15123.3	15834.4	15981.9
45°	12647.5	13284.9	14396.4	15181.2	15344.5
47.5°	11773.1	12463.2	13695.8	14507.0	14675.5
50°	10851.3	11609.8	12947.8	13795.9	13969.7
52.5°	9929.4	10745.9	12173.4	13053.1	13216.4
55°	8960.2	9887.3	11388.6	12247.2	12394.7
57.5°	8059.4	9039.2	10582.6	11399.1	11488.6
60°	7169.2	8185.9	9760.9	10477.3	10508.9
62.5°	6300.1	7369.4	8918.1	9487.0	9444.8
65°	5467.8	6584.5	8059.4	8459.8	8365.0
67.5°	4667.1	5820.7	7179.7	7437.9	7311.4
70°	3908.6	5078.0	6326.4	6458.1	6342.2
72.5°	3239.6	4372.1	5462.5	5573.1	5488.8
75°	2575.9	3697.9	4667.1	4788.3	4740.8
77.5°	1954.3	3044.7	3934.9	4092.9	4103.5
80°	1406.5	2449.4	3297.5	3545.1	3576.7
82.5°	927.1	1901.6	2765.5	3081.5	3129.0
85°	537.3	1417.0	2338.8	2660.1	2707.5
87.5°	231.8	1021.9	1880.5	2170.3	2228.2
90°	0.0	553.1	1338.0	1685.6	1754.1
92.5°	15.8	458.3	1148.3	1464.4	1522.3
95°	26.3	374.0	1000.8	1274.8	1322.2
97.5°	31.6	316.1	869.2	1111.5	1158.9
100°	31.6	273.9	753.3	974.5	1016.6
102.5°	31.6	242.3	658.5	853.4	890.2
105°	36.9	216.0	579.4	758.5	790.1



TEST NUMBER: P830767

CATALOG NUMBER: OHBL-72SE-MFL-UNV-L830-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	42.1	142.2	400.3	537.3	558.4
115°	42.1	121.2	358.2	479.4	500.4
117.5°	47.4	105.4	316.1	431.9	447.7
120°	47.4	89.5	279.2	384.5	405.6
122.5°	47.4	73.7	247.6	347.7	363.5
125°	42.1	57.9	216.0	310.8	326.6
127.5°	36.9	47.4	184.4	279.2	295.0
130°	36.9	42.1	158.0	247.6	263.4
132.5°	36.9	47.4	131.7	216.0	237.0
135°	36.9	47.4	110.6	189.6	210.7
137.5°	36.9	47.4	89.5	163.3	184.4
140°	42.1	47.4	73.7	137.0	158.0
142.5°	47.4	47.4	57.9	115.9	131.7
145°	52.7	47.4	52.7	94.8	110.6
147.5°	52.7	52.7	52.7	73.7	89.5
150°	52.7	57.9	52.7	57.9	73.7
152.5°	52.7	57.9	52.7	47.4	57.9
155°	52.7	57.9	52.7	47.4	52.7
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	36.9	189.6	511.0	674.3	700.6
110°	36.9	168.6	453.0	600.5	626.8



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2307-100-4

Test Date: 07/27/2023

Luminaire Tested: OHB-15SE-N-UNV-L830-CD

Data in this report applies to families of products including OHB-15SE-N-UNV-L830-CD.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2307-100-4
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 08/04/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L830-CD**
 Description: 15000 LUMEN OHB SE LED LUMINAIRE WITH 80CRI, 3000K LEDS AND NARROW LENS

LENS

Spectral Parameters

CCT (K):	3094	CRI (Ra):	83.1		
CIE u':	0.2471	R1:	81.4	R9:	8.0
CIE v':	0.5200	R2:	91.2	R10:	80.2
Duv:	0.0004	R3:	96.3	R11:	80.9
CIE x:	0.4308	R4:	81.2	R12:	72.3
CIE y:	0.4028	R5:	81.8	R13:	83.8
CIE z:	0.1664	R6:	89.5	R14:	98.6
Peak Wavelength (nm):	601	R7:	83.2		
Dominant Wavelength (nm):	582	R8:	59.8		
Purity:	50.4				
Rf:	85.5				
Rg:	95.7				



Test Conditions

Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/57%
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2307-100-4

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2307-100-4

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2307-100-4

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5588	NR	490	67760	NR	620	245592	NR	750	12500	NR	880	5775	NR
365	4653	NR	495	80150	NR	625	233690	NR	755	11226	NR	885	6968	NR
370	4816	NR	500	92862	NR	630	218514	NR	760	10108	NR	890	4448	NR
375	5382	NR	505	106466	NR	635	203332	NR	765	9635	NR	895	3971	NR
380	5471	NR	510	115999	NR	640	188047	NR	770	8591	NR	900	4881	NR
385	5274	NR	515	124150	NR	645	172926	NR	775	7303	NR	905	5743	NR
390	4889	NR	520	130163	NR	650	155620	NR	780	6289	NR	910	5113	NR
395	4299	NR	525	135224	NR	655	141125	NR	785	5911	NR	915	4407	NR
400	4023	NR	530	140755	NR	660	126216	NR	790	5635	NR	920	4245	NR
405	3768	NR	535	146504	NR	665	111397	NR	795	5646	NR	925	3908	NR
410	4601	NR	540	152733	NR	670	97878	NR	800	5673	NR	930	5417	NR
415	6365	NR	545	159328	NR	675	85741	NR	805	5281	NR	935	4964	NR
420	9813	NR	550	166801	NR	680	74760	NR	810	5525	NR	940	3949	NR
425	16211	NR	555	175954	NR	685	65227	NR	815	4927	NR	945	4140	NR
430	25392	NR	560	187354	NR	690	56436	NR	820	5126	NR	950	3965	NR
435	39464	NR	565	198482	NR	695	48938	NR	825	4905	NR	955	4799	NR
440	61997	NR	570	210996	NR	700	42760	NR	830	5269	NR	960	3231	NR
445	101388	NR	575	223758	NR	705	37659	NR	835	4331	NR	965	3690	NR
450	140880	NR	580	236632	NR	710	33026	NR	840	4092	NR	970	6116	NR
455	134821	NR	585	248639	NR	715	29202	NR	845	4761	NR	975	5312	NR
460	103575	NR	590	256555	NR	720	25763	NR	850	4730	NR	980	4400	NR
465	86441	NR	595	264551	NR	725	22755	NR	855	4934	NR	985	4764	NR
470	70678	NR	600	268886	NR	730	20059	NR	860	5495	NR	990	4803	NR
475	58575	NR	605	267857	NR	735	17717	NR	865	5241	NR	995	3507	NR
480	55102	NR	610	262898	NR	740	15495	NR	870	5223	NR	1000	6247	NR
485	58801	NR	615	255346	NR	745	14094	NR	875	5501	NR			

REPORT NUMBER: SP1-2307-100-4

Scotopic Flux vs. Wavelength



Scotopic Lumens: 18580

S/P: 1.39

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5588	NR	490	67760	NR	620	245592	NR	750	12500	NR	880	5775	NR
365	4653	NR	495	80150	NR	625	233690	NR	755	11226	NR	885	6968	NR
370	4816	NR	500	92862	NR	630	218514	NR	760	10108	NR	890	4448	NR
375	5382	NR	505	106466	NR	635	203332	NR	765	9635	NR	895	3971	NR
380	5471	NR	510	115999	NR	640	188047	NR	770	8591	NR	900	4881	NR
385	5274	NR	515	124150	NR	645	172926	NR	775	7303	NR	905	5743	NR
390	4889	NR	520	130163	NR	650	155620	NR	780	6289	NR	910	5113	NR
395	4299	NR	525	135224	NR	655	141125	NR	785	5911	NR	915	4407	NR
400	4023	NR	530	140755	NR	660	126216	NR	790	5635	NR	920	4245	NR
405	3768	NR	535	146504	NR	665	111397	NR	795	5646	NR	925	3908	NR
410	4601	NR	540	152733	NR	670	97878	NR	800	5673	NR	930	5417	NR
415	6365	NR	545	159328	NR	675	85741	NR	805	5281	NR	935	4964	NR
420	9813	NR	550	166801	NR	680	74760	NR	810	5525	NR	940	3949	NR
425	16211	NR	555	175954	NR	685	65227	NR	815	4927	NR	945	4140	NR
430	25392	NR	560	187354	NR	690	56436	NR	820	5126	NR	950	3965	NR
435	39464	NR	565	198482	NR	695	48938	NR	825	4905	NR	955	4799	NR
440	61997	NR	570	210996	NR	700	42760	NR	830	5269	NR	960	3231	NR
445	101388	NR	575	223758	NR	705	37659	NR	835	4331	NR	965	3690	NR
450	140880	NR	580	236632	NR	710	33026	NR	840	4092	NR	970	6116	NR
455	134821	NR	585	248639	NR	715	29202	NR	845	4761	NR	975	5312	NR
460	103575	NR	590	256555	NR	720	25763	NR	850	4730	NR	980	4400	NR
465	86441	NR	595	264551	NR	725	22755	NR	855	4934	NR	985	4764	NR
470	70678	NR	600	268886	NR	730	20059	NR	860	5495	NR	990	4803	NR
475	58575	NR	605	267857	NR	735	17717	NR	865	5241	NR	995	3507	NR
480	55102	NR	610	262898	NR	740	15495	NR	870	5223	NR	1000	6247	NR
485	58801	NR	615	255346	NR	745	14094	NR	875	5501	NR			

REPORT NUMBER: SP1-2307-100-4

Melanopic Flux vs. Wavelength



Melanopic Lumens: 7125.5

M/P: 0.53

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5588	NR	490	67760	NR	620	245592	NR	750	12500	NR	880	5775	NR
365	4653	NR	495	80150	NR	625	233690	NR	755	11226	NR	885	6968	NR
370	4816	NR	500	92862	NR	630	218514	NR	760	10108	NR	890	4448	NR
375	5382	NR	505	106466	NR	635	203332	NR	765	9635	NR	895	3971	NR
380	5471	NR	510	115999	NR	640	188047	NR	770	8591	NR	900	4881	NR
385	5274	NR	515	124150	NR	645	172926	NR	775	7303	NR	905	5743	NR
390	4889	NR	520	130163	NR	650	155620	NR	780	6289	NR	910	5113	NR
395	4299	NR	525	135224	NR	655	141125	NR	785	5911	NR	915	4407	NR
400	4023	NR	530	140755	NR	660	126216	NR	790	5635	NR	920	4245	NR
405	3768	NR	535	146504	NR	665	111397	NR	795	5646	NR	925	3908	NR
410	4601	NR	540	152733	NR	670	97878	NR	800	5673	NR	930	5417	NR
415	6365	NR	545	159328	NR	675	85741	NR	805	5281	NR	935	4964	NR
420	9813	NR	550	166801	NR	680	74760	NR	810	5525	NR	940	3949	NR
425	16211	NR	555	175954	NR	685	65227	NR	815	4927	NR	945	4140	NR
430	25392	NR	560	187354	NR	690	56436	NR	820	5126	NR	950	3965	NR
435	39464	NR	565	198482	NR	695	48938	NR	825	4905	NR	955	4799	NR
440	61997	NR	570	210996	NR	700	42760	NR	830	5269	NR	960	3231	NR
445	101388	NR	575	223758	NR	705	37659	NR	835	4331	NR	965	3690	NR
450	140880	NR	580	236632	NR	710	33026	NR	840	4092	NR	970	6116	NR
455	134821	NR	585	248639	NR	715	29202	NR	845	4761	NR	975	5312	NR
460	103575	NR	590	256555	NR	720	25763	NR	850	4730	NR	980	4400	NR
465	86441	NR	595	264551	NR	725	22755	NR	855	4934	NR	985	4764	NR
470	70678	NR	600	268886	NR	730	20059	NR	860	5495	NR	990	4803	NR
475	58575	NR	605	267857	NR	735	17717	NR	865	5241	NR	995	3507	NR
480	55102	NR	610	262898	NR	740	15495	NR	870	5223	NR	1000	6247	NR
485	58801	NR	615	255346	NR	745	14094	NR	875	5501	NR			

REPORT NUMBER: SP1-2307-100-4

TM-30-18

Summary

$R_f = 85.5$
 $R_g = 95.7$
 $CIE R_a = 83.1$
 $R_9 = 8.0$



Color Vector Graphics



REPORT NUMBER: SP1-2307-100-4

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)


CES01 = 86	CES26 = 85	CES51 = 94	CES76 = 81
CES02 = 63	CES27 = 94	CES52 = 94	CES77 = 85
CES03 = 31	CES28 = 94	CES53 = 90	CES78 = 81
CES04 = 70	CES29 = 89	CES54 = 91	CES79 = 91
CES05 = 49	CES30 = 96	CES55 = 90	CES80 = 90
CES06 = 51	CES31 = 90	CES56 = 87	CES81 = 74
CES07 = 42	CES32 = 83	CES57 = 86	CES82 = 96
CES08 = 41	CES33 = 94	CES58 = 87	CES83 = 95
CES09 = 29	CES34 = 91	CES59 = 92	CES84 = 92
CES10 = 76	CES35 = 95	CES60 = 92	CES85 = 77
CES11 = 59	CES36 = 87	CES61 = 89	CES86 = 70
CES12 = 65	CES37 = 95	CES62 = 90	CES87 = 85
CES13 = 43	CES38 = 94	CES63 = 88	CES88 = 88
CES14 = 74	CES39 = 98	CES64 = 82	CES89 = 76
CES15 = 71	CES40 = 96	CES65 = 80	CES90 = 89
CES16 = 47	CES41 = 98	CES66 = 80	CES91 = 79
CES17 = 50	CES42 = 96	CES67 = 79	CES92 = 66
CES18 = 56	CES43 = 91	CES68 = 82	CES93 = 79
CES19 = 72	CES44 = 99	CES69 = 87	CES94 = 63
CES20 = 66	CES45 = 94	CES70 = 79	CES95 = 75
CES21 = 87	CES46 = 91	CES71 = 77	CES96 = 84
CES22 = 79	CES47 = 94	CES72 = 92	CES97 = 90
CES23 = 92	CES48 = 85	CES73 = 75	CES98 = 86
CES24 = 91	CES49 = 91	CES74 = 92	CES99 = 77
CES25 = 72	CES50 = 95	CES75 = 79	



REPORT NUMBER: SP1-2307-100-4

TM-30-18

Color Rendition by Hue-Angle Bin

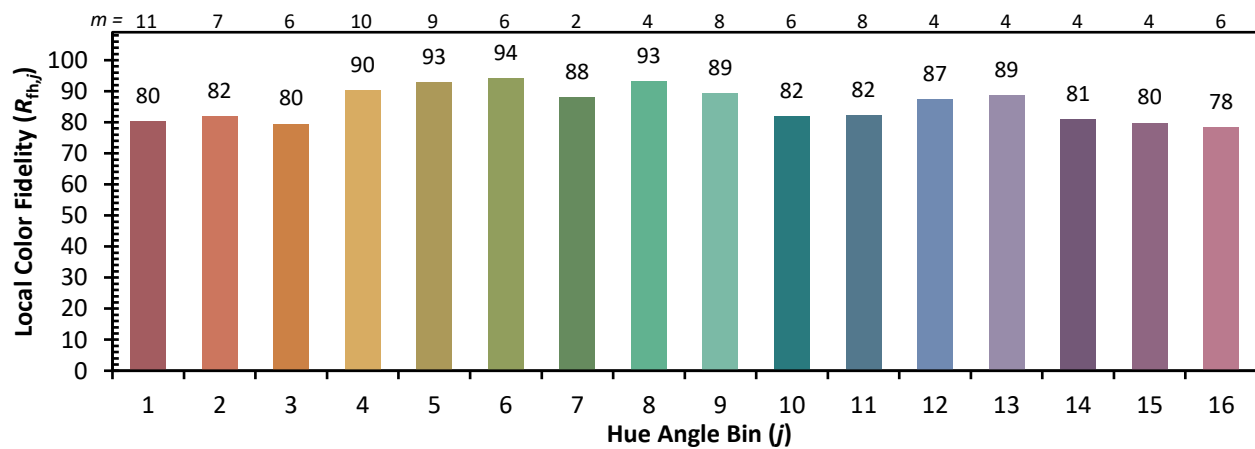

REPORT NUMBER: SP1-2307-100-4

TM-30-18

Measure Comparisons



(END OF REPORT)