

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P827794

Luminaire Tested: **OHBL-36HE-N-UNV-L930-CD-UPL36**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P827794
REPORT IS A COMBINATION OF REPORTS P826314 AND G3-2310-221-2
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-36HE-N-UNV-L930-CD-UPL36
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 30965.0 lumens
Efficiency: N/A
Efficacy: 128.6 lumens/watt
Spacing Criteria (0/90/45): 1.47 / 0.53 / 0.78
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 1.8' x H: 0.17')
CIE Type: Semi-Direct

Input Watts (W): 240.8
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P827794

CATALOG NUMBER: OHBL-36HE-N-UNV-L930-CD-UPL36

Luminous Intensity Polar Plot

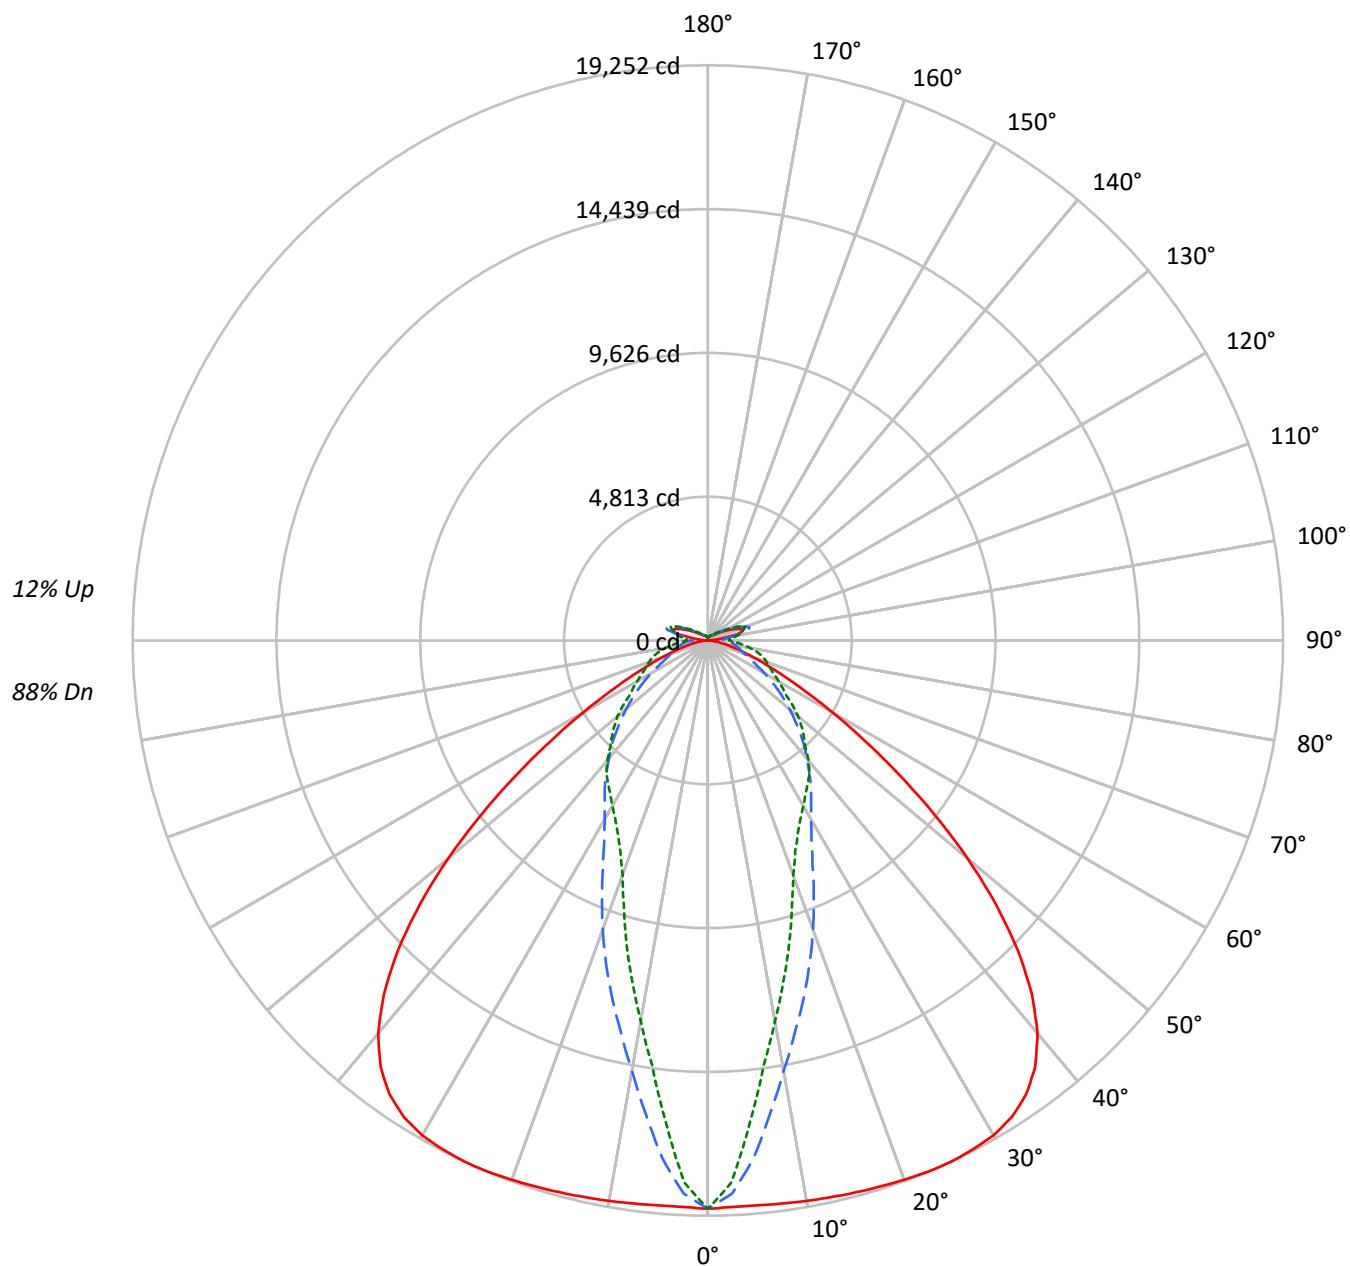



TEST NUMBER: P827794

CATALOG NUMBER: OHBL-36HE-N-UNV-L930-CD-UPL36

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	116	116	116	116	112	112	112	112	104	104	104	97	97	97	91	91	91	88		
1	107	102	98	95	103	99	95	92	92	90	87	86	84	82	81	79	78	75		
2	98	91	84	79	94	88	82	77	82	78	74	77	74	70	73	70	67	64		
3	90	81	74	68	87	78	72	66	74	68	64	69	65	61	65	62	58	56		
4	83	73	65	59	80	71	63	58	67	60	56	63	58	54	59	55	52	49		
5	77	66	58	52	75	64	56	51	61	54	49	57	52	48	54	50	46	44		
6	72	60	52	46	69	58	51	45	55	49	44	53	47	43	50	45	41	39		
7	67	55	47	41	65	53	46	41	51	44	40	48	43	38	46	41	37	35		
8	63	50	43	37	61	49	42	37	47	40	36	45	39	35	43	38	34	32		
9	59	47	39	34	57	46	38	34	44	37	33	42	36	32	40	35	31	29		
10	56	43	36	31	54	42	35	31	41	34	30	39	33	29	37	32	29	27		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	30077	30077	30077
5°	29890	27403	25591
10°	30099	23093	20620
15°	30555	19759	17009
20°	31273	16715	13828
25°	32203	13842	12182
30°	33150	11931	11382
35°	33654	10880	10912
40°	32878	9834	10425
45°	30038	8893	9728
50°	25139	7863	9215
55°	18918	6894	8292
60°	13099	5919	8048
65°	8675	5105	8020
70°	5798	4801	8623
75°	3896	4966	9554
80°	2540	5526	10458
85°	1325	6975	12470



TEST NUMBER: P827794

CATALOG NUMBER: OHBL-36HE-N-UNV-L930-CD-UPL36

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1601.0	5.2
10°-20°	3766.2	12.2
20°-30°	4720.8	15.2
30°-40°	5009.3	16.2
40°-50°	4529.2	14.6
50°-60°	3284.0	10.6
60°-70°	2060.9	6.7
70°-80°	1363.8	4.4
80°-90°	791.9	2.6
90°-100°	603.0	1.9
100°-110°	1270.0	4.1
110°-120°	995.8	3.2
120°-130°	473.1	1.5
130°-140°	235.9	0.8
140°-150°	136.5	0.4
150°-160°	77.1	0.2
160°-170°	35.6	0.1
170°-180°	10.9	0.0
0°-30°	10088.0	32.6
0°-40°	15097.3	48.8
0°-60°	22910.6	74.0
0°-90°	27127.2	87.6
90°-120°	2868.8	9.3
90°-150°	3714.2	12.0
90°-180°	3838.0	12.4
0°-180°	30965.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	19018	19018	19018	19018	19018	
5°	18980	18494	17408	16600	16182	###
15°	19125	15588	12381	11011	10511	5424
25°	19252	12053	8290	7358	7124	8894
35°	18562	8013	6017	5828	5827	11539
45°	14674	5075	4360	4466	4542	11179
55°	7769	3146	2845	3086	3197	7019
65°	2778	1825	1647	2111	2346	2891
75°	858	983	1106	1718	1821	956
85°	150	407	809	1126	1034	180
90°	6	210	520	719	725	14
95°	57	220	546	731	769	193
105°	1208	1271	1421	1232	1162	1149
115°	852	877	1030	1087	1084	861
125°	432	453	537	557	547	405
135°	261	270	300	328	328	206
145°	198	204	212	228	227	126
155°	164	172	176	180	176	73
165°	122	124	124	125	126	35
175°	112	112	112	112	113	11
180°	110	110	110	110	110	



TEST NUMBER: P827794

CATALOG NUMBER: OHBL-36HE-N-UNV-L930-CD-UPL36

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	19018.5	19018.5	19018.5	19018.5	19018.5
2.5°	18978.7	18870.1	18531.6	18325.2	18151.4
5°	18980.5	18493.6	17407.5	16600.3	16182.1
7.5°	19007.6	17925.2	15968.5	14790.2	14330.4
10°	19049.3	17221.1	14625.4	13369.3	12940.3
12.5°	19080.1	16428.2	13443.5	12152.9	11682.3
15°	19125.3	15588.4	12380.9	11010.7	10511.2
17.5°	19167.0	14797.4	11331.1	9899.3	9343.6
20°	19208.6	13944.9	10281.3	8806.1	8348.1
22.5°	19248.4	13045.2	9256.7	7957.1	7643.9
25°	19252.0	12053.3	8290.2	7357.9	7124.5
27.5°	19204.9	11025.2	7506.4	6856.6	6711.8
30°	19123.5	10027.9	6898.2	6494.6	6391.4
32.5°	18920.7	9010.6	6427.6	6145.2	6085.5
35°	18562.3	8013.3	6016.7	5828.5	5826.6
37.5°	17997.6	7128.1	5571.4	5538.9	5578.6
40°	17163.2	6353.3	5149.6	5236.5	5236.5
42.5°	16049.9	5680.0	4767.7	4856.5	4832.9
45°	14674.3	5075.4	4360.5	4465.5	4541.5
47.5°	13079.6	4543.3	3944.2	4146.9	4251.9
50°	11345.6	4036.5	3564.0	3822.9	3942.3
52.5°	9528.2	3567.7	3193.0	3489.8	3585.8
55°	7768.9	3146.0	2845.4	3086.2	3196.6
57.5°	6176.0	2744.0	2505.2	2733.2	2961.3
60°	4805.8	2398.3	2184.8	2510.6	2738.6
62.5°	3670.8	2090.7	1884.3	2302.5	2530.5
65°	2778.5	1824.6	1647.1	2110.6	2345.9
67.5°	2094.2	1594.7	1462.5	1971.2	2201.1
70°	1572.9	1372.1	1314.1	1884.3	2090.7
72.5°	1162.1	1167.5	1196.5	1808.2	1965.8
75°	858.0	982.9	1106.0	1717.8	1820.9
77.5°	613.6	814.6	1024.5	1609.1	1645.4
80°	425.3	664.3	939.4	1466.2	1435.4
82.5°	266.1	532.1	863.4	1308.7	1223.6
85°	150.3	407.2	809.1	1125.8	1033.5
87.5°	67.0	304.1	707.8	877.8	820.0
90°	6.5	209.8	519.8	718.9	725.2
92.5°	23.8	189.7	494.9	682.2	705.1
95°	57.4	219.7	546.1	730.9	769.1
97.5°	311.4	430.0	669.5	858.4	899.5
100°	659.9	760.2	873.1	1000.2	1034.5
102.5°	1029.6	1117.5	1142.4	1110.4	1100.6
105°	1208.4	1271.1	1420.8	1231.6	1161.7



TEST NUMBER: P827794

CATALOG NUMBER: OHBL-36HE-N-UNV-L930-CD-UPL36

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	996.2	1042.0	1197.9	1254.4	1237.6
115°	852.5	877.4	1030.5	1086.8	1084.1
117.5°	733.9	753.0	887.9	929.9	922.9
120°	620.7	642.4	759.1	785.8	779.3
122.5°	518.1	543.8	640.0	662.7	650.4
125°	431.6	453.3	537.2	557.1	547.2
127.5°	371.5	380.0	451.0	472.4	470.5
130°	322.2	332.3	384.7	411.6	410.0
132.5°	286.5	296.6	337.2	365.0	367.4
135°	260.6	269.9	299.9	327.6	328.4
137.5°	239.6	249.9	269.2	296.7	297.5
140°	221.8	230.3	246.0	271.0	271.0
142.5°	209.0	215.7	227.0	247.5	247.5
145°	198.0	203.8	211.5	228.4	227.4
147.5°	188.3	195.1	201.0	210.8	209.8
150°	179.4	187.2	190.4	197.5	196.5
152.5°	171.3	179.1	182.4	186.8	185.8
155°	164.0	171.9	176.1	179.5	175.9
157.5°	135.8	138.2	140.6	141.5	141.5
160°	131.0	132.6	135.0	135.0	135.8
162.5°	126.1	127.7	129.3	130.1	131.0
165°	122.1	123.7	124.5	125.3	126.1
167.5°	118.8	119.6	120.4	121.2	121.2
170°	115.6	116.4	117.2	117.2	118.0
172.5°	113.2	114.0	114.8	114.8	114.8
175°	111.6	111.6	112.4	112.4	113.2
177.5°	109.9	110.7	110.7	110.7	111.6
180°	109.9	109.9	109.9	109.9	109.9



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	1219.7	1281.9	1453.7	1394.5	1266.5
110°	1128.6	1189.8	1355.8	1376.7	1325.5



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930

Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				



Test Conditions

Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 6505.3 M/P: 0.55

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$



Color Vector Graphics



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons



(END OF REPORT)