

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P827184

Luminaire Tested: **OHBL-30SE-NL-UNV-L840-CD-UPL30**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P827184
REPORT IS A COMBINATION OF REPORTS P826285 AND G3-2310-221-4
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-30SE-NL-UNV-L840-CD-UPL30
Description: 30000 LUMEN OHBL SE LED LUMINAIRE WITH 80CRI, 4000K LEDS AND NO LENS AND 3000 LUMEN UPLIGHT MODULE
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 33815.9 lumens
Efficiency: N/A
Efficacy: 171.5 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.28 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 1.67' x H: 0.1')
CIE Type: Direct

Input Watts (W): 197.2
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P827184

CATALOG NUMBER: OHBL-30SE-NL-UNV-L840-CD-UPL30

Luminous Intensity Polar Plot

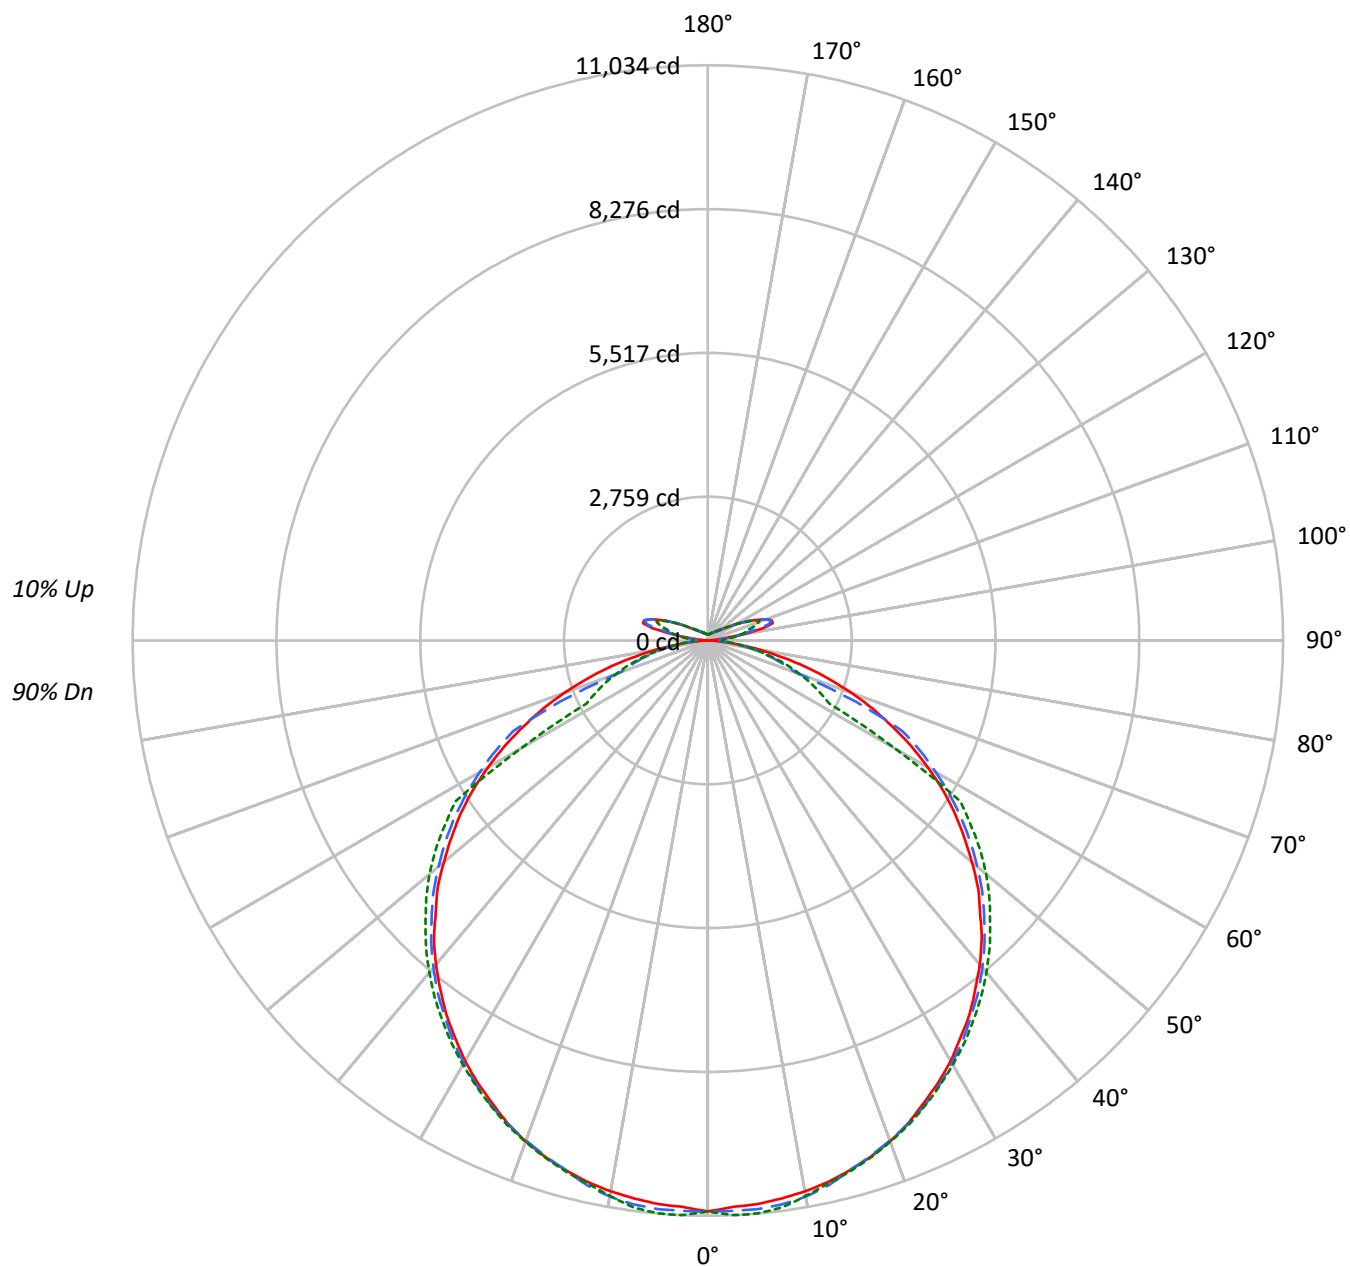



TEST NUMBER: P827184

CATALOG NUMBER: OHBL-30SE-NL-UNV-L840-CD-UPL30

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20					20					20					20					20
RC	80					70					50					30					10
RW	70	50	30	10		70	50	30	10		50	30	10		50	30	10		50	30	10
RCR																					
0	117	117	117	117		113	113	113	113		106	106	106		99	99	99		93	93	93
1	107	103	99	95		103	99	96	92		93	90	88		88	86	83		83	81	79
2	98	90	83	78		94	87	81	76		82	77	73		77	73	70		73	70	67
3	89	79	71	65		86	77	69	64		72	66	61		68	63	59		65	61	57
4	82	70	61	55		79	68	60	54		64	58	52		61	55	51		58	53	49
5	75	62	54	47		72	61	53	47		58	51	45		55	49	44		52	47	43
6	69	56	47	41		67	55	47	41		52	45	40		49	43	38		47	42	37
7	64	51	42	36		62	50	42	36		47	40	35		45	39	34		43	37	33
8	60	46	38	32		57	45	37	32		43	36	31		41	35	30		39	34	30
9	56	42	34	29		54	41	34	29		40	33	28		38	32	27		36	31	27
10	52	39	31	26		50	38	31	26		37	30	25		35	29	25		34	28	24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	18708	18708	18708
5°	18508	18673	18871
10°	18415	18587	18677
15°	18313	18304	18513
20°	18184	18150	18422
25°	17952	18035	18337
30°	17754	17834	18257
35°	17514	17597	18186
40°	17225	17373	18132
45°	16822	17058	18019
50°	16391	16704	17947
55°	15867	16254	17643
60°	15082	15590	13630
65°	13957	14737	9078
70°	12508	7577	8679
75°	10384	6847	8092
80°	7292	5728	7085
85°	2926	4589	6131



TEST NUMBER: P827184

CATALOG NUMBER: OHBL-30SE-NL-UNV-L840-CD-UPL30

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1040.6	3.1
10°-20°	2979.6	8.8
20°-30°	4533.7	13.4
30°-40°	5512.3	16.3
40°-50°	5795.9	17.1
50°-60°	5292.4	15.7
60°-70°	3392.7	10.0
70°-80°	1602.6	4.7
80°-90°	450.9	1.3
90°-100°	354.4	1.0
100°-110°	1102.4	3.3
110°-120°	890.0	2.6
120°-130°	415.8	1.2
130°-140°	209.6	0.6
140°-150°	122.5	0.4
150°-160°	71.8	0.2
160°-170°	37.3	0.1
170°-180°	11.4	0.0
0°-30°	8553.9	25.3
0°-40°	14066.2	41.6
0°-60°	25154.4	74.4
0°-90°	30600.7	90.5
90°-120°	2346.9	6.9
90°-150°	3094.8	9.2
90°-180°	3215.0	9.5
0°-180°	33815.9	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	10953	10953	10953	10953	10953	
5°	10852	10894	10950	11009	11032	###
15°	10523	10602	10521	10536	10544	2971
25°	9792	9808	9842	9858	9850	4519
35°	8753	8701	8801	8908	8883	5470
45°	7382	7369	7494	7671	7657	5706
55°	5785	5741	5935	6133	6148	5159
65°	3898	3898	4124	2366	2374	3864
75°	1926	1962	1274	1342	1347	2030
85°	252	319	398	431	407	372
90°	7	149	231	270	267	16
95°	63	171	267	348	361	209
105°	1287	1308	1219	923	814	1215
115°	892	895	900	898	869	891
125°	434	447	459	447	441	406
135°	255	260	266	271	271	201
145°	186	189	194	196	196	118
155°	149	152	154	156	156	70
165°	128	129	130	132	132	37
175°	116	117	117	118	118	11
180°	115	115	115	115	115	



TEST NUMBER: P827184

CATALOG NUMBER: OHBL-30SE-NL-UNV-L840-CD-UPL30

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	10953.4	10953.4	10953.4	10953.4	10953.4
2.5°	10876.5	10913.1	10953.4	11005.3	11034.0
5°	10851.5	10893.8	10949.6	11009.2	11032.2
7.5°	10797.8	10857.2	10911.1	10953.4	10966.9
10°	10730.4	10801.6	10832.4	10828.5	10818.9
12.5°	10640.1	10715.1	10705.6	10661.2	10669.0
15°	10522.9	10601.6	10521.0	10536.3	10544.0
17.5°	10384.5	10461.4	10367.2	10397.9	10399.9
20°	10223.1	10280.7	10207.7	10232.7	10232.7
22.5°	10029.0	10069.3	10038.6	10055.9	10059.7
25°	9792.5	9807.8	9842.4	9857.9	9850.1
27.5°	9565.9	9546.5	9613.9	9650.3	9631.0
30°	9313.9	9283.2	9362.0	9421.6	9398.6
32.5°	9025.6	9006.5	9096.8	9167.8	9154.4
35°	8752.7	8700.8	8800.8	8908.4	8883.4
37.5°	8429.8	8399.1	8512.4	8626.0	8612.5
40°	8114.6	8062.7	8191.5	8326.0	8312.6
42.5°	7776.4	7714.8	7855.2	8016.7	8001.3
45°	7382.3	7368.8	7493.8	7670.6	7657.2
47.5°	7032.7	6965.3	7140.1	7311.2	7326.7
50°	6609.6	6584.8	6744.3	6951.9	6967.1
52.5°	6196.5	6179.2	6346.3	6555.9	6582.8
55°	5785.1	5740.9	5935.1	6133.1	6148.5
57.5°	5345.2	5299.0	5497.0	5712.2	5744.8
60°	4874.1	4829.9	5047.1	5247.1	4172.7
62.5°	4403.2	4372.5	4599.4	3257.8	2625.6
65°	3897.8	3897.8	4124.4	2365.9	2373.7
67.5°	3425.1	3394.3	3075.3	2125.6	2125.6
70°	2917.6	2929.2	1772.0	1862.5	1864.3
72.5°	2408.3	2450.6	1530.0	1602.9	1606.7
75°	1925.8	1962.4	1274.2	1341.6	1347.3
77.5°	1414.6	1087.8	1024.3	1076.4	1078.3
80°	993.6	686.2	784.2	834.1	828.4
82.5°	580.3	480.4	574.6	611.3	609.2
85°	251.7	319.1	397.8	430.6	407.4
87.5°	80.6	198.0	247.8	267.2	265.1
90°	7.0	148.6	230.8	270.4	266.7
92.5°	21.0	135.4	219.8	273.3	277.1
95°	62.7	170.8	267.0	348.1	361.1
97.5°	351.9	386.3	390.3	483.5	526.4
100°	690.9	758.6	600.6	646.0	653.1
102.5°	1093.6	1130.9	898.4	775.5	747.5
105°	1286.6	1308.2	1218.7	922.7	813.9



TEST NUMBER: P827184

CATALOG NUMBER: OHBL-30SE-NL-UNV-L840-CD-UPL30

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	1035.6	1047.5	1054.2	1035.5	997.8
115°	891.6	895.4	900.1	898.4	868.8
117.5°	744.0	749.0	751.0	743.0	735.0
120°	626.0	635.0	633.0	627.0	619.0
122.5°	523.0	538.0	543.0	532.0	523.0
125°	434.0	447.0	459.0	447.0	441.0
127.5°	368.0	377.0	386.0	385.0	380.0
130°	317.0	325.0	335.0	337.0	336.0
132.5°	282.0	289.0	296.0	299.0	298.0
135°	255.0	260.0	266.0	271.0	271.0
137.5°	231.0	238.0	243.0	247.0	247.0
140°	214.0	219.0	224.0	226.0	227.0
142.5°	199.0	203.0	208.0	210.0	211.0
145°	186.0	189.0	194.0	196.0	196.0
147.5°	174.0	178.0	182.0	184.0	184.0
150°	165.0	168.0	172.0	173.0	174.0
152.5°	157.0	159.0	162.0	164.0	164.0
155°	149.0	152.0	154.0	156.0	156.0
157.5°	143.0	145.0	147.0	148.0	149.0
160°	138.0	139.0	141.0	142.0	143.0
162.5°	132.0	134.0	135.0	136.0	137.0
165°	128.0	129.0	130.0	132.0	132.0
167.5°	124.0	125.0	126.0	127.0	127.0
170°	121.0	122.0	123.0	123.0	123.0
172.5°	118.0	119.0	120.0	120.0	120.0
175°	116.0	117.0	117.0	118.0	118.0
177.5°	115.0	116.0	116.0	116.0	117.0
180°	115.0	115.0	115.0	115.0	115.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	1285.6	1313.1	1273.9	1109.3	957.7
110°	1181.6	1208.3	1189.0	1130.5	1046.8



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-1

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L840

Data in this report applies to families of products including OHB-15SE-N-UNV-L840.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L840**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 80CRI 4000K

Spectral Parameters

CCT (K):	4018	CRI (Ra):	84.0		
CIE u':	0.2242	R1:	82.5	R9:	11.5
CIE v':	0.5025	R2:	91.6	R10:	79.8
Duv:	0.0010	R3:	96.1	R11:	80.5
CIE x:	0.3803	R4:	81.4	R12:	64.0
CIE y:	0.3788	R5:	82.4	R13:	85.1
CIE z:	0.2410	R6:	88.0	R14:	98.4
Peak Wavelength (nm):	454	R7:	85.5		
Dominant Wavelength (nm):	578	R8:	64.7		
Purity:	27.9				
Rf:	84.5				
Rg:	93.7				



Test Conditions

Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.7/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-1

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-1

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

Scotopic Flux vs. Wavelength



Scotopic Lumens: 25258.1

S/P: 1.73

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

Melanopic Flux vs. Wavelength



Melanopic Lumens: 10357.9 M/P: 0.71

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	6853	NR	490	98921	NR	620	217813	NR	750	11077	NR	880	7212	NR
365	5941	NR	495	111249	NR	625	204757	NR	755	10374	NR	885	8336	NR
370	6345	NR	500	125186	NR	630	189812	NR	760	9527	NR	890	8299	NR
375	7044	NR	505	139782	NR	635	174714	NR	765	9227	NR	895	8295	NR
380	6587	NR	510	150374	NR	640	160641	NR	770	8071	NR	900	5725	NR
385	6443	NR	515	158837	NR	645	146146	NR	775	7303	NR	905	5085	NR
390	5977	NR	520	167163	NR	650	132087	NR	780	6839	NR	910	6133	NR
395	5473	NR	525	171514	NR	655	118817	NR	785	5988	NR	915	6429	NR
400	4874	NR	530	176783	NR	660	105411	NR	790	5761	NR	920	7354	NR
405	4470	NR	535	182412	NR	665	92911	NR	795	6396	NR	925	6889	NR
410	5232	NR	540	187578	NR	670	81240	NR	800	6049	NR	930	7465	NR
415	7030	NR	545	192635	NR	675	70762	NR	805	5748	NR	935	9430	NR
420	11074	NR	550	198282	NR	680	61913	NR	810	5571	NR	940	6867	NR
425	19121	NR	555	206255	NR	685	53742	NR	815	5977	NR	945	7026	NR
430	32148	NR	560	213621	NR	690	46348	NR	820	6580	NR	950	9476	NR
435	54073	NR	565	222021	NR	695	40313	NR	825	6610	NR	955	8237	NR
440	89242	NR	570	230974	NR	700	35240	NR	830	6652	NR	960	7127	NR
445	153497	NR	575	237268	NR	705	30635	NR	835	5919	NR	965	5614	NR
450	236793	NR	580	244317	NR	710	27359	NR	840	5707	NR	970	9396	NR
455	259282	NR	585	250340	NR	715	24401	NR	845	5548	NR	975	9700	NR
460	209272	NR	590	252316	NR	720	21810	NR	850	5560	NR	980	8916	NR
465	162456	NR	595	253019	NR	725	19005	NR	855	6972	NR	985	9548	NR
470	132627	NR	600	252244	NR	730	17009	NR	860	8311	NR	990	10271	NR
475	106283	NR	605	246798	NR	735	14940	NR	865	6330	NR	995	7323	NR
480	91347	NR	610	238764	NR	740	13159	NR	870	8019	NR	1000	8719	NR
485	91575	NR	615	229100	NR	745	12000	NR	875	7419	NR			

REPORT NUMBER: SP1-2304-001-1

TM-30-18

Summary

$R_f = 84.5$
 $R_g = 93.7$
 CIE $R_a = 84.0$
 $R_9 = 11.5$



Color Vector Graphics



REPORT NUMBER: SP1-2304-001-1

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 85	CES26 = 88	CES51 = 91	CES76 = 81
CES02 = 61	CES27 = 90	CES52 = 93	CES77 = 85
CES03 = 31	CES28 = 94	CES53 = 89	CES78 = 80
CES04 = 69	CES29 = 93	CES54 = 88	CES79 = 93
CES05 = 48	CES30 = 87	CES55 = 85	CES80 = 91
CES06 = 50	CES31 = 95	CES56 = 84	CES81 = 78
CES07 = 41	CES32 = 88	CES57 = 82	CES82 = 96
CES08 = 40	CES33 = 96	CES58 = 82	CES83 = 96
CES09 = 29	CES34 = 92	CES59 = 91	CES84 = 91
CES10 = 74	CES35 = 95	CES60 = 88	CES85 = 77
CES11 = 57	CES36 = 77	CES61 = 86	CES86 = 74
CES12 = 63	CES37 = 95	CES62 = 78	CES87 = 84
CES13 = 42	CES38 = 81	CES63 = 85	CES88 = 88
CES14 = 74	CES39 = 98	CES64 = 77	CES89 = 78
CES15 = 71	CES40 = 97	CES65 = 77	CES90 = 89
CES16 = 47	CES41 = 94	CES66 = 74	CES91 = 68
CES17 = 49	CES42 = 97	CES67 = 73	CES92 = 64
CES18 = 56	CES43 = 93	CES68 = 79	CES93 = 78
CES19 = 71	CES44 = 99	CES69 = 82	CES94 = 65
CES20 = 65	CES45 = 94	CES70 = 77	CES95 = 73
CES21 = 86	CES46 = 91	CES71 = 69	CES96 = 84
CES22 = 78	CES47 = 93	CES72 = 90	CES97 = 90
CES23 = 91	CES48 = 82	CES73 = 72	CES98 = 86
CES24 = 90	CES49 = 92	CES74 = 90	CES99 = 77
CES25 = 71	CES50 = 92	CES75 = 74	



REPORT NUMBER: SP1-2304-001-1

TM-30-18


Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2304-001-1

TM-30-18

Measure Comparisons

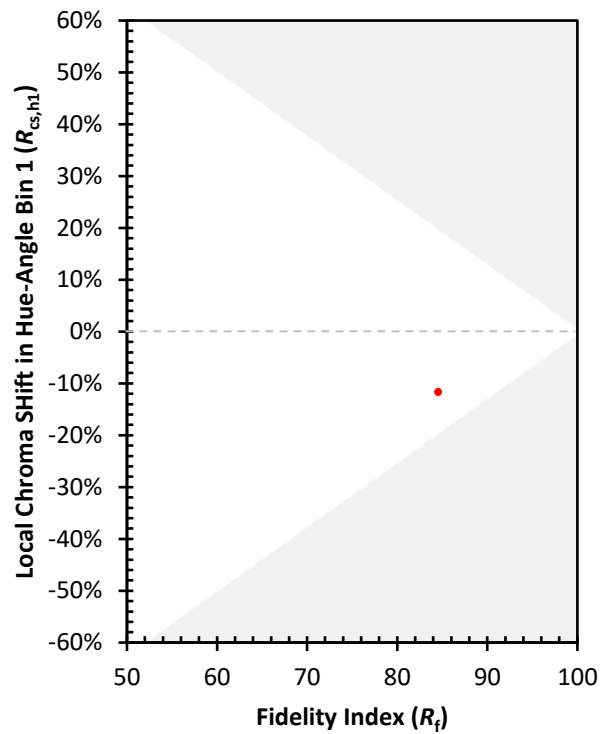

(END OF REPORT)