

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P827807

Luminaire Tested: **OHBL-36SE-NL-UNV-L930-CD-UPL18**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P827807
REPORT IS A COMBINATION OF REPORTS P826177 AND G3-2310-221-8
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-36SE-NL-UNV-L930-CD-UPL18
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 30200.1 lumens
Efficiency: N/A
Efficacy: 135.2 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.28 / 1.39
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 1.8' x H: 0.1')
CIE Type: Direct

Input Watts (W): 223.3
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P827807

CATALOG NUMBER: OHBL-36SE-NL-UNV-L930-CD-UPL18

Luminous Intensity Polar Plot

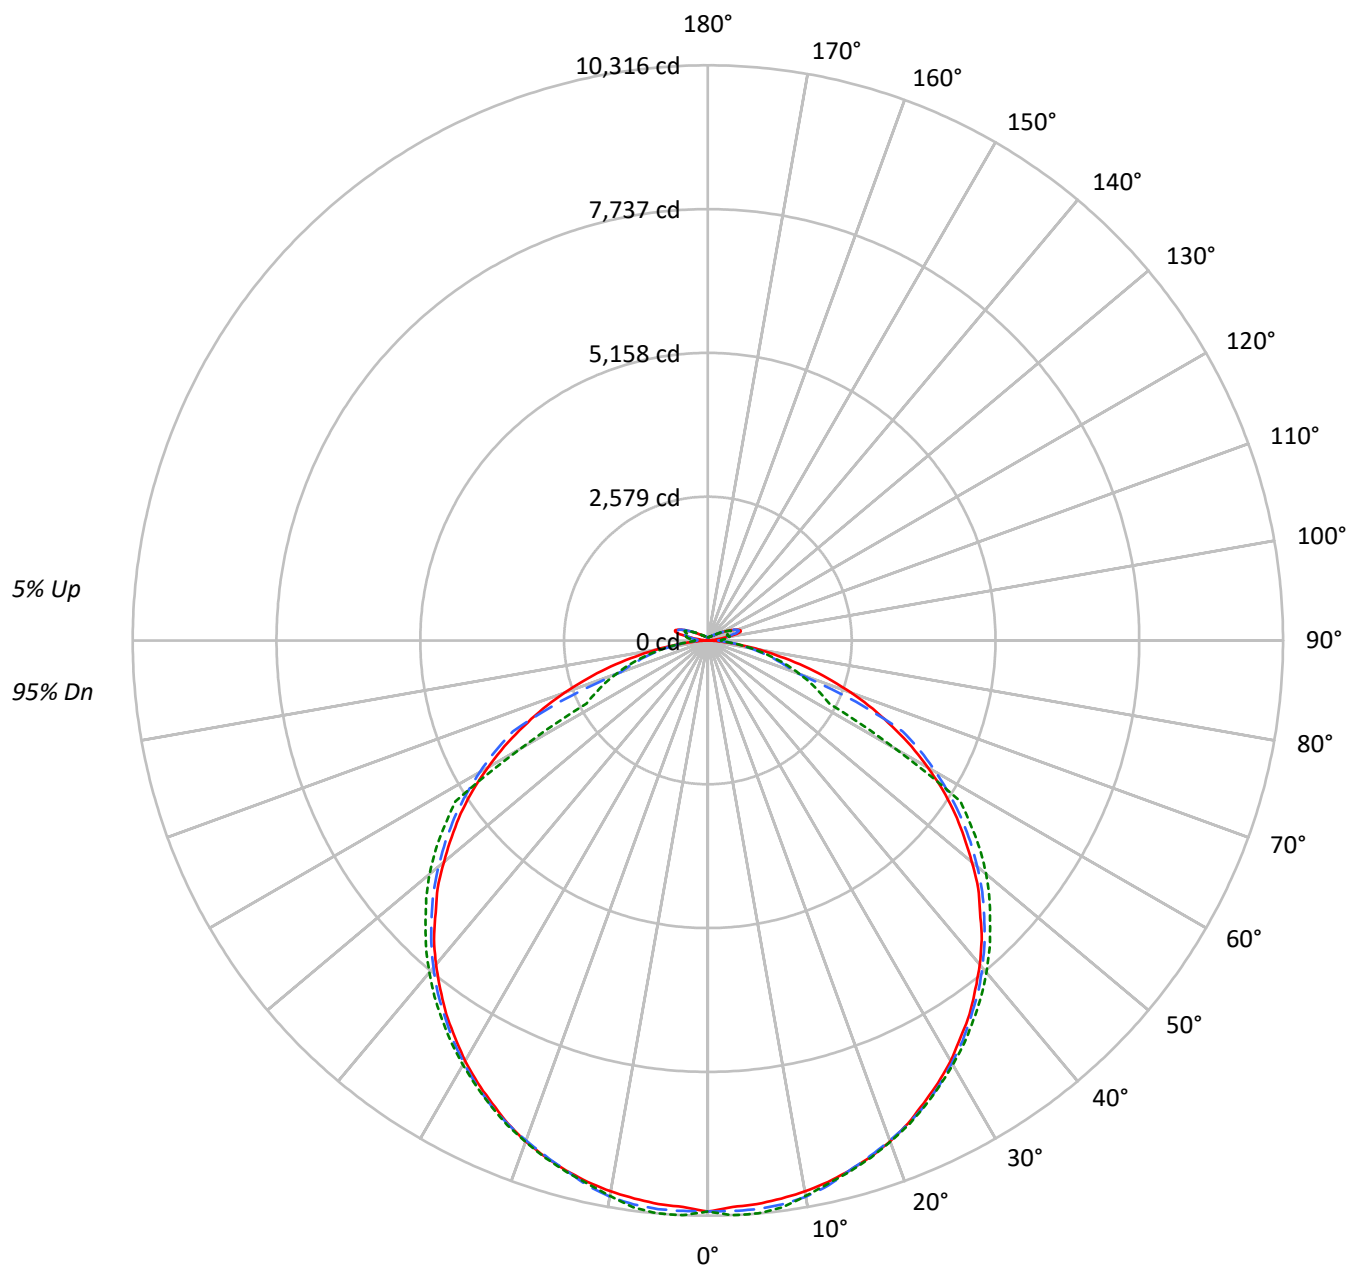



TEST NUMBER: P827807

CATALOG NUMBER: OHBL-36SE-NL-UNV-L930-CD-UPL18

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10		50	30	10		50	30	10		50	30	10
RCR																				
0	118	118	118	118	114	114	114	114		108	108	108		102	102	102		97	97	97
1	108	103	99	96	105	101	97	94		96	93	90		91	88	86		86	84	83
2	99	91	84	78	95	88	82	77		84	79	75		80	76	72		76	73	70
3	90	80	72	65	87	78	70	65		74	68	63		71	65	61		67	63	59
4	82	71	62	56	80	69	61	55		66	59	54		63	57	52		60	55	51
5	76	63	54	48	73	62	53	47		59	52	46		56	50	45		54	49	44
6	70	57	48	42	68	56	47	41		53	46	40		51	45	40		49	43	39
7	65	51	43	37	63	50	42	36		48	41	36		46	40	35		45	39	35
8	60	47	38	33	58	46	38	32		44	37	32		43	36	31		41	35	31
9	56	43	35	29	55	42	34	29		41	34	29		39	33	28		38	32	28
10	53	40	32	27	51	39	31	26		38	31	26		36	30	26		35	29	25

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	16196	16196	16196
5°	16029	16170	16337
10°	15955	16100	16169
15°	15872	15859	16027
20°	15768	15730	15948
25°	15573	15635	15875
30°	15408	15467	15806
35°	15208	15266	15744
40°	14965	15078	15697
45°	14625	14812	15599
50°	14260	14511	15537
55°	13817	14130	15274
60°	13149	13563	11799
65°	12186	12834	7859
70°	10943	6608	7514
75°	9113	5985	7006
80°	6434	5025	6134
85°	2611	4058	5307



TEST NUMBER: P827807

CATALOG NUMBER: OHBL-36SE-NL-UNV-L930-CD-UPL18

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	972.9	3.2
10°-20°	2785.8	9.2
20°-30°	4238.9	14.0
30°-40°	5153.8	17.1
40°-50°	5419.0	17.9
50°-60°	4948.2	16.4
60°-70°	3172.1	10.5
70°-80°	1498.4	5.0
80°-90°	419.1	1.4
90°-100°	248.4	0.8
100°-110°	510.8	1.7
110°-120°	421.3	1.4
120°-130°	198.3	0.7
130°-140°	99.1	0.3
140°-150°	57.5	0.2
150°-160°	33.6	0.1
160°-170°	17.4	0.1
170°-180°	5.3	0.0
0°-30°	7997.6	26.5
0°-40°	13151.5	43.5
0°-60°	23518.7	77.9
0°-90°	28608.4	94.7
90°-120°	1180.5	3.9
90°-150°	1535.4	5.1
90°-180°	1592.0	5.3
0°-180°	30200.1	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	10241	10241	10241	10241	10241	
5°	10146	10185	10238	10293	10315	965
15°	9838	9912	9837	9851	9858	2778
25°	9156	9170	9202	9217	9210	4225
35°	8184	8135	8228	8329	8306	5114
45°	6902	6890	7006	7172	7159	5335
55°	5409	5368	5549	5734	5749	4824
65°	3644	3644	3856	2212	2219	3613
75°	1801	1835	1191	1254	1260	1898
85°	235	298	372	403	381	348
90°	3	121	193	232	233	13
95°	36	118	223	295	314	100
105°	608	613	535	385	356	577
115°	424	432	437	426	415	425
125°	202	212	217	217	215	190
135°	120	122	126	128	128	95
145°	87	89	91	92	92	55
155°	70	71	72	73	73	33
165°	60	61	61	61	61	17
175°	54	54	55	55	55	5
180°	54	54	54	54	54	



TEST NUMBER: P827807

CATALOG NUMBER: OHBL-36SE-NL-UNV-L930-CD-UPL18

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	10241.2	10241.2	10241.2	10241.2	10241.2
2.5°	10169.2	10203.5	10241.2	10289.7	10316.5
5°	10145.9	10185.4	10237.5	10293.3	10314.8
7.5°	10095.6	10151.1	10201.6	10241.2	10253.7
10°	10032.6	10099.2	10127.9	10124.4	10115.4
12.5°	9948.2	10018.4	10009.4	9968.0	9975.2
15°	9838.5	9912.2	9836.9	9851.2	9858.4
17.5°	9709.2	9781.2	9693.0	9721.7	9723.7
20°	9558.3	9612.2	9543.9	9567.3	9567.3
22.5°	9376.8	9414.5	9385.8	9402.0	9405.6
25°	9155.7	9170.1	9202.4	9216.9	9209.6
27.5°	8943.8	8925.8	8988.7	9022.8	9004.7
30°	8708.3	8679.6	8753.2	8808.9	8787.4
32.5°	8438.7	8420.8	8505.3	8571.6	8559.1
35°	8183.6	8135.1	8228.4	8329.1	8305.7
37.5°	7881.7	7852.9	7958.8	8065.1	8052.5
40°	7586.9	7538.4	7658.9	7784.6	7772.0
42.5°	7270.7	7213.1	7344.4	7495.4	7481.0
45°	6902.2	6889.7	7006.5	7171.8	7159.2
47.5°	6575.4	6512.4	6675.8	6835.8	6850.3
50°	6179.8	6156.6	6305.7	6499.8	6514.1
52.5°	5793.6	5777.4	5933.7	6129.6	6154.7
55°	5408.9	5367.7	5549.1	5734.2	5748.7
57.5°	4997.6	4954.4	5139.5	5340.8	5371.2
60°	4557.1	4515.8	4718.9	4905.9	3901.3
62.5°	4116.9	4088.1	4300.3	3046.0	2454.8
65°	3644.3	3644.3	3856.2	2212.1	2219.3
67.5°	3202.4	3173.6	2875.3	1987.4	1987.4
70°	2727.9	2738.7	1656.8	1741.4	1743.1
72.5°	2251.6	2291.2	1430.5	1498.6	1502.2
75°	1800.6	1834.8	1191.4	1254.4	1259.7
77.5°	1322.7	1017.1	957.7	1006.5	1008.2
80°	929.0	641.6	733.2	779.9	774.5
82.5°	542.6	449.2	537.3	571.5	569.6
85°	235.3	298.4	371.9	402.6	380.9
87.5°	75.3	185.1	231.7	249.8	247.9
90°	3.2	120.8	192.8	232.2	232.8
92.5°	10.5	105.6	188.3	241.2	249.4
95°	36.1	118.4	223.0	295.0	314.4
97.5°	161.3	209.8	276.9	353.7	370.2
100°	328.6	371.6	341.9	389.7	396.4
102.5°	517.4	532.8	401.0	388.9	385.9
105°	607.9	613.1	534.7	385.2	356.0



TEST NUMBER: P827807

CATALOG NUMBER: OHBL-36SE-NL-UNV-L930-CD-UPL18

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	497.4	504.3	500.0	481.7	448.7
115°	423.6	432.1	436.6	426.4	414.8
117.5°	353.2	355.7	357.3	355.7	356.5
120°	295.0	300.7	303.9	301.5	299.9
122.5°	246.5	253.8	257.9	255.4	253.8
125°	202.1	211.8	217.4	216.6	215.0
127.5°	171.4	178.6	185.9	185.1	183.5
130°	148.7	154.4	159.2	160.0	160.9
132.5°	133.4	135.8	140.6	141.5	143.1
135°	119.6	122.1	126.1	127.7	128.5
137.5°	109.1	111.6	114.8	116.4	117.2
140°	100.2	102.7	105.1	106.7	107.5
142.5°	93.0	95.4	97.8	98.6	99.4
145°	87.3	88.9	91.3	92.2	92.2
147.5°	81.6	83.3	84.9	86.5	86.5
150°	76.8	78.4	80.0	80.8	81.6
152.5°	73.6	74.4	76.0	76.8	76.8
155°	69.5	71.1	71.9	72.8	72.8
157.5°	67.1	67.9	68.7	69.5	69.5
160°	64.7	64.7	65.5	66.3	66.3
162.5°	62.2	62.2	63.0	63.9	63.9
165°	59.8	60.6	60.6	61.4	61.4
167.5°	58.2	58.2	59.0	59.0	59.8
170°	56.6	56.6	57.4	57.4	57.4
172.5°	55.0	55.8	55.8	55.8	55.8
175°	54.2	54.2	55.0	55.0	55.0
177.5°	53.4	54.2	54.2	54.2	54.2
180°	54.2	54.2	54.2	54.2	54.2



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	613.6	622.5	582.9	449.4	368.3
110°	564.5	576.3	557.4	501.9	433.3



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930

Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				



Test Conditions

Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 6505.3 M/P: 0.55

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$



Color Vector Graphics



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	



REPORT NUMBER: SP1-2304-001-2

TM-30-18


Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons

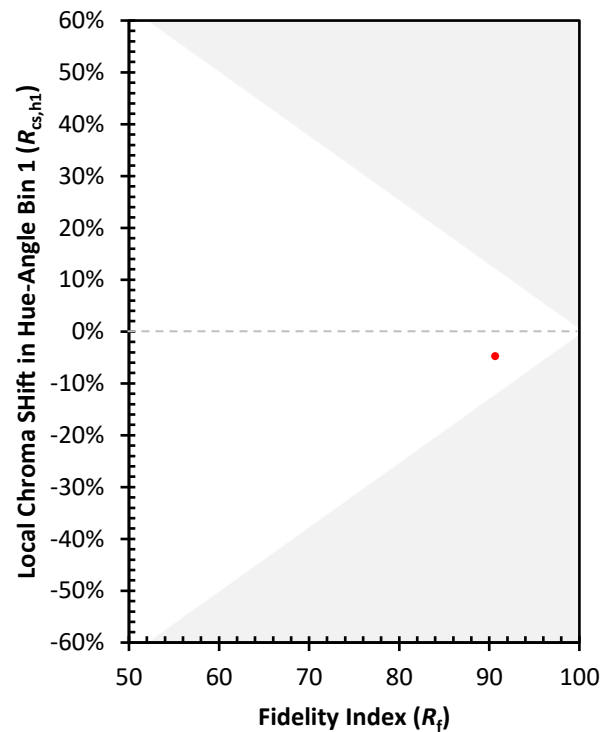

(END OF REPORT)