

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P827689

Luminaire Tested: **OHBL-15SE-W-UNV-L930-CD-UPL15**

Issue Date: 5/3/2024



Test Information

Test Method: LM-79-08
Report Number: P827689
REPORT IS A COMBINATION OF REPORTS P826118 AND G3-2310-221-10
Test Lab: INNOVATION CENTER
Issue Date: 5/3/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: OHBL-15SE-W-UNV-L930-CD-UPL15
Description:
Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 13176.0 lumens
Efficiency: N/A
Efficacy: 135.4 lumens/watt
Spacing Criteria (0/90/45): 1.14 / 1.58 / 1.62
Luminous Opening: Rectangular w/ Sides (W: 3.78' x L: 0.88' x H: 0.17')
CIE Type: Semi-Direct

Input Watts (W): 97.3
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P827689

CATALOG NUMBER: OHBL-15SE-W-UNV-L930-CD-UPL15

Luminous Intensity Polar Plot

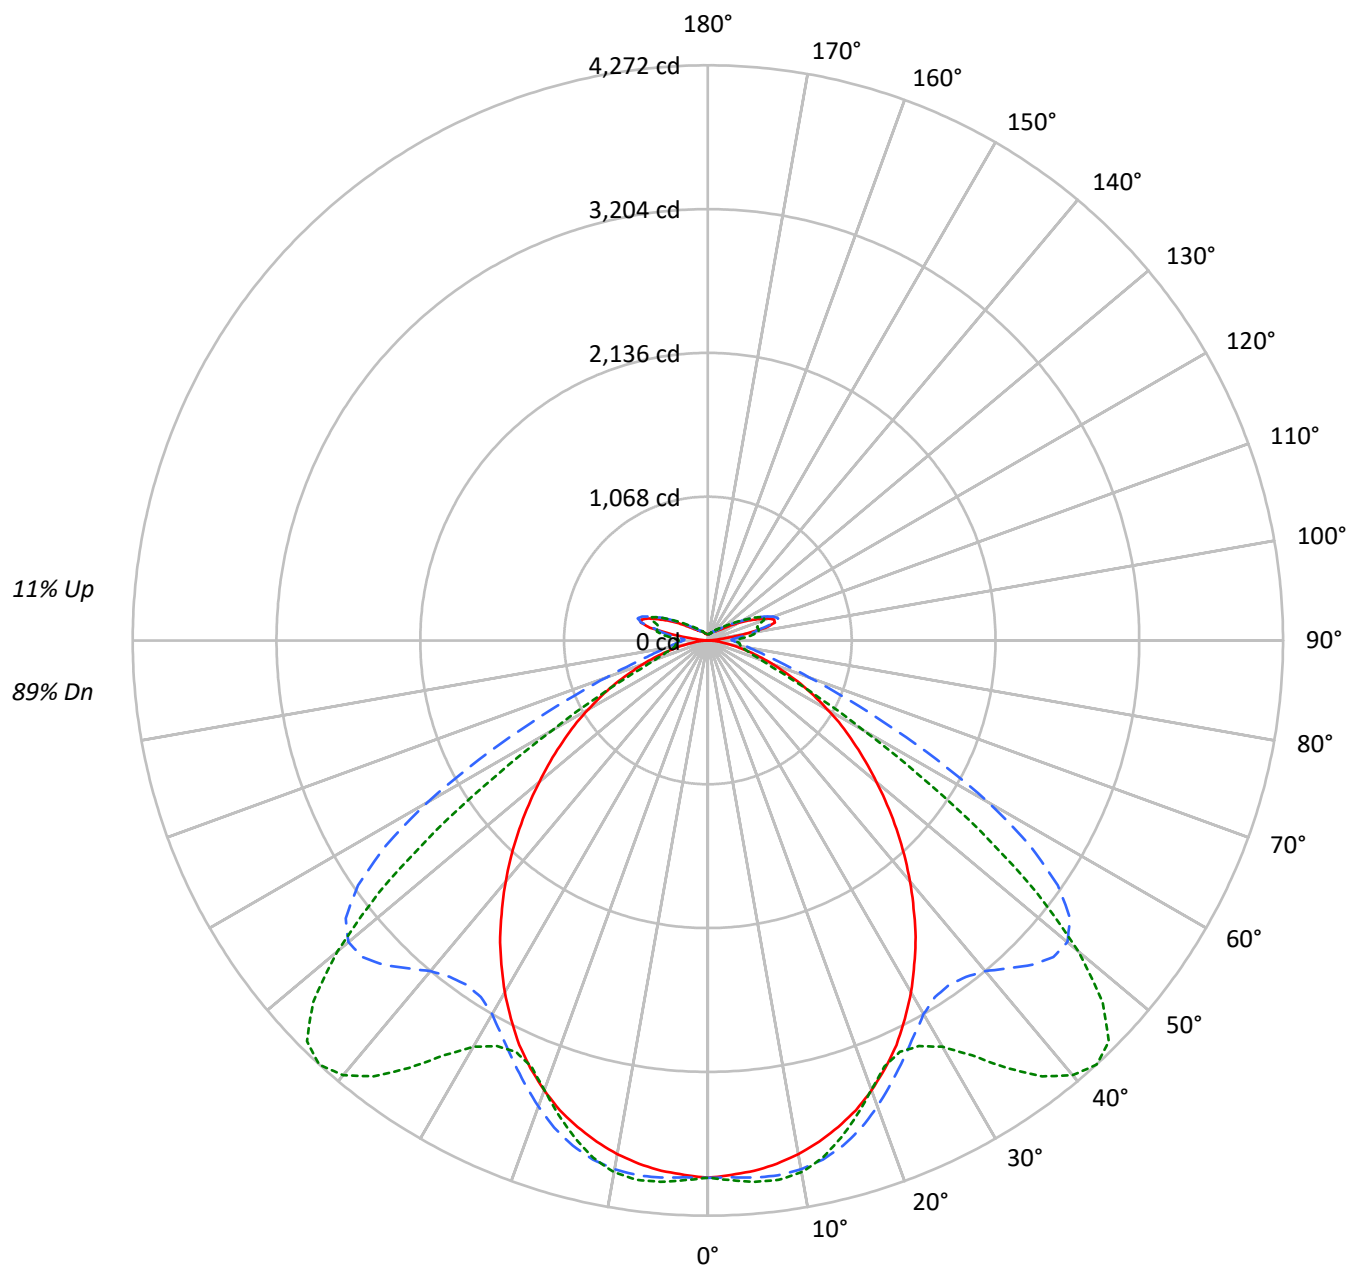



TEST NUMBER: P827689

CATALOG NUMBER: OHBL-15SE-W-UNV-L930-CD-UPL15

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	116	116	116	116	112	112	112	112	105	105	105	98	98	98	92	92	92
1	107	102	98	94	103	99	95	92	92	90	87	87	84	82	81	80	78
2	97	89	83	77	94	87	81	76	81	76	72	76	72	69	72	69	66
3	89	79	71	64	85	76	69	63	72	66	61	67	62	58	63	59	56
4	81	70	61	55	78	67	60	54	64	57	52	60	54	50	57	52	48
5	74	62	53	47	72	60	52	46	57	50	44	54	48	43	51	46	41
6	69	56	47	41	66	54	46	40	51	44	39	48	42	37	46	40	36
7	63	50	42	36	61	49	41	35	46	39	34	44	38	33	42	36	32
8	59	46	37	31	57	44	37	31	42	35	30	40	34	29	38	33	29
9	55	42	34	28	53	41	33	28	39	32	27	37	31	26	35	30	26
10	51	38	30	25	50	37	30	25	36	29	24	34	28	24	32	27	23

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	12982	12982	12982
5°	12699	12892	13130
10°	12382	12802	13146
15°	11987	12521	12724
20°	11509	12022	12101
25°	10927	11437	11858
30°	10213	10986	12761
35°	9427	11114	14932
40°	8552	11949	17263
45°	7656	13444	18555
50°	6740	14727	17267
55°	5881	14548	13194
60°	5021	12145	8067
65°	4136	8247	4887
70°	3182	5215	3528
75°	2238	3623	3271
80°	1418	3033	3690
85°	759	3062	5835



TEST NUMBER: P827689

CATALOG NUMBER: OHBL-15SE-W-UNV-L930-CD-UPL15

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	381.3	2.9
10°-20°	1079.8	8.2
20°-30°	1580.1	12.0
30°-40°	2052.1	15.6
40°-50°	2505.9	19.0
50°-60°	2206.8	16.7
60°-70°	1150.0	8.7
70°-80°	493.2	3.7
80°-90°	239.9	1.8
90°-100°	229.0	1.7
100°-110°	477.0	3.6
110°-120°	391.4	3.0
120°-130°	190.4	1.4
130°-140°	95.2	0.7
140°-150°	54.2	0.4
150°-160°	30.3	0.2
160°-170°	14.8	0.1
170°-180°	4.5	0.0
0°-30°	3041.2	23.1
0°-40°	5093.4	38.7
0°-60°	9806.1	74.4
0°-90°	11689.1	88.7
90°-120°	1097.4	8.3
90°-150°	1437.3	10.9
90°-180°	1487.0	11.3
0°-180°	13176.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	3990	3990	3990	3990	3990	
5°	3953	3984	4005	4040	4036	375
15°	3741	3846	3883	3854	3822	1053
25°	3315	3492	3432	3368	3371	1521
35°	2690	2974	3124	3643	3876	1677
45°	1981	2492	3407	4125	4211	1527
55°	1319	2183	3172	2782	2473	1184
65°	757	1513	1452	808	695	749
75°	305	708	467	319	303	332
85°	65	252	238	232	235	72
90°	3	109	180	210	218	6
95°	24	112	211	261	284	82
105°	515	535	511	401	378	488
115°	358	370	406	415	410	361
125°	177	189	214	221	221	166
135°	106	109	120	132	133	84
145°	80	80	83	90	91	51
155°	66	67	67	67	67	30
165°	51	51	52	52	52	15
175°	46	46	46	47	47	4
180°	46	46	46	46	46	



TEST NUMBER: P827689

CATALOG NUMBER: OHBL-15SE-W-UNV-L930-CD-UPL15

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	3990.4	3990.4	3990.4	3990.4	3990.4
2.5°	3973.2	3990.4	3991.2	4015.4	4012.8
5°	3953.4	3983.5	4005.0	4040.4	4036.0
7.5°	3920.7	3968.0	4005.9	4044.7	4041.2
10°	3874.2	3938.8	3988.7	4020.6	4010.2
12.5°	3813.9	3899.2	3948.2	3955.1	3935.3
15°	3740.7	3845.8	3882.8	3853.5	3822.5
17.5°	3658.1	3781.2	3794.1	3730.4	3691.7
20°	3554.8	3695.1	3682.2	3594.4	3551.3
22.5°	3440.3	3600.4	3559.1	3466.9	3425.6
25°	3314.6	3491.9	3432.5	3367.9	3371.4
27.5°	3167.4	3368.8	3311.1	3340.4	3395.5
30°	3017.6	3239.6	3204.4	3374.9	3483.4
32.5°	2853.1	3107.1	3138.9	3475.6	3652.9
35°	2690.4	2974.5	3123.5	3642.6	3875.9
37.5°	2510.4	2840.2	3148.4	3835.5	4080.0
40°	2335.7	2709.4	3205.2	4008.5	4215.1
42.5°	2157.5	2592.2	3300.8	4110.9	4272.0
45°	1981.0	2492.4	3406.7	4124.7	4210.8
47.5°	1804.5	2408.0	3479.9	4015.4	3975.8
50°	1634.0	2333.1	3485.0	3752.8	3590.9
52.5°	1474.8	2264.2	3390.3	3334.4	3083.0
55°	1319.0	2183.3	3172.5	2781.6	2472.6
57.5°	1176.9	2071.4	2836.8	2187.6	1850.1
60°	1026.3	1919.9	2402.9	1600.5	1334.5
62.5°	887.6	1731.3	1916.4	1114.0	959.1
65°	756.8	1512.6	1452.4	807.5	694.8
67.5°	618.1	1286.2	1071.8	588.9	516.5
70°	509.7	1076.1	798.1	458.0	415.8
72.5°	398.6	876.4	596.6	371.9	348.7
75°	304.7	707.7	466.7	319.4	303.0
77.5°	224.7	559.6	375.4	282.4	266.9
80°	157.5	440.8	314.2	252.3	246.2
82.5°	105.9	341.0	267.7	240.2	241.0
85°	64.6	252.3	237.6	232.5	235.1
87.5°	31.0	179.0	204.0	211.8	214.4
90°	3.3	109.0	180.1	209.8	218.2
92.5°	8.1	92.4	174.9	211.9	224.2
95°	24.3	111.6	211.3	261.2	284.0
97.5°	135.9	195.1	276.9	324.3	341.4
100°	275.0	332.1	341.5	375.2	383.5
102.5°	440.7	457.1	402.4	389.8	386.6
105°	515.2	534.6	510.9	401.3	377.9



TEST NUMBER: P827689

CATALOG NUMBER: OHBL-15SE-W-UNV-L930-CD-UPL15

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	416.6	437.8	466.7	464.1	451.3
115°	357.6	369.7	405.6	415.2	409.6
117.5°	308.4	316.2	347.8	356.6	355.8
120°	258.3	268.4	294.2	302.8	302.9
122.5°	214.6	225.4	252.6	259.7	259.7
125°	176.6	188.9	214.4	221.4	221.4
127.5°	150.7	157.2	182.6	191.2	190.4
130°	131.3	135.3	155.7	165.1	166.8
132.5°	117.5	120.8	136.9	146.3	148.8
135°	106.2	109.4	120.4	131.6	133.2
137.5°	98.1	99.7	109.0	118.4	120.9
140°	90.0	92.5	98.4	107.8	109.4
142.5°	85.3	86.0	90.2	98.7	99.6
145°	80.4	80.3	82.9	89.6	91.3
147.5°	76.4	77.2	78.8	82.2	83.9
150°	72.3	74.0	73.1	75.6	77.4
152.5°	69.1	69.9	69.8	69.8	72.3
155°	65.9	66.7	66.6	66.6	67.4
157.5°	56.6	57.4	58.2	59.0	59.0
160°	54.2	55.0	55.8	55.8	56.6
162.5°	52.5	53.4	53.4	54.2	54.2
165°	50.9	50.9	51.7	51.7	51.7
167.5°	49.3	49.3	50.1	50.1	50.9
170°	47.7	48.5	48.5	48.5	49.3
172.5°	46.9	46.9	47.7	47.7	47.7
175°	46.1	46.1	46.1	46.9	46.9
177.5°	45.3	46.1	46.1	46.1	46.1
180°	46.1	46.1	46.1	46.1	46.1



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	516.0	539.2	546.8	452.3	395.0
110°	476.4	499.4	518.8	491.4	443.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2304-001-2

Test Date: 05/31/2023

Luminaire Tested: OHB-15SE-N-UNV-L930

Data in this report applies to families of products including OHB-15SE-N-UNV-L930.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2304-001-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 05/31/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **OHB-15SE-N-UNV-L930**
 Description: 15SE OHB WITH APT LEDS, NARROW LENS, 90CRI 3000K

Spectral Parameters

CCT (K):	3051	CRI (Ra):	92.2		
CIE u':	0.2497	R1:	92.8	R9:	60.2
CIE v':	0.5166	R2:	95.6	R10:	88.6
Duv:	-0.0027	R3:	96.4	R11:	92.7
CIE x:	0.4295	R4:	92.2	R12:	82.3
CIE y:	0.3950	R5:	92.5	R13:	93.6
CIE z:	0.1755	R6:	94.0	R14:	97.4
Peak Wavelength (nm):	621	R7:	91.7		
Dominant Wavelength (nm):	583	R8:	82.4		
Purity:	47.8				
Rf:	90.7				
Rg:	101.5				



Test Conditions

Stabilization Time: 22M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.2/44%
 Sphere Temperature (°C): 25.3

REPORT NUMBER: SP1-2304-001-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	2/9/2023	8/9/2023
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2304-001-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2304-001-2

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 16819.9

S/P: 1.43

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: 6505.3 M/P: 0.55

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	5142	NR	490	62439	NR	620	231386	NR	750	21976	NR	880	7157	NR
365	4540	NR	495	73651	NR	625	230941	NR	755	19435	NR	885	7445	NR
370	4803	NR	500	84837	NR	630	226625	NR	760	17457	NR	890	5651	NR
375	5429	NR	505	96138	NR	635	221573	NR	765	15928	NR	895	5663	NR
380	5059	NR	510	104675	NR	640	214183	NR	770	13612	NR	900	4391	NR
385	5164	NR	515	112374	NR	645	206197	NR	775	12383	NR	905	4718	NR
390	4787	NR	520	120074	NR	650	195149	NR	780	11099	NR	910	4205	NR
395	4429	NR	525	125393	NR	655	184048	NR	785	9818	NR	915	4466	NR
400	3966	NR	530	131080	NR	660	171890	NR	790	8853	NR	920	4608	NR
405	4026	NR	535	137166	NR	665	158117	NR	795	8815	NR	925	6506	NR
410	4947	NR	540	141770	NR	670	144601	NR	800	7747	NR	930	6091	NR
415	6735	NR	545	146789	NR	675	131155	NR	805	7317	NR	935	6242	NR
420	10542	NR	550	151664	NR	680	119765	NR	810	7417	NR	940	5908	NR
425	16995	NR	555	157152	NR	685	106544	NR	815	7400	NR	945	4377	NR
430	27239	NR	560	162379	NR	690	94952	NR	820	6832	NR	950	6170	NR
435	43016	NR	565	167867	NR	695	83928	NR	825	6514	NR	955	6143	NR
440	69527	NR	570	174214	NR	700	74959	NR	830	6419	NR	960	5227	NR
445	113795	NR	575	179459	NR	705	66186	NR	835	6702	NR	965	4363	NR
450	137556	NR	580	186493	NR	710	58632	NR	840	6224	NR	970	9654	NR
455	112457	NR	585	194218	NR	715	52023	NR	845	5410	NR	975	7378	NR
460	88709	NR	590	201759	NR	720	46022	NR	850	5183	NR	980	8170	NR
465	74548	NR	595	208902	NR	725	40235	NR	855	6469	NR	985	7350	NR
470	58681	NR	600	217002	NR	730	35330	NR	860	7161	NR	990	8712	NR
475	50369	NR	605	222691	NR	735	31141	NR	865	5351	NR	995	7670	NR
480	50005	NR	610	226497	NR	740	27444	NR	870	5943	NR	1000	8916	NR
485	54326	NR	615	229506	NR	745	24768	NR	875	6650	NR			

REPORT NUMBER: SP1-2304-001-2

TM-30-18

Summary

$R_f = 90.7$
 $R_g = 101.5$
 CIE $R_a = 92.2$
 $R_9 = 60.2$



Color Vector Graphics



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 87	CES51 = 97	CES76 = 83
CES02 = 63	CES27 = 96	CES52 = 95	CES77 = 89
CES03 = 32	CES28 = 94	CES53 = 92	CES78 = 82
CES04 = 70	CES29 = 87	CES54 = 97	CES79 = 94
CES05 = 51	CES30 = 95	CES55 = 96	CES80 = 92
CES06 = 51	CES31 = 88	CES56 = 93	CES81 = 86
CES07 = 43	CES32 = 83	CES57 = 93	CES82 = 96
CES08 = 42	CES33 = 90	CES58 = 94	CES83 = 95
CES09 = 29	CES34 = 89	CES59 = 97	CES84 = 95
CES10 = 76	CES35 = 94	CES60 = 96	CES85 = 85
CES11 = 59	CES36 = 90	CES61 = 94	CES86 = 85
CES12 = 65	CES37 = 92	CES62 = 95	CES87 = 90
CES13 = 44	CES38 = 99	CES63 = 92	CES88 = 95
CES14 = 74	CES39 = 98	CES64 = 91	CES89 = 85
CES15 = 72	CES40 = 95	CES65 = 89	CES90 = 95
CES16 = 48	CES41 = 96	CES66 = 89	CES91 = 83
CES17 = 50	CES42 = 91	CES67 = 88	CES92 = 82
CES18 = 57	CES43 = 87	CES68 = 88	CES93 = 89
CES19 = 72	CES44 = 99	CES69 = 90	CES94 = 80
CES20 = 67	CES45 = 92	CES70 = 85	CES95 = 85
CES21 = 86	CES46 = 92	CES71 = 84	CES96 = 91
CES22 = 79	CES47 = 91	CES72 = 94	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 80	CES98 = 93
CES24 = 91	CES49 = 90	CES74 = 94	CES99 = 91
CES25 = 72	CES50 = 96	CES75 = 84	



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2304-001-2

TM-30-18

Measure Comparisons



(END OF REPORT)